

 


Clear and Simple Quick Start Guide

Alcatel PIXI THEATRE™






Getting to know your

Alcatel PIXI THEATRE™

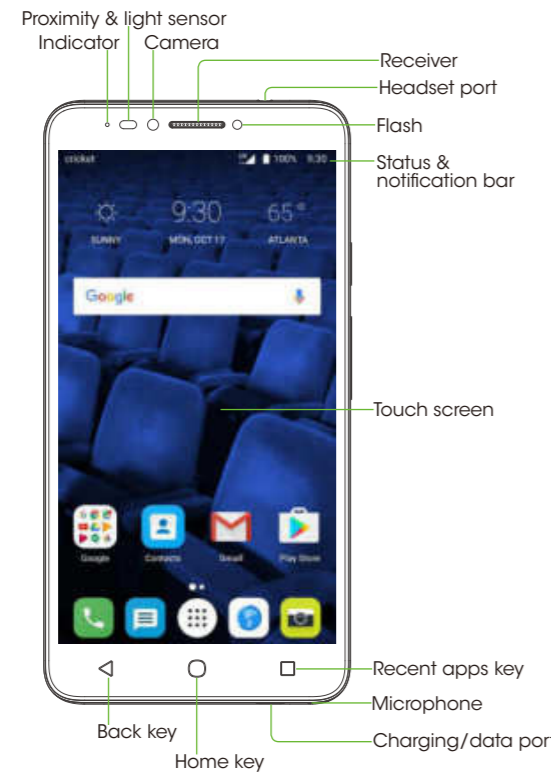

Phone setup

     1. Remove the back cover.
2. To insert the SIM, turn the SIM card so the gold contacts face downward.
3. Slide the SIM card into the SIM slot.
4. To insert a microSD card (sold separately), turn the microSD card so the gold contact face downward and slide it into the microSD slot.
5. Make sure that it is correctly inserted.
6. To remove a SIM or microSD card, push in on the exposed edge to release the card and slide it out.
7. Replace the back cover.



Warning!

To avoid damage to the phone, only use the SIM included in the box or provided to you by Cricket.

Touch screen

 
 
 
Navigating your phone

- Use your finger tip to lightly touch the screen.
- Use quick flicks of your finger on the touch screen to swipe up, down, left, and right.
- To return to the previous screen, tap the **Back key** ◀.
- Tap the **Home key** ○ at any time to return to the main home screen.
- Tap the **Recent apps key** □ to access recently viewed apps.
- Tap **Apps** ⋮ to access applications on your phone.

Notification panel

Access alerts, including new messages, emails, and software updates.

- Tap the top of the home screen and drag your finger down to see the Notifications panel.
- Swipe right or left to clear individual notifications or tap to clear all.
- With the notification panel open, tap the top of screen again and drag down to expand the quick settings menu.
- Tap to access the settings menu.

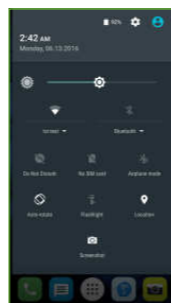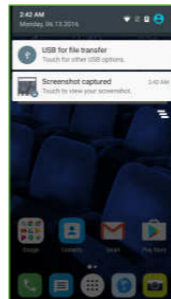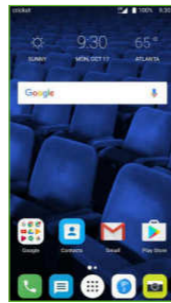

Personalize

 
Set wallpaper

- To change your home or lock screen wallpaper, press and hold a blank part of the home screen and tap **WALLPAPERS**.
- Select a wallpaper and tap **Set wallpaper** to set it. You can also tap **Pick image** for additional options.



Add to home screen

- To add app shortcuts, tap **Apps** ⋮, press and hold the desired app, and drag it to the home screen.
- To add widgets, press and hold a blank part of the screen and tap **WIDGETS**, press and hold the desired widget and drag it to the home screen.

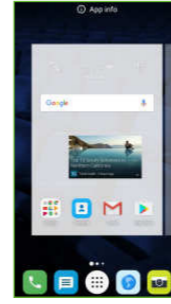

Organize home screens

 
 
 
- To move widget or app shortcut, press and hold it and then drag it to a new location.
- To delete it, drag it to the **X Remove** and release it.
- To organize app shortcuts in a folder, press and hold a shortcut and drag it so it is on top of another one and release it. This will create a Folder. Drag additional shortcuts to the folder to add them.
- Tap to access the settings menu.
- Tap to rename a folder, tap the folder title and then type a new name.

Calls and voicemail

Make a call

1. From the home screen, tap **Call** .
2. Type a name or phone number, or select one of the following options:

- Manually enter a phone number.
- Choose from frequently called contacts.
- Choose from a list of people who you have called or have recently called you.
- Call from your contacts list.

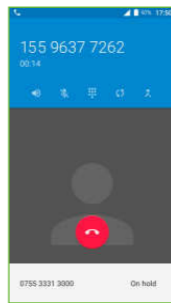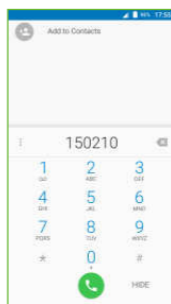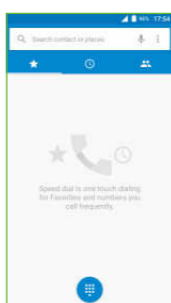

Note: Do not block the microphone when making or answering a call.

Check voicemail

1. From the home screen, tap **Call** , then tap .
2. Press and hold **key 1**.

Use call waiting

 
Call waiting lets you answer a second call while you are on an existing call.

1. While on a call, you will hear a tone if another call comes in. Slide to the right to answer.
2. Tap or **On hold** to switch between active calls.
3. Tap to merge calls.
4. Tap to end a conference call.

Text and picture messaging


Send a text message

1. From the home screen, tap **Messaging** .
2. Tap **New message** to start a new text message.
3. In the **To** field, enter a number or a contact name or tap **Contacts** to access your contacts.
4. Tap the **Send message** field and enter your message.
5. Tap **Send** to send the message.

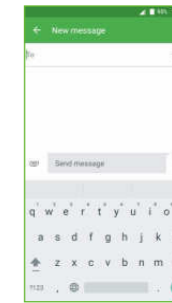

Send a picture message

 1. Follow steps 1-4 above.
2. Tap the **Paperclip** .
3. Tap and select desired picture or tap to take a picture to attach.
4. Tap **Send** to send the message.

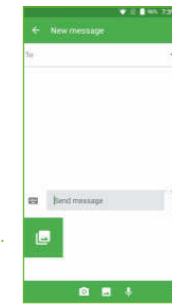

Note: Please don't text while driving.

Browser

Go to a web page

On the Browser screen, tap the URL box at the top, enter the address of the web page and confirm.



 
Find text on a web page

1. On the Browser screen, tap **Find on page**.
2. Enter the text or phrase you want to find. Text that matches the inputs will be highlighted on the screen.
3. Tap the Up or Down arrow to switch to the previous or next matching items.
4. Tap the **Back key** ◀ to close the search bar.

Open multiple windows

Multiple windows can be opened at the same time for your convenience.

- Tap and then to open a new window.
- Switch to a preferred window by taping it.
- To close a window, touch on the window you want to close.

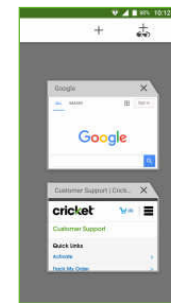

More information

On the web

Detailed support information, including device specifications and troubleshooting, is available at www.cricketwireless.com/support/devices.

On the phone

- Call Customer Care at 1-855-246-2461 or
- Dial 611 from your cell phone.

Accessories

For more information concerning accessories, please visit your local Cricket store location or go to www.cricketwireless.com/shop/accessories.



Note: Store and online inventories may vary.

© 2016 Cricket Wireless LLC. All rights reserved. Cricket and the Cricket logo are registered trademarks under license to Cricket Wireless LLC. Other marks are the property of their respective owners. microSDHC logo is a trademark of SD-3C, LLC. You can also create your own custom beats with the ONETOUCH Mix app, which lets you mix both local and streaming tracks to save and share with your friends. ALCATEL is a trademark of Alcatel-Lucent and is used under license by TCL Communication Ltd. © Copyright 2016 TCL Communication Ltd. All rights reserved. TCL Communication Ltd. reserves the right to alter material or technical specification without prior notice. All "Signature" ringtones embedded in this phone have been composed, arranged and mixed by NU TROPIC (Amar Kabouche).



CJB1FACALAAA

Printed in China

FCC Regulations

This mobile phone complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This mobile phone has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Note:

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Product meets FCC Radio Frequency Exposure Guidelines—FCC ID 2ACCJB061.

RF Exposure Information (SAR)

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the United States. During SAR testing, this device was set to transmit at its highest certified power level in all tested frequency bands, and placed in positions that simulate RF exposure in usage against the head with no separation, and near the body with the separation of 15 mm.

To support body-worn operation, choose the belt clips or holsters, which do not contain metallic components, to maintain a separation of 15 mm between this device and your body.

Hearing Aid Compatibility (HAC) regulations

 
Your mobile phone is rated: «For Hearing Aid», to assist hearing device users in finding mobile phones that may be compatible with their hearing devices. This phone is HAC M4/T3 compatible. Reference ANSI C63.19-2011 For more information please visit our website <http://www.alcatelonetouch.us/Hearing-Aid-Compatibility-with-Mobile-Phones-Accessibility-and-Compliance/b/10844773011>.

Email

Email setup (Gmail™, Yahoo!®, etc.)

1. From the home screen, tap **Apps** > **Email** .
2. Select an account type, enter your email address and password, then tap **NEXT**.
3. Confirm email account settings and tap **NEXT**.
4. Tap **FINISH**. Your email will begin to synchronize with your phone.

Note: To set up corporate email, contact your IT administrator.

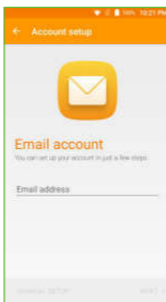

Create and send an email message

1. From the home screen, tap **Apps** > **Email** .
2. To compose a new message, tap **Compose** .
3. Tap the **To** field and enter email address or name or tap **Contacts** to access your contacts.
4. Enter a subject and email message.
5. To attach files to the email message, tap the **Paperclip** and make your selection.
6. Tap **Send** to send the message.



Cricket Apps & Services

These services make using Cricket even better and easier.



My Cricket: Check account balance, make a quick payment, view usage and access support from the palm of your hand.



Cricket Wi-Fi Manager: Helps you save your high speed data by seeking out free and open Wi-Fi hotspots whenever you're near them. Also remembers your favorite Wi-Fi hotspots and connects you automatically. Cricket does the searching so you can do the saving.



Cricket Voicemail: Quickly view, access and play back your voicemail messages. Easily save important numbers to your Favorites list and respond to messages by calling back or texting.



 
Deezer: Listen on-the-go with ad-free streaming music, download your favorites to your phone and get customized playlists based on your preferences.

Apps on Google Play™

The Alcatel PIXI THEATRE is preloaded with great apps like YouTube and Hangouts to help take your smartphone experience to the next level. To find additional apps, check out Google Play.

Access Google Play


1. From the home screen, tap Play Store .
2. Enter your existing Google account or create one following the steps on the screen.

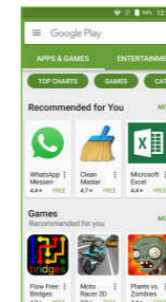

Navigate Google Play

From Play Store, there are multiple ways to find apps, games, and more.

 1. Tap a category to browse popular apps, games, movies, and music organized by popularity or genre.
2. Tap **Search Q** to search the Play Store for a specific game or app.
3. To install, tap the app and follow instructions. Once installed, you will see a notification in the Notifications panel. Open the app from this notification or by locating it in the **Apps** .

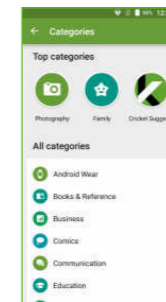

Note: A Google Wallet™ payment method is required to purchase apps.

Camera and video

Take a picture

1. From the home screen, tap **Camera** .
2. Tap to select different modes. Then tap to display Camera settings.
3. Zoom in and out by pinching with your fingers.
4. Tap the **Shutter button** or press either of the **Volume Keys** to take a photo.



View pictures

1. From the home screen, tap **Apps** .
2. Tap **Gallery** .

 


Take a video

In camera mode, tap **Start recording** to start and tap **Stop recording** to stop recording video.

Send a picture


1. After taking a picture, slide right to view the taked picture. Tap a selected picture and then tap **Share** .
2. Scroll through options to send via Messaging or Email, Bluetooth, and more.

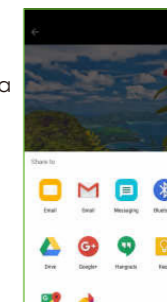

Unique Alcatel Features

Color notification

 Color highlighting lets you quickly identify unread call or message notifications on the lock screen or notification panel.

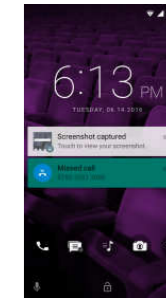

Quick Silence

You can quickly mute an incoming call by simply turning over your phone. To activate this feature, tap **Settings > Gestures** and select **Turn over to mute**.

Double tap to turn on/off screen

When the screen is off, double tap to turn it on. When the screen is on, double tap a blank area on the home screen to turn it off. To activate this feature, tap **Settings > Gestures** and select **Unlock**.

Selfie

Take selfies quickly and easily. From the lock screen, double tap to quickly open the front-facing camera and capture the moment without switching between camera modes.

Printed in China