

SPECIFICATIONS



SELFIE STICK With Built In Bluetooth Shutter Button



USER MANUAL

FEATURES

- Bluetooth enabled selfie wand
- Built in rechargeable battery
- Charging cable included
- ON/OFF power switch

CHARGING

- Connect the supplied cable to the DC jack then connect the other end to a USB powered outlet (5V adapter not included) to charge the built in battery. While your unit is charging the red LED light (below the power button) will be on.
- For best fast charging results do not use the unit while charging.
- Use power ON/OFF button to switch the unit on or off.

OPERATING THE BLUETOOTH

- Start power by switching the ON/Off Button.
- LED indicator will start to flash slowly. This means your bluetooth function is working.
- Activate the Bluetooth function on your Bluetooth enabled mobile device and open up your bluetooth devices window. Select Aduro SFS50 from the list. Once you connect successfully your LED indicator on the wand will off.

SHOOTING

Be sure you install the mobile device to the end of the selfie stick correctly. After you have successfully paired your mobile device to your selfie stick, you will be ready to start taking pictures by pressing the button marked "PRESS" on your selfie stick.

Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by Shenzhen Bolutek Electronic Technology Co., Ltd may void the FCC authorization to operate this device.

Note: The manufacturer is not responsible for any radio or tv interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.