

# Quick Start

## 1. Download the Ring app.

The Ring app walks you through setting up and managing your Ring Car Cam.

## 2. Open the Ring app and tap Set Up Device.

Select **Mobility** and scan this QR code.



QR+FR



## 3. Complete setup in the Ring app.

Follow the in-app instructions to install and set up your Ring Car Cam.



For additional help,  
visit [ring.com/help](https://ring.com/help)

