


Content	
I. Key definition	12
II. Desktop	13
1. Home page	13
2. Navigation bar	15
III. Basic operation	15
1. Startup/Shutdown	15
2. USB connection with PC	16
3. USB charging/Detecting	17
4. Reset function	17
5. APK installation and uninstallation	17
6. File management	18
7. Recent task	18
8. System setting	18
9. Specification	19

I. Key definition

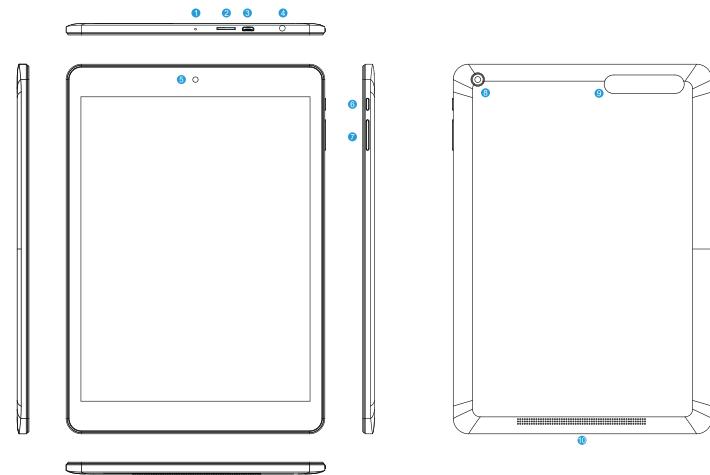


- ① Microphone
- ② TF card slot
- ③ USB port
- ④ Headphone jack
- ⑤ Front camera
- ⑥ Power key: long press for 3 seconds to start up/shut down;
short press to turn screen off, short press again to turn screen on.
- ⑦ Volume
- ⑧ Rear camera
- ⑨ Antenna
- ⑩ Stereo speaker

12

II. Desktop introduction

1 Home screen

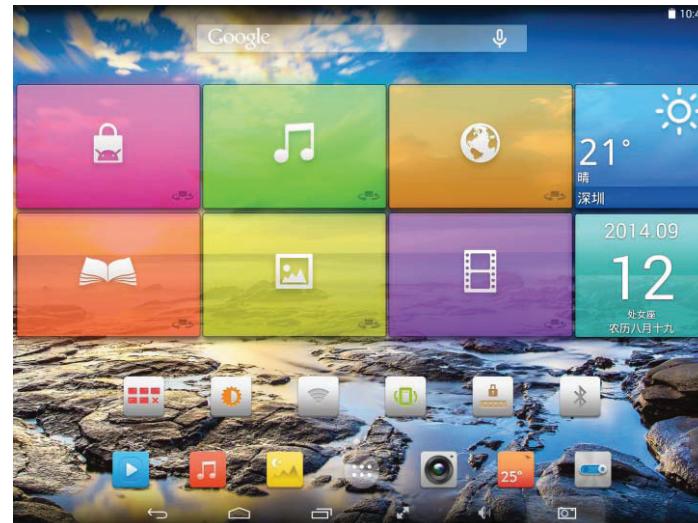

Tap each icon in six color blocks to define default application and default color for blocks.
Remark: Default application color cannot be changed.

13



Tap the icon to access build-in FNF market, tap to return to home menu.
Tips: The device can remember the webpage where you left, displays the webpage on the icon once you leave off.
"No internet connection" tips pop up when you tap the block without internet signal.



Tap the icon to access music list, tap home icon to return to home menu.
Tips: The device can remember the webpage where you left, displays the webpage on the icon once you leave off.
"No internet connection" tips pop up when you tap the button without internet signal.



Tap the icon to access internet browser, tap home icon "No internet connection" tips pop up when you tap the button without internet signal.to return to home menu.
Tips: The device can remember the webpage where you left, displays the webpage on the icon once you leave off.
You can access to the webpage directly that you viewed last time by taping the icon.



Tap the icon to go to e-books. Tap home icon "to return to home menu.
Tips: The device can remember the page where you left, displays the page on the icon once you leave off. You can access the page directly that you viewed last time by taping the icon.



Tap the icon to go to photo list.
Tips: In full screen mode, if you tap the home button to exit, the photos will slide show in the icon. The photos display in full screen when you tap it again.



Tap the icon to go to video list, tap home icon to return to home menu.
Tips: The device can remember the screen where you left, displays the screen on the icon once you leave off. It will resume video playback when you tap the button again.

 



Tap to go to weather settings



Tap the icon to go to time settings.

2 Navigation bar

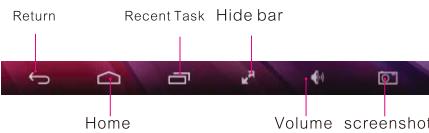

Decline in to go to quick launcher settings menu, date, time, Wi-Fi, Bluetooth status, battery level status shows, and you can set up Wi-Fi, Bluetooth, G-sensor, brightness and volume.

III. Basic operation

1.Startup/Shutdown


Startup: Press and hold the power button for 3 seconds to turn on the device.

Shutdown: Press and hold the power button for 3 seconds to turn off the device, "Power off" and "Reboot" menu pop up, tap "Power off" and then tap "Cancel" to exit or tap "OK" to shut down the tablet.

[Note]: The first boot takes much time after firmware upgrade. Please be patient. More applications are installed, longer time are needed during booting.

2.USB connection with PC

In power on mode, insert USB cable to connect to PC, the following screen auto pops up.

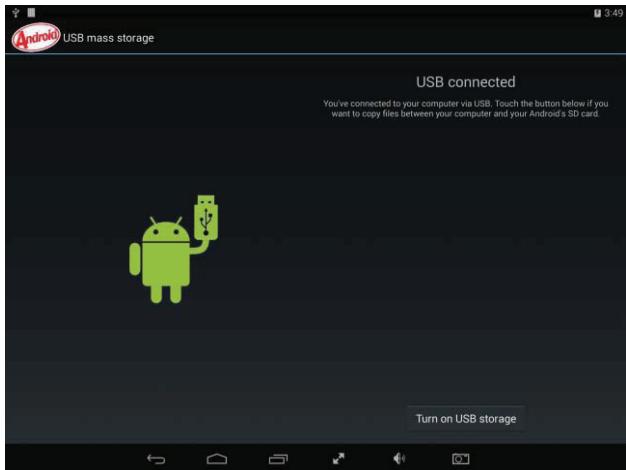

Tap "Turn on USB storage", access to device for files management.

3.USB charging/detecting

Battery indication

The battery icon  in the navigation bar will be gradually turned into  during using. Charging reminder pops up once battery level less than 14%.

Charging indication

The best way to charge battery is to connect tablet PC to a power outlet with using USB cable and power adapter.

Full battery: 

Low battery: 

Charging: 

Note: Charge the battery immediately in low power.

Charging the battery:

Connect the device to a power outlet using the included cable and USB power adapter.

The battery icon  on the navigation bar indication that the battery is in charging.

Do not disconnect the device until the battery is fully charged

Note:

1.Do not upgrade firmware when the battery is low. Make sure the battery is fully charged before you upgrade firmware.

2.In extremely low power status, the device will turn off automatically.

3.Connect to the power adapter, charge icon shows on the screen, the device start charging.

4.In charging mode, do not operate the device if the battery is low.

Suggestion:

You are strongly recommended to full charge the device before initial use.

4. Reset function

If the device is getting abnormal when operation, you can reset it to normal by pressing and holding the power button for about 10 seconds.

5. APK installation and uninstallation

Tap the icon  in the home screen, access all application page, select 'APK Installer', then select 'Install', find out the file path, then tap to install. Refer to APK Installer as below.



6.File management

Tap icon  in home screen, access to all application page, select "Explorer" for file management, copy, adhere, move or delete single or multiple files. Refer to multiple files management as below.



Find out the file path, tap 'Multi', select file and file name turns to blue, tap 'edit' to copy, move and delete etc.

7. Recent task

Tap icon  in the navigation bar, recent applications will be listed, tap and drag each application downwards until the window disappear, task end. Refer to photo as below:



8.System setting

Tap icon  in home screen to access to all application page, select "Settings" to set system language, Wi-Fi and Bluetooth connection, keyboard, time and date etc.

9.Specification

Model Name	R405
Announced Date	October, 2014
Operating System	Android 4.4
Solution	Rock-Chips Rk3288
CPU	1.8GHz Quad-Core Cortex A17CPU
GPU	Mali-T764
RAM	2GB DDR3 RAM
Int. Memory	16GB/32GB
Ext. Memory	MicroSD Max 32GB
LCD SIZE	9.7inch
Resolution	2048x1536
Screen	Capacitive/Multi-touch 10 Points
WiFi	2412-2462MHz
Bluetooth	4.0
Audio	MP3, AAC, FLAC, APE, WMA, WAV, OGG
Video	Max support 1080P (1,920 x 1,080)
Camera	Rear 8.0 Mega pixel w/ Auto-Focus Front 2.0 Mega pixel
USB	Micro USB 2.0
Audio output	3.5mm Stereo interface, 0.7W*1 speaker
Button	Power button
Battery	8200mAh
Battery life	Up to 8 hours video (Wi-Fi off)

Power adapter	5V 2A
Dimensions	240mm(H)x168mm(W)x7.6mm(T)
Weight	~520g

Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by **Hummingbird System Inc** may void the FCC authorization to operate this device.

Note: The manufacturer is not responsible for any radio or tv interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.