

VICTROLA™

by *innovative* technology.



5-IN-1 WOODEN MUSIC CENTER

MODEL: VTA-25

INSTRUCTION MANUAL

Please read this instruction manual carefully and keep it for future reference

 
CONTENTS

Contents.....	1
Before Using the Unit.....	1
Safety Instructions.....	2
Specifications.....	3
Proper Disc Use.....	4
Record Handling.....	4
Features and Functions.....	5-6
Remote Control.....	6
Replacing the Stylus.....	7
Record Operation.....	8
CD Operation.....	9-10
Bluetooth Operation.....	11
Aux-In Operation.....	11
Radio Operation.....	11
Troubleshooting.....	12
FCC Statement, Prop 65 Warning, Warranty.....	13-14

BEFORE USING THE UNIT

- As the unit may become warm during operation, always leave sufficient space around the unit for ventilation.
- The voltage supplied to the unit should match the voltage printed on the rear panel. If you are in any doubt regarding this matter, consult an electrician.
- Choose the installation location of your unit carefully. Avoid placing it in direct sunlight or close to a source of heat. Also, avoid locations subject to vibrations and excessive dust, heat, cold or moisture.
- Do not place the unit on an amplifier/receiver.
- Do not open the cabinet as this might result in damage to the circuitry and may cause electrical shock. If a foreign object should get into the unit, contact a service company.
- When removing the power plug from the wall outlet, always pull directly on the plug, never pull from the cord.
- To keep the CD laser pickup clean, be sure not to touch it. Always close the disc tray after inserting or removing a CD.
- Do not attempt to clean the unit with chemical solvents as this might damage the finish. Use a clean, dry cloth.
- Keep this manual in a safe place for future reference.
- **DO NOT MOVE THE UNIT DURING PLAYBACK:** During playback, the disc rotates at high speed. Do NOT lift or move the unit during playback. Doing so may damage the disc or the unit.
- **PLEASE NOTE:** This unit plays Records and CDs Vertically. DO NOT turn the unit horizontally to play either Records or CDs as it could damage the vinyl & discs. To play music, simply place unit on a flat surface or mount securely to a wall.

SAFETY INSTRUCTIONS

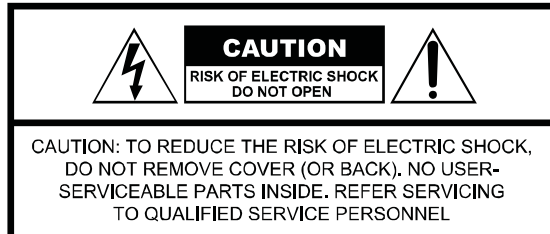

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD. DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION

1. DO NOT REMOVE THE EXTERNAL CASES OR CABINETS TO EXPOSE THE ELECTRONICS. NO USER SERVICEABLE PARTS ARE LOCATED INSIDE THE UNIT.
2. USE OF CONTROLS, ADJUSTMENTS OR PERFORMANCE PROCEDURES OTHER THAN THOSE SPECIFIED, MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

CAUTION

The product should not be exposed to moist areas where water can drip or splash on the unit. Objects filled with liquids, such as vases, should NOT be placed on the product.

Do not install this equipment in a confined space such as a book case, small cabinet, etc.

SPECIFICATIONS

AMPLIFIER

Output Power.....3W*2
Frequency Response50 Hz ~20 KHz

CD PLAYER

Frequency Response....20 Hz to 20,000 Hz(±1dB)

TUNER

Frequency Range
(FM).....87.50 MHz to 108.00 MHz
(AM).....522 KHz to 1710 KHz

RECORD PLAYER

Motor.....DC Servo Motor
Drive System.....Belt Drive
Speed.....33-1/3 RPM, 45 RPM, 78 RPM
Wow and Flutter.....less than 0.25%(WDT)
Cartridge type.....Ceramic Stereo Cartridge

SPEAKER SYSTEM

Unit.....1-way
Impedance.....4 Ohms

**PLEASE CONTACT CUSTOMER SERVICE
FOR REPLACEMENT STYLUS AT
www.ithomeproducts.com/support**

 
GENERAL

Power Requirements.....DC 12V
Power Consumption.....26W
Dimensions
(W x H x D).....16-1/2" x 6-7/8" x 20-5/8"
Weight.....20 lbs

STANDARD ACCESSORIES

Owner's Manual (1x)
Record Fixator (1x)
45 RPM Adaptor (1x)
12V, 2A AC/DC Power Adaptor (1x)

MOUNTING DIAGRAM

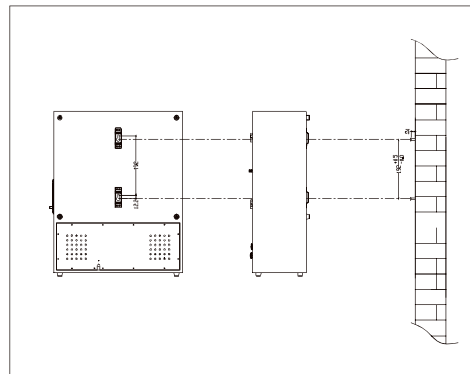

PROPER DISC USE

- **Discs which can be played on this unit:**

- Conventional audio CDs bearing the CD-DA logo on the label:
- Properly finalized CD-R and CD-RW discs.



- Always place the disc on the disc tray with the label side up.
- To remove a disc from its storage case, press down on the center of the case and lift the disc out, holding it carefully by the edges.



How to Remove the Disc



How to Hold the Disc

 
- Should the disc become dirty, wipe the surface radially (from the center hole outward towards the outer edge) with a soft, dry cloth.



- Never use such chemicals as record sprays, antistatic sprays or fluid, benzine or thinner to clean the discs. Such chemicals will do irreparable damage to the disc's plastic surface.
- Discs should be returned to their cases after use to avoid dust and scratches that could cause the laser pickup to "skip."
- Do not expose discs to direct sunlight or high humidity and temperature for extended periods. Long exposure to high temperatures will warp the disc.
- Do not play any disc that is warped, deformed or damaged. Playing such discs may cause irreparable harm to the playing mechanisms.
- CD-R and CD-RW discs are more sensitive to the effects of heat and ultraviolet rays than ordinary CDs. It is important that they are not stored in a location where direct sunlight will shine on them and away from sources of heat such as radiators or heat-generating electrical devices.
- Do not stick papers or protective sheets on the discs and do not use any protective coating spray.

RECORD HANDLING


- Do not touch the grooves on the record. Only handle records by the edges or the label. Make sure your hands are clean. Skin oils from even clean hands can leave a residue on the record surface that will gradually deteriorate the quality of your record.

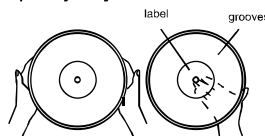

- Keep your records away from dust. Keep them in a cool, dry place.
- To avoid dust and scratches, keep records in the sleeves and jackets when not in use.
- Do not expose records to direct sunlight or high humidity and temperature. Long exposure to high temperatures will warp the record.
- Should the record become dirty, gently wipe the surface in a circular motion, using a soft anti-static cloth.



 FEATURES AND FUNCTIONS

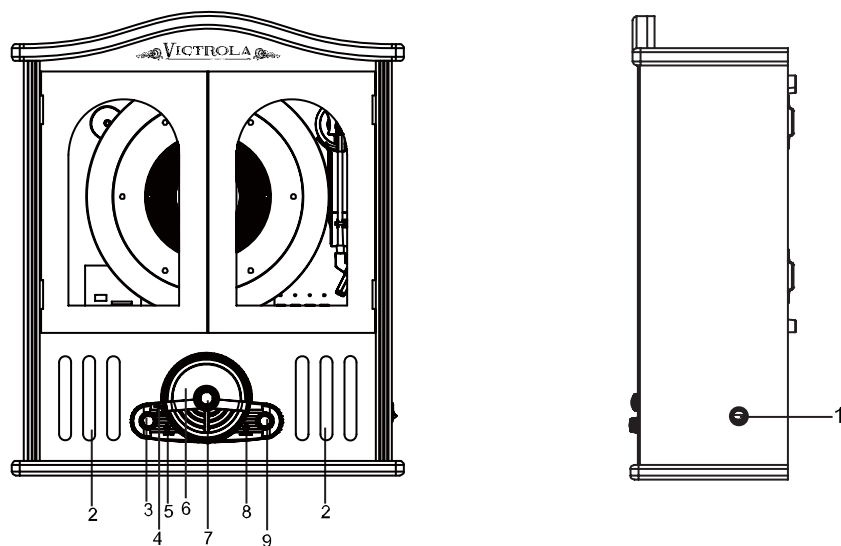

1 DC 12V, 2A INPUT PORT

2 SPEAKERS (STEREO)

3 CD/BT/AUX-PH/TUNER Function Button.

- Turn the Function button to CD position to play a CD.
- Turn the Function button to BT position to play music from a Bluetooth enabled device.
- Turn the Function button to AUX/PH position to play an External audio device or a Record.
- Turn the Function button to TUNER position to listen to the Radio.

4 AM/FM RADIO BUTTON

- PUSH to select AM or FM Radio Mode.

5 LINE-IN PORT

6 TUNING DISPLAY PANEL

7 TUNING KNOB

 
8 EARPHONE JACK

9 VOLUME KNOB

- Turn the knob clockwise to raise the volume.
- Turn the knob counterclockwise to lower the volume.


FEATURES AND FUNCTIONS

- 10 CD TRAY
- 11 CD COVER
- 12 +10 BUTTON (Skip the next 10 songs)
- 13 DN/FR (Down/Fast Rewind) BUTTON
- 14 RANDOM BUTTON
- 15 UP/FF (Up/Fast Forward) BUTTON
- 16 PROGRAM BUTTON
- 17 STOP BUTTON
- 18 PLAY/PAUSE BUTTON
- 19 REPEAT BUTTON
- 20 SPEED SELECTOR BUTTON
- 21 POWER ON/OFF BUTTON
- 22 LED DISPLAY

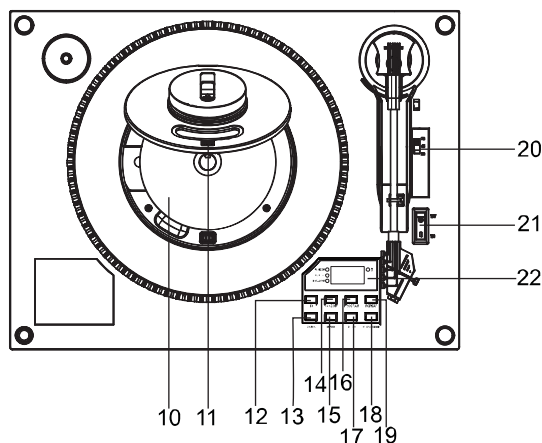

REMOTE CONTROL FOR CD PLAYER

 - R1. PROGRAM
- R2. RANDOM
- R3. REPEAT
- R4. PLAY / PAUSE
- R5. DN/FR (Previous Track)
- R6. DN/FF (Next Track)
- R7. STOP

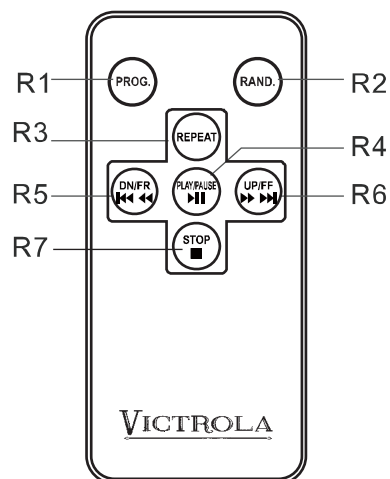

NOTE: All of the buttons on the remote control have the same function as CD buttons on the Unit. The remote control will only function when the unit is in CD Mode

REPLACING THE STYLUS

 
Under normal use, the stylus (needle) will last, however, it is recommended that the stylus be replaced as soon as you notice a change in sound quality. Prolonged use of a worn-out stylus may damage the record. The higher speed of 78 RPM records can wear the stylus at a faster rate.

Caution:

- Do not remove or bend the stylus.
- To avoid injury, do not touch the needle.
- Turn off the unit's power before you replace the stylus.
- Keep out of the reach of children.

Removing an old stylus:


1. Set a screwdriver at the tip of the stylus and push down to the direction "A".

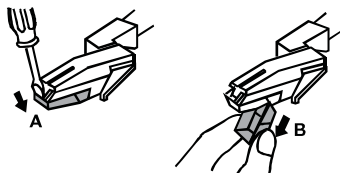

2. Pull the stylus out toward direction "B"


Installing a new stylus

 1. Hold the tip of the stylus and insert the other edge by pressing toward direction "C".
2. Push the stylus up toward direction "D" until it locks at the tip.




RECORD OPERATION

 - 1 TURNTABLE
- 2 TONE ARM HOLDER
- 3 TONE ARM
- 4 3-SPEED SELECTOR
- 5 RECORD FIXATOR




 Before use, detach the stylus guard (white plastic cover) by pulling it straight off the front of the cartridge in the direction of the arrow.

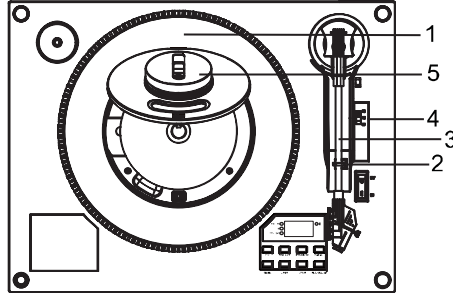



RECORD OPERATION

 1. PUSH the ON/OFF POWER button to turn the unit On.
2. Set the FUNCTION KNOB to the AUX-PH position.
3. Remove the RECORD FIXATOR by pressing the plastic tabs together and pulling the fixator towards you.
4. Put the record on the turntable and place the RECORD FIXATOR back on the unit in order to keep the record from moving or falling off while playing.
5. Select the Record Speed using the 3-SPEED SELECTOR
NOTE: For a 45RPM record, please use included 45 Adaptor located in the top left corner of the unit.
6. Unlock the tone arm from the tone arm support.
7. Move the tone arm gently to the edge of the record (or the starting point of a track).
 - The turntable will begin to turn. Be sure the stylus (needle) is secure.
 - When the tone arm reaches the end of the record it will automatically stop.
 Please manually return the tone arm back to the hold position.
8. Turn the VOLUME KNOB to adjust the volume.





  
PLEASE NOTE: Playing records with doors closed will prevent dust from settling on the turntable.

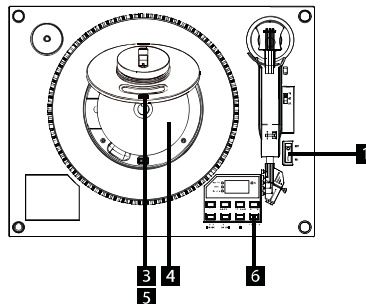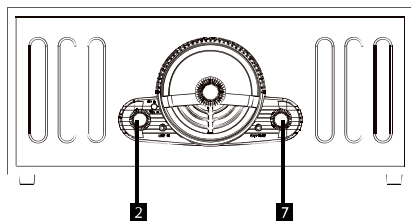CD OPERATION



GETTING STARTED

 1. **PUSH** the **POWER ON/OFF** button to turn the unit On. 
2. Set the function knob (CD/BT/AUX-PH/TUNER) to CD position.
3. Press the **OPEN** on the CD cover to open the CD tray.
4. Place a disc on the tray with the printed label facing up.
NOTE: Never place more than one disc on the tray.
5. Close the CD cover. When the CD begins playing the LCD Display will show the total number of tracks.
6. Press the **PLAY/PAUSE** button to start playback. 
7. Turn the **VOLUME** knob to adjust the volume.



CD OPERATION

1. PAUSE/PLAY BUTTON

 
- Temporarily starts / stops CD playback.

2. STOP BUTTON

- Stops CD playback.

3. DN/FR or UP/FF BUTTON (PREVIOUS or SKIP Track)

- Press the DN/FR Button repeatedly to select a Previous Track.
- To Restart the Track Press the DN/FR Button once.
- To Skip a Track Press the UP/FF Button.
- Press the PLAY/PAUSE button within 5 seconds to start playing the selected track.

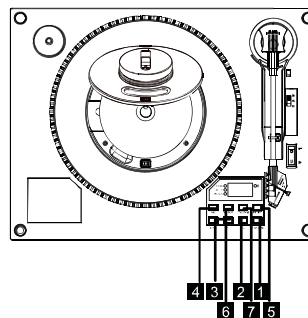

4. +10 BUTTON

- Press to skip 10 tracks at a time.

5. REPEAT BUTTON

- Press once to repeat one single track. The "REPEAT" LED Indicator will Flash.
- Press twice to repeat all tracks. The "REPEAT" LED Indicator will remain lit.
- Press one more time to cancel the repeat function. The "REPEAT" LED Indicator will turn off.

 
6. RANDOM BUTTON

- Shuffles each track during CD playback.
- Press the RANDOM button once and unit will play the tracks randomly and the "RANDOM" LED Indicator will remain lit.
- Press the DN/FR or UP/FF button to play the next tracks in a random order.
- Press the RANDOM button again to cancel the random function and the "RANDOM" LED Indicator will turn off.

7. PROGRAM BUTTON

1. Press PROGRAM to set your own playlist on the CD.
 - Once pressed, the "PROGRAM" LED indicator will begin to flash while the display will show "P01".
2. Use the DN/FR & UP/FF buttons to select your first desired track.
 - Then press the PROGRAM button to save it as the first programmed song.
 - To save another track, repeat steps 1 & 2 above for each. Once a track is Programmed the "MEMORY" LED Indicator will remain lit on that track.
 - The unit can program up to 20 tracks. To listen to the Programmed tracks, use the PLAY/PAUSE & STOP Buttons normally.
 - Press the STOP button twice on a selected programmed track to erase it, the "MEMORY" LED Indicator will then turn off.
 - If the power is turned off or the function knob is set to other modes (BT/AUX-PH/TUNER), the programmed tracks will automatically be erased.

NOTE: All of the buttons on the remote control have the same function as CD buttons on the Unit. The remote control will only function when the unit is in CD Mode.

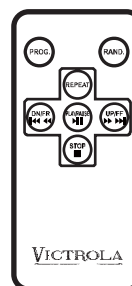

BLUETOOTH OPERATION

An external device with Bluetooth Connectivity can be wirelessly connected to this turntable using the Bluetooth function.

1. Push the POWER ON/OFF Button to turn the unit On.
2. Turn the FUNCTION KNOB to the BT (Bluetooth®) position, the blue LED light will begin to flash.
3. Turn your external device's Bluetooth Setting ON. Wait a moment, then look for the Bluetooth pairing name "VTA-25".
4. Select the Bluetooth pairing name, to connect the unit. Once connected, the blue LED will stop flashing. If you are asked for a passcode, enter "0000" to connect to the unit.
5. You are now connected to your external device via Bluetooth.
6. Rotate the VOLUME CONTROL KNOB to adjust the sound level.

AUX-IN OPERATION

 
An external (auxiliary) audio source (i.e. personal CD/MP3 Player/Mobile phone or computer) can be connected to this apparatus via the LINE-IN PORT.

1. Plug a detachable Aux Cable (not provided) into the LINE-IN port on the function panel.
2. Turn the FUNCTION KNOB to the AUX-PH position.
3. Plug the other end of the Aux Cable into the Headphone or Line Out socket of your External Source.
4. Power ON the unit by turning the VOLUME CONTROL KNOB clockwise.
5. Rotate the VOLUME CONTROL KNOB to adjust the sound level.

EARPHONE OPERATION


Plug the earphone jack into the EARPHONE PORT on the function panel to listen to the record. The built-in speaker will stop playing once the earphones are plugged in.

NOTE: For best performance and product maintenance, unplug the turntable when not in use.

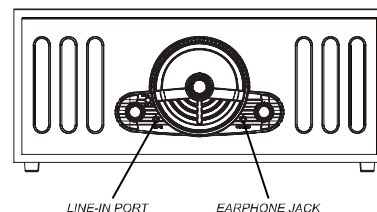

RADIO OPERATION

 1. Push the POWER ON/OFF Button to turn the unit On.
2. Turn the FUNCTION KNOB to the Tuner position.
3. Select AM or FM by pushing the AM/FM BUTTON.
 - When the AM/FM Button is pushed in, it is in FM Radio Mode.
 - When the AM/FM Button is out, it is in AM Radio Mode.
4. Use the TUNER DIAL to select your desired radio station.
 - In FM Radio Mode when the Tuner has a strong connection the Dial LED will glow orange.
5. Rotate the VOLUME CONTROL KNOB to adjust the sound level.

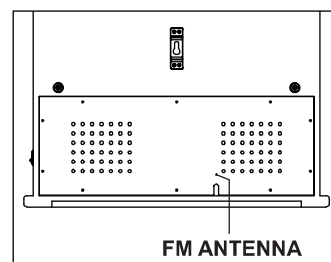

NOTE: If the Reception is poor for an AM Broadcast, re-position the unit to find the best position for AM stations. If the Reception is poor for an FM Broadcast, extend and gently re-position the FM antenna so you can receive better reception.

TROUBLESHOOTING

IF YOU EXPERIENCE ANY PROBLEMS WITH THE UNIT, PLEASE TAKE A MOMENT TO LOOK THROUGH THIS CHART AND SEE IF ANY OF THE PROBLEMS CAN BE SOLVED BEFORE CONTACTING CUSTOMER SERVICE.

NO POWER

- Check the connection to the AC power source. Check and make sure the AC source is not operated by a wall switch and if it is that the switch is turned on.
- Make sure there is power to the AC outlet by plugging in and testing with another item such as a lamp or fan.

NO SOUND

- Adjust the volume using the VOLUME KNOB.

THERE IS STATIC WHEN PLAYING MUSIC

- The unit may be too close to a TV set or similar appliance.
- Relocate the unit further away from the appliance, or turn all other appliances off.

TUNER CANNOT LISTEN TO ANY STATION, OR SIGNAL IS TOO WEAK

- Tune in the station properly.
- If a TV is near the unit, turn it off.
- Rotate the unit or antenna wire for the best reception position.

RECORD PLAYER WILL NOT PLAY

- Turn the VOLUME knob clockwise, and turn the function to AUX/PH mode.
- Detach the stylus guard. (The stylus guard is a white plastic cover that protects the stylus during transportation.) Failing to remove this guard will not allow the needle to contact the grooves of the record and no sound will be heard.
- If the stylus is worn out, change the stylus. Select the correct playback speed.

RECORD / CD IS SKIPPING

- Place the unit on a stable surface to avoid vibration and shock. Make sure the unit is level both front to back and side to side. Clean the surface of the record/disc. Don't use scratched, damaged or warped records/discs.

CD PLAYER WILL NOT PLAY

- Turn the VOLUME knob clockwise, and turn the function to CD mode.
- Load a disc with the artwork facing up and playback side facing down.
- If the disc is dirty, clean the surface of the disc.
- Make sure the disc is NOT a blank disc or a prerecorded CD-R/CD-RW.
- The unit will NOT play unfinalized CD-R/CD-RW discs.
- Finalize a CD-R/CD-RW disc in a CD recorder and try again.

BEWARE OF CONDENSATION

When the unit (or a record/disc) is moved from a cold to a warm place, or used after a sudden temperature change, there is the danger of condensation. Vapor in the air could condense on the internal mechanism, making correct operation erratic or impossible. To prevent this, or if this occurs, leave the unit turned off for one or two hours.

MAINTENANCE - IF NORMAL OPERATION CANNOT BE OBTAINED, UNPLUG THE POWER CORD FROM THE OUTLET AND PLUG IT IN AGAIN.

Always keep the turntable clean. If the surface of the unit gets dirty, wipe with a soft cloth or use a diluted mild liquid soap. Be sure to remove any excess liquid completely. Do not use thinner, benzine or alcohol as they may damage the surface of the unit. Allow the surface of the unit to dry completely before using.

FCC STATEMENT

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

"This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body."

IC Caution

IC Caution.

RSS-Gen Issue 4 Nov 2014"&"CNR-Gen 4e édition Novembre 2014:

"This device complies with Industry Canada's licence-exempt RSSs.

Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device."

« Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux

conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement. »

CALIFORNIA PROP 65 WARNING

"WARNING" This product contains a chemical known to the State of California to cause birth defects or other reproductive harm. For more information on these regulations and a list of chemicals, log on the following website address:

<http://www.oehha.ca.gov/prop65.html>

CALIFORNIA PROP 65 WARNING

"WARNING" This product contains a chemical known to the State of California to cause birth defects or other reproductive harm. For more information on these regulations and a list of chemicals, log on the following website address:
<http://www.oehha.ca.gov/prop65.html>

WARRANTY

Victrola is a registered trademark of Innovative Technology Electronics Corp.

Innovative Technology Electronics Corp.

Limited Warranty: 90 Days Labor, One Year Parts

Innovative Technology Electronics Corp. (IT) warrants the product to be free from "Defects" in materials under normal use for a period of "One Year" from the date of the original purchase. The Warranty is "Not" transferable. IT agrees, within the initial "90 Day" period, to repair or replace the product if it is determined to be defective at "No Charge". It is further agreed that IT will cover the cost to repair or replace damaged "Parts" only for a total period of "One Year" from the date of the original purchase. The warranty does not cover cosmetic damage, antennas, AC cords, cabinets, headbands, ear-pads, or damage due to line power surges, connection to improper voltage supply or settings, misuse, mishandling, accident, acts of God or attempted repair by an unauthorized service agent.

To obtain service, the purchaser MUST present an original sales receipt / proof of purchase.

Please contact us at www.ithomeproducts.com to request an RMA (Return Material

Authorization) number to return products for service or replacement. Returns without an RMA number on the package will be refused and returned to sender. Upon receipt of the returning item and our full inspection (IT) may issue a replacement to customer for the same item or of one that has equivalent value and features. To return an item, supply full name, return address, phone number, item purchased, receipt of purchase and reason for return to obtain RMA number.

All returns must be in the original packaging or reasonable substitute to prevent damage. Customer "Must" include full name, shipping address and telephone number inside of package. No return will be shipped back to a PO Box or APO address.

Please include your check or money order in the amount of:

- **USD \$5.00 for items \$10.00 to \$39.99 (Price Paid Per Unit)**
- **USD \$10.00 for items \$40.00 to \$99.99. (Price Paid Per Unit)**
- **USD \$16.00, for items \$100.00 and up. (Price Paid Per Unit)**
- **Shipping fees are non-refundable**

to be payable to Innovative Technology Electronics Corp. (for handling and return shipping charges) (IT) will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any / all of the necessary information. Send all inquiries or RMA request via our website www.ithomeproducts.com/support.

Innovative Technology Electronics Corp.
1 Channel Drive
Port Washington, NY 11050
Toll free: 1-877-483-2497
Website for support: www.ithomeproducts.com/support

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER, (IT) SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Made In China.