
## **ATTENTION**

When you receive or use this product, the following malfunctions may occur. You can troubleshoot the problem by following the steps below.

## Malfunction of Remote Control

When there are 2 or more walking pads of our brand, or a new remote control to be set, you may need to rematch the remote control to the machine by following steps:

- 1. Hold the remote controller and aiming it towards the screen.
- 2. Push the Power button and hold it.
- 3. Turn on the power switch of walking machine.
- 4. After 5 seconds, the machine makes a quick beep sound and showes "0000".
- 5. Press Start button, then screen showes current controller code.
- 6. Shut down the machine, then restart.
- 7. Now the remote controller is rematched to the machine, you can control the machine with it now.

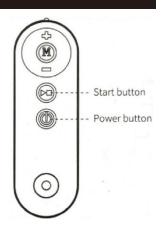

## **SPECIFICATION**

Remote control No.	XHC-K077
Remote control voltage	DC 3V
Remote control Working frequency	433.92MHz
Remote control Size	120mm (L) * 39mm (W) * 11.8mm (H)



## FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.