



MODEL : BH389A

The diagram illustrates the components of the charging case and the earbuds. The top row shows the closed charging case with a 'Charging port' label pointing to the bottom, and the open case showing the earbuds with an 'LED light' label pointing to the front of the right earbud. The bottom row shows a single earbud with three labels: 'MFB' pointing to the top, 'LED light' pointing to the front, and 'Talking mic' pointing to the side. Below this, another earbud is shown with 'L/R logo' pointing to the top and 'Magnetic charging contact pins' pointing to the bottom.

EN:

Take out the earphones, they automatically enter the pairing mode when the blue and red lights start flashing alternately, and then select "Mpow M7".

Note: The earbud will reconnect to the paired device by priority. If you want to pair to the second smartphone, please disconnect Bluetooth on the paired smartphone.

FR:
Sortez les écouteurs, ils entreront automatiquement en mode de jumelage lorsque les voyants bleu et rojo clignotent en alternance, puis sélectionnez « Mpow M7 »

Remarque: l'oreillette se reconnectera par priorité au téléphone portable jumelé. Si vous voulez jumeler l'autre téléphone portable, désactivez Bluetooth du téléphone jumelé.

ES:
Saque los auriculares, ingresan automáticamente en el modo de emparejamiento cuando las luces azul y rot comienzan a parpadear alternativamente, y luego seleccionan "Mpow M7"
Nota: El auricular volverá a conectarse al dispositivo emparejado por prioridad. Si necesita conectarse al segundo teléfono inteligente, desactive Bluetooth en el teléfono inteligente emparejado.

IT:
Estrarre gli auricolari, entrano automaticamente nella modalità di associazione quando le luce blu e rosso iniziano a lampeggiare alternativamente, poi selezionare "Mpow M7"
Nota: l'auricolare si riconnetterà al dispositivo accoppiato per priorità. Se si desidera accoppiare il secondo smartphone, disabilitare Bluetooth sullo smartphone associato.

EN:

Volume +: press and hold the MFB button of Right earbud to turn up the volume increasingly.

Volume -: press and hold the MFB button of Left earbud to turn down the volume decreasingly.

DE:

Lautstärke +: Halten Sie die MFB-Taste am rechten Kopfhörer gedrückt, um die Lautstärke zu erhöhen.

Lautstärke -: Halten Sie die MFB-Taste am linken Kopfhörer gedrückt, um die Lautstärke zu verringern.

FR:

Volume +: Maintenez le bouton MFB de l'écouteur droit plus longtemps pour augmenter le volume.

Volume -: Maintenez le bouton MFB de l'écouteur gauche plus longtemps pour baisser le volume.

ES:
Volumen +: mantenga presionado el botón MFB del auricular derecho para subir el volumen.
Volumen -: mantenga presionado el botón MFB del auricular izquierdo para bajar el volumen de manera decreciente.

IT:
Volume +: premere e tenere premuto il pulsante MFB dell'auricolare destro per aumentare il volume.
Volume -: premere e tenere premuto il pulsante MFB dell'auricolare sinistro per abbassare il volume.

EN:

- 01 Answer/Hang up**
Click the MFB button on the Right or Left earphone once.
- 02 Reject**
Keep pressing the MFB button on the Right or Left earphone for 1s.
- 03 SIRI**
Triple-click MFB button on the Right earphones.

DE:

01 Antworten /auflegen

Klicken Sie einmal auf die MFB am rechten oder linken Ohrhörer.

02 Ablehnen

Halten Sie die MFB am rechten oder linken Kopfhörer 1 Sekunde lang gedrückt.

03 SIRI
Drücken Sie die MFB am rechten Ohrhörer dreimal

FR:

01 Répondre / raccrocher l'appel
Cliquez une fois sur le bouton MFB de l'écouteur droit ou gauche pour le répondre / raccrocher.

02 Rejeter l'appel
Appuyez longuement sur le bouton MFB de l'écouteur droit ou gauche pour 1 seconde et vous pouvez rejeter l'appel.

03 Demandez-le à Siri
Appuyez 3 fois sur le bouton MFB de l'écouteur droit pour activer Siri.

ES:

01 Responder / Cuelga
Haga clic en el botón MFB en el auricular derecho o izquierda una vez.

02 Rechazar
Mantenga presionado el botón MFB en el auricular derecho o izquierda durante 1s.

03 SIRI
Haga clic en el botón MFB en los auriculares derechos.

01 Rispondi / riaggancia
Premere una volta sul pulsante MFB sull'auricolare destro o sinistra.

02 Rifiuta

Premere a lungo il pulsante MFB sull'auricolare destro o sinistro per 1 secondo.

03 SIRI
Premere il pulsante MFB sull'auricolare destro 3 volte.

EN:
In the state of charging, simultaneously press and hold both MFB buttons for 5s.

DE:
Halten Sie im Ladezustand gleichzeitig beide MFB-Tasten für 5 Sekunden lang gedrückt.

FR:
En mode de charge, maintenez simultanément les deux boutons
MFB enfoncés pendant 5 secondes.

ES:
En el estado de carga, presione simultáneamente y mantenga presionados ambos botones MFB durante 5 segundos.

IT:
Nello stato di carica, premere contemporaneamente i pulsanti MFB dei due auricolari per 5 secondi.

[illegible]

EN: Do not put the earbuds in the charging case when the earbuds are wet.
DE: Legen Sie die Kopfhörer NICHT in die Ladebox, wenn die Kopfhörer nass sind.
FR: Ne pas mettre les écouteurs dans le boîtier de charge lorsque celles-ci sont humides.
ES: No cargue cuando los auriculares estén mojados.
IT: Non inserire gli auricolari nella custodia di ricarica quando gli auricolari sono bagnati.

 (Waste Electrical & Electronic Equipment)

This Marking shown on the product or its literature, indicate that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household user should

contact either the retailer where they purchased this product or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not properly installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

www.xmpow.com | support@xmpow.com
MPOW TECHNOLOGY CO., LTD
Copyright © MPOW Inc. All rights reserved