
User Manual

1 Welcome

E1 is packaged with the following state of the art features:

- VGA Camera
- 1.8 inch screen
- Music Player
- FM Radio
- Video and FM Recording
- Dual SIM (GSM + GSM)
- T-Flash Card support (up to 32 GB)
- Spanish, Portuguese ,English Language Support

Important:

1. Please read the contents of this manual to fully utilize the features of this phone.
2. Please read the Guidelines section provided with this Reference guide.

Table of Contents

1 Welcome	2
2 Know Your Phone	6
2.1 Keys and Parts.....	6
2.2 Insert SIM Card	7
2.3 Keys and Parts.....	7
2.4 Insert Sim Card	7
2.5 Insert Memory Card	7
3 Basic Operations.....	8
3.1 Switch Phone ON/OFF	8
3.2 Unlock the phone	8
3.3 Make a call.....	8
4 Notable Features	9
4.1 Secure your Phone.....	9
4.2 Blacklist.....	9
5 Call logs	9
5.1 Call logs.....	9
6 Phonebook	10
6.1 Create Contact.....	10
6.2 Write message	10
6.3 Call	10
6.4 Delete	10
6.5 Delete multiple	11
6.6 Delete all.....	11


6.7 Delete from Phone	11
6.8 Delete from SIM1	11
6.9 Delete from SIM2	11
6.10 Move contacts	12
6.11 Copy contacts	12
6.12 Add to Blacklist	12
6.13 Add to Whitelist	12
6.14 Import/Export	12
6.15 Send vCard	12
6.16 Advanced settings	13
6.17 Groups	13
7 Camera	14
8 Messages	14
8.1 Write message	14
8.2 Templates	14
8.3 Broadcast messages	14
8.4 Voice mail server	15
8.5 Settings	15
8.6 Message capacity	15
9 Multimedia	15
9.1 Video Recorder	15
9.2 Video Player	16
9.3 Music player	16
9.4 FM Radio	16
9.5 Image Viewer	17
9.6 Recorder	17

10 File Manager	17
10.1 File Manager.....	17
11 Organizer	18
11.1 Bluetooth	18
11.2 Calendar.....	18
11.3 Alarm	18
11.4 World Clock.....	18
11.5 Flashlight.....	18
11.6 Games.....	19
11.7 Calculator.....	19
11.8 Unit Conversion	19
11.9 Timer	19
11.10 Ebook.....	19
12 Settings	20
12.1 Call Settings	20
12.2 Phone settings	20
12.3 Display settings.....	21
12.4 Security settings.....	21
12.5 Profiles.....	21
12.6 Network Settings	21
13 Internet	22
14 Health and Safety Precautions	22
15 Taking Care of Your Device	24

2 Know Your Phone

2.1 Keys and Parts

Important keys and parts are listed here for you to use the phone better.

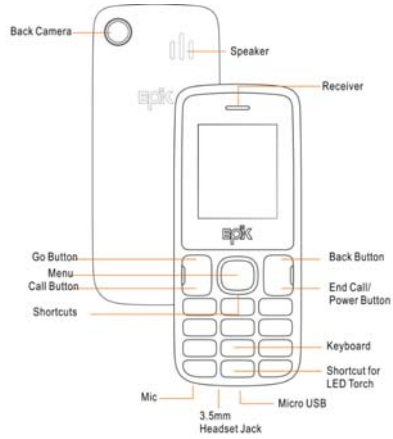

2.2 Insert SIM Card

The phone is a Dual SIM mobile phone allowing you to use two SIM Cards.

1. Switch off the mobile phone and remove the rear Insert SIM Card

2.3 Keys and Parts

2.4 Insert SIM Card

1. Switch off the phone and remove the rear cover and the battery.
2. Insert the SIM card into the slot.
3. Finally, insert the battery and the rear cover of the mobile phone.

2.5 Insert Memory Card

1. Switch off the phone and remove the rear cover and the battery.
2. Insert the memory card into the slot.
3. Finally, insert the battery and the rear cover of the mobile phone.

Note: Use only compatible memory cards approved by this phone. Incompatible cards may damage the slot or corrupt the data stored in the card.

3 Basic Operations

3.1 Switch Phone ON/OFF

To switch ON/OFF your phone, press and hold the **End key** for a few seconds.

3.2 Unlock the phone

If you do not use the phone for a while, the screen is replaced with a locked screen.

1. Press Left key and # key to activate the screen.

3.3 Make a call

You can make a call in the following ways:

- Enter the desired number in standby mode and press the **Call key** to make the call.
- Go to **Menu > Phonebook** and then select and dial the desired number.
- Just press the **Call key** to dial the contacts listed in Call logs.
- You can also dial a contact from the messages.

4 Notable Features

4.1 Secure your Phone

Menu> Settings > Security settings> Phone Locked

Let you lock/unlock your phone via a security password which you can change anytime.

The default security code to unlock the phone is 0000.

Note: After you activate the phone lock, you would be asked for a password when you power on your phone next time.

4.2 Blacklist

Menu > Settings > Security > Blacklist

Blacklist undesired SMS senders and caller so that you do not receive SMS and calling from them.

5 Call logs

5.1 Call logs

Menu > Call logs

Tip: Directly access the call logs of by pressing the **Call** key in idle mode.

The Call log lists the calls you have recently dialed, received, missed for SIM1 and SIM 2.

Press the Left/Right navigation keys to access various call logs and work on the call history.

6 Phonebook

Your phonebook stores all your saved contacts for anytime use. Your phonebook data can be stored in your SIM card or your phone memory. You can manage your contacts from here.

Menu > Phonebook

6.1 Create Contact

Menu > Phonebook > Left Key > New

6.2 Write message

Menu > Phonebook> Left Key>Write message

6.3 Call

Menu > Phonebook > Left Key>Call

6.4 Delete

Menu > Phonebook > Left Key>Delete

6.5 Delete multiple

Menu > Phonebook > Left Key> Delete multiple

In the Contacts list, select the entry you want to delete.

6.6 Delete all

Menu > Phonebook > Left Key> Delete all

Clear all contacts in the contact list.

6.7 Delete from Phone

Menu > Phonebook > Left Key> Delete from Phone

In the Contacts list, select the entry you want to delete in phone.

6.8 Delete from SIM1

Menu > Phonebook > Left Key> Delete from SIM1

In the Contacts list, select the entry you want to delete in SIM1.

6.9 Delete from SIM2

Menu > Phonebook > Left Key> Delete from SIM2

In the Contacts list, select the entry you want to delete in SIM2.

6.10 Move contacts

Menu > Phonebook > Left Key > Move

In the Contacts list, select the entry you want to move.

6.11 Copy contacts

Menu > Phonebook > Left Key> Copy

In the Contacts list, select the entry you want to copy to SIM or phone.

6.12 Add to Blacklist

Menu > Phonebook > Left Key > Add to Blacklist

Blacklist undesired SMS senders and caller so that you do not receive SMS and calling from them.

6.13 Add to Whitelist

6.14 Import/Export

Menu > Phonebook > Left Key > Import/Export

You can copy, Import or Export contacts entries stored in the SIM card to the phone memory and vice-versa.

6.15 Send vCard

Menu > Phonebook> Left Key > Send vCard

6.16 Advanced settings

Speed dial

Menu > Phonebook > Left Key >Advanced settings > Speed dial

Set speed dial and view memory status.

Memory status

Menu > Phonebook > Left Key > Advanced settings > Memory status

Check the memory status of SIM, and Phone.

Own number

Menu > Phonebook > Left Key >Advanced settings> Own number

Set names of your own number.

Service number

Menu > Phonebook > Left Key >Advanced settings> Service number

6.17 Groups

Menu> Phonebook > Groups

Press the Left/Right navigation key to access the Group tab. Setup a list of numbers with similar preferences such as ringtone, profile etc.

7 Camera

Press the left key in camera mode to choose various settings

Shortcut keys: Press the number keys on the phone's keypad to choose various settings.

8 Messages

8.1 Write message

Menu > Messages > Write message > New SMS/MMS

You can compose and send SMS/MMS. Pressing the **Left Key** during/after composing the message gives you a host of messaging features.

8.2 Templates

Menu > Messages > Templates

Enter into preset message templates and use them. These preset templates can save you time if the theme of your message is the same as those existing in the template.

8.3 Broadcast messages

Menu > Messages > Broadcast messages

8.4 Voice mail server

Menu > Messages > Voice mail server

You can activate voicemail service to redirect your incoming calls (based on your call settings) to a voicemail server and retrieve them later via SMS alerts.

To divert incoming calls to a voicemail server, go to Settings>Call settings > Call divert> SIM selection>choose the desired call divert condition> Activate> Divert to voicemail/Divert to number.

8.5 Settings

Menu > Messages > Options>Settings

You can set your desired parameters for SMS, push message and others.

8.6 Message capacity

Menu > Messages >Options> Message capacity

View the memory status of your SMS.

9 Multimedia

9.1 Video Recorder

Menu > Multimedia > Video Recorder

Press the left key in camera mode to choose various settings

Shortcut keys: Press the number keys on the phone's keypad to choose various settings.

9.2 Video Player

Menu > Multimedia > Video Player

Let you play videos stored in your phone or memory card.

Press 2 key while playing a video to change the display mode.

9.3 Music player

Menu > Multimedia > Music Player

The phone comes with an inbuilt audio player that plays all your favorite songs stored in the phone memory or memory card.

- While in music mode, press the Left key to choose various music options
- **Adjust Volume:** Press * and # keys /Press Up keys and down keys to adjust volume

9.4 FM Radio

Menu > Multimedia > FM radio

Your phone comes with an FM radio to let you listen to FM channels.

- Go to Options> Search Channels> Auto Search to fill up

the channels.

- Press the number keys on your keypad in accordance to the channel list.
- Press OK key to start/stop the radio.
- Press the Up or Down key to increase/decrease the volume.
- Press the Left key for various radio options.

9.5 Image Viewer

Menu > Multimedia > Image Viewer

Let you to view your saved images. You can also send the images via MMS or Bluetooth or use it as wallpaper, etc.

9.6 Recorder

Menu > Multimedia > Recorder

You can record surrounding sounds using this feature.

10 File Manager

10.1 File Manager

Menu > File Manager

To manage the space of phone or memory card.

11 Organizer

11.1 Bluetooth

Menu > Organizer > Bluetooth

Open the Bluetooth, for file transfer and acceptance.

11.2 Calendar

Menu > Organizer > calendar

To arrange your journey according to calendar.

11.3 Alarm

Menu > Organizer > Alarm

To use the alarm service available with your mobile phone.

11.4 World Clock

Menu > Organizer > World Clock

11.5 Flashlight

Menu > Organizer > Flashlight

- To turn on/off Flashlight
- long press number key 0 to turn flashlight on or off

11.6 Games

Menu > Organizer > Games

You may play the built-in games and perform the game.

11.7 Calculator

Menu > Organizer > Calculator

To provide a calculator with 4 basic functions to facilitate simple calculations.

11.8 Unit Conversion

Menu > Organizer > Unit Conversion

11.9 Timer

Menu > Organizer > Timer

Set up time, time will have ring tone hint.

11.10 Ebook

Menu > Organizer > Ebook

Tread TXT files on the card

12 Settings

Choose various preferences to customize your handset according to your requirements. You can set:

- Call Settings
- Phone Settings
- Display Settings
- Security Settings
- Profiles
- Network Settings

12.1 Call Settings

Menu > Settings>Call settings

You can set Call divert, Call waiting, Call barring, Hide ID etc.

12.2 Phone settings

Menu > Settings>Phone settings

To perform the Date & time, Language settings, Shortcuts, Schedule power on/off, Restore factory settings.

12.3 Display settings

Menu > Settings>Display settings

Perform related Settings shown as switch Animation effect, wallpaper settings, idle display settings, backlight and the backlight time, key backlight time setting.

12.4 Security settings

Menu > Settings>Security settings

Execute related the SIM1/2 security, mobile security, automatic keyboard lock, and end keys locked fast, anti-theft tracking and fixed dialing, privacy protection.

12.5 Profiles

Menu > Settings>Profiles

You can select and set different scenarios, such as conference mode, etc.

12.6 Network Settings

Menu > Settings>Network Settings

You can set connectivity including Network account, Network selection, GPRS Service.

13 Internet

Menu >Internet

To access this menu, enter the Main Menu in the standby mode and then select Internet. You can use the network-related services with this function.

14 Health and Safety Precautions

Please read these simple guidelines. Not following them may be dangerous or illegal.

SAR Compliance

- Your phone is designed not to exceed the limits of emission of radio waves recommended by international guidelines.
- SAR (specific absorption rate) is the measurement of body-absorbed RF quantity when the phone is in use. SAR value is ascertained according to the highest RF level generated during laboratory tests.
- The SAR value of the phone may depend on factors such as proximity to the network tower, use of accessories or other accessories.

SAR Recommendations

- Use a wireless hands-free system (headphone, headset) with a low

power Bluetooth emitter.

- Please keep your calls short and use SMS whenever more convenient. This advice applies especially to children, adolescents and pregnant women
- Prefer to use your cell phone when the signal quality is good.
- People having active medical implants should preferably keep the cell phone at least 5mm away from the implant.
- Maintain a preferable distance of 5 mm from the device.

Safe Driving

- Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit.
- Please do not put the phone onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.

During Flight

- Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone during a flight.

In Hospitals

- Your Phone's radio waves may interfere with the functioning of inadequately shielded medical devices. Consult a physician or the

manufacturer of the medical device to determine whether they are adequately shielded from external Radio Frequency. Switch off your device when regulations posted instruct you to do so.

- To avoid potential interference with implanted medical devices such as a pacemaker or cardioverter defibrillator:
- Always keep your phone at least 15.3 centimeters (6 inches) from the medical device.
- Do not carry the wireless device in a breast pocket.
- Turn off the phone if there is any reason to suspect that interference is taking place.
- Follow the manufacturer directions for the implanted medical device.
- If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

Unsafe Areas

- Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and chemical preparations, or any other dangerous goods are stored.

15 Taking Care of Your Device

Your device is a product of superior design and craftsmanship and should be

handled with care: The following suggestions will help you protect your phone:

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits. If your device does get wet, remove the battery without turning on the device, wipe it with a dry cloth and take it the service center.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not attempt to open the device other than as instructed in this guide. Repairing this phone by yourself other than our authorized service agents/centers goes against the warranty rules.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time.

Battery Recommendations:

- Please put the battery in a cool and well-ventilated place out of direct sunlight. We recommend you to charge the battery at room temperature range.
- Batteries have life cycles. If the time that the battery powers equipment becomes much shorter than usual, the battery life is at an end. Replace the battery with a new battery of the same make and specification.
- Do not discard the battery with household trash. Please dispose of used battery according to your local environmental laws and guidelines.
- Use manufacturer approved batteries, chargers, accessories and supplies. This phone will not be held responsible for user's safety when using unapproved accessories or supplies.

Recycle Your Handset



The WEEE logo (shown at the left) appears on the product (battery, handset, and charger) to indicate that this product must not be disposed of or dumped with your other household wastes. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste.

Specified collection points for recycling of such hazardous waste. Collection and proper recovery of your electronic waste equipment at the time of disposal will allow us to help preserve the environment. Recycling of the electronic waste equipment will ensure safety of human health and environment.

Disclaimers

1. The colors and specifications shown/mentioned in the user manual may differ from the actual product. Images shown are for representation purpose only. Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.
2. We keep the right to make modifications to any of the content in this user guide without public announcement in advance. The content of

this manual may vary from the actual content displayed in the mobile phone. In such a case, the latter shall govern.

Copyrights

All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of this phone is strictly prohibited.

FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If

this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.