mibro


Mibro Earbuds 5 用户手册

User Manual

Thank you for purchasing this product, before using, please read carefully and strictly follow the instructions and precautions and keep it in a safe place for reference.

Note: Please fully charge it with the charging case before the first use when you receive the product.

Product Overview

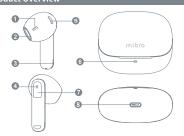

- 1 Tone hole
- 2 Soundhole
- Charging Pin

- Microphone
- 6 Tone hole
- 6 Charging compartment status indicator
- Multi-function Button
- **®** USB-C Charge input

Charging

Please put the buds into the box before the first use, and connect the charging cable with the charging box to fully charge.

- Put the buds into the corresponding slot to ensure that the charging contact of the buds contacts the metal sheet.
- The white light is always on when the buds charging.
- When the charging case charging case white light flashes quickly to indicate low power, please charge,
- When the battery voltage is lower than 3.1V, the charging compartment light goes off.

When the charging box is low power, the light goes off, please charge.

- When the white light of the charging case flashes, it means that the earbuds are charging:
- When the charging case charging compartment. the white light of the charging compartment is solid to indicate that the battery is fully charged.
- Connect USB adapter to charge it
- (charging current shall not exceed 1A).
- If it is not used for a long time, it shall be charged at least once every three months.

Getting Starts



1) Open the cover of the charging box and take out the double buds for wearing. The buds will automatically turn on. When prompt tone is heard, the buds will enter the Bluetooth pairing mode.

2 Open your mobile phone system Bluetooth, search for the Bluetooth name "Mibro Farbuds 5" and click the device name to pair. The buds will prompt tone if the pairing is successful

3 The buds will record the last connection status of the device. Take out two buds and wear them properly, you will hear prompt tone indicating that both buds are connected and the device music can be played normally.

Functions

Incoming call status

Double Press: Double tap on any headset



Wake up voice assistant Long press left and right ear



Music status

Double Pres Play/Pause



Previous Three strikes to the left ear. Next song Three strikes to the right ear.



Getting Off

The earbuds turn off automatically if:

- ① You put earbuds back to the charging case. ② When earbuds leave the charging case, but
- haven't connect to any devices within 5 minutes.

 ③ When the earphone battery is low
- (please charge it in time).



Safety Instructions

Before using and operating the equipment, read and observe the following precautions to ensure optimal performance and to avoid dangerous or illegal situations.

- Product information and certification labels are located inside the charging case.
 To prevent possible hearing damage, do not use this product at high volume levels
- To prevent possible hearing damage, do not use this product at high volume levelfor extended periods of time.
 Please observe the relevant regulations in your region or country and do not use
- this product while driving.

 Do not disassemble, hit, crush, put into fire or high temperature environment,
- Do not alsassemble, nit, crush, put into fire or night emperature environment, avoid crushing or cutting the battery mechanically, which may lead to explosion.
- The product contains a non-removable lithium battery, please do not replace the battery yourself to avoid damage to the battery or the device. The battery can only be replaced by an authorized service center and must be replaced with the same type of battery, replacing the battery with an incorrect type will damage the protective measures, resulting in fire, explosion, battery leakage, etc. Do not continue to use the battery if it is severely inflated.
 Do not disoose of the old batteries in household carbase o. Disoose of the
- equipment and used batteries as required by local laws and regulations.

 Do not use this product in thunderstorms, which can cause the equipment to work
- abnormally and increase the risk of electric shock.
- Do not subject the battery to extremely high temperatures or low air pressure.
- This product is not a toy, and the body and accessories are not intended to be used as a toy.
- This product is not a toy, the product body and accessories contain small parts that may cause children to apphyxiate or cause other injuries.
- This product is not a toy, and the small parts contained in the product body and accessories may cause children to suffocate or cause other injuries, so please keep the product out of children's reach

If symptoms such as redness and swelling appear on the skin at the site of contact, discontinue use immediately and consult a physician.



Name and content of hazardous substances

	Hazardous substances					
Part name	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Earbuds	0	0	0	0	0	0
Battery	X	0	0	0	0	0
Charge Box	0	0	0	0	0	0

This table is prepared in accordance with SJ/T 11364-2014.

O Indicates that the content of the hazardous substance in all homogeneous materials of the component is below the limit specified in GB/T 26572.

It means that the content of the hazardous substance in at least one homogeneous material of the component exceeds the limit specified in GB/T 26572.

This product meets the ROHS environmental protection requirements: there is no mature technology in the world to replace or reduce the lead content of some electronic components of circuit components, steel and copper alloys.



The numbers within this logo indicate that the product (except batteries), under normal use, has an The environmental protection use period is 10 years.

The Eco-Friendly Use Period markings on parts take precedence over any conflicting or different Eco-Friendly Use Period markings on the product. The Eco-Friendly Service Life of this product is the period of time during which this product can be used without leakage of toxic or hazardous substances under the conditions of use specified in the product manual.

Trouble shooting and after sales regulations

Name	Trouble shooting		
Mibro Earbuds 5	The earbuds is silent during use. During the call, the other party cannot hear the sound. Unable to charge, the charging indicator is not on.		

Non warranty regulations

- Wear and dirt caused by users' use, such as scratches and color changes; As well as damage caused by contact with chemical reagents, sharp objects, falling, extrusion and deformation.
- Unauthorized maintenance, collision, misuse, negligence, abuse, water ingress, accidents, and failures caused by the use of non-standard accessories of the product.
- 3. Tearing, altering labels, forging anti-counterfeiting marks, etc.
- 4. Damage caused by force majeure.
- 5. Non compliance with performance faults listed in the performance fault table.

If you need after-sales service, please contact Mibro customer service: Website: www.mibrofit.com

Email: service@mibrofit.com

Attention:

The illustrations of products and accessories in the manual are schematic diagrams for users' reference only. Due to the update and upgrading of this product, the actual product may be different from the schematic diagram. Please take the actual product as the standard.

Mibro brand owns the final right to interpret the goods.

FAO

A. Why the headset touch function sometimes does not respond?

- 1. The touch area may not be touched correctly to cause no response, please refer to the instructions in the "User's Manual":
- 2. The speed of continuous touch is too slow, please make sure to touch 2 or 3 times to complete the operation quickly and continuously:
- 3. Dirty fingers or too much liquid, resulting in the touch area is not sensitive, please keep the surface of the fingers and the headset pressing. Please keep the surface of your fingers and the headset pressing area clean, and then touch the operation.

B. the headset can not hear the sound, or left and right headset sound inconsistent.

- 1. Confirm that the headset is in working condition:
- 2. Confirm that the volume of the headset is appropriate:
- 3. Confirm whether the headset is normally connected to the phone;
- 4. Please adjust the left and right headset wearing exactly the same;
- 5. Please put the headset back into the charging case and take it out after 5 seconds to reconnect it for use:
- 6. Please check whether the headset power is too low, please put the headset back to the charging box full of electricity before taking out to use.

C.the headset call effect is not good.

- 1. The effective use distance of the headset is 10 meters, please make sure that the headset is within the effective use distance and that there is no obstacle between the headset and the cell phone. Please make sure that the headset is within the effective using distance and there is no obstacle between the headset and the cell phone;
- 2. Check whether the microphone hole is blocked by dust or foreign matter: 3. Please make sure the volume of the headset is adjusted too low/mute:
- 4. Please check whether the headset battery is too low, low battery will affect the performance of the headset.
- D.Equipment maintenance 1. If the product with lithium battery is not used for a long time, please make sure it is charged at least once every three months:
- 2. Keep the product dry, do not put in a wet place, so as not to affect the internal
- 3. Avoid the use of this product in intense exercise or sweating more, to prevent sweat penetration into the product damage this product:

- 4. Do not place the product in the sun or in a place with high temperature. High temperatures can shorten the life of electronic components, damage batteries, and deform some plastic parts:
- 5. Do not attempt to disassemble the product, if non-professionals, may damage the
- 6. Do not use strong chemicals, cleaning agents to clean the headset;
- 7. Do not use the pointed body on the surface of the product scratching and hard body impact on the product, so as not to damage the shell and affect the appearance.

Package Contents

Charging Box X1, Earbuds X2, User Manual X1.

Basic Parameters

Earbuds Basic Parameters:

BT Model XPFJ014 Battery Capacity 30mAh (Per Earbuds) BT Version V5.4 Charging Time About 1 hours

BT Range ≤10m/33ft Play Time About 6 hours Input 5V == 30mA Stand By About 60 hours

Waterproof IPX4 Weight About 3.5 g (Per Earbuds)

Battery Type Lithium ion polymer

Charge Box Basic Parameters:

Battery Capacity 190mAh Charging Time About 2 hours Input 5V == 200mA

Output 5V == 200mA Weight About 31.4g

GB/T9254.1-2021 GB4943.1-2022 Implementation standards

Battery Type Lithium ion polymer

mibro

网 址: www.mibrofit.com

邮 箱: service@mibrofit.com 制造商: 甄十信息科技(上海)有限公司

地 址:上海市闵行区紫星路588号2幢4015室

出口商: 甄十信息科技(深圳)有限公司

地 址: 深圳市龙华区民治街道民乐社区星河WORLD二期E栋1401、1402、1403、1408.

Web: www.mibrofit.com

Support: service@mibrofit.com

Manufacturer: ZhenShi Information Technology (Shanghai) Co., Ltd.
Address: Room 4015, Building 2, No.588 Zixing Road, Minhang District,

Shanghai, China

Exporter: ZhenShi Information Technology (Shenzhen) Co., Ltd.

Address: RM1401-1403,1408, Tower E, Galaxy World, Minzhi Street,

Longhua District, Shenzhen, China





扫一扫查看更多语言的用户手册 Scan for user manuals in more languages

FCC Warning Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.