

FCC WARNING:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 (1) This device may not cause harmful interference.
 (2) This device must accept any interference that may be received, including interference from radio transmitters that may be authorized for operation in the adjacent frequency band.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference to residential environments. This device does not use any frequency-agile frequency energy and, if not resorted to and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 • Reorient or relocate the receiving antenna.
 • Increase the separation between the equipment and receiver.
 • Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
 • Consult the dealer or an experienced radio/TV technician for help.

*Consult the dealer or an experienced radio/TV technician for help. This device has been designed to meet general FCC equipment requirements. The device can be used in countries that require compliance without restriction.

WHEN USING A KEYBOARD:

1. Maintain proper posture and avoid excessive force on the keys.
2. The keypad is made of plastic material.
3. Clean the keypad regularly to remove dust and dirt.
4. Avoid leaving the keyboard to heat.
5. Keep the keyboard in a suitable environment, free from extreme temperatures or humidity.

Remember these tips for a comfortable and durable keyboard experience.



GUARANTEE
 Non-human damage
 12-month warranty

产品基础

 
PRODUCT BASIC INFORMATION



说明书 Manual 拔轴取键器 Switch and Keycaps Puller 键盘 Keyboard Type-C 数据线 Type-C Cable 2.4G接收器 2.4G Receiver

指示灯

INDICATOR LIGHT




K68Pro Caps Lock Win Lock Num Lock
 充电指示: 充电时常亮, 充满模式切换成功时闪烁
 Charging indicator: Steady light during charging, off when fully charged, and flashing when battery is low

	尺寸/Size	Layout	版本/Version	背光/Backlit	轴体/Key Switches
K68Pro	329.4(L) × 118.15(W) × 37.9(H) ± 2	67 keys	有线/2.4G/BT	RGB	机械轴体 Mechanical switches
K20	89.7(L) × 132.5(W) × 38.3(H) ± 2	19 keys	USB-C 有线/2.4G 无线/BT	RGB	机械轴体 Mechanical switches

有线模式

WIRED MODE

 K68Pro

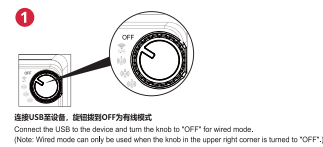

选择USB设备, 按钮拨到OFF为有线模式
 Connect the USB to the device and turn the knob to "OFF" for wired mode.
 (Note: Wired mode can only be used when the knob in the upper right corner is turned to "OFF".)

(建议: 使用5V 1A额定电源为键盘充电)
 (Recommended: Use a 5V 1A power supply for keyboard charging.)

K20

 


有线模式: 连接USB至设备, 开关拨到中间为有线模式
 Connect the USB cable to the device and set the switch to the middle position for wired mode.

BT连接


BT CONNECTION

K68Pro

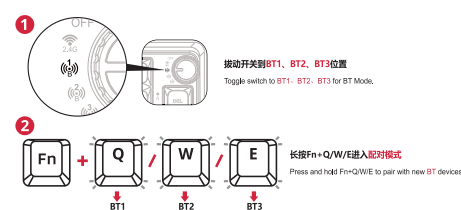

1. 拨动开关到BT1, BT2, BT3位置
 Toggle switch to BT1, BT2, BT3 for BT Mode.
 2. 长按Fn + Q/W/E进入配对模式
 Press and hold Fn+Q/W/E to pair with new BT devices

 K20

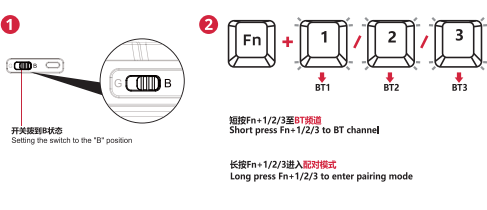

1. 开关拨到BT位置
 Setting the switch to the "BT" position
 2. 短按Fn + 1/2/3进入配对模式
 Short press Fn+1/2/3 to BT channel
 长按Fn + 1/2/3进入配对模式
 Long press Fn+1/2/3 to enter pairing mode

2.4G连接

2.4G RECEIVER CONNECTION

K68Pro



1. 拨动开关到2.4G位置
 1. Switch to the 2.4G position.
 2. Fn + P 长按3秒, P键闪烁插入接收器, P键停止闪烁即配对成功。
 2. Press and hold Fn + P to pair. As the P key flashing, plug the receiver into the device. if the P key stops flashing, pairing is successful.

K20



 
1. 开关拨到2.4G位置
 1. Switch to the "2.4G" position. To pair the receiver.
 2. 长按Fn + 0, 0键闪烁插入接收器, 0键停止闪烁即配对成功。
 2. Long-press Fn + 0, the 0 key will flash. Insert the receiver and wait for the flashing to stop, indicating successful pairing.

(温馨提示: 出厂时已配对好接收器, 无需自行再次配对2.4G, 此方法只是2.4G无法连接时时候使用, 首次设置即可, 无需每次设置)
 (Tips: The receiver is set to be paired at the factory. You just need to set it only once, when pairing not working properly.)

背光控制


BACKLIGHT CONTROL

K68Pro


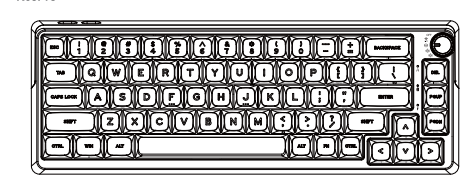


- Fn + [Light Icon] 支持多种背光效果切换 Multiple backlight effects switch
- Fn + [Light Icon] 背光单色切换 Backlight monochrome switching
- Fn + [Light Icon] 背光亮度 + Backlight brightness +
- Fn + [Light Icon] 背光亮度 - Backlight brightness -
- Fn + [Light Icon] 背光速度 + Backlight speed +
- Fn + [Light Icon] 背光速度 - Backlight speed -
- Fn + [Win Icon] 窗口锁定 Windows lock
- Fn + [Spacebar Icon] 长按3秒, 恢复出厂设置 Long-press for three seconds to restore factory settings

 K20

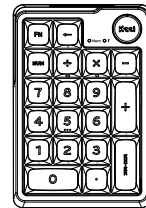

- Fn + [Light Icon] 支持多种背光效果切换 Multiple backlight effects switch
- Fn + [Light Icon] 背光单色切换 Backlight monochrome switching
- Fn + [Light Icon] 背光亮度 + Backlight brightness +
- Fn + [Light Icon] 背光亮度 - Backlight brightness -
- Fn + [Light Icon] 背光速度 + Backlight speed +
- Fn + [Light Icon] 背光速度 - Backlight speed -
- Fn + [Spacebar Icon] 长按3秒, 恢复出厂设置 Long-press for three seconds to restore factory settings

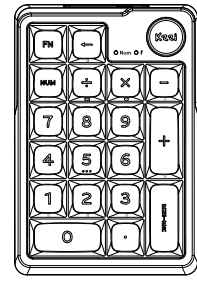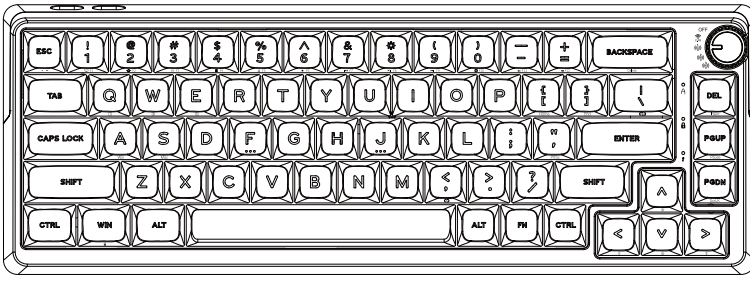  

ISED STATEMENT:
 1. The device contains radiofrequency transmitters (receivers) that comply with Canada's...
 2. The device is not intended for use in aircraft...
 3. The device is not intended for use in motor vehicles...
 4. The device is not intended for use in...
 5. The device is not intended for use in...
 6. The device is not intended for use in...
 7. The device is not intended for use in...
 8. The device is not intended for use in...
 9. The device is not intended for use in...
 10. The device is not intended for use in...

BATTERIES:
 1. The batteries are not to be used in aircraft...
 2. The batteries are not to be used in motor vehicles...
 3. The batteries are not to be used in...
 4. The batteries are not to be used in...
 5. The batteries are not to be used in...
 6. The batteries are not to be used in...
 7. The batteries are not to be used in...
 8. The batteries are not to be used in...
 9. The batteries are not to be used in...
 10. The batteries are not to be used in...

WARRANTY
 12 MONTHS WARRANTY

GUARANTEE
 Non-human damage
 12-month warranty

FN组合功能键 K68Pro

FN KEY

Fn + ESC ~	Fn + PrtSc
Fn + End	Fn + DEL Insert
Fn + PAUP Pause	Fn + PBDN ScrLK
Fn + Home	

特殊功能键 K68Pro

SPECIAL FUNCTION KEYS

Fn + 1 F1	Fn + 5 F5	Fn + 9 F9
Fn + 2 F2	Fn + 6 F6	Fn + 0 F10
Fn + 3 F3	Fn + 7 F7	Fn + - F11
Fn + 4 F4	Fn + 8 F8	Fn + =+ F12

电池电量提示

KEYBOARD BATTERY LEVEL INDICATION AND CHECK

K68Pro

The keyboard's lighting can display the current battery level status.

背光键提示可显示当前电池电量状态

The keyboard's lighting can display the current battery level status.

按下 FN+ENTER 查看电池电量情况

Pressing FN+ENTER allows you to view the battery level status. Each key from "1" to "0" represents a specific battery level range.

例如:

For example:

背光键提示显示当前电量10%的电量

The backlight of the "1" key is illuminated, indicating that the keyboard's current battery level is at 10%.

K20

长按旋钮三秒切换旋钮三转模式

Long press the knob for three seconds to switch between three modes.

1. 音量模式 (默认): 顺时针音量+, 逆时针音量-, 按压静音 (旋转时旋钮发红光)

1. Volume mode (Default): Rotating the knob clockwise increases the volume, rotating it counterclockwise decreases the volume, and pressing the knob mutes the sound (the knob lights up red while rotating).

2. 背光模式: 顺时针背光亮度+, 逆时针背光亮度-, 按压切换灯效 (旋转时旋钮发绿光)

2. Backlight mode: Clockwise rotation increases brightness, counterclockwise rotation decreases brightness, and pressing the knob toggles between lighting effects (the knob lights up green while rotating).

3. 鼠标滚轮模式: 顺时针向下翻页, 逆时针向上翻页 (旋转时旋钮发蓝光)

3. Mouse scroll wheel mode: Rotating the knob clockwise scrolls down, rotating it counterclockwise scrolls up (the knob lights up blue while rotating).

WINDOWS多媒体键 K68Pro

WINDOWS MULTIMEDIA KEYS

Windows系统 (FN+A: 切换到Windows系统)

In Windows mode (FN+A: Switch to Windows system)

FN + 左 Ctrl (主要功能和复合键的第二功能互换)

FN + Left Ctrl (Swap primary key function and secondary function of compound keys)

Fn + F1 我的电脑 Computer	Fn + F4 计算器 Calculator	Fn + F7 上一曲 Previous Song	Fn + F10 静音 Mute
Fn + F2 浏览器 Browser	Fn + F5 播放器 Media Player	Fn + F8 播放/暂停 Play/Pause	Fn + F11 音量- Volume -
Fn + F3 邮箱 Email	Fn + F6 停止 Stop	Fn + F9 下一曲 Next Song	Fn + F12 音量+ Volume +

MAC多媒体键 K68Pro

MAC MULTIMEDIA KEYS

MAC系统 (FN+S: 切换到MAC系统)

In macOS mode (FN+S: Switch to macOS system)

FN + 左 Ctrl (主要功能和复合键的第二功能互换)

FN + Left Ctrl (Swap primary key function and secondary function of compound keys)

Fn + F1 屏幕亮度- Screen Brightness -	Fn + F6 键盘背光亮度+ Keyboard Backlight Brightness +	Fn + F9 下一曲 Next Song	Fn + F12 音量+ Volume +
Fn + F2 屏幕亮度+ Screen Brightness +	Fn + F7 上一曲 Previous Song	Fn + F10 静音 Mute	
Fn + F5 键盘背光亮度- Keyboard Backlight Brightness -	Fn + F8 播放/暂停 Play/Pause	Fn + F11 音量- Volume -	

MAC多媒体键 K68Pro

MAC MULTIMEDIA KEYS

MAC系统 (FN+S: 切换到MAC系统)

In macOS mode (FN+S: Switch to macOS system)

FN + 左 Ctrl (主要功能和复合键的第二功能互换)

FN + Left Ctrl (Swap primary key function and secondary function of compound keys)

Fn + F1 屏幕亮度- Screen Brightness -	Fn + F6 键盘背光亮度+ Keyboard Backlight Brightness +	Fn + F9 下一曲 Next Song	Fn + F12 音量+ Volume +
Fn + F2 屏幕亮度+ Screen Brightness +	Fn + F7 上一曲 Previous Song	Fn + F10 静音 Mute	
Fn + F5 键盘背光亮度- Keyboard Backlight Brightness -	Fn + F8 播放/暂停 Play/Pause	Fn + F11 音量- Volume -	

Thank you for choosing KZZI products! If you have any questions or need assistance, please feel free to contact us. Our team is dedicated to providing support and addressing your inquiries.

We highly value your feedback and suggestions as they help us continuously improve and enhance product quality. Once again, we appreciate your support for KZZI!