 


## 10. Bluetooth music function

 
Bluetooth music function, namely through the audio device to play wireless music files in your phone, provided that this mobile phone must be able to support the corresponding Bluetooth protocol. When the Bluetooth device is connected to the machine After the audio system automatically connect to a paired phone. In the 【main interface】 Touch 【Bluetooth music】 icon to enter the following interface:

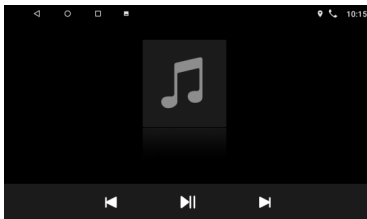

Because of different phone models and in some cases should start to play audio files through the phone keypad.

## 11. Dynamic wallpaper function

in 【all applications】 interface touch 【Live Wallpaper】 icon to enter the following interface, choose your favorite live wallpaper, drag up and down to browse, then press 【Set wallpaper】 icon set Set success.

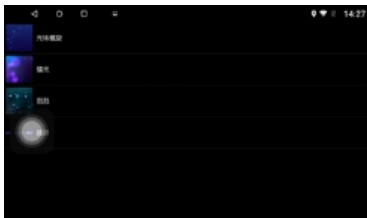





## 12. Panel Key Functions




Please refer to the physical panels, inquiries about the corresponding key introduction. (Part Function Keys If deviation, please prevail in kind)

### 1. (switch Mute)

In the absence of state power, short press to start the host.

① with panel  key case, according to this side of  key is no mute function in the boot state, long

press the side of the  key is off the host, press the panel  key to switch to silent mode.

② no panel  down key scene in the boot mode, press the panel  key to switch to silent mode, press  key to turn off the host.

### 2. (main menu)

In any application, press to return to the main screen.

### 3. (Back key)

In any application, press to return to the previous menu.

### 4. (volume up)

In any mode, press the volume up.

### 5. (volume reduction)

In any mode, press volume down.

 
## 13. Music functional operation

① This function can play USB, built-in hard disk connected device audio files.

② The product supports music file formats including MP3, M4A, WAV, AMR, WMA, OGG, AAC, MID and so on.

③ does not support music playback, may be prompted to format does not support can not be played.

④ in the 【main interface】 touch 【music】 icon to enter the following

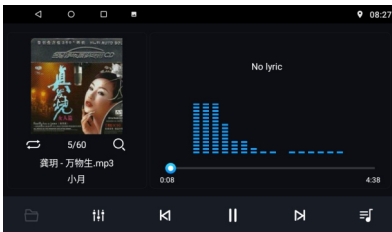


- ⑤ Touch 【<】 and 【>】 icon to perform the song next song played.
- ⑥ Touch 【||】 icon to switch between pause play.
- ⑦ Touch 【🔍】 icon, scanning the list of songs.
- ⑧ Touch 【🔄】 icon to switch between open loop repeat a single in a repeat all random.

#### 14. Figure quick browsing operation

 This function can be USB, internal hard disk connected to your device for viewing image editing.

- ① The product supports image file formats including JPG, PNG, BMP, JPEG and the like.
- ② Unsupported image format player, because the format is not supported and can not be played.
- ③ in 【all applications】 interface touch 【Express plans】 icon to enter the following interface:

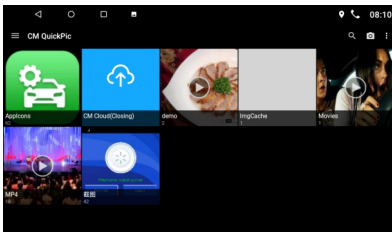

- ④ touch the top of the 【🔄】 icon to select the album activities and other options.
- ⑤ Touch 【🗃️】 icon to set the lamination Grid List file browsing albums effects.
- ⑥ Touch 【⋮】 icon to set the sort Add show hidden items and other options.

#### Note:

 
1, touch 【⋮】 icon, click 【Settings】 - 【General】 - Select 【contains video files】 , you can play video files; when there is no check on 【contains video files】 , video files, unable to display.

2, part of the picture can not edit text Rotate Left or Rotate Right, so it will not display this function icons.

#### 15. SET FUNCTION OPERATION

##### 15.1 SET FUNCTION OPERATION


in 【all applications】 interface touch 【Settings】 icon to enter the following interface:

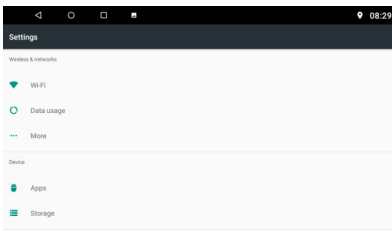

## 15.2 WLAN Settings

opening and closing WLAN

 Touch **【WLAN】** next to the button to open the WLAN, WLAN open later, if you are surrounded by WLAN network in the list on the right column will be searched. The following interface:

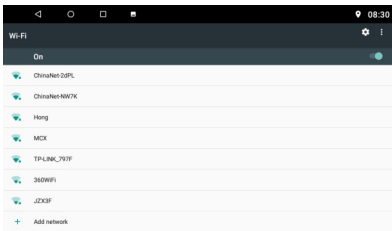

the figure above, to search for the source name (on the router, this name is called the SSID, they can be set, is generally not recommended set to Chinese) small print below plus wireless WLAN Tight manner, each name behind the fan icon indicates the WLAN signal strength, if the fan next to the graphic added a small lock indicating signal is encrypted, you need to enter a password before they can connect.

## Connectivity Wireless WLAN

Search to wireless WLAN if not encrypted, it will automatically connect after open WLAN.

If there is encryption, click on the wireless WLAN name, a password will automatically pop up a window, generally only need to enter your password and click on the bottom right of the Connect button to connect.

Check the lower-left corner of the Show advanced options later, there will be more detailed settings, when connecting this function can be selected according to their needs:

Proxy: Default None (no access to general, will not be here, say so).

 
IP settings: The default is DHCP, automatically obtain IP address. When elected as static, you can manually enter the IP address.

Data usage

can query traffic usage and other functions.


## 15.3 More Settings

Tethering portable hotspot: Touch **【Setup】** icon WLAN hotspot, enter the following interface:

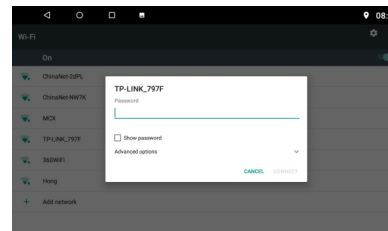

to modify the network SSID security password, touch **【Save】** to set success.

 
Mobile Network: can be set to enable data network, mobile data network roaming capabilities and other options; touch **【mobile network】** icon to enter the following interface:

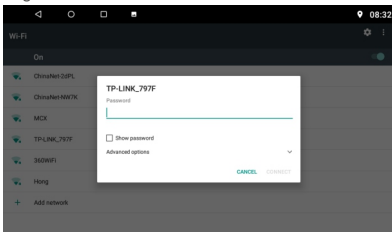

#### 15.4 Language input


Settings page in touch **【Language input】** icon to enter the following interface:

 - ① Language Settings page includes selecting a language, keyboard and input method settings.
- ② product interface language support for Chinese, traditional Chinese and English.
- ③ Touch **【iFlyTek input method】** icon to the right, you can set the input settings, keyboard settings, set up voice, handwriting settings, restore the default settings, and other functions.

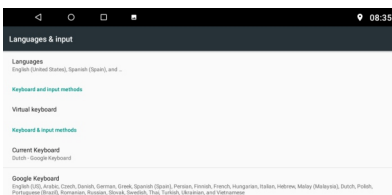

#### 15.5 Date and time settings

 set interface touch **【Date and Time】** icon to enter the following interface; you need to set the date, time, time zone, in the corresponding interface in touch **【completed】** icon to set Set success.

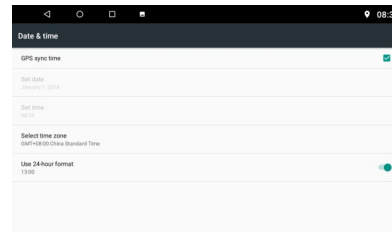

#### 15.6 version number information

Settings page in touch (on vehicle computer) icon, you can view the Android version revision number.

### 16. Optional feature operation

#### 16.1 AUX function operation (optional)

video input jack plug to connect the input video input, audio input plug to connect the input audio input jack.

#### 16.2 T-V functional operation (optional)

When the unit is connected to a plug-in digital TV boxes in the **【main interface】** touch **【T-V】** icon to start the digital TV function. See detailed functional user interface, says digital TV operations Bright.

### 16.3 ES File Browser function operation

in 【all applications】 interface touch 【ES File Explorer】 icon to enter the ES file browser interface.

**Favorites:** You can access news, weather, documents, videos, apps, music and other web via wifi

**Local:** ES will automatically navigate to the root directory of the storage.

**USB file manager,** a variety of file operations, multi-select multiple file view options and more powerful clipboard functions, search function.

**Library:** insert U disk, you can view pictures, music, video playback and other functions.

**Network:** Users can my network, LAN, network disk, FTP browsing and other functions to transfer, copy cut delete, rename files and folders, etc., can also back up system The system software has been installed.

### 16.4 Toolbox function operation (optional)

in 【all applications】 interface touch 【Toolbox】 icon to enter the Toolbox interface.

**Cache clear:** clean up or remove your unwanted files:

- ① Touch a key clean-up icon to delete the memory unwanted junk files, view the next host the remaining space used space capacity.
- ② Click Apply icon in the icon drop-down video music files map Select Delete and radio delete.

**GPS Monitor:** You can view the GPS status parameters Glonss Compass and state parameters.


**One Click Setup:** Choose the file you want to install touch One Click Setup icon to install, such as no installation, touch Exit icon.

### 16.5 function Operating Instructions

in 【all applications】 touch 【specification】 icon to enter Manual operation interface, gently slide to the left to the right at the interface with your fingers, you can switch the next interface. (Note: there Describes some of the features the host operating instructions)

## 17. Navigation operations

### 17.1 Navigation operations

in the 【main interface】 touch 【Navigation】 icon to enter the navigation interface. By pressing the panel 【】 key to exit the navigation screen, switch to the main screen. After exiting the navigation interface, the background will continue to maintain navigation.

### 17.2 before the navigation instructions

- ① Make sure that the host and the satellite antenna is connected properly, switched within a period of time, satellite antennas need to receive satellite signals and update the information, you can wait for a while to work this time Screen status bar displays the satellite has registration marks.
- ② Make sure that the vehicle is not in the position of the satellite signal receiving bad places, such as tunnel, bridge, next to the tall buildings and the like.
- ③ driver to be pre-set navigation destination in the parking state, the process of moving Do not operate the navigation.

### 17.3 navigation map Description

because of urban construction and the rapid development of road transport, the company will continue to update the navigation map navigation map, please keep abreast of updated navigation map information is updated, if found to navigation Map of route guidance with actual road conditions or traffic control situation is not, according to the actual road conditions, traffic control and traffic rules drive the vehicle.

### 17.4 navigation map Description

- ① You can find all kinds of search functions based on navigation software needs to reach the destination, set the destination, start planning the path, a navigation.
- ② in the driver more familiar area, driving their own choice may be more suitable than driving situation path may be higher than the navigation software navigation planning.

## 17.5 Error

satellite signal reception errors under normal circumstances, at about 7 meters, and in some cases, the timely adoption of this software product may still bias automatically corrected, then please note that the driver View Police to be driving the actual road conditions prevail.

 
### Note:

navigation system environment is complex, it may be due to large external electromagnetic interference caused by operation error, navigation is not working properly (if not into a map, GPS and so no image). Restart GPS can enter normal operation.




## 18. Car Settings function operation

Car Settings function operation

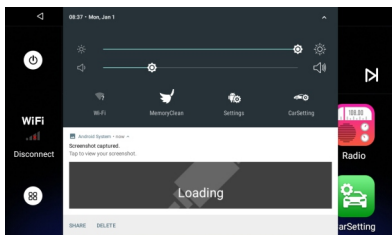in the **【main interface】** Touch **【Car Settings】** icon to enter the following interface:



### 18.1 Audio Settings

drag the **【】** icon, can be arbitrarily adjust the treble midrange bass volume. Touch **【】** icon to switch to customize jazz classical rock and other volume effects. Touch **【】** icon to turn on off loudness. Touch **【Restore Default】** icon to restore the initial state.

### 18.2 sound field settings


Touch **【Left】** and **【Right】** icon, can be left and right to adjust the volume balance.

Touch **【before】** and **【after】** icon, can be up and down to adjust the volume balance.

Touch **【】** icon, you can quickly set up audio control center point.

### 18.3 Basic Settings


Touch **【Close Time Setting】** icon to set the off-screen time.

Touch **【】** icon to set parking headlight detection key tone mute function reversing switch.

### 18.4 Navigation Settings

Navigation path has been set up at the factory, please do not enter the navigation interface is set free to change the path. Otherwise, it may cause abnormal program.

### 18.5 backlight settings

drag the **【】** icon, the effect can be adjusted backlight settings.

### 18.6 Radio

 
choose your favorite country radio area.

### 18.7 default

drag the **【】** icon to adjust the default volume.

### 18.8 default

through the original steering wheel, the machine can also be controlled. Original car steering wheel control line positive electrode, a negative electrode and a positive electrode side of the machine control line, a negative electrode connected. One by one by pressing the steering wheel above Key, and records the order, click on the corresponding function settings to save settings.

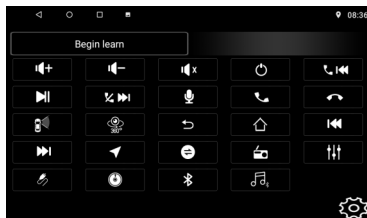

### 18.9 Voice Settings

in the 【Voice Settings】 screen, slide this icon, you can control the voice switches.

 
### 18.10 factory setting

In the 【factory setting】 screen, touch 【Restore Factory】 icon, enter the password 1234 to enter.

Touch Erase everything icon to restore the system to factory settings, the system will automatically restart. Third-party programs after the system is restored to factory settings, and all have been installed User data will be lost.

## 19. CAMERA functional operation

When the unit is connected to CAMERA video input, 【all applications】 interface touch 【CAMERA】 icon to enter the following interface:

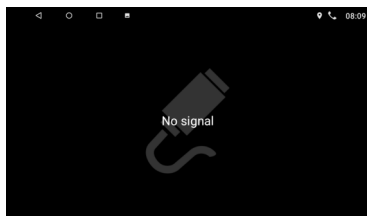

- ① when the car engine is not connected with the equipment, in CAMERA screen shows no signal.
- ② When the device is connected with the car engine in the CAMERA screen displays load, the normal display front camera screen after loading. Native CAMERA video input display function only, not with CAMERA serial communication control device functions.

## 20. Troubleshooting functional

Common Troubleshooting Guide

Fault 1: You can not boot

Cause: The power supply fuse burned

Solution: Replace the same type fuse

Fault 2: can not boot

Reason: Other factors contributing to the microprocessor is not working

Workaround: After 10S, host restarts

Fault 3: After the ignition switch is turned off, the settings are lost

Reason: replace the battery or fuse

Solution: Re-setting information and save the

Fault 4: poor income units

Reason: The radio signal is weak

Solution: The car is moved to another location search again

fault 5: No image

Reason: Other factors contributing to the microprocessor is not working

Workaround: After 10S, host restarts

Fault 6: driving the process can not view the image

Cause: driving the process is not allowed to view images

Solution: Plug the car to a safe location, the car stalls placed in the P range, pull handbrake