Iprintit Portable Wirless Phone Printer

Operating Manual



Model: AW-68

Brief Introduction


Thank you for using the intelligent digital products produced by our company. We have randomly equipped with detailed instructions, from which you can obtain instructions on the use of the products. Please read the instructions carefully before you start using this machine, so as to facilitate you to use this product accurately. When the contents involved are changed, no notice willbe given.

This product is aunique sheape, exquisite design, easy to operate Portable mini printer, designed for children's digital products, so that children in use to learn more imagination play, experience the fun of nature.

Maintenance and maintenance

This product should not be placed in wet environment for a long time, please wipe the surface stains with dry cloth. Wires, plug shells and other components must be regularly checked for damage, and damage should be stopped immediately until repaired.in order to reduce battery aging and swelling; If it is not used for a long time, it needs to be charged once every three months or so

Key/interface specification

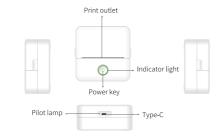

Indicator status

Green light flash:Normal use status. Red light on:Out of paper/Overheat/Cover opened. Red/Green light flash:low power

Product specification

Battery capacity:800mAh Sharpness: 200dpi Printing method: inkless printing Paper size:57*26MM*6M Display method: Black and white Bluetooth: 5.3 Product Size 85X85X45MM Input power: Type-C

Use the wizard



2. Apple store or Google search:Tiny Print insalled APP to use.



long press the power

key 3 seconds to boot.



Manual according to the direction indicated by the arrow. Press inward on both sides and up at the same time. Open the lid of the paper bin.

5 My information iii Change the password

My device

print record

About us

5 Log Out

3. After bluetooth is enabled.use the app downloaded from the mobile phone to connect to the Bluetooth printer in the TAB bar of "My device", After successful connection. the note can be printed.

Paper replacement course



Cover the paper bin, the machine can automatically absorb paper after normal use

carton is in a carton.

Take out the old paper roll, put the paper straight, don't.

Expose the 2CM length of the paper bin for casual wear.

The machine can absorb paper automatically when the

Put it askew. (note: new thermal paper is required.



After the above steps are correct, the machine can print normally.

Battery Warning Note

- 1. Please use 5V charger to charge according to the specification to avoid damage to the machine
- 2. Disassembly, impact, extrusion or fire are prohibited:
- 3. If severe bulging occurs, do not continue to use,
- 4. Do not put in high temperature environment, battery after immersion is prohibited to use;
- 5. Replacement with the wrong type of battery can be explosive, be sure to follow the instructions to dispose of used batteries.

Matters needing

- 1. when charging . please gently insert or pull out the charging line to prevent excessive force damage to the port;
- 2. After charging, please unplug the charging line in time
- 3. In order to avoid danger, do not use or charge in high temperature ,high humidity , excessive smoke and dust environment . such as: bathroom , steam room , open fire , etc ;
- 4. Improper charging may lead to print head damage;
- 5. Do not touch the print head to prevent overheating and scalding:
- 6. Tear paper blade sharp, be careful not to touch;
- 7.Contains small parts, not suitable for children under three vears of age to use
- 8. The Guardian should be in custody while the child is playing.

NOT. The signment has been beard and based to coming with the limb for a Case It digital details, account to part 56 of the CD has. These limb are indicated to produce mountain produces the confidence of the comment of the Comment

Increase the separation between the equipment and receiver.

Connect the soutement into an outsit on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technicien for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the

This device complies with Part 15 of the PCC Rules. Operation is subject to the following two conditions:
(1) this device may not ouse harmful interference, and (2) this device must accept any interference secsived, including inc.
cause underlyind operation.

(3) This device may not cause interference.

(2) This device may not cause interference.

(2) This device must accept any interference, including interference that may cause undested operation of the device.

L'émetteus/récepteur exempt de licence contenu dans le présent appareil est conforme eux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence, L'exploitation est autorisée aux deux conditions