

WIRELESS SPEAKER

使用手册

使用前请仔细阅读此手册

S WIRELESS SPEAKER

声明

本手册描述的产品及附件某些特征和功能仅供参考。我公司保留随时修改本手册中任何信息的权利，我公司对本手册中的所有内容不提供任何明示暗示的保证，包括但不限于销售或者使用于某特定的目的保证。在法律允许的范围内，我公司在任何情况下，都不对因使用本手册相关内容而产生的任何特殊的、附带的、间接的、继发性的损害进行赔偿，也不对任何利润、数据、商誉或可预期的损失进行赔偿。

安全警告

请在常温下存放使用本产品；
请勿将本产品浸入水中；
请勿丢掷，避免因跌落造成产品损坏；
请勿自行拆解、修理和改造本产品；
不要在靠近任何热源地方使用耳机；
在易燃易爆区域，请关闭您的设备，并遵守相关标示说明，以免引起爆炸或火灾，易燃易爆包括但不限于加油站燃料区、有爆炸危险标志区域、有“关掉双向无线电设备”标志区域。把声音调整至合适的音量，以免损坏您的健康和设备。

物品清单

音箱主机	USB电源线	说明书/保修卡
1台	1条	1份

备注：商品不带适配器销售

示意图及使用说明



操作指南

充电说明

Micro充电接口外接5V=1A充电器充电，充电过程指示灯亮红色充满后红色指示灯熄灭，关机状态下3小时左右充满工作状态。

开/关机

将开关推到ON的位置，机器开机，推到OFF位置关机

模式切换

音箱多音源连接播放时，可通过长按“”键2秒来回切换蓝牙模式、TF卡模式、音源输入模式、FM模式、U盘模式。

音箱连接

① 单台无线连接

音箱开机后，无其它设备连接时，默认进入无线模式，蓝灯闪烁进入搜索配对状态，此时打开手机无线搜索设备找到设备名“SPEAKER 5.0”点击连接即可成功配对。

② 同款两台无线互联

将两台音箱同时开机后，长按其中一台音箱的键2秒后，音箱提示互联模式，此时音箱指示灯快速闪烁进入互联搜索配对，等待4-6秒后，两台音箱互连成功，音箱蓝色指示灯状态常亮，此时再用手机搜索设备名“SPEAKER 5.0”点击配对连接即可实现一台手机连接两台音箱。

音乐模式

音箱开机后，插入TF卡或者U盘，音箱提示TF卡模式/U盘模式，TF卡或者U盘内有MP3音频文件时，音箱会自动播放U盘TF卡内的音频文件短按或切换歌曲，通过+或-调节音箱音量大小，短按键播放暂停音乐。

免提通话

音箱在手机连接状态下，当有人呼入电话时，此时按下音箱上的键可接听电话，通话结束时，再按一下键可挂断电话。

音源输入

音箱开机后，插入音频线选择到音源输入模式，再将音频线的另一端连接电脑或者手机耳机插孔即可作为外接音箱，音频线插入电脑，如电脑有弹出提示输出选择，应该选择耳机。

FM模式

音箱开机后，然后插上充电线当外接天线，长按键2秒音箱切换至FM模式，FM模式下长按键2秒后松开，音箱蓝色指示灯快速闪烁，音箱提示搜索电台，此时等待1-2分钟音箱搜台完成后，可通过或切换电台频道。

参数说明

版本：V5.0+EDR
喇叭： $\Phi 45mm * 2$
频率响应：100HZ-16KHZ
信噪比： $\geq 85db$
连接范围：直线有效距离10米
支持音频：MP3格式
输入：5V = 1A

产品保修卡			
维修联	日期	保部门	故障现象

产品保修卡	
用户联	产品型号： 购日期：



保修需求

保修期内，用户需保修产品时，请填写本卡到购买商店接受保修。属下列情况之一的产品不属于免费保修的范围：
1.超过保修期。由购买日起，保修一年。
2.用户自行拆机，机器结构有人为损坏的。
3.用户维修或使用不当（如受潮、撞击、电压过高过低、环境过热过冷、入水等）而引起的损坏。
4.随机配件不予保修。

USER MANUAL

Please read me before using

S WIRELESS
SPEAKER

Specification

Wireless version:Wireless5.0+EDR
Speaker:Double Speakers 45mm *2+one passive speaker
SNR: \geq 85db
FM Frequency Range :87.5-108Hz
Frequency Response:100Hz-16KHz
Battery: Lithium Battery
Audio format: Mp3
Playing Time : 6~8 Hours
Input Voltage:5V= 1 A
Product size:180mmX63mmX44mm

Attention

Please read and keep this Manual,adn pay attention to the below warnings.

NO strong impact on the machine.

Do not use when you are close to the strong magnetic or electric field.

Do not disassemble,repair and rebuild.


Do not clean the machine by water.

Low power consumption may cause distortion of the sound , please charge in time .

Please disconnect the power supply if you are not going to use it for quite some time .

The charging voltage is 5V,The speaker's internal chip will be burned out and couldn't work normal if using higher charger.

Buttons instruction

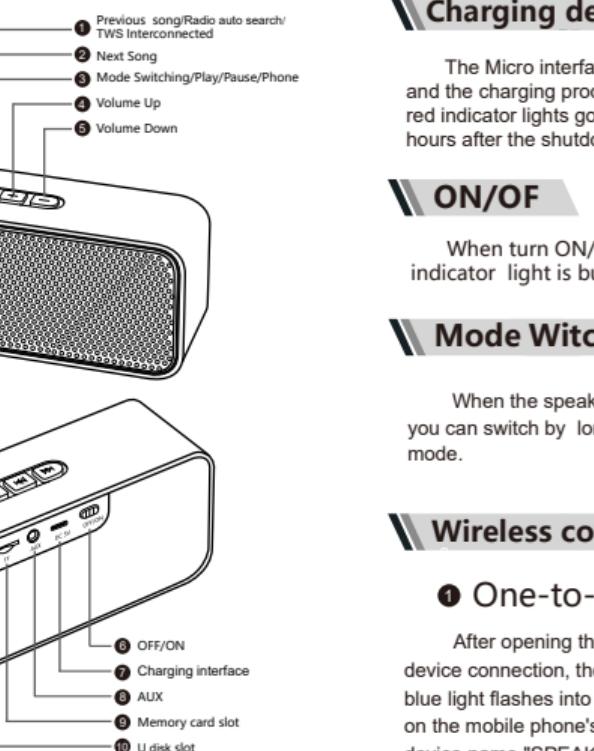

Operation guide

Charging description

② One-to-two connection

After two loudspeaker boxes opening, long-press the switch button for 2 seconds and release it after the speaker box is prompted. At this point, the spaker box prompt light flashes rapidly and enters the matching mode of the search box. After waiting 6-8 seconds, the two speakers are connected to each other successfully, and the blue indicator of the speakers is always on. At this point, you can use the mobile phone search device name "SPEAKER 5.0" to click the paired connection to connect one phone to two speakers.

ON/OFF

When turn ON/OFF the key to the ON position and the indicator light is bule ,It works;OFF,not.

Mode Witching

When the speaker is connected to multiple audio sources, you can switch by long-press the " " key for 2 seconds mode.

Wireless connection

① One-to-one connection

After opening the loudspeaker box, when there is no other device connection, the default access to search matches. The blue light flashes into the search pairing state. At this point, turn on the mobile phone's BT wireless search device and find the device name "SPEAKER 5.0". Click the connection and the pairing will be successful.

— Page 4 —

AUX Mode

After the speaker is turned on, insert the 3.5mm audio cable and select the input mode of the sound source, and then connect the other end of the 3.5mm audio cable to the headphone jack of your computer or mobile phone to act as an external speaker.

FM Mode

After the speaker is started up, plug in the 3.5mm audio cable as an external antenna and switch the speaker to FM mode by long pressing the key . At this time, Radio auto search pressing the key, the blue indicator light of the sound box flashes rapidly, and the radio station is searched automatically. At this time, no other operation is required. After finished, radio channels can be switched through pressing or .

Package include

SPEAKER	USB CABLE	USER MANUAL
1pcs	1pcs	1pcs

— Page 5 —

— Page 1 —

— Page 2 —

— Page 3 —

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.