

G68

Bluetooth Microphone

Instructions



Tips

Thank you very much for purchasing our products. Please read this manual carefully before using this product. For future reference, please take good care of this manual after reading it.

1. There is a battery in this product. Please don't let the product get into water or leave it in a humid environment for a long time.
2. This product has a speaker and a circuit board welded, Please try not to drop the product on the hard floor or bump it, so as not to cause the product not to work normally.
4. Please avoid placing this product in extremely high temperature environment.
5. Please use 5V 1 A or 5V 2A adapter for charging。
6. This product is powered by rechargeable lithium battery. If it is not used for a long time, please charge the product every 1 to 2 months to prolong the battery life.



Key Function

Power key:

1. Press 2 seconds to turn on the phone, enter Bluetooth mode, search G68, click Pairing, and you can play songs and sing. Press 2 seconds in the power-on state to turn it off.
2. When the microphone is turned on, short press to switch working modes (Bluetooth, USB flash drive, tf card, audio cable).

Play/Pause/ Twins key:

1. Short press to switch play and pause.
2. For the first time to pair the two microphones,

First, turn off the Bluetooth of the mobile phone, and then turn on the two microphones, long press one of the microphone Twins key 2 seconds, it will make a "DI" and the other one have "dodo", the two microphones are successfully paired. Turn on the Bluetooth of the mobile phone, search Bluetooth G68 and pair it. Play the songs on the mobile phone, and both microphones will play at the same time. When the paired microphones are turned on again, they will be automatically connected back, and there is no need to pair again.

MAGIC/ACMP key:

1. When playing a song, short press to switch the original singing and accompaniment.
2. Long press for 2 seconds (there will be a beep), several sounds (original sound, female voice, doll sound, uncle sound, Warcraft sound) switch in order.

PREV/NEXT key:

When playing a song, switch the previous song and the next song.

Volume+/- key:

Adjust the volume of playing songs.

MIC VOL key:

Adjust the volume of human voice.

REMIX key:

Adjust the reverberation effect of microphone, beautify the human voice and increase the deep and heavy feeling of the human voice.



DC5V Charging Hole:

1: Please use 5V1 or 5V 2A charging plug to connect the charging line for charging.

2: Use the flat head of the audio cable to plug into the microphone charging hole, and the round head to plug into the round hole of the mobile phone or computer or TV headset. Some mobile phones that don't have a round earphone hole need a patch cord to be used.

Audio Output Hole:

Connect headphones or speaker, output singing and playing songs.

TF card /U Flash Disk:

Play MP3 songs in TF card or USB flash disk,. Please insert the memory card with one end of the chip facing up and parallel.

Frequently Questions

1. The microhpone cannot be turned on.

Check whether it is low power,charge it.

Long press the power key 2 seconds to turn on not short press.

2.Singing without sound:

Push up the MIC vol and Remix,

3. Unable to search for Bluetooth G68.

Check whether there is a TF card or USB device link. If there is, you need to short press the power key to switch to Bluetooth mode.

Turn off and restart the microphone, turn off and on the Bluetooth of the mobile phone, Try more times.

4. Play music silently or at a low volume:

Turn up the volume of the mobile phone or press the volume + of the microphone.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.