

User Manual

Fan Remote Control

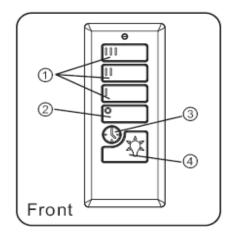

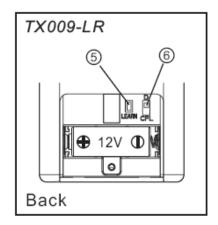

Remote Control Functions:

- ①FAN SPEED CONTROL Button: To control the fan speed HIGH, MEDIUM, LOW.
- @FAN/OFF Button: To turn the fan on or off.
- ③Walk Away Light Delay Button: Tap to active the WALK AWAY LIGHT DELAY function.
- ⑤Tact Switch: Press to learn code.
- ©Extended Function Switch.

Note: Install the 12-volt battery(included)to the remote control.

BATTERY INFORMATION AND REPLACEMENT:

- 1. On the bottom of the remote use your finger to slide out the battery holder.
- 2. Remove the used battery and insert a new 12-volt battery with the "+" polarity mark facing up.
- 3. Slide the battery holder back inside so that it sets in place.
- 4. Dispose of old battery properly.

WARNING:

Keep batteries away from children and pets.

Follow the battery manufacturer's safety and usage instructions.

- Remove battery if product is to be left unused for a long time.
- Clean the battery contacts prior to battery installation.
- Do not dispose of batteries in fire. Batteries may explode or leak.

NOTE: In case of power failure, the system will need to be reset.

FCC INFORMATION:

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION:

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

FCC Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.