



PARA ASISTENCIA Y SERVICIO, CONTACTENOS EN support.avita-americas.com

Importante: Guarde su "Boleta de venta" como prueba de su compra. Para mayor información acerca de otros productos y servicios, sírvase contactar nuestra página de Internet en la siguiente dirección: support.avita-americas.com

Esta garantía le brinda derechos legales específicos y puede que usted también tenga otros derechos que pueden variar, dependiendo del estado. Algunos estados no ponen límite en cuanto a la duración de una garantía implícita, a cuando se puede tomar acción, o a la exclusión o limitación de los daños fortuitos o consiguientes, de modo que es posible que las disposiciones anteriores no sean aplicables en su caso.

Para mayor información acerca de otros productos y servicios, sírvase contactar nuestra página de Internet en la siguiente dirección: support.avita-americas.com

Esta garantía le brinda derechos legales específicos y puede que usted también tenga otros derechos que pueden variar, dependiendo del estado. Algunos estados no ponen límite en cuanto a la duración de una garantía implícita, a cuando se puede tomar acción, o a la exclusión o limitación de los daños fortuitos o consiguientes, de modo que es posible que las disposiciones anteriores no sean aplicables en su caso.

Para mayor información acerca de otros productos y servicios, sírvase contactar nuestra página de Internet en la siguiente dirección: support.avita-americas.com

Importante: Usede se hace responsable de cualesquier gastos por razones de transporte, envío o seguro relacionados con la devolución del producto al Centro de Devoluciones de Productos.

En caso que su producto necesite ser reparado y que el periodo de garantía ya haya expirado, sírvase contactarse con el Centro de Ayuda al Cliente en el fono support.avita-americas.com

Fuera de la Garantía

Computer, o de haber quitado o cambiado el número de serie de las piezas o del producto. Instrucciones que acompañan este producto o de haber modificado el producto o de haber quitado o cambiado el número de serie de las piezas o del producto. (3) Las garantías sólo se extienden en casos de materiales o de fabricación defectuosas. Dichos productos o piezas dañadas a causa del mal uso de la unidad, de accidentes, que se hayan perdido o tirado a la basura, ni a productos o piezas dañadas a causa del mal uso de la unidad, de accidentes, (2) Estas garantías sólo son efectivas si el producto ha sido comprado y puesto a funcionar en Estados Unidos o Canadá. (1) Usted debe guardar la boleta de venta original como prueba de su compra.

Su responsabilidad

Cuando usted envíe el producto al centro de reparaciones de **AVITA Computer**, usted debe utilizar la caja de cartón y el material de embalaje original o un tipo de embalaje equivalente, según lo establezca **AVITA Computer**.

El cliente es responsable por todos los gastos de envío al centro de reparaciones.

el cliente deberá enviar la unidad al centro de reparaciones que se le indique al contactar con la oficina de respaldo al adicional de uno año a contar de la fecha del cambio o de la reparación. Para poder hacer las reparaciones que sean necesarias, efectuar reparaciones de productos o piezas defectuosas. Dichos productos o piezas de recambio cuentan con una garantía de la fecha de efectividad de la garantía, **AVITA Computer** utilizará piezas o productos de recambio nuevos o reemplazados al

oficina de respaldo al Cliente de **AVITA Computer**. **POR FAVOR NO DEVUELVA ESTA UNIDAD A AVITA COMPUTER SIN CONTAR CON AUTORIZACIÓN PREVIA**. En los centros designados para reparaciones y por un periodo de uno año a contar

Cliente al support.avita-americas.com. La decisión de si bien usted está facultado para recibir estos servicios la tomará la obtener los servicios de la garantía en los Estados Unidos o Canadá, sírvase contactarse con el Centro de Servicio para el necesario, mano de obra de reparación para reparar defectos de fabricación en su centro de reparaciones designado. Para

Durante un periodo de uno año a partir de la fecha efectiva de la garantía, **AVITA Computer** proporcionará, cuando sea según lo estime **AVITA Computer** únicamente.

encuentra en conformidad a esta garantía, nosotros repararemos el producto usando piezas y productos nuevos y reparados, Los productos **AVITA Computer** que se hayan comprado en los Estados Unidos o Canadá tienen una garantía de uno año a

Garantía de repuestos y reparaciones por Uno Año

al uso no comercial del producto.

AVITA Computer ofrece la siguiente garantía limitada, la cual se extiende al comprador-consumidor original y está limitada

Garantía limitada

IMPORTANT SAFETY INSTRUCTIONS

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments / accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

ADDITIONAL SAFETY INFORMATION

- The AC adapter and apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Always leave sufficient space around the product for ventilation. Do not place product in or on a bed, rug, in a bookcase or cabinet that may prevent air flow through vent openings.
- Do not place lighted candles, cigarettes, cigars, etc. on the product.
- Care should be taken so that objects do not fall into the product.
- Do not attempt to disassemble the cabinet. This product does not contain customer serviceable components.
- To prevent the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- Do not play your headset at high volume. Hearing experts warn against extended high-volume play.

IMPORTANTE INSTRUCCIONES DE SEGURIDAD

Alguna de la siguiente información quizá no se aplique a su producto en particular. Sin embargo, como con cualquier producto electrónico, se deben tomar precauciones durante su manejo y uso.

- Lea estas instrucciones.
- Conserve estas instrucciones.
- Tome en cuenta todas las advertencias.
- Siga todas las instrucciones.
- No use este aparato cerca del agua.
- Limpie solamente con un paño seco.
- No bloquee ninguna de las aperturas de ventilación. Instale de acuerdo con las instrucciones del fabricante.
- No instale cerca de fuentes de calor tales como radiadores, registros de calor, estufas, u otros aparatos (incluyendo amplificadores) que produzcan calor.
- Proteja el cable de corriente de ser arrastrado o pellizcado particularmente en las clavijas, receptáculos, y en la punta donde salen del aparato.
- Use solamente accesorios / aditamentos especificados por el fabricante.
- Desconecte este aparato durante tormentas eléctricas o cuando no sea utilizado por largos periodos de tiempo.
- Refiera todo el servicio a personal de servicio calificado. El servicio es requerido cuando el aparato ha sido dañado de alguna forma, tal como daño a la clavija o al cable de corriente, cuando se ha derramado líquido o han caído objetos dentro del aparato, el aparato ha sido expuesto a lluvia o humedad, no funciona normalmente, o ha sido tirado.

INFORMACION ADICIONAL DE SEGURIDAD

- El aparato no debe quedar expuesto a goteos o salpicaduras de líquidos, y, por lo tanto, no se deben colocar sobre el aparato objetos que contengan líquidos, como por ejemplo vasos.
- Siempre deje suficiente espacio para ventilación alrededor del producto. No ponga el producto en la cama, alfombra, librero o gabinete que pueda obstruir la corriente de aire a través de aperturas de ventilación.
- No pongan velas, cigarrillos o cigarrillos encendidos encima de producto.
- Tome precauciones para evitar que caigan objetos dentro del producto.
- Carros y Estantes-El artefacto deberá ser usado sólo con carros y estantes que hayan sido recomendados por el fabricante.
- Para prevenir fuego o shock eléctrico, no exponga el producto a lluvia o humedad.
- No ponga los auriculares a un volumen alto. Los especialistas de oído previenen contra la exposición a altos volúmenes de forma continuada.

Product Support and Service
To learn more about how to operate your new AVITA laptop, please visit support.avita-americas.com
Soporte y Servicio del Product
Para obtener más información sobre cómo operar su nueva computadora portátil AVITA, visite support.avita-americas.com

FOR SUPPORT AND SERVICE, PLEASE CONTACT US support.avita-americas.com
Important: Also keep your "Bill of Sale" as proof of purchase.

support.avita-americas.com

For more information on other products and services, please visit our web site at:

states do not allow limitation on how long an implied warranty lasts, when an action may be brought, or the exclusion or limitation of incidental or consequential damages, so the above provisions may not apply to you.

This warranty gives you specific legal rights and you may also have other rights, which may vary, from state to state. Some states do not allow limitation on how long an implied warranty lasts, when an action may be brought, or the exclusion or limitation of incidental or consequential damages, so the above provisions may not apply to you.

No person, agent, distributor, dealer or company is authorized to change, modify or extend the terms of these warranties in any manner whatsoever. The time within action must be commenced to enforce any obligation of **AVITA Computer** arising under the warranty or under any state, or law of the United States or Canada or any state thereof, is hereby limited to one year from the date of purchase. This limitation does not apply to implied warranties arising under state law.

parts. In no event shall **AVITA Computer** be liable for consequential or incidental damages.

guarantees, agreements and similar obligations of manufacturer or seller with respect to the repair or replacement of any warranties implied by state law as hereby limited, the foregoing warranty is exclusive and in lieu of all other warranties, purposes, are expressly limited to the duration of the limited warranties set forth above. With the exception of any

All warranties implied by state law, including the implied warranties of merchantability and fitness for a particular use, are hereby limited to the duration of the limited warranties set forth above. With the exception of any

Important: You are responsible for any transportation, shipping or insurance relative to the return of product to our Product Returns Center.

support.avita-americas.com
Customer Support Center at

In the event your product requires repair after the limited warranty period has expired, please contact our

Out of Warranty

number removed or changed.

or modified without authorization of **AVITA Computer**, or to products or parts thereof which have had the serial

maintenence, or use in violation of instructions provided with the product, or to product which has been altered

have been lost or discarded, or damage to product or parts caused by misuse, accident, improper operation or

(3) Warranties extend only to defects in material or workmanship, and do not extend to any product or parts which

(2) These warranties are effective only if the product is purchased and operated in the United States or Canada.

(1) You must retain the original sale receipt to provide proof of purchase.

Your Responsibility

material or an equivalent as designated by **AVITA Computer**.

When you send the product to the **AVITA Computer** service facility you must use the original carton box and packing

Packaging and Shipping Instruction

customer is responsible for all transportation charges to the service facility.

ship the unit to the Service Center indicated at the time Customer Support is contacted to make the necessary repairs. The

products are warranted for an additional one year from the date of repair or replacement. The Customer will be required to

AVITA Computer at its designated Service Center for one year from the effective warranty date. Such replacement parts or

PRIOR AUTHORIZATION. New or remanufactured replacement parts or products will be used for repairs by

made by **AVITA Computer** Customer Support. **PLEASE DO NOT RETURN YOUR UNIT TO AVITA COMPUTER WITHOUT**

you must first contact our Customer Support Center at support.avita-americas.com. The determination of service will be

repair a manufacturing defect at its designated Service Center. To obtain warranty service in the United States or Canada,

During a period of one year from the effective warranty date, **AVITA Computer** will provide, when needed, service labor to

or workmanship for a period of one year from the date of their original retail purchase. If the unit fails to conform to this

AVITA Computer products purchased in the United States or Canada are warranted to be free from defects in materials

One Year Parts & Labor Warranty

and is limited to non-commercial use of the product.

AVITA Computer makes the following limited warranty. This limited warranty extend to the original consumer purchaser

Limited Warranty

Laptop Ordenador portátil

 
Quick Start Guide Guía de inicio rápido

CN6Q15

avita-americas.com

Getting to know your new AVITA laptop / Conozca su nueva computadora portátil AVITA

FOR SUPPORT AND SERVICE,
PLEASE CONTACT US
PARA ASISTENCIA Y SERVICIO,
CONTÁCTENOS EN
support.avita-americas.com

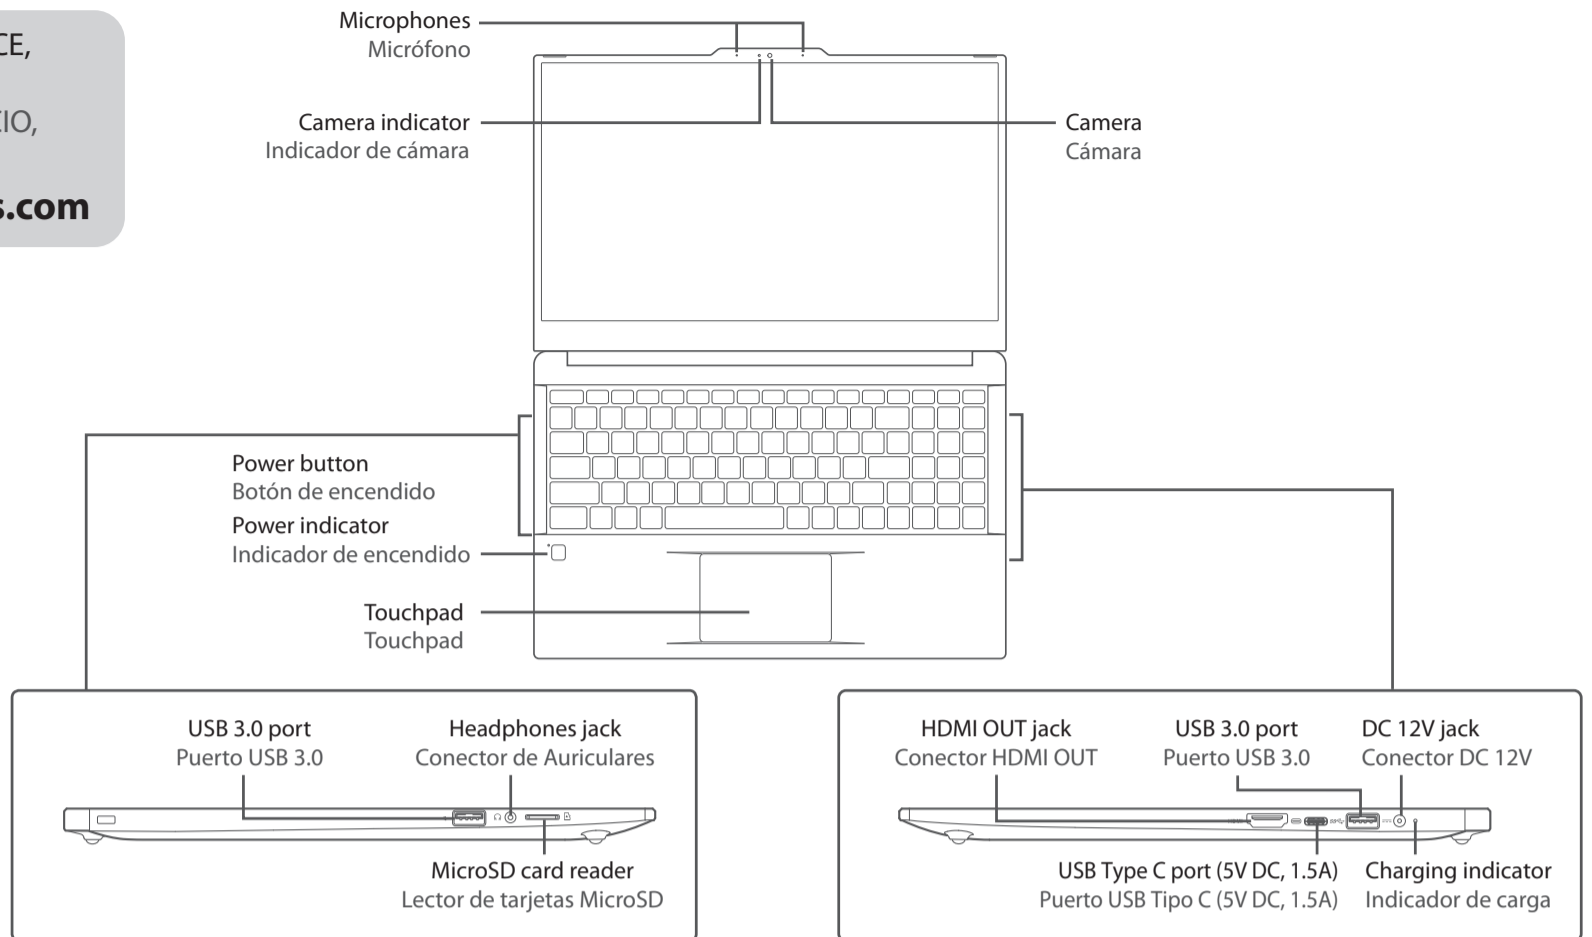

Copyright and trademark notices

Windows and windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.
The *Bluetooth* word mark and logos are registered trademarks owned by the *Bluetooth SIG* Inc. Other trademarks and trade names are those of their respective owners.
The Wi-Fi CERTIFIED Logo is a certification mark of the Wi-Fi Alliance.

HDMI HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks, registered trademarks, or service marks of HDMI Licensing, LLC in the United States and/or other countries.

About HDMI

High-Definition Multimedia Interface (HDMI) is a high-speed digital interface that can transmit uncompressed high definition video and digital multichannel audio. It delivers high quality picture and sound quality. HDMI is fully backward compatible with DVI. As required by the HDMI standard, connecting to HDMI or DVI products without HDCP (High bandwidth Digital Content Protection) will result in no Video or Audio output.

All other trademark appearing herein are the property of their respective owners. Specifications subject to change without notice.

Avisos de derechos de autor y marcas registradas

Windows y el logotipo de Windows son marcas comerciales o marcas comerciales registradas de Microsoft Corporation en los Estados Unidos y / o en otros países.
La marca denominativa y el logotipo de *Bluetooth* son marcas registradas propiedad de *Bluetooth SIG*, Inc. Otras marcas registradas y nombres comerciales son de sus dueños respectivos.
El logotipo CERTIFICADO Wi-Fi es una marca de certificación de Wi-Fi Alliance.

 
HDMI HDMI, el logotipo de HDMI y High-Definition Multimedia Interface son marcas comerciales, marcas registradas, o marcas de servicio de HDMI Licensing LLC en los Estados Unidos y otros países.

Acerca de HDMI

La interfaz multimedia de alta definición (siglas del inglés High-Definition Multimedia Interface, HDMI), permite transmitir vídeo de alta definición y audio multicanal sin comprimir. Proporciona imágenes y sonido de alta calidad. La tecnología HDMI es totalmente compatible con DVI. Como requiere el estándar HDMI, si se conectan productos HDMI o DVI sin HDCP (protección de contenido digital de banda ancha) no habrá salida de vídeo ni de audio.

Todas las demás marcas comerciales que aparecen en este documento son propiedad de sus respectivos dueños. Las especificaciones están sujetas a cambios sin previo aviso.

Turning on your AVITA laptop for the first time / Encender su computadora portátil AVITA por primera vez




IMPORTANT! Please Read.

We recommend fully charging your laptop before using it for the first time. For optimal operation, please connect the provided AC adapter to your laptop when it falls below 20% charge.

¡IMPORTANTE! Favor de leer.

 Recomendamos cargar completamente su computadora portátil antes de usarla por primera vez. Para un funcionamiento óptimo, conecte el adaptador de CA suministrado a su computadora portátil cuando cae por debajo del 20% de carga.

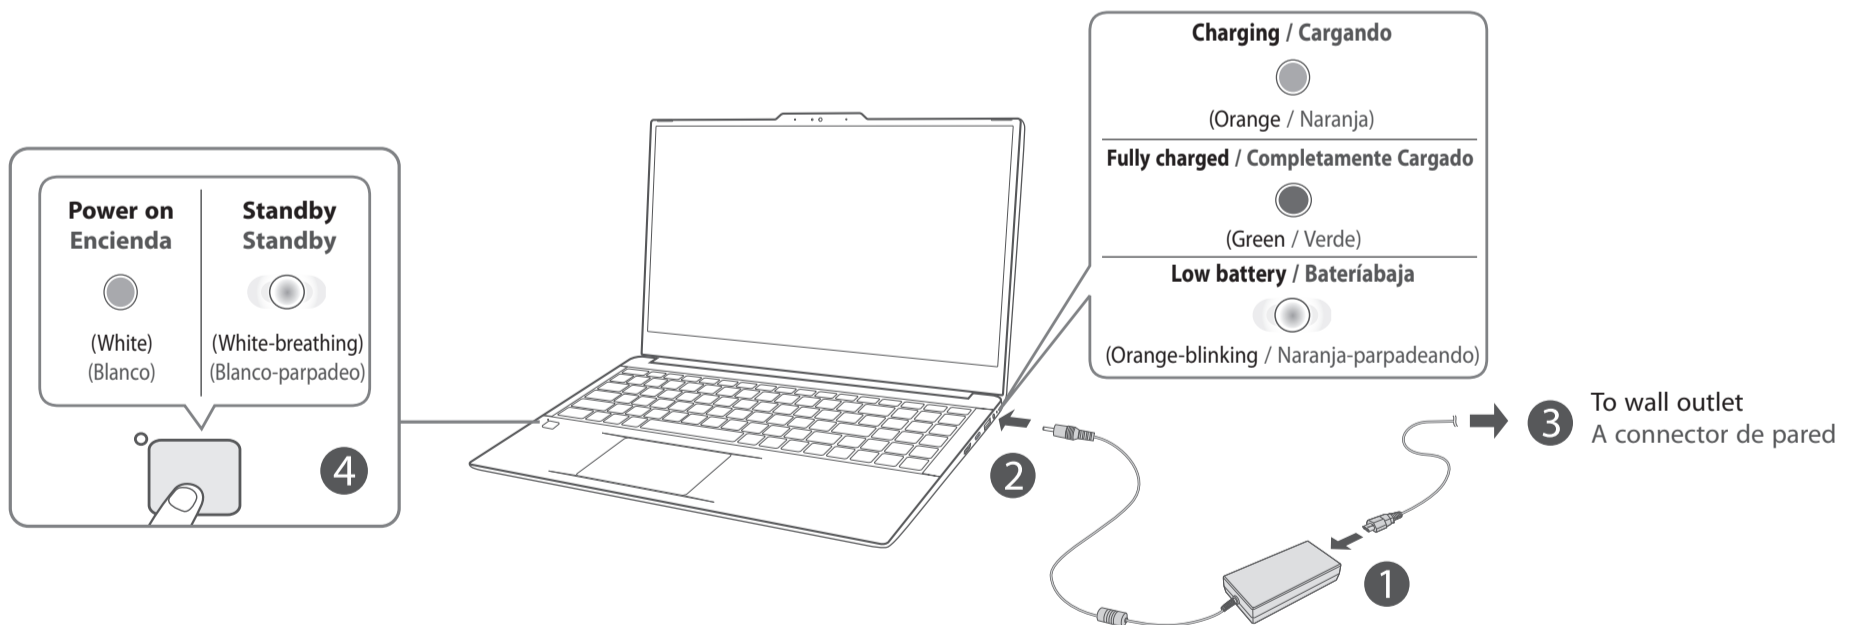

NOTE

- Use ONLY the included AC Adapter to charge the battery. The AC Adapter may vary in appearance, depending on models and your region.
- Charging time will vary depending on remaining battery level. Charging from 0% to 70% will take approximately 1.5 hours. You may not be able to turn on your laptop within a few minutes if the battery was fully drained.

NOTA

- Utilice SOLAMENTE el Adaptador de CA incluido para cargar la batería. El Adaptador de CA puede variar en apariencia, según los modelos y su región.
- El tiempo de carga variará dependiendo del nivel de batería restante. La carga de 0% a 70% tomará aproximadamente 1.5 horas. Es posible que no pueda encender su computadora portátil en pocos minutos si la batería se descarga completamente.

Specifications

Power: DC 19V (operate with AC adapter)
Card Reader: MicroSD Card Slot support max 256GB
WiFi Connection: IEEE 802.11 b/g/n/ac
USB Port:
USB 3.0 Type-C x 1
USB 3.0 Type A x 2

Especificaciones

Corriente: DC 19V (operar con adaptador de CA)
Lector de tarjetas: Soporte de ranura para tarjeta MicroSD máximo de 256 GB
Conexión WiFi: IEEE 802.11 b/g/n/ac
Puerto USB:
Puerto USB 3.0 Tipo C x 1
Puerto USB 3.0 Tipo A x 2

AVITA

Laptop

User manual

CN6Q15

avita-americas.com

IMPORTANT SAFETY INSTRUCTIONS

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments / accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

EN

ADDITIONAL SAFETY INFORMATION

- The AC adapter and apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Always leave sufficient space around the product for ventilation. Do not place product in or on a bed, rug, in a bookcase or cabinet that may prevent air flow through vent openings.
- Do not place lighted candles, cigarettes, cigars, etc. on the product.
- Care should be taken so that objects do not fall into the product.
- Do not attempt to disassemble the cabinet. This product does not contain customer serviceable components.
- To prevent the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- Do not play your headset at high volume. Hearing experts warn against extended high-volume play.

FCC information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAN ICES-3(B) / NMB-3(B)

This device complies with Industry Canada License-exempt RSS Standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

SAR

The radiated output power of this device is below the FCC radio frequency exposure limits. Nevertheless, the device should be used in such a manner that the potential for human contact is minimized during normal operation. The exposure standard for wireless devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/Kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. To avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna should be minimized.

For body worn operation, this device has been tested and meets the FCC RF exposure.

Battery safety

This device contains a built-in battery, improper use of which may result in explosion. Do not heat, open, puncture, mutilate, or dispose of the product in fire. Do not leave the device in direct sunlight for an extended period of time, which could cause melting or battery damage. The battery in this device is not user replaceable and should only be replaced by AVITA or a AVITA Authorized Service Provider.

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Warning: the AC adapter is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the mains plug from mains completely, the AC adapter should be disconnected from the mains socket outlet completely. The socket-outlet shall be installed near the equipment and shall be easily accessible.

EN

Copyright and Trademark Notices

Windows and windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

The Wi-Fi CERTIFIED Logo is a certification mark of the Wi-Fi Alliance.

The Wi-Fi Protected Setup Mark is a mark of the Wi-Fi Alliance.

The *Bluetooth*® word mark and logos are registered trademarks owned by the *Bluetooth* SIG Inc. Other trademarks and trade names are those of their respective owners.



HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks, registered trademarks, or service marks of HDMI Licensing, LLC in the United States and/or other countries.

About HDMI

High-Definition Multimedia Interface (HDMI) is a high-speed digital interface that can transmit uncompressed high definition video and digital multichannel audio. It delivers high quality picture and sound quality. HDMI is fully backward compatible with DVI. As required by the HDMI standard, connecting to HDMI or DVI products without HDCP (High bandwidth Digital Content Protection) will result in no Video or Audio output.

All other trademark appearing herein are the property of their respective owners.


Contents

Safety Precautions	1
Getting Started	6
Getting to know your AVITA laptop	6
Charging your AVITA laptop	9
Turning your AVITA laptop on	10
Put your AVITA laptop off	10
Power Management	12
Basics	13
Start menu	13
Action center	15
Task view	17
Fingerprint recognition	18
Using the touchpad	19
Using the keyboard	21
Connections and Setup	23
Inserting a microSD card	23
External display	24
Connecting to a Wi-Fi network	26
Airplane mode	27
Bluetooth	28
Brightness	28
Volume	29
Troubleshooting	30
Specifications	31

Getting Started

Getting to know your AVITA laptop

 
Top view

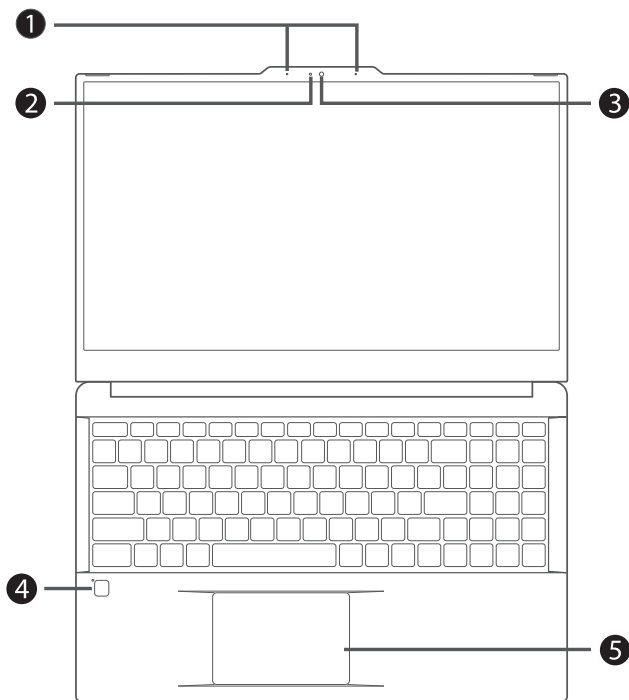

EN

- 1 Microphone**
For voice input.
- 2 Camera indicator**
The camera indicator lights up when the built-in camera is in use.
- 3 Camera**
The built-in camera allows you to take still photos and record videos.
- 4 Power button**
Press to turn the Laptop on or off.
Power indicator
The power indicator lights up when the Laptop is powered on and blinks slowly when the Laptop is in Standby mode.
- 5 Touchpad**
Move the cursor and selects options.
Functions as a mouse.

 Left side



- 1 USB 3.0 port**
Connect to a USB storage device or a mouse, keyboard, or camera.
- 2 Headphones jack**
Headphones connection for personal listening.
- 3 MicroSD card reader**
Accept microSD card (up to 256GB).

Right side



- 1 HDMI OUT port**
Connect to a TV or a display device.
- 2 USB Type-C port (5V DC, 1.5A)**
Connect to a USB storage device or a mouse, keyboard, or camera.
Supports DisplayPort™ audio/video output.
- 3 USB 3.0 port**
Connect to a USB storage device or a mouse, keyboard, or camera.
- 4 DC jack**
Connect with 19V DC charger.
- 5 Charging indicator**
Show the battery's charge status.
 - **Orange:** Charging
 - **Green:** Fully charged
 - **Orange (blinking):** Low battery

 
EN

Charging your AVITA laptop



IMPORTANT! Please Read.

We recommend fully charging your Laptop before using it for the first time. For optimum performance, please connect the provided AC adaptor to your Laptop when it falls below 20% charge.

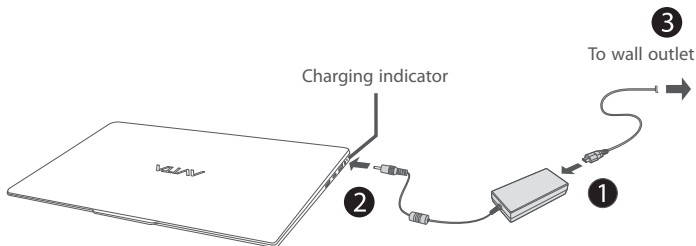

Charging indicator

Orange: Charging

Green: Fully charged

Orange (blinking): Low battery

NOTE

- Use **ONLY** the included AC Adaptor to charge the battery.
- The AC Adaptor may vary in appearance, depending on models and your region.
- Charging time will vary depending on remaining battery level. Charging from 0% to 70% will take approximately 1.5 hours. You may not be able to turn on your Laptop within a few minutes if the battery was fully drained.

In order to keep the battery working in best condition, please pay attention to the following:

 
- The included AC adaptor is for use with this unit only. Do not use it with other equipment.
- Please do not charge the battery in high temperatures.
- Do not wait for the battery to be fully depleted before charging again. Keep the battery charged as needed.
- If your Laptop has not been used for a long period of time, the battery might be in over discharge protection mode and may take longer to charge.

Turning your AVITA laptop on

Starting for the first time

When using the Laptop for the first time, you will be required to setup the following:

1. Press the **Power** button to turn on your Laptop.

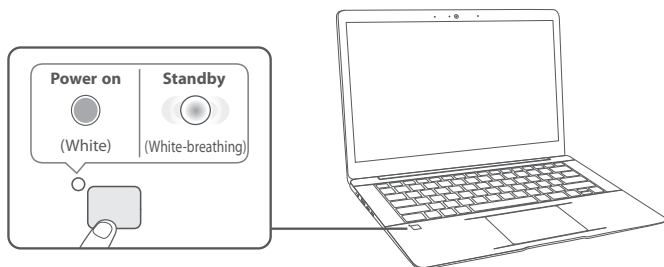

2. Select the language, then click **Yes**.
3. Follow the onscreen instructions to configure your Laptop.

About Windows Activation




Windows will be active automatically once you connect your Laptop to a WiFi network.

 
Putting your AVITA laptop to Sleep

You can put your Laptop to Sleep mode by doing either of the following:

- Go to the **Start** menu and click the **Power** icon in the lower-left corner of the screen, select and click **Sleep**.
- Briefly press the **Power** button to put the laptop in sleep mode. If the laptop has not been operated for some time, it will automatically turn to sleep mode.

Turning your AVITA laptop off

1. Click the  icon in the lower-left corner of the screen or press the  **Start** key on the keyboard to get to the **Start** menu.
2. Click the  **Power** icon in the lower-left corner of the screen, it will display 3 options (Sleep, Shut down and Restart).
3. Select **Shut down** to power the Laptop off.

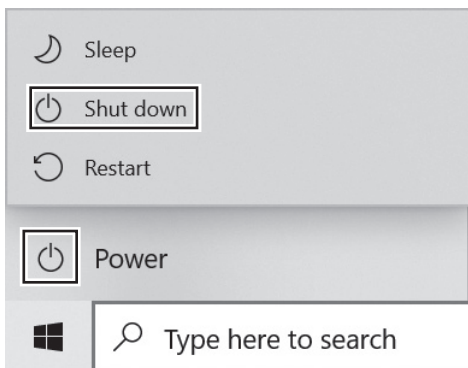

NOTE

 
- Save all data before turning your Laptop off.
- If your Laptop is unresponsive, press and hold the **Power** button for several seconds and follow the on-screen instructions to force SHUT DOWN the unit.

Power Management

When the apparatus is not connected power adaptor and not providing the main function or when other energy-using products are not dependent on its function, the default system settings and its characteristics enable the apparatus to activate display sleep mode within 5 minutes of user inactivity, and to activate a distinct sleep mode within 10 minutes of user inactivity. In the same scenario, when the apparatus is connected to power adaptor, will activate display sleep mode within 15 minutes of user inactivity, and activate a distinct sleep mode within 25 minutes of user inactivity. When in sleep mode, the system becomes fully usable within 5 seconds via network connections or user interface devices. The power management function is automatically switched on by the default system settings.



EN

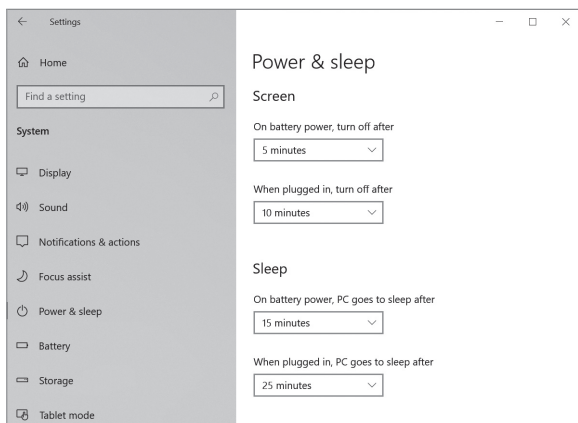
Go to **Settings -> System -> Power & sleep** to manage how your Noteboool PC use power.



Basics


Start menu

 Microsoft Windows 10 is a new operating system that is used to control a computer. Click the  icon in the lower-left corner of the screen to get to the Start menu. You can also open the Start menu by pressing the  **Start** key on the keyboard.

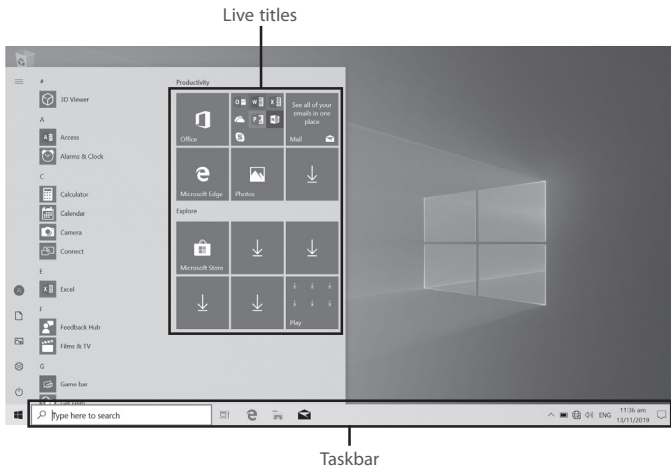

Live Tiles on the screen change and update in real time so you can get real-time updates about news or sports, check what your friends are up to, and get the latest weather forecast.

Expand

Click this icon  in the upper-left corner of the screen to expand the **START** menu.


Account options

Click on your account name to change account settings, lock your device or sign out of your account.

Settings

Allows you to access the settings of your Laptop. Click it to enter the **Settings** screen.

Power

Click  icon to Sleep, Shut down or Restart your Laptop.




 





 
Start

Click the  **Start** icon to open/close the Windows Start menu.

EN

Taskbar


The below table lists some of the frequently used icons in the Taskbar:


Icon	Description
	Shows the battery status.
	Displays when a Wi-Fi network connected.
	Displays when there is NO a Wi-Fi network connection or Wi-Fi is turned off.
	Airplane mode is on.
	Adjusts the speaker volume.
	Launches Action Center
	Launches Search.
	Shows the recent task.
	Shows all opened tasks in a single view.
	Launches the File Explorer.

Action Center

It allows you to receive system notifications, such as updates. It also has a really useful Quick Actions on the bottom.

Checking notifications

 1. Click the  icon in the lower-right corner of the screen to launch the ACTION CENTER screen.
2. All messages appears in the Action Center and you can select and click them to read.

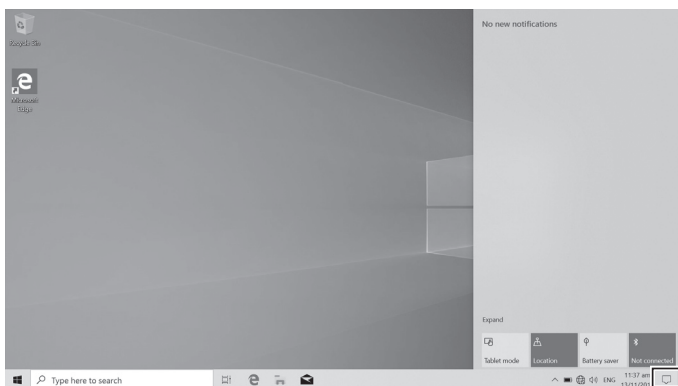

Tip: You can go to **Settings -> System -> Notifications & actions** to set the Notifications and Actions.



NOTE


- Select **Expand** or **Collapse** to expand or minimize the **Quick Actions** menu.

Quick Actions menu

Tablet mode	Opens or closes the Tablet mode.
Network	Enables or disables Network, and connects to a wireless network so that you can check email, search the Web, access social media websites.
All settings	Allows you to access the settings of your Laptop.
Nearby sharing	Turns on/off Nearby sharing.
Airplane mode	Enables or disables Airplane mode. Turns it on to stop all wireless communication.
Location	Enables or disables Location. If this setting is on, each person who signs in to this device can change their own location settings.
Focus assist	Choose which notification you'd like to see and hear so you stay focused (off, Priority only or Alarms only).
Mobile hotspot	Activates the Mobile hotspot.
Night light	Enables or disables Night light.
Bluetooth	Enables or disables Bluetooth.
VPN	Add a VPN connection.
Battery saver	Turns on/off Battery saver.
Screen snip	Opens the Screen snip options.
Project	Opens the Project options.
Connect	Searches for wireless display and audio devices.

 
EN

Task view


If you have a lot of apps and programs opened, click the  icon on the taskbar to see all of your running apps and programs. You can select and click any item to open it.

Creating a new desktop

Select and click **+ New desktop**, a new desktop will be added. Then you can open your desired apps and programs on the new desktop.

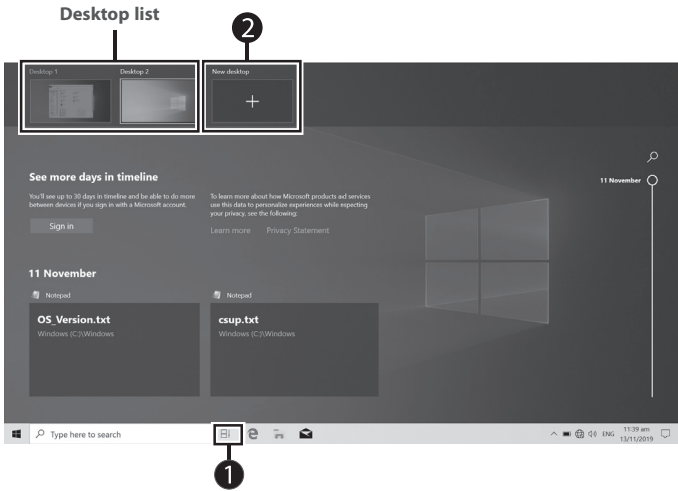

Deleting a desktop

Move the cursor over the desktop you want to delete, then select  in the upper-right corner of the desktop.

 
Fingerprint recognition

Unlock the screen using your fingerprint rather than entering a password.

Setting up your fingerprint account

You need create a **Password** first to use the fingerprint feature.

1. Go to **Settings** -> **Accounts** -> **Sign-in options**.

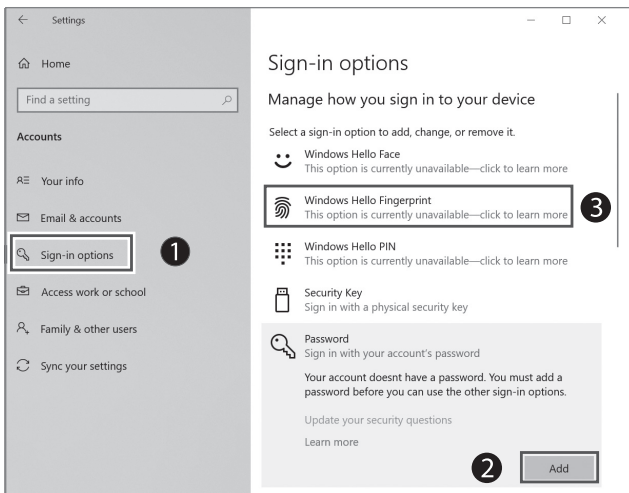


2. Select **Add** under **Password** to create a password.
3. Select **Set up** under **Fingerprint** to start the fingerprint registration.
4. Follow the onscreen instructions to set up your Fingerprint account.

Using the Touchpad

Use the Touchpad to move the cursor or select an item. The left and right buttons of the Touchpad act the same as the left and right buttons of a mouse.

Moving

 Slide your finger on the Touchpad to move the cursor.



Left-click

Tap the touchpad or press the left touchpad button.

 
- In the Start menu, click an app to launch it.
- On the File Explorer desktop, double click an application to launch it.



Right-click


To right-click an item, press the right touchpad button.

- In the Start menu, select an app and press the right touchpad button to launch the Setting bar.
- On the File Explorer desktop, select one folder or file and press the right touchpad button to open the right-click menu.




Dragging and dropping

 Press and hold the left button. Select an item using your other finger then drag and drop it to a new position.



Two-finger scroll (up/down)

 
Slide two fingers to scroll up or down.



EN


Two-finger scroll (left/right)

 Slide two fingers to scroll left or right.




Zoom out

 Pinch two fingers while viewing a website, map, or image.



Zoom in

 Spread two fingers apart while viewing a website, map, or image.
























 


NOTE

- Please keep your fingers dry and clean when using the Touchpad.

Using the Keyboard
























Function keys

Press and hold the **Fn** key, then press a hot key to trigger the following commands:







-  +  Turns the Airplane mode on and off.
-  +  Decreases the screen brightness.
-  +  Increases the screen brightness.
-  +  Enables or disables the Touchpad.
-  +  Launches Windows Settings.
-  +  Turns the speakers on and off.
-  +  Decreases the sound volume.
-  +  Increases the sound volume.
-  +  Adjusts the keyboard backlight's brightness or turn it off.
-  +  Plays or pauses a selected media file.
-  +  Prints the current screen.
-  +  Switches between the display screen and an external monitor (if connected).

Windows keys

You can also use the following shortcuts to help you to launch the applications and navigate the Windows 10.

-  Opens or closes the Start menu.
-  +  Launches **Action Center**
-  +  Launches the desktop
-  +  Launches **File Explorer**
-  +  Launches **Feedback Hub**
-  +  Launches Windows **Settings**
-  +  Launches the **CONNECT** screen
-  +  Activates the Lock screen
-  +  Minimizes all currently active windows
-  +  Launches the **PROJECT** screen
-  +  Opens the **Run** window
-  +  Launches **Search** window

 
EN

-  +  Chooses the programs on the taskbar
-  +  Opens **Ease of Access** setting menu
-  +  Opens the context menu of the Start button

Connections and Setup

Inserting a microSD card

Insert the microSD card (sold separately) into the Laptop's microSD slot until it clicks.

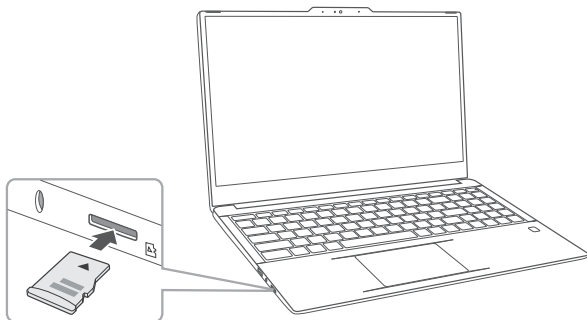

To check the storage of the microSD card, go to **Settings -> System -> Storage**.

Remove the microSD card by pushing in on the card's edge. The card will pop out and can be removed.

 **NOTE**

 
- You can use microSD™ card and microSDHC™ card (up to 256GB, SD card not included).

External display

 
You can connect the Laptop to an external display device. The cables required to connect an external display are sold separately.

Connecting to a display

1. Connect the Laptop to a TV or other display device using an HDMI cable (not included) through the mini-HDMI port.

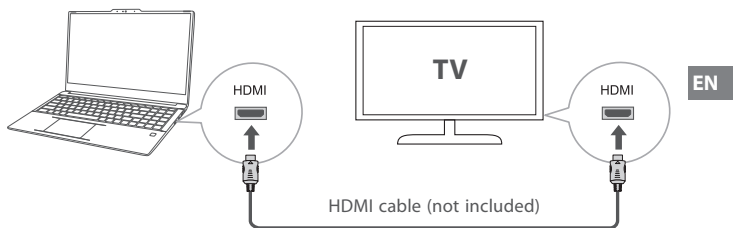



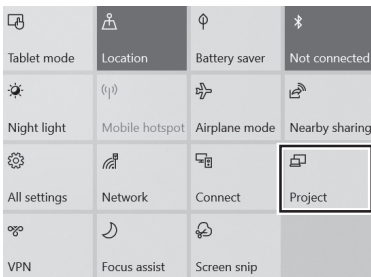

2. Turn on your TV or other display device and select its input mode.
3. Go to **Action Center** menu, select and click **Project**.



Tip: You can also use the following shortcuts to launch the **Project**.




4. Select your desired mode as following:


	PC screen only Shows the screen on the Laptop only.
	Duplicate Shows the screen on both the Laptop and the external display.
	Extend Extends the screen to the external display.
	Second screen only Shows the screen on the external display only.

Tip: You can also select the dual view (extend) mode. Go to **Settings -> System -> Display**, and select **Detect** on the **Multiple displays** option.

Connecting to a Wi-Fi network


Connect the Laptop to a wireless network to use the Internet.

 1. On the Taskbar, select and click .

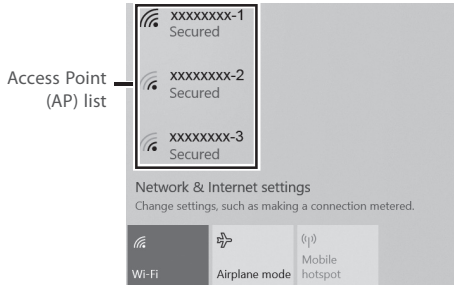

EN

 2. Select a network from the list of detected wireless networks and select **Connect automatically** -> **Connect**

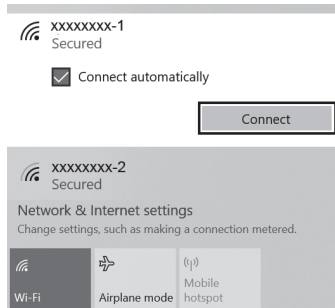

3. Enter the **Access Point's** password, if necessary, and select **Next**.

Tip: You can also go to **Settings** -> **Network & Internet** -> **Wi-Fi**, click it to **On**.





NOTE

 
- If the device finds a network that you connected to previously, it will connect to it automatically.
- If the Wi-Fi network does not appear in the list, it maybe a hidden network, please click "**Hidden Network**" and input SSID name of network along with password for a connection.


Airplane mode

The Airplane mode disables the wireless connection, allowing you to use your Laptop safely while in-flight.

If you see  icon displayed in the lower-right corner of the screen, the Airplane mode is on. You should turn off the Airplane mode to enable the wireless network.

1. On the Taskbar, select and click .

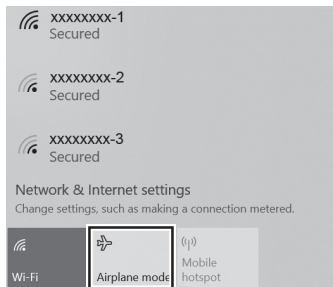


2. Select and click  **Airplane mode**.

Tip: You can also go to **Settings** -> **Network & Internet** -> **Airplane mode**, click it to **On**.

Bluetooth

You can use Bluetooth to communicate between the Laptop and other Bluetooth devices, such as a smartphone.

 1. Go to **Action Center** menu, select and click **Bluetooth** to turn it on.

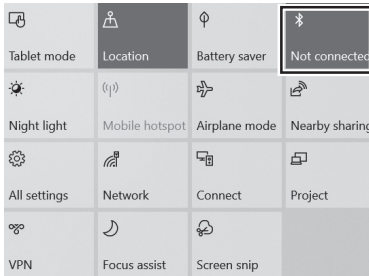

EN

2. Then the Laptop will be a discoverable bluetooth device and you can scan it on your other bluetooth device.

Tip: You can also go to **Settings -> Devices -> Bluetooth**, click it to **On**.

Brightness

You can adjust the brightness level of the screen according to your requirements.

Using the keyboard to adjust brightness


Press and hold the **Fn** key, then press the **F2** key to decrease the brightness of the computer screen.

 


Press and hold the **Fn** key, then press the **F3** key to increase the brightness of the computer screen.



Using the taskbar to adjust brightness

Click the  icon in the lower-right corner of the screen to launch the ACTION CENTER menu. Drag the bar to adjust the brightness.

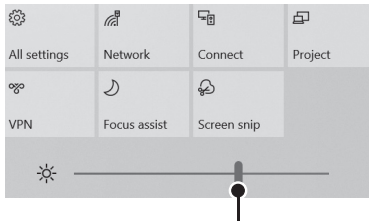

Brightness adjustment bar

Volume

You can adjust the system volume or sound volume when playing music or video.

Using the keyboard to control volume

 
Press and hold the **Fn** key, then press the **F7** key to decrease the sound volume.




Press and hold the **Fn** key, then press the **F8** key to increase the sound volume.



Using the taskbar to control volume

 Select and click  on the Taskbar, then drag the adjustment bar to your desired volume.

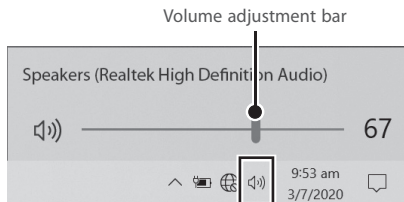

Volume adjustment bar

Troubleshooting

When a problem occurs with the Laptop, it is easy to restore the Laptop to the factory default settings. Back up important data regularly before a problem occurs with the Laptop.

You can go to **Settings** -> **Update & security** -> **Recovery** to recover your Laptop.

Reset this PC

If your PC isn't running well, resetting it might help. This lets you choose to keep your personal files or remove them, and then reinstalls Windows. Click **Get started** and then choose an option.

Keep my files

Removes apps and settings, but keeps your personal files.

Remove everything

Removes all of your personal files, apps, and settings.

Advanced startup

Start up from a device or disc (such as a USB drive), change your PC's firmware settings, change Windows startup settings, or restore Windows from the system image. This will restart your PC.

If you want to perform this action, click **Restart Now**.



NOTE

Third-party applications will be removed.

Q & A

The device won't start

- This may happen if your battery is empty. Please connect the provided AC adapter to a wall outlet.

Windows is not active automatically

Windows will be active automatically once you connect your Laptop to a Wi-Fi network.

- Make sure that you have a Wi-Fi network connection.

Laptop displays network or service error message

- When you are located in places with poor signal, your Laptop may lose its Wi-Fi connection. Try moving closer to the Wi-Fi router.

EN

Laptop is frozen or a serious error appears

- If the Laptop is frozen or suspended, you may need to close the application or refresh your Laptop.
- If the Laptop is frozen or slow to respond, press and hold the power button for several seconds and follow the on-screen instructions to force SHUT DOWN the unit, then press the power button to turn on your Laptop again.

Specifications

Processor

AMD R3

CPU Speed

2.6 GHz

RAM

8GB DDR4

Display

1920 x 1080 FHD

Camera

1M

Card Reader

MicroSD Card Slot support max 256GB

USB port

USB Type-C x 1

USB 3.0 Type A x 2

WiFi Connection

IEEE 802.11 b/g/n/ac

Bluetooth

Bluetooth 4.2

Power

DC 19V (operates with supplied AC adaptor)

Specifications and external appearance are subject to change without notice.