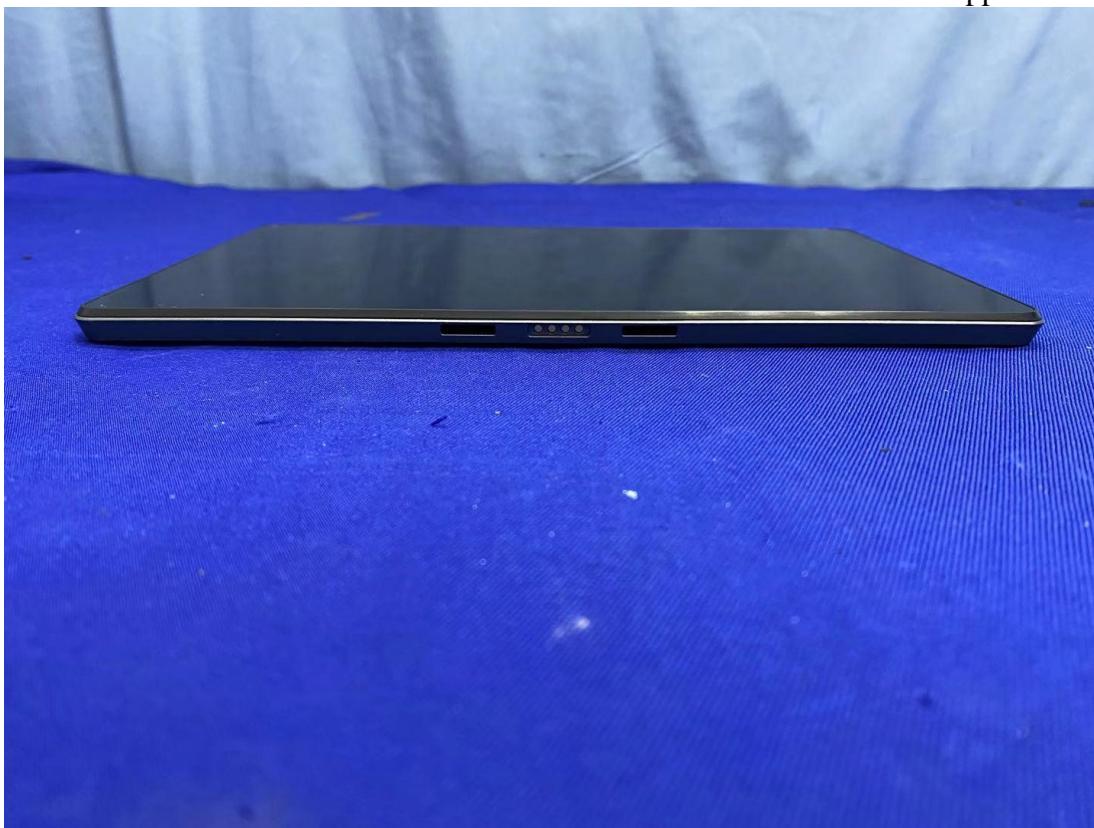


Figure 7

General Appearance of the EUT

**Figure 8**

Inside Configuration of the EUT

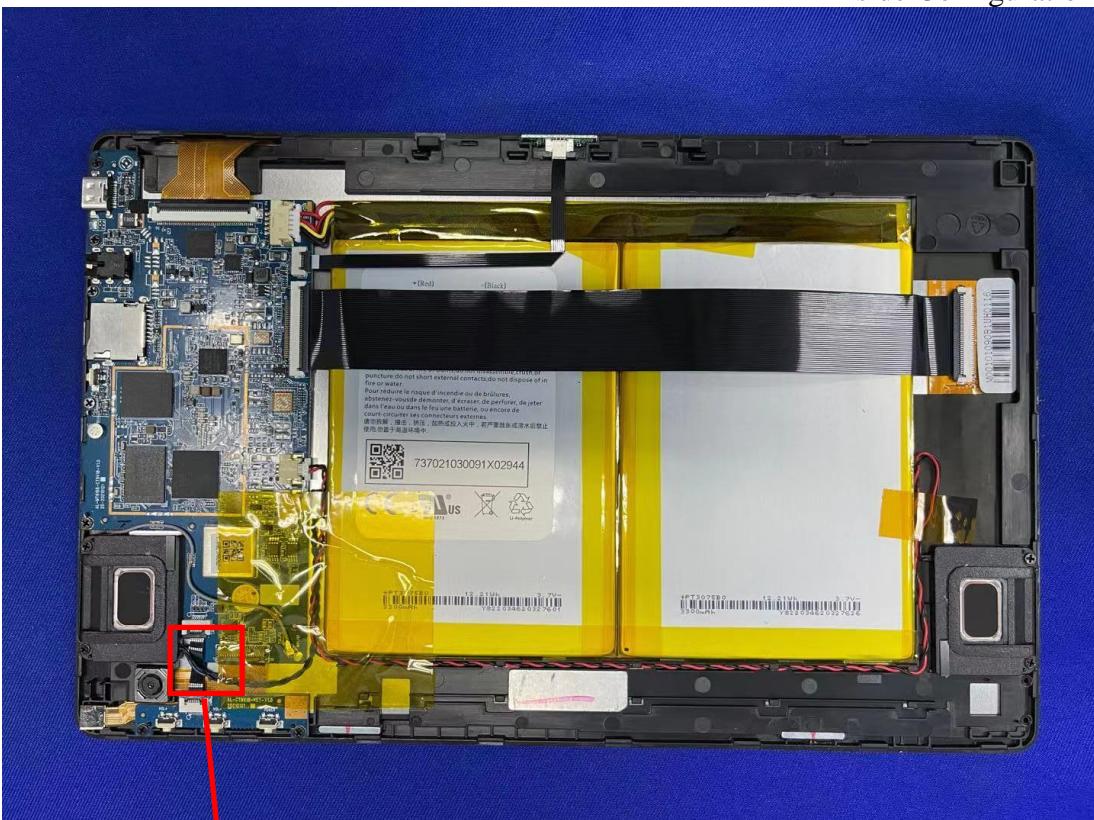
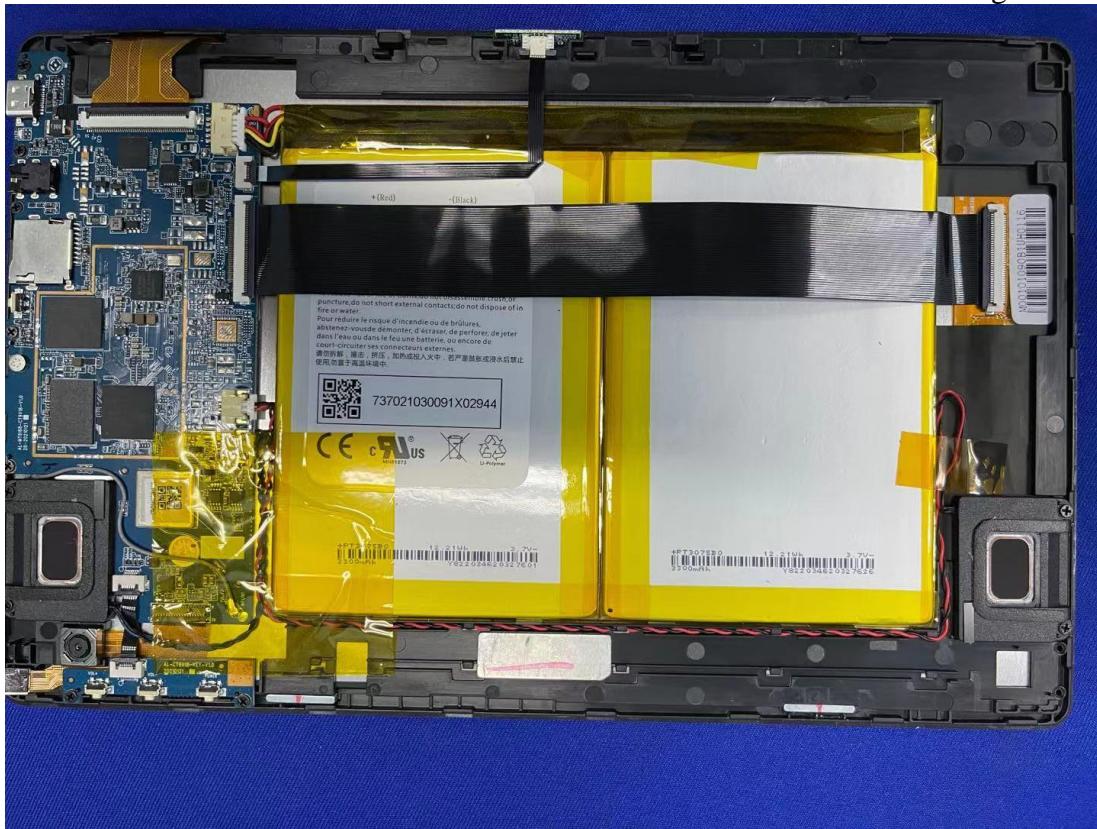
**BT/WIFI Ant**

Figure 9
Inside Configuration of the EUT



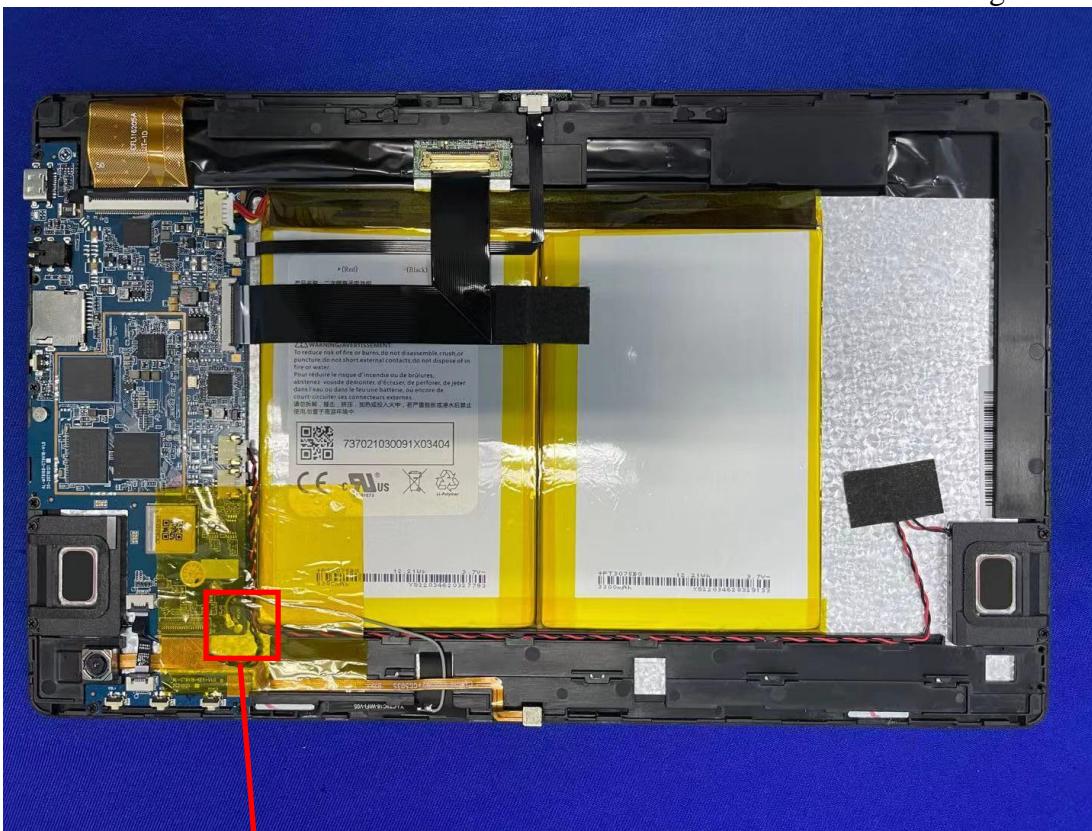
M/N: CT9C18

Figure 10
General Appearance of the EUT



Figure 11

Inside Configuration of the EUT

**BT/WIFI Ant****Figure 12**

Inside Configuration of the EUT

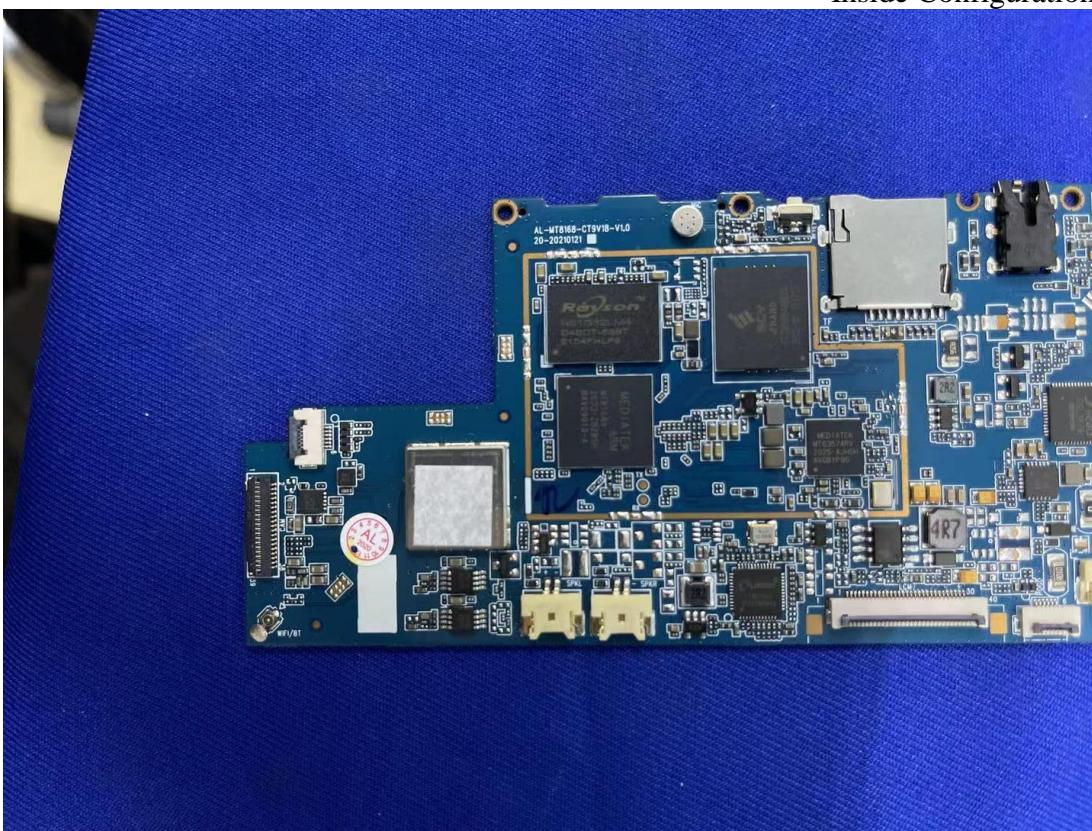
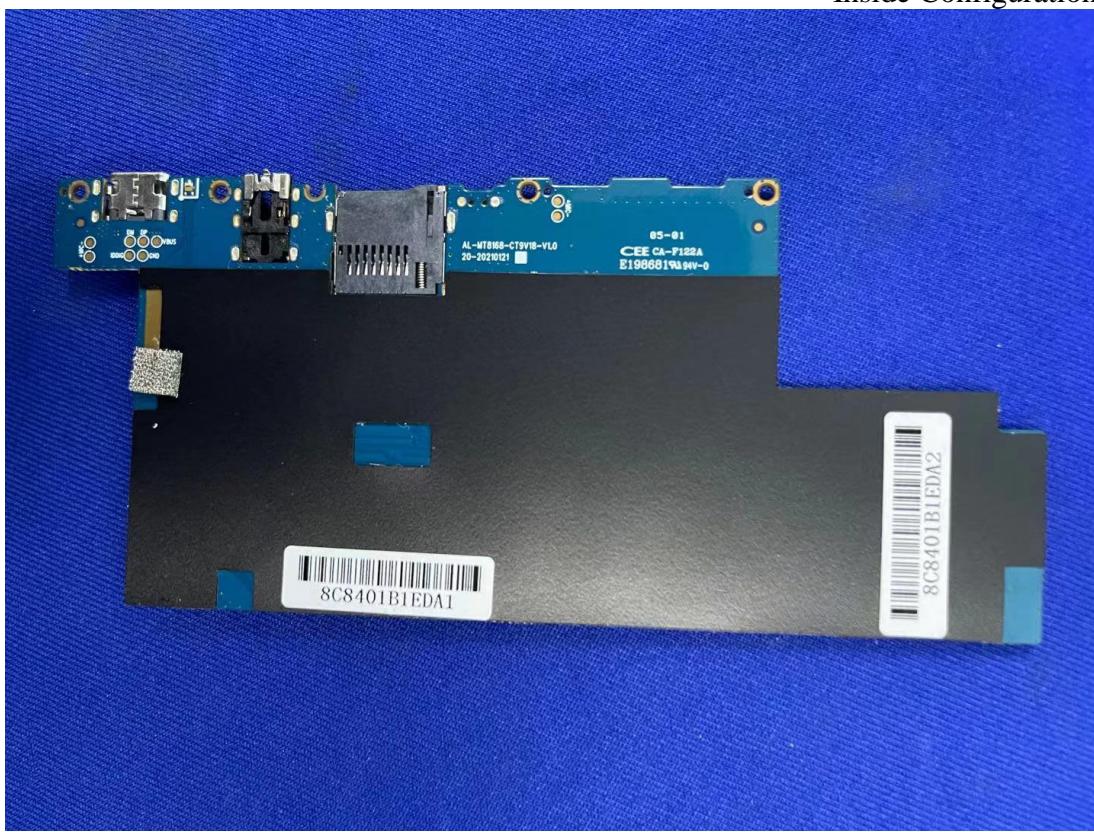


Figure 13

Inside Configuration of the EUT

**Figure 14**

Inside Configuration of the EUT

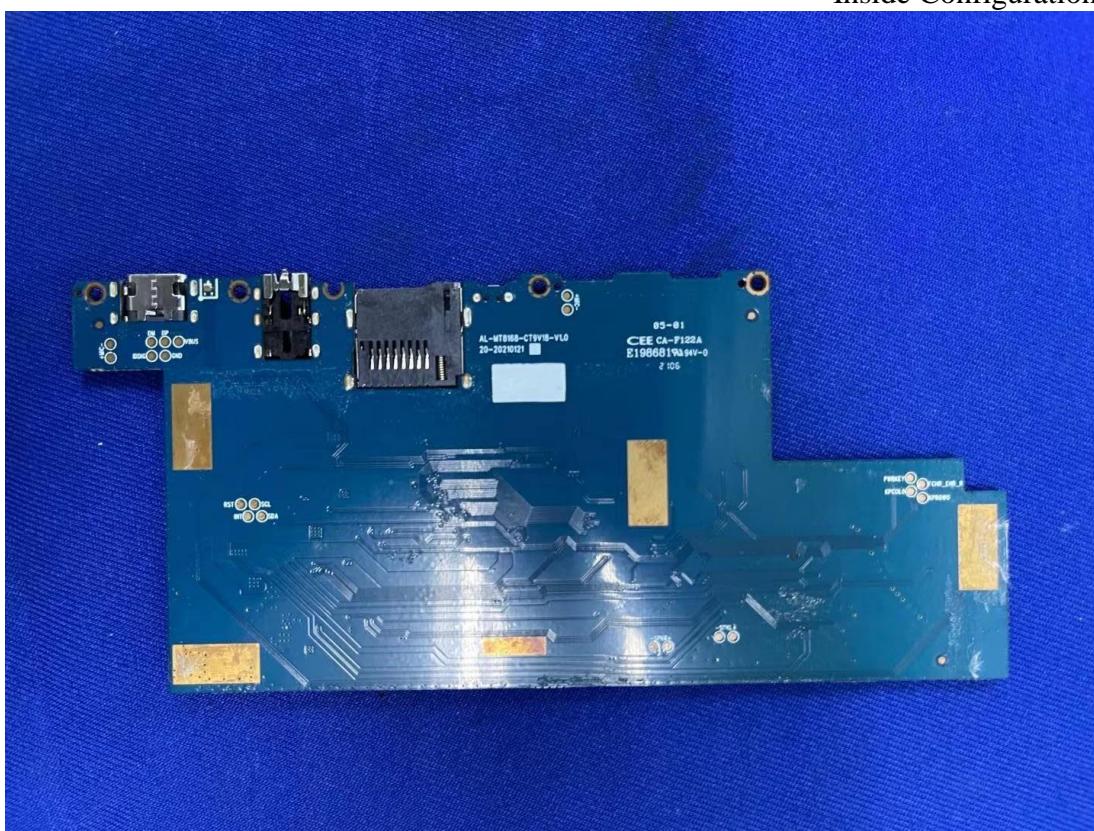
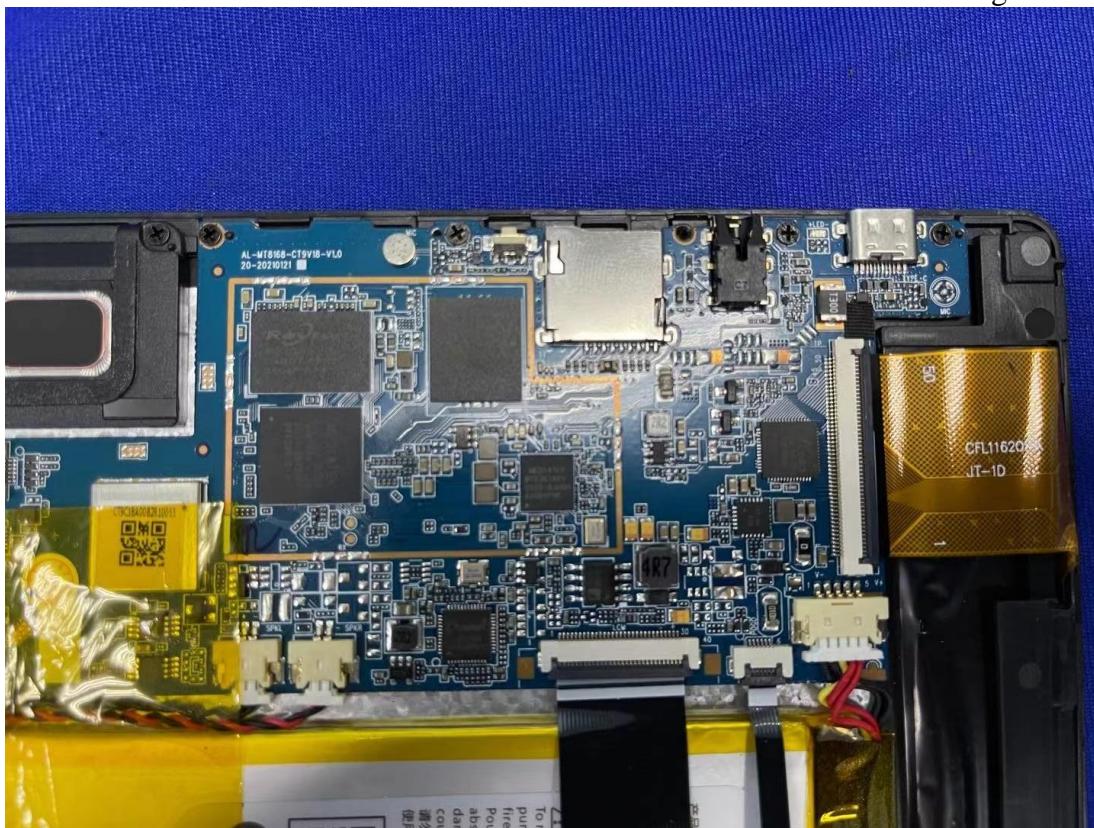


Figure 15

Inside Configuration of the EUT

**Figure 16**

Inside Configuration of the EUT

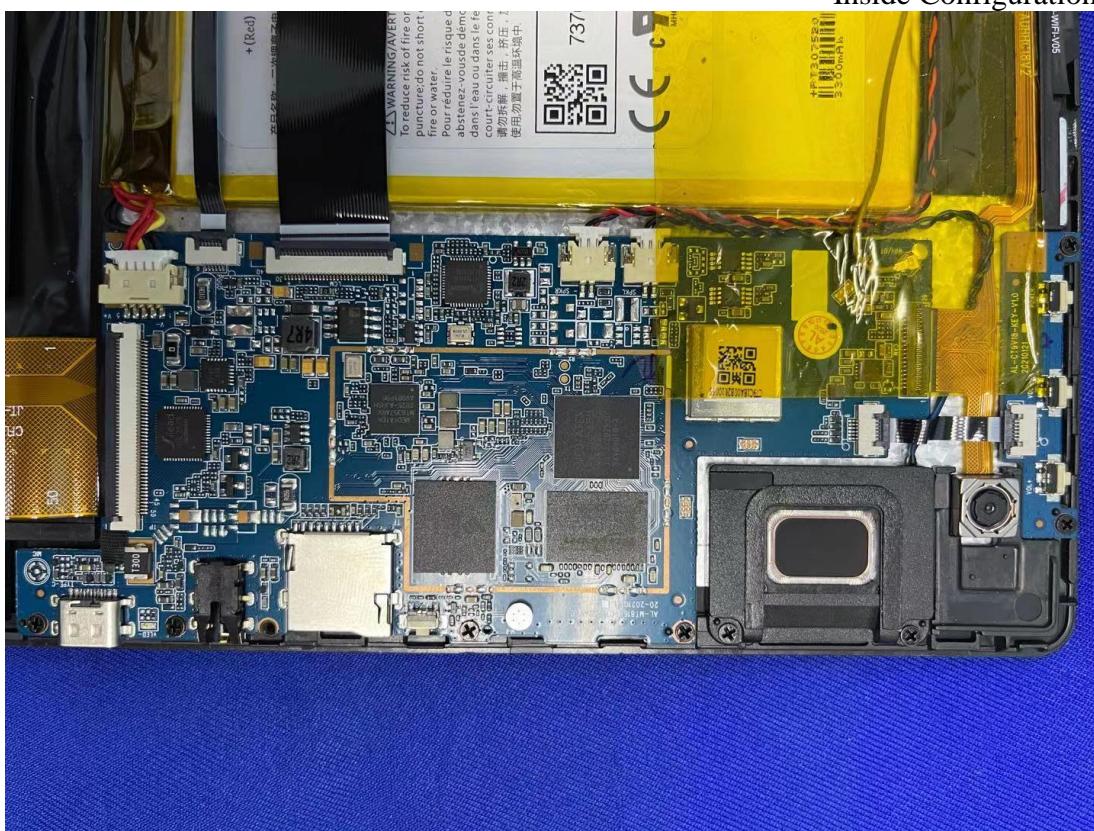


Figure 17
Inside Configuration of the EUT

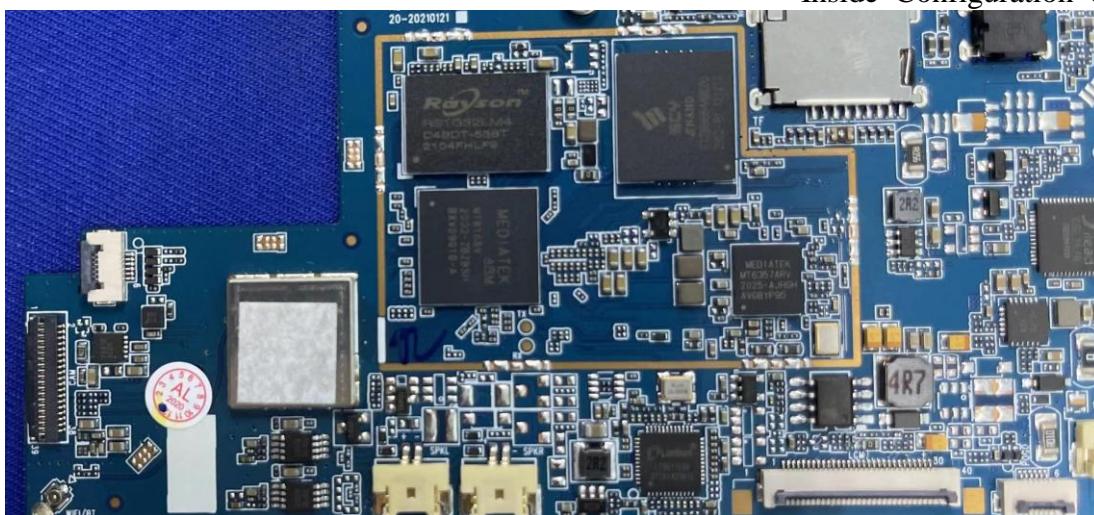


Figure 18
Inside Configuration of the EUT

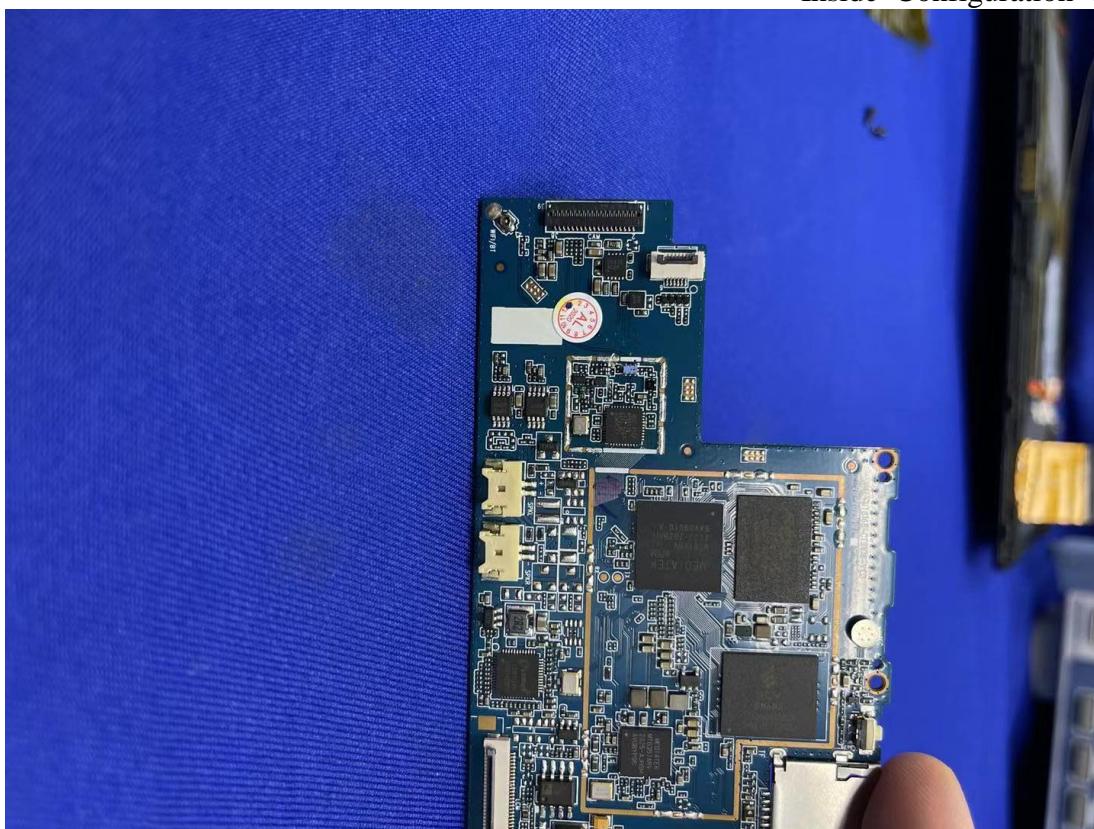
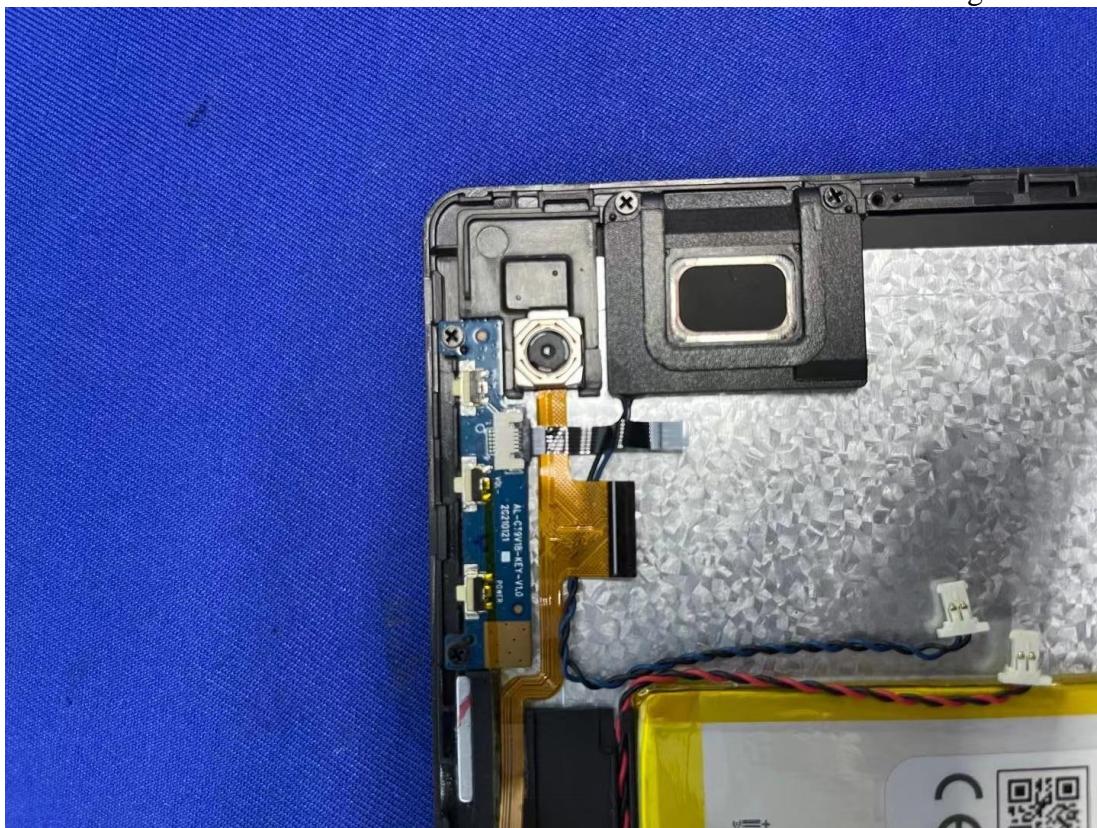


Figure 19

Inside Configuration of the EUT

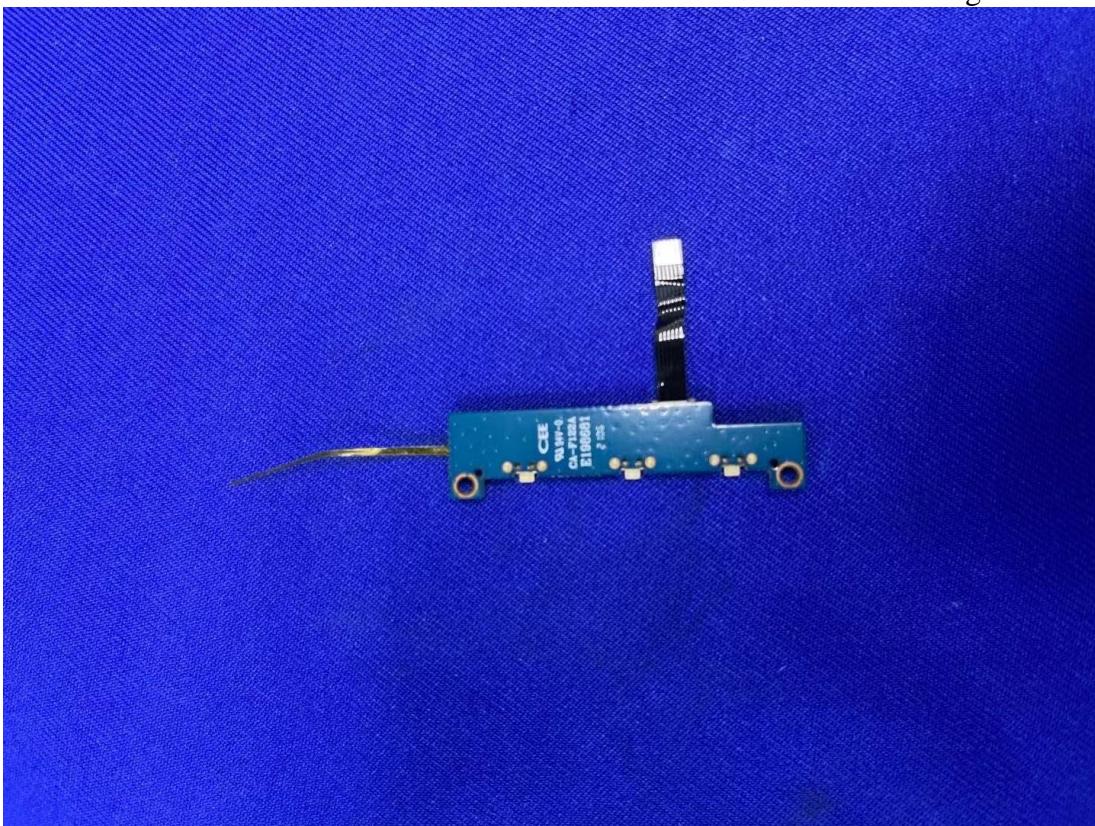
**Figure 20**

Inside Configuration of the EUT



Figure 21

Inside Configuration of the EUT

**Figure 22**

Inside Configuration of the EUT



Figure 23

Inside Configuration of the EUT



Figure 24

Inside Configuration of the EUT



Figure 25

Inside Configuration of the EUT

**Figure 26**

Adapter



Figure 27
Adapter