

# QUICK START GUIDE

EF-NN975

LED View Cover

Printed in Korea  
A00685 Rev.1.0  
USA Type 01/2019

## SAMSUNG

To stop an alarm or timer, drag your finger to the right on the LED window (b).



- You cannot answer or reject an incoming call on the LED View Cover during a video call.
- The LED window (b) may not work while wireless charging.
- Remove the cover for optimal Wireless Power Share results.

### Unlocking the mobile device's screen automatically

You can set your mobile device to unlock automatically when the LED View Cover is opened.

On your mobile device, tap **Settings** → **Advanced features** → **Accessories**, and then activate the automatic unlock feature.



- This feature is available only when secure lock is disabled.

## English

Copyright © 2019 Samsung Electronics America, Inc. Other marks are the property of their respective owners.

- Please read this guide before using the device to ensure safe and proper use.
- Images may differ in appearance from the actual product. Content is subject to change without prior notice. Visit [www.samsung.com](http://www.samsung.com) to view device information, the latest guide, and more.
- Before using the LED View Cover, make sure it is compatible with your device.
- Verify that the NFC function is working properly before using the device with the LED window functions, Auto Screen On/Off feature, or Theme Curation Service feature active.
- If your device is running Mobile Device Management (MDM) or is located near a metallic object, the NFC function may not work properly.
- If you flip the front cover and block the back of the mobile device, the NFC function may not work properly.
- Your consumer rights are governed by the law of the country in which you purchased the product. Please contact your service provider for more information.

### Setting LED images

Using your mobile device, you can create and set LED images to display for contacts during incoming calls or for notifications on the LED window (b). On your mobile device, tap **Settings** → **Advanced features** → **Accessories**, and then use the LED icon editor feature.

You can also use the LED icon editor app that appears when you attach the LED View Cover to the mobile device.

 
### Safety information

Read all safety information before using the device to ensure safe and proper use. To view the full safety information, refer to the Samsung website.


**Use only charging devices that are approved by Samsung. Samsung charging devices are designed for your device to maximize battery life. Using other charging devices may void your warranty and may cause damage**

**Do not touch the device with wet hands**


**Do not drop or cause an impact to the charger or the device**

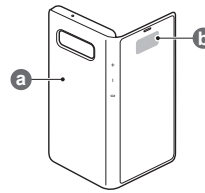

A

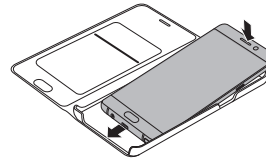 

B

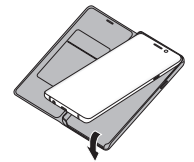 

### Device layout

a	NFC antenna	b	LED window
---	-------------	---	------------

### Attaching or detaching the LED View Cover

Open the LED View Cover and attach it to your mobile device (A).

To detach the LED View Cover, open the LED View Cover and pull on the bottom of it to remove it from the mobile device (B).

### Answering or rejecting calls

You can answer or reject a call on your mobile device using the LED window (b) without opening the LED View Cover.

To answer a call, drag your finger to the right on the LED window (b). To reject a call, drag your finger to the left on the LED window (b).

**The device can be used in locations with an ambient temperature of 0 °C / 32 °F to 35 °C / 95 °F. You can store the device at an ambient temperature of -20 °C / -4 °F to 50 °C / 122 °F. Using or storing the device outside of the recommended temperature ranges may damage the device**

**Do not allow children or animals to chew or suck the device**

**Do not disassemble, modify, or repair your device**

### FCC Part 15.19

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### FCC Part 15.21

Any changes or modifications (including the antennas) to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment.

### Samsung Mobile Products and Recycling

Samsung cares for the environment and encourages its customers to properly dispose of Devices and Samsung accessories in accordance with local regulations. In some areas, disposal of these items in household or business trash may be prohibited. Dispose of other unwanted electronics through an approved recycler. To find the nearest recycling location, go to our website: [www.samsung.com/recyclingdirect](http://www.samsung.com/recyclingdirect) or call 1-877-278-0799.

### Samsung Electronics America, Inc

85 Challenger Road,  
Ridgefield Park, New Jersey, 07660  
Phone: 1-800-SAMSUNG (726-7864)