

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

SAMSUNG ELECTRONICS



World Wide Web
<http://www.samsungmobile.com>

Printed in Korea
Code No.:GH68-XXXXXA
English (EU). 11/2009. Rev. 1.0

GT-S5150 user manual



using this manual

This user manual has been specially designed to guide you through the functions and features of your mobile phone. To get started quickly, refer to “introducing your mobile phone,” “assembling and preparing your mobile phone,” and “using basic functions.”

Instructional icons

Before you start, familiarise yourself with the icons you will see in this manual:



WARNING

Warning—situations that could cause injury to yourself or others



CAUTION

Caution—situations that could cause damage to your phone or other equipment



Note—notes, usage tips, or additional information



Refer to—pages with related information; for example: ► p. 12 (represents “see page 12”)

- **Followed by**—the order of options or menus you must select to perform a step; for example: In Menu mode, select **Messages** → **Create message** (represents **Messages**, followed by **Create message**)
- [] **Square brackets**—phone keys; for example: [] (represents the Power/Menu exit key)
- < > **Angled brackets**—softkeys that control different functions at each screen; for example: <OK> (represents the **OK** softkey)

Copyright information

Rights to all technologies and products that comprise this phone are the property of their respective owners:

- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide
Bluetooth QD ID: B0XXXXX
- Java™ is a trademark of Sun Microsystems, Inc.

CE0168

contents

safety and usage information	1
Safety warnings	1
Safety precautions	4
Important usage information	6
 introducing your mobile phone	 12
Unpack	12
Phone layout	13
Keys	14
Display	15
Icons	16
 assembling and preparing your mobile phone	 17
Install the SIM card and battery	17
Charge the battery	19
Insert a memory card (optional)	20

using basic functions 22

Turn your phone on and off	22
Access menus	23
Use shortcut menus from the shortcut toolbar	23
Customise your phone	24
Use basic call functions	26
Send and view messages	27
Add and find contacts	30
Use basic camera functions	31
Listen to music	32
Browse the web	34

using advanced functions 35

Use advanced call functions	35
Use advanced phonebook functions	38
Use advanced messaging functions	39

Use advanced camera functions	41
-------------------------------------	----

Use advanced music functions	44
------------------------------------	----

using tools and applications 47

Use the Bluetooth wireless feature	47
Activate and send an SOS message	49
Activate the mobile tracker	49
Make fake calls	50
Record and play voice memos	51
Edit images	52
View photos and videos on the web	53
Use Java-powered games and applications	54
Create and view world clocks	55
Set and use alarms	56
Use the calculator	57
Convert currencies or measurements	57

Set a countdown timer	57
Use the stopwatch	57
Create new tasks	58
Create new memos	58
Manage your calendar	58

troubleshooting	a
------------------------------	----------

index	d
--------------------	----------

Correct disposal of this product

(Waste Electrical & Electronic Equipment)



(Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

This EEE is compliant with RoHS.

Correct disposal of batteries in this product



(Applicable in the European Union and other European countries with separate battery return systems)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

Disclaimer

Some content and services accessible through this device belong to third parties and are protected by copyright, patent, trademark and/or other intellectual property laws. Such content and services are provided solely for your personal noncommercial use. You may not use any content or services in a manner that has not been authorised by the content owner or service provider. Without limiting the foregoing, unless expressly authorised by the applicable content owner or service provider, you may not modify, copy, republish, upload, post, transmit, translate, sell, create derivative works, exploit, or distribute in any manner or medium any content or services displayed through this device.

"THIRD PARTY CONTENT AND SERVICES ARE PROVIDED "AS IS." SAMSUNG DOES NOT WARRANT CONTENT OR SERVICES SO PROVIDED, EITHER EXPRESSLY OR IMPLIEDLY,

FOR ANY PURPOSE. SAMSUNG EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. SAMSUNG DOES NOT GUARANTEE THE ACCURACY, VALIDITY, TIMELINESS, LEGALITY, OR COMPLETENESS OF ANY CONTENT OR SERVICE MADE AVAILABLE THROUGH THIS DEVICE AND UNDER NO CIRCUMSTANCES, INCLUDING NEGLIGENCE, SHALL SAMSUNG BE LIABLE, WHETHER IN CONTRACT OR TORT, FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, ATTORNEY FEES, EXPENSES, OR ANY OTHER DAMAGES ARISING OUT OF, OR IN CONNECTION WITH, ANY INFORMATION CONTAINED IN, OR AS A RESULT OF THE USE OF ANY CONTENT OR SERVICE BY YOU OR ANY THIRD PARTY, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES."

Third party services may be terminated or interrupted at any time, and Samsung makes no representation or warranty that any content or service will remain available for any period of time. Content and services are transmitted by third parties by means of networks and transmission facilities over which Samsung has no control. Without limiting the generality of this disclaimer, Samsung expressly disclaims any responsibility or liability for any interruption or suspension of any content or service made available through this device.

Samsung is neither responsible nor liable for customer service related to the content and services. Any question or request for service relating to the content or services should be made directly to the respective content and service providers.

introducing your mobile phone

In this section, learn about your mobile phone's layout, keys, display, and icons.

Unpack

Check your product box for the following items:

 
- Mobile phone
- Battery
- Travel adapter (charger)
- User manual




- The items supplied with your phone may vary depending on the software and accessories available in your region or offered by your service provider. You can obtain additional accessories from your local Samsung dealer.
- The supplied accessories perform best for your phone.

Phone layout

The front of your phone includes the following keys and features:

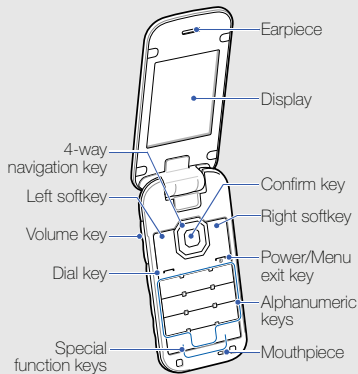

 The rear of your phone includes the following keys and features:

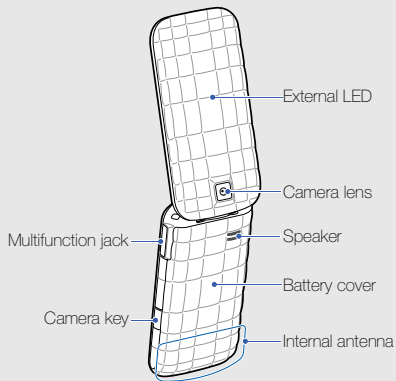

Keys


Key	Function
 Softkeys	Perform actions indicated at the bottom of the display
 4-way navigation	Scroll through menu options; In Idle mode, move among the home screen shortcuts. When the home screen shortcuts are deactivated, access user-defined menus (depending on your service provider, pre-defined menus may differ)
 Confirm	Select the highlighted menu option or confirm an input; In Idle mode, when the home screen shortcuts are deactivated, launch the web browser or access Menu mode (depending on your service provider or region)

Key	Function
 Dial	Make or answer a call; In Idle mode, retrieve recently dialed, missed, or received numbers
 Power/Menu exit	Turn the phone on or off (press and hold); End a call; In Menu mode, cancel input and return to Idle mode
 Alpha-numeric/ Symbol	Enter numbers, characters, and symbols in a text input field; In Idle mode, press and hold [1] to access voice mails and [0] to enter an international call prefix
 Special function	Enter special characters or perform special functions; In Idle mode, press and hold [#] for the silent profile; press and hold [*] to enter a pause between numbers

Key	Function
	Volume Adjust the phone's volume; Silence a ringtone for incoming calls or reject calls (press and hold)
	Camera In Idle mode, turn on the camera (press and hold); In Camera mode, take a photo or record a video

Display

 Your phone's display consists of three areas:

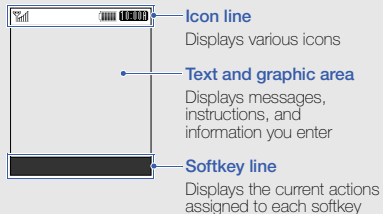

Icons

Learn about the icons that appear on your display.

Icon	Definition
	Signal strength
	GPRS network connected
	Transferring data via GPRS network
	EDGE network connected
	Transferring data via EDGE network
	Call in progress
	SOS message feature activated
	Connecting to secured web page
	Browsing the web
	Call diverting activated
	Roaming (outside of normal service area)
	Bluetooth activated

Icon	Definition
	Music playback in progress
	Music playback paused
	Music playback stopped
	FM radio on
	FM radio suspended
	Memory card inserted
	New text or multimedia message
	New email message
	New voice mail message
	Alarm activated
	Normal profile activated
	Silent profile activated
	Battery power level
	Current time

assembling and preparing your mobile phone

 
Get started by assembling and setting up your mobile phone for its first use.

Install the SIM card and battery

When you subscribe to a cellular service, you will receive a Subscriber Identity Module (SIM) with subscription details, such as your personal identification number (PIN) and optional services.


To install the SIM card and battery,

1. Remove the battery cover.

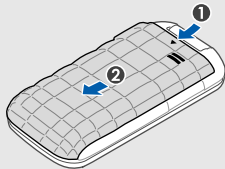


If the phone is on, press and hold [] to turn it off.

 2. Insert the SIM card.

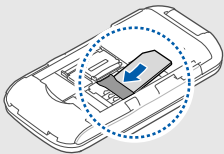


- Place the SIM card in the phone with the gold-coloured contacts facing down.
- Without inserting a SIM card, you can use your phone's non-network services and some menus.

 3. Insert the battery.

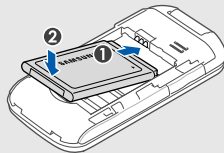

 
4. Replace the battery cover.

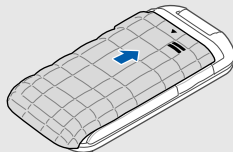

Charge the battery

Before using the phone for the first time, you must charge the battery.

 1. Open the cover to the multifunction jack on the side of the phone.
2. Plug the small end of the travel adapter into the multifunction jack.

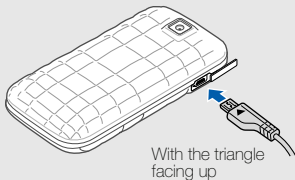

CAUTION

Improperly connecting the travel adapter can cause serious damage to the phone. Any damages by misuse are not covered by the warranty.

3. Plug the large end of the travel adapter into a power outlet.
4. When the battery is fully charged (the  icon is no longer moving), unplug the travel adapter from the power outlet.
5. Unplug the travel adapter from the phone.
6. Close the cover to the multifunction jack.



About the low battery indicator

When your battery is low, the phone will emit a warning tone and a low battery message. The battery icon will also be empty and blinking. If the battery level becomes too low, the phone will automatically power off. Recharge your battery to continue using your phone.

Insert a memory card (optional)

 
To store additional multimedia files, you must insert a memory card. Your phone accepts microSD™ or microSDHC™ memory cards up to 8 GB (depending on memory card manufacturer and type).




Formatting the memory card on a PC may cause incompatibility with your phone. Format the memory card only on the phone.

1. Remove the battery cover and battery.


2. Unlock the memory card cover.

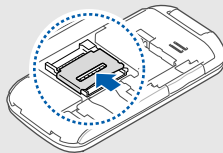

 
3. Lift the memory card cover and insert a memory card with the label side facing up.

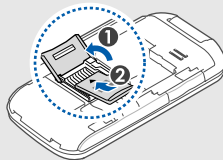

 4. Close the memory card cover.

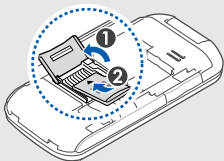

 5. Lock the memory card cover.

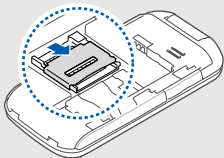

6. Insert the battery and replace the battery cover.

To remove the memory card, remove the battery cover and battery, unlock and lift the memory card cover, and then remove the memory card.

using basic functions

Learn how to perform basic operations and use the main features of your mobile phone.

Turn your phone on and off

To turn your phone on,

1. Press and hold [].
2. Enter your PIN and press <OK> (if necessary).
3. When the setup wizard opens, customise your phone as desired by following the screen.

To turn your phone off, repeat step 1 above.

Switch to the offline profile

By switching to the offline profile, you can use your phone's non-network services in areas where wireless devices are prohibited, such as aeroplane and hospitals.

To switch to the offline profile, in Menu mode, select **Settings** → **Phone profiles** → **Offline**.



Follow all posted warnings and directions from official personnel when in areas where wireless devices are prohibited.

Access menus

To access your phone's menus,

1. In Idle mode, press <Menu> to access Menu mode.



You may need to press the Confirm key to access Menu mode depending on your region or service provider.

2. Use the Navigation key to scroll to a menu or option.
3. Press <Select> or the Confirm key to confirm the highlighted option.
4. Press <Back> to move up one level; Press [>] to return to Idle mode.

Use shortcut menus from the shortcut toolbar

Learn to use the items on the toolbar.

To access an item from the shortcut toolbar, in Idle mode, scroll left or right to the menu item you want and press the Confirm key.

To edit items on the shortcut toolbar,

1. In Menu mode, select **Settings** → **Display and light** → **Shortcuts toolbar**.
2. Press <Options> → **Edit**.
3. Select your favourite menus.
4. Press <Save>, or press <Options> → **Save**.



To deactivate the shortcuts toolbar, in Menu mode, select **Settings** → **Display and light** → **Home screen** → **Shortcuts toolbar** → **Off** → **Save**.

Customise your phone

Get more from your phone by customising it to match your preferences.

Adjust the volume of the key tones

In Idle mode, press the Volume key up or down to adjust the key tone volume.

Switch to or from the silent profile

In Idle mode, press and hold [**#**] to silence or unsilence your phone.

Set a phone profile

To change the ringtone of the current profile,

1. In Menu mode, select **Settings** → **Phone profiles**.

2. Scroll to the profile you are using.



If you are using the silent or offline profile, you are not allowed to change the ringtone.

3. Press **<Options>** → **Edit** → **Voice call ringtone**.
4. Select a ringtone category → a ringtone.
5. Press **<Save>**.

To switch to another profile, select it from the list.

To create a phone profile,

1. In Menu mode, select **Settings** → **Phone profiles**.
2. Press **<Options>** → **Create**.
3. Enter a name for the profile and press **<Save>**.
4. Customise the sound settings as desired.
5. When you are finished, press **<Save>**.

Select a wallpaper (Idle mode)

1. In Menu mode, select **Settings** → **Display and light** → **Home screen**.
2. Scroll left or right to **Images**.
3. Select **Wallpaper**.
4. Select an image category → an image.
5. Press <**Select**> → <**Save**>.

Select a theme for the display

1. In Menu mode, select **Settings** → **Display and light** → **My theme**.
2. Scroll to a theme and press <**Save**>.

Set display animations

You can set display animations on the external LED for different phone events.

1. In Menu mode, select **Settings** → **External LED** → **Event settings**.
2. Scroll to an event and press the Confirm key.
3. Select an animation option.
4. Check the animation on the external LED (if necessary).
5. Press <**Set**>.
6. Press <**Save**> to save the changes.

Set menu shortcuts

1. In Menu mode, select **Settings** → **Phone settings** → **Shortcuts**.
2. Select a key to use as a shortcut.
3. Select a menu to assign to the shortcut key.



When the shortcuts toolbar is activated, the Navigation keys (left/right) do not work as shortcuts.

Lock your phone

1. In Menu mode, select **Settings** → **Security** → **Phone lock** → **On**.
2. Enter a new 4- to 8-digit password and press <OK>.
3. Enter the new password again and press <OK>.



- The first time you access a menu that requires a password, you will be prompted to create and confirm a password.
- Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software.

Use basic call functions

Learn to make or answer calls and use basic call functions.

Make a call

1. In Idle mode, enter an area code and a phone number.
2. Press [>] to dial the number
3. To end the call, press [>].

Answer a call

1. When a call comes in, press [>].
2. To end the call, press [>].

Adjust the volume

To adjust the volume during a call, press the Volume key up or down.

Use the speakerphone feature

1. During a call, press the Confirm key → **<Yes>** to activate the speaker.
2. To switch back to the earpiece, press the Confirm key again.



In noisy environments, you may have difficulty hearing the calls while using the speakerphone feature. For better audio performance, use the normal phone mode.

Record a conversation



This feature may not be available depending on your region or service provider.

1. During a call, press **<Options>** → **Menu** → **Applications** → **Voice recorder**.
2. Press the Confirm key to start recording.
3. Press the Navigation key down to stop recording.

Use the headset

By plugging the supplied headset into the headset jack, you can make and answer calls:

- To redial the last call, press the headset button twice.
- To answer a call, press the headset button.
- To end a call, press the headset button.

Send and view messages

Learn to send or view text (SMS), multimedia (MMS), or email messages.

Send a text or multimedia message

1. In Menu mode, select **Messages** → **Create message** → **Message**.
2. Enter a destination number and scroll down.

3. Enter your message text. ► p. 28
For sending as a text message, skip to step 5.
For attaching multimedia, continue with step 4.
4. Press <Options> → **Add multimedia** and add an item.
5. Press the Confirm key to send the message.

Send an email

1. In Menu mode, select **Messages** → **Create message** → **Email**.
2. Enter an email address and scroll down.
3. Enter a subject and scroll down.
4. Enter your email text.
5. Press <Options> → **Attach multimedia** and attach a file (if necessary).
6. Press the Confirm key to send the email.

Enter text

When entering text, you can change the text input mode:

- Press and hold [#] to switch between T9 and ABC modes. Depending on your country, you may be able to access an input mode for your specific language.
- Press [#] to change case or switch to Number mode.
- Press [*] to switch to Symbol mode.
- Press and hold [*] to select an input method or an input language.

Enter text in one of the following modes:

Mode	Function
ABC	Press an appropriate alphanumeric key until the character you want appears on the display.
T9	1. Press appropriate alphanumeric keys to enter an entire word. 2. When the word displays correctly, press the Confirm key. If the correct word does not display, select an alternate word from the list that appears.
Number	Press an appropriate alphanumeric key to enter a number.
Symbol	Press an appropriate alphanumeric key to enter a symbol.

View text or multimedia messages

1. In Menu mode, select **Messages** → **Inbox**.
2. Select a text or multimedia message.

View an email

1. In Menu mode, select **Messages** → **Email inbox**.
2. Select an account.
3. Press <**Options**> → **Download**.
4. Select an email or a header.
5. If you selected a header, press <**Options**> → **Retrieve** to view the body of the email.

Add and find contacts

Learn the basics of using the phonebook feature.



The memory location to save new contacts may be preset depending on your service provider. To change the memory location, in Menu mode, select **Phonebook** → **<Options>** → **Settings** → **Save new contact to** → a memory location.

Add a new contact

1. In Idle mode, enter a phone number and press **<Options>**.
2. Select **Save contact** → a memory location (if necessary) → **New**.
3. Select a number type (if necessary).

4. Enter contact information.
5. Press **<Save>**, or press **<Options>** → **Save** to add the contact to memory.

Find a contact

1. In Menu mode, select **Phonebook**.
2. Enter the first few letters of the name you want to find.
3. Select the contact's name from the search list.



Once you have found a contact, you can:

- call the contact by pressing [**↵**]
- edit the contact information by pressing the Confirm key

Use basic camera functions

Learn the basics to capture and view photos and videos.

Capture photos

1. In Idle mode, press and hold [> to turn on the camera.
2. Rotate the phone anti-clockwise to landscape view.
3. Aim the lens at the subject and make any adjustments.
 - To adjust the brightness, press the Navigation key up or down.
 - To zoom in or out, press the Navigation key left or right or press the Volume key.

4. Press the Confirm key or [> to take a photo.
The photo is saved automatically.
5. Press <[> or [> to take another photo (step 3).

View photos

In Menu mode, select **My files** → **Images** → **My photos** → a photo file.

Capture videos

1. In Idle mode, press and hold [> to turn on the camera.
2. Rotate the phone anti-clockwise to landscape view.
3. Press [**1**] to switch to Recording mode.

4. Aim the lens at the subject and make any adjustments.
 - To adjust the brightness, press the Navigation key up or down.
 - To zoom in or out, press the Navigation key left or right or press the Volume key.
5. Press the Confirm key or [] to start recording.
6. Press <> or [] to stop recording.
The video is saved automatically.
After capturing videos, press the Confirm key to view the video.
7. Press <> or [] to record another video (step 4).

View videos

In Menu mode, select **My files** → **Videos** → **My video clips** → a video file.

Listen to music

Learn how to listen to music via the music player or FM radio.

Listen to the FM radio

1. Plug the supplied headset into the phone's multifunction jack.
2. In Menu mode, select **FM radio**.
3. Press the Confirm key to turn on the FM radio.
4. Press <**Yes**> to start automatic tuning.
The radio scans and saves available stations automatically.



The first time you turn on the FM radio, you will be prompted to start automatic tuning.

5. Control the FM radio using the following keys:

Key	Function
Confirm	Turn the FM radio on or off
Volume	Adjust the volume up or down
Navigation	- Left/Right: Tune a radio station; Select an available radio station (press and hold) - Up/Down: Select a radio station saved in the favourite list ► p. 46

6. To turn off the FM radio, press the Confirm key.

Listen to music files

Start by transferring files to your phone or memory card:

- Download from the wireless web. ► p. 34
- Download from a PC with the optional Samsung PC Studio. ► p. 44

- Receive via Bluetooth. ► p. 48
- Copy to your memory card. ► p. 44

After transferring music files to your phone or memory card,

1. In Menu mode, select **Music** → **Music player**.
2. Select a music category → a music file.
3. Control playback using the following keys:

Key	Function
Confirm	Pause or resume playback
Volume	Adjust the volume up or down
Navigation	- Left: Restart playback; Skip backward (press within 2 seconds); Scan backward in a file (press and hold) - Right: Skip forward; Scan forward in a file (press and hold) - Up: Open the playlist - Down: Stop playback



If you select **My files** → **Memory card** → a music file, you cannot skip forward or backward during playback.

Browse the web

Learn to access and bookmark your favourite web pages.



- You may incur additional charges for accessing the web and downloading media.
- The browser menu may be labelled differently depending on your service provider.

Browse web pages

1. In Menu mode, select **Internet** → **Home** to launch your service provider's homepage.

2. Navigate web pages using the following keys:

Key	Function
Navigation	Scroll up or down on a web page
Confirm	Select an item
<Back>	Return to the previous page
<Options>	Access a list of browser options

Bookmark your favourite web pages

1. In Menu mode, select **Internet** → **Bookmarks**.
2. Press <Add>.
3. Enter a page title and a web address (URL).
4. Press <Save>.

using advanced functions

Learn how to perform advanced operations and use additional features of your mobile phone.

Use advanced call functions

Learn about your phone's additional calling capabilities.

View and dial missed calls

Your phone will display calls you have missed on the display. To dial the number of a missed call,

1. Press <View>.
2. Scroll to the missed call you want to dial.
3. Press [] to dial.

Call a recently dialled number

1. In Idle mode, press [] to display a list of recent numbers.
2. Scroll to the number you want and press [] to dial.

Hold a call or retrieve a held call

Press <**Hold**> to place a call on hold or press <**Retrieve**> to retrieve a held call.

Dial a second call

If your network supports this function, you can dial another number during a call:

1. Press <**Hold**> to place the first call on hold.
2. Enter the second number to dial and press [.
3. Press <**Swap**> to switch between the two calls.
4. To end the call on hold, press <**Options**> → **End held call**.
5. To end the current call, press [.

Answer a second call

If your network supports this function, you can answer a second incoming call:

1. Press [] to answer the second call.
The first call is automatically placed on hold.
2. Press <**Swap**> to switch between the calls.

Make a multiparty call (conference call)

1. Call the first party you want to add to the multiparty call.
2. While connected to the first party, call the second party.
The first party is automatically placed on hold.
3. When connected to the second party, press <**Options**> → **Join**.

4. Repeat steps 2 and 3 to add more parties (if necessary).
5. To end the multiparty call, press [].

Call an international number

1. In Idle mode, press and hold [0] to insert the + character.
2. Enter the complete number you want to dial (country code, area code, and phone number), and then press [] to dial.

Call a contact from the phonebook

You can call numbers directly from the phonebook using stored contacts. ► p. 30

1. In Menu mode, select **Phonebook**.
2. Scroll to the number you want to dial and press [] to dial.

Reject a call

To reject an incoming call, press []. The caller will hear a busy tone.

To reject calls from certain numbers automatically, use the auto rejection. To activate the auto rejection and set up the reject list,

1. In Menu mode, select **Settings** → **Application settings** → **Call** → **All calls** → **Auto reject**.
2. Scroll left or right to **On**.
3. Select **Reject list**.
4. Press <Options> → **Add** → **New**.
5. Enter a number to reject and press <Save>.
6. Repeat steps 4-5 to add more numbers.
7. Select the check boxes next to the numbers.
8. Press <Options> → **Save**.
9. Press <Save>.

Use advanced phonebook functions

Learn to create your namecard, set speed dial numbers, and create groups of contacts.

Create your namecard

1. In Menu mode, select **Phonebook**.
2. Press <**Options**> → **My namecard**.
3. Enter your personal details.
4. Press <**Save**>, or press <**Options**> → **Save**.



You can send your namecard by attaching it to a message or email or transferring it via the Bluetooth wireless feature.

Set speed dial numbers

1. In Menu mode, select **Phonebook**.
2. Press <**Options**> → **Settings** → **Speed dial**.
3. Scroll to a number you want to set and press the Confirm key.
4. Select a contact → a number (if necessary) to assign to the number.

The contact is saved to the speed dial number.



You can now call this contact from Idle mode by pressing and holding the assigned speed dial number.

Create a group of contacts

By creating groups of contacts, you can assign group names, ringtones, and caller ID photos to each group or send messages to an entire group. Start by creating a group:

1. In Menu mode, select **Phonebook**.
2. Scroll left or right to **Groups**.
3. Press <**Options**> → **Create group**.
4. Enter a group name.
5. To set the caller ID image, scroll down and press the Confirm key → an image category → an image.
6. To set a group ringtone, scroll down and press the Confirm key → a ringtone category → a ringtone.
7. Press <**Save**>.

Use advanced messaging functions

Learn to create templates, use templates to create new messages, and use the messengers.

Create a text template

1. In Menu mode, select **Messages** → **Templates** → **Text message templates**.
2. Press <**Create**> to open a new template window.
3. Enter your text and press the Confirm key to save the template.

Create a multimedia template

1. In Menu mode, select **Messages** → **Templates** → **Multimedia message templates**.
2. Press <**Options**> → **Create**.
3. Create a multimedia message, with a subject and desired attachments, to use as your template. ► p. 27
4. Press <**Options**> → **Save as template** to save the template.

Insert text templates in new messages

1. In Menu mode, select **Messages** → **Create message** → a message type.
2. In the text field, press <**Options**> → **Add text** → **Template** → a template.

Create a message from a multimedia template

1. In Menu mode, select **Messages** → **Templates** → **Multimedia message templates**.
2. Scroll to the template you want and press <**Options**> → **Send**.
Your template opens as a new multimedia message.

Use the Bluetooth messenger

Learn to chat with your family or friends instantly via the Bluetooth wireless feature.

1. In Menu mode, select **Messages** → **Bluetooth messenger**.
2. Press <**Yes**> to turn on the Bluetooth wireless feature (if necessary).
3. Press <**Options**> → **Search Bluetooth contact** → **Search for new devices**.

4. Scroll to a device and press <**Select**>.
5. Enter a PIN for the Bluetooth wireless feature or the other device's Bluetooth PIN, if it has one, and press <**OK**>.

When the owner of the other device enters the same PIN or accepts the connection, pairing is complete.



You may not need to enter a PIN depending on the device.

6. Enter your message and press the Confirm key.

Create a folder to manage messages

1. In Menu mode, select **Messages** → **My folders**.
2. Press <**Yes**> to create a new folder.
3. Enter a new folder name and press <**OK**>.

Move messages from a message folder to your folders to manage them as your preferences.

Use advanced camera functions

Learn how to capture photos in various modes and customise camera settings.

Capture a series of photos

1. In Idle mode, press and hold [] to turn on the camera.
2. Rotate the phone anti-clockwise to landscape view.
3. Press <> → **Shooting mode** → **Multiple**.
4. Select the number of photos to capture.
5. Press <>.
6. Make any necessary adjustments.
7. Press the Confirm key or [] to take series of photos.
8. Select photos to save and press <> to save the photos.

Capture divided photos

1. In Idle mode, press and hold [] to turn on the camera
2. Rotate the phone anti-clockwise to landscape view.
3. Press <> → **Shooting mode** → **Mosaic**.
4. Select an image layout and press the Confirm key.
5. Make any necessary adjustments.
6. Press the Confirm key or [] to take photos for each segment.

Capture photos with decorative frames

1. In Idle mode, press and hold [] to turn on the camera.
2. Rotate the phone anti-clockwise to landscape view.

3. Press <> → **Frames**.
4. Select a frame and press the Confirm key.
5. Make any necessary adjustments.
6. Press the Confirm key or [] to take a photo with the frame.

Use camera options

Before capturing a photo, press <> to access the following options:

Option	Function
Shooting mode	Change the shooting mode
Resolution	Change the resolution option
Night mode	Set whether to use Night shot mode
Timer	Select the time delay
Effects	Apply a special effect
Frames	Add a decorative frame

Option	Function
White balance	Adjust the colour balance
Viewfinder mode	Change the preview screen
Shortcuts	View the shortcut information

Before capturing a video, press <[Menu]> to access the following options:

Option	Function
Size	Select the resolution option
Timer	Select the time delay
Effects	Apply a special effect
White balance	Adjust the colour balance
Audio recording	Turn the audio on or off
Recording mode	Change the recording mode
Viewfinder mode	Change the preview screen
Shortcuts	View the shortcut information

Customise camera settings

Before capturing a photo, press <[Camera]> → **Settings** → **Camera** to access the following settings:

Option	Function
Quality	Adjust the quality of your photos
Shutter sound	Select a sound to accompany the shutter action
Zoom sound	Turn the zoom sound on or off
Brightness sound	Turn the brightness sound on or off
Default storage	Select a memory location to store new photos

Before capturing a video, press <⏏> → **Settings** → **Camcorder** to access the following settings:

Option	Function
Quality	Adjust the quality of your videos
Zoom sound	Turn the zoom sound on or off
Brightness sound	Turn the brightness sound on or off
Default storage	Select a memory location to store new videos

Use advanced music functions

Learn to prepare music files, create playlists, and store radio stations.

Copy music files via Samsung PC Studio

1. Using an optional PC data cable, connect the multifunction jack on your phone to a PC.

2. Run Samsung PC Studio and copy files from the PC to the phone.
Refer to the Samsung PC Studio help for more information.

Copy music files to a memory card

1. Insert a memory card.
2. Using an optional PC data cable, connect the multifunction jack on your phone to a PC.
When connected, a pop-up window will appear on the PC.
3. Open a folder to view files.
4. Copy files from the PC to the memory card.

Create a playlist

1. In Menu mode, select **Music** → **Music player** → **Playlists**.
2. Press <Options> → **Create playlist**.

3. Enter a title for your new playlist and press **<Save>**.
4. Select the new playlist.
5. Press **<Options>** → **Add** → **Tracks**.
6. Select the files you want to include and press **<Add>**.

Customise your music player settings

Learn to adjust the playback and sound settings for your music player.

1. In Menu mode, select **Music** → **Music player**.
2. Press **<Options>** → **Player settings**.
3. Adjust the settings to customise your music player:

Option	Function
Background playing	Set whether to play music in the background when you end the music player

Option	Function
Sound effects	Select a sound effect
Music auto off	Set the timer when the music player automatically turns off

4. Press **<Save>**.

Store radio stations automatically

1. Plug the supplied headset into the phone's multifunction jack.
2. In Menu mode, select **FM radio**.
3. Press the Confirm key to start the FM radio.
4. Press **<Options>** → **Self-tuning**.
5. Press **<Yes>** to confirm (if necessary).
The radio scans and saves available stations automatically.

Set up your favourite radio station list

1. Plug the supplied headset into the phone's multifunction jack.
2. In Menu mode, select **FM radio**.
3. Press the Confirm key to start the FM radio.
4. Select a radio station to add to the favourite list.
5. Press <Options> → **Add to channel list** → **Favourites**.
6. Select a number you want to set.



You can select this radio station from the FM radio screen by pressing the assigned number.

Find information of music

Learn to access an online music service and get information about the songs you hear while on the move.

1. In Menu mode, select **Music** → **Find music**.
2. Select **Find music** to connect to the server.
3. When the phone is successfully registered, press <Record> to record a part of music you want to find.



Some service providers may not support this service and the database may not have information for all songs.

using tools and applications

Learn how to work with your mobile phone's tools and additional applications.

Use the Bluetooth wireless feature

Learn about your phone's ability to connect to other wireless devices for exchanging data and using hands-free features.

Turn on the Bluetooth wireless feature

1. In Menu mode, select **Applications** → **Bluetooth**.
2. Press <Options> → **Settings**.
3. Scroll down to **Activation**.
4. Scroll left or right to **On**.
5. To allow other devices to locate your phone, scroll down to **My phone's visibility** and scroll left or right to **On**.
If you select **Custom**, scroll down and set duration that your phone is visible.
6. Press <Save>.

Find and pair with other Bluetooth-enabled devices

1. In Menu mode, select **Applications** → **Bluetooth** → **Search for new devices**.
2. Scroll to a device and press <**Select**>.
3. Enter a PIN for the Bluetooth wireless feature or the other device's Bluetooth PIN, if it has one, and press <**OK**>.

When the owner of the other device enters the same PIN or accepts the connection, pairing is complete.



You may not need to enter a PIN depending on the device.

Send data using the Bluetooth wireless feature

1. Select the file or item from one of your phone's applications that you want to send.
2. Press <**Options**> → **Send via**, **Send namecard via**, or **Send URL via** → **Bluetooth** (when sending contact data, specify which data to send).

Receive data using the Bluetooth wireless feature

1. Enter the PIN for the Bluetooth wireless feature and press <**OK**> (if necessary).
2. Press <**Yes**> to confirm that you are willing to receive data from the device (if necessary).

Activate and send an SOS message

When you have an emergency, you can send an SOS message asking for help.

1. In Menu mode, select **Messages** → **Settings** → **SOS messages** → **Sending options**.
2. Scroll left or right to **On**.
3. Scroll down and press the Confirm key to open the recipient list.
4. Press **<Options>** → **Phonebook** to open your contact list.
5. Scroll to a contact and press the Confirm key.
6. Select a number (if necessary).
7. When you are finished selecting contacts, press **<Select>** to return to the recipient list.
8. Press the Confirm key to save the recipients.

9. Scroll down and set the number of times to repeat the SOS message.

10. Press **<Save>** → **<Yes>**.

To send an SOS message, the phone must be closed. Press the Volume key four times.



Once you send an SOS message, all phone functions will be suspended until you press [⏏].

Activate the mobile tracker

When someone inserts a new SIM card in your phone, the mobile tracker feature will automatically send the contact number to two recipients to help you locate and recover your phone.

To activate the mobile tracker,

1. In Menu mode, select **Settings** → **Security** → **Mobile tracker**.
2. Enter your password and press <OK>.
3. Scroll left or right to **On**.
4. Scroll down and press the Confirm key to open the recipient list.
5. Press <Options> → **Phonebook** to open your contact list.
6. Scroll to a contact and press the Confirm key.
7. Select a number (if necessary).
8. When you are finished selecting contacts, press <Select> to return to the recipient list.
9. Press the Confirm key to save the recipients.
10. Scroll down and enter the sender's name.
11. Press <Save> → <Accept>.

Make fake calls

You can simulate an incoming call when you want to get out of meetings or unwanted conversations. You can also make it appear as if you are talking on the phone by playing back a recorded voice.

Record a voice

1. In Menu mode, select **Settings** → **Application settings** → **Call** → **Fake call** → **Fake call voice**.
2. Scroll to **Fake call voice**.
3. Press <Options> → **Edit**.
4. Press <Record> to start recording.
5. Speak into the microphone.
6. When you are finished speaking, press the Navigation key down.
7. Press <Set> to set the recording as a response for fake calls.

Make a fake call

You must set a shortcut key to make a fake call.

► p. 25

To make a fake call, In Idle mode, press and hold the shortcut key.

Record and play voice memos

Learn to operate your phone's voice recorder.

Record a voice memo

1. In Menu mode, select **Applications** → **Voice recorder**.
2. Press the Confirm key to start recording.
3. Speak your memo into the microphone.
4. When you are finished speaking, press the Navigation key down.

Play a voice memo

1. From the voice recorder screen, press **<Options>** → **My voice clips**.
2. Select a file.
3. Control playback using the following keys:

Key	Function
Confirm	Pause or resume playback
Volume	Adjust the volume
Navigation	• Left: Skip backward; Scan backward in a file (press and hold) • Right: Skip forward; Scan forward in a file (press and hold) • Down: Stop playback

Edit images

Learn to edit images and apply fun effects.

Apply effects to images

1. In Menu mode, select **My files** → **Images** → **My photos** → a photo file.
2. Press <Options> → **Edit**.
3. Press <Options> → **Effects** → an effect option (filter, style, warp, or partial blur).
4. Select a variation of the effect to apply and press <Done>.

To apply a blur effect to a specific area of an image, move the rectangle over the area you want to apply the blur effect and press <Options> → **Done**.

To resize the rectangle, press <Options> → **Resize**.

5. When you are finished, press <Options> → **Save as**.
6. Enter a new file name for the image and press <OK>.

Adjust an image

1. Open the image to be edited. Refer to steps 1-2 in "Apply effects to images."
2. Press <Options> → **Adjust** → an adjustment option (brightness, contrast, or colour).
To adjust the image automatically, select **Auto level**.
3. Adjust the image as desired and press <Done>.
4. Save the edited image with a new file name.
Refer to steps 5-6 in "Apply effects to images."

Transform an image

1. Open the image to be edited. Refer to steps 1-2 in "Apply effects to images."
2. Press <Options> → **Transform** → **Rotate** or **Flip**.
3. Rotate or flip the image as desired and press <Done>.
4. Save the edited image with a new file name. Refer to steps 5-6 in "Apply effects to images."

Crop an image

1. Open the image to be edited. Refer to steps 1-2 in "Apply effects to images."
2. Press <Options> → **Crop**.
3. Move the rectangle over the area you want to crop and press <Options> → **Done**.
To resize the rectangle, press <Options> → **Resize**.

Insert a visual feature

1. Open the image to be edited. Refer to steps 1-2 in "Apply effects to images."
2. Press <Options> → **Insert** → a visual feature (frame, image, clip art, emoticon, or text).
3. Select a visual feature, or enter text and press <OK>.
4. Move, resize, or rotate the visual feature or text and press <Done> or <Options> → **Done**.
5. Save the edited image with a new file name. Refer to steps 5-6 in "Apply effects to images."

View photos and videos on the web

Learn to access photo sharing websites and blogs and view photos and videos.



This feature may be unavailable depending on your region or service provider.

1. In Menu mode, select **Applications** → **Communities**.
2. Select a destination you want to view.
3. Enter your user ID and password of the destination (if necessary).

Use Java-powered games and applications

Learn to use games and applications powered by award-winning Java technology.



The download of Java games or Java applications may not be supported depending on the software of the phone.

Download games or applications

1. In Menu mode, select **Applications** → **Games and more** → **More games**.
Your phone connects to the website preset by your service provider.
2. Search for a game or an application and download it to the phone.

Play games

1. In Menu mode, select **Applications** → **Games and more** → **My games**.
2. Select a game from the list and follow the on-screen instructions.



Available games may vary, depending on your region or service provider. Game controls and options may vary.

Launch applications

1. In Menu mode, select **Applications** → **Games and more** → an application.
2. Press <**Options**> to access a list of various options and settings for your application.

Create and view world clocks

Learn to view the time in another region and set world clocks to appear on your display.

Create a world clock

1. In Menu mode, select **Organiser** → **World clock**.
2. Press <**Options**> → **Add**.
3. Scroll left or right to a time zone.
4. To set daylight saving time, scroll down and press the Confirm key.

5. Press <**Save**> to create your world clock.
The world clock is set as the second clock.
6. To add more world clocks, repeat steps 2-5 above.

Add a world clock to your display

In Dual Clock Display mode, you can view clocks with two different time zones on your display.

After you have created world clocks,

1. In Menu mode, select **Organiser** → **World clock**.
2. Scroll to the world clock you want to add and press <**Options**> → **Set as second clock**.
3. Press <**Back**> twice.
4. In Menu mode, select **Settings** → **Display and light** → **Home screen**.
5. Scroll left or right to **Images** (if necessary).

6. Select **Clock**.
7. Scroll left or right to **Dual**.
8. Scroll down, and then scroll left or right to select a dual clock style.
9. Press **<Set>** → **<Save>**.

Set and use alarms

Learn to set and control alarms for important events.

Set a new alarm

1. In Menu mode, select **Alarms**.
2. Select an empty alarm location.
3. Set alarm details.
4. Press **<Save>**.



The auto power-up feature sets the phone to automatically turn on and sound the alarm at the designated time if the phone is turned off.

Stop an alarm

When the alarm sounds,

- Press **<Exit>** or the Confirm key to stop the alarm without snooze.
- Press **<Confirm>** or the Confirm key to stop the alarm with snooze, or press **<Snooze>** to silence the alarm for the snooze period.

Deactivate an alarm

1. In Menu mode, select **Alarms**.
2. Scroll to the alarm you want to deactivate and press the Confirm key.
3. Scroll down to **Alarm activation** (if necessary).
4. Scroll left or right to **Off**.
5. Press **<Save>**.

Use the calculator

1. In Menu mode, select **Organiser** → **Calculator**.
2. Use the keys that correspond to the calculator display to perform basic mathematical operations.

Convert currencies or measurements

1. In Menu mode, select **Organiser** → **Convertor** → a conversion type.
2. Enter the currencies or measurements and units in the appropriate fields.

Set a countdown timer

1. In Menu mode, select **Applications** → **Timer**.
2. Press <**Set**>.
3. Enter the length of time to count down and press <**OK**>.
4. Press the Confirm key to begin or pause the countdown.
5. When the timer expires, press <**Exit**> to stop the alert.

Use the stopwatch

1. In Menu mode, select **Applications** → **Stopwatch**.
2. Press the Confirm key to begin and record lap times.
3. Press <**Reset**> to clear recorded times.

Create new tasks

1. In Menu mode, select **Organiser** → **Task**.
2. Press <Options> → **Create**.
3. Enter the details of the task.
4. Press <Save>, or press <Options> → **Save**.

Create new memos

1. In Menu mode, select **Organiser** → **Memo**.
2. Press <Options> → **Create**.
3. Enter your memo text and press the Confirm key.

Manage your calendar

Learn to change the calendar view and create events.

Change the calendar view

1. In Menu mode, select **Organiser** → **Calendar**.
2. Press <Options> → **View by** → **Day** or **Week**.

Create an event

1. In Menu mode, select **Organiser** → **Calendar**.
2. Press <Options> → **Create** → an event type.
3. Enter the details of the event as required.
4. Press <Save>, or press <Options> → **Save**.



You can set the smart wallpaper to display a selected image on the home screen on the day of your anniversaries or holidays.

 
View events

To view events of a specific date,

1. In Menu mode, select **Organiser** → **Calendar**.
2. Select a date on the calendar.
3. Select an event to view its details.

To view events by event types,

1. In Menu mode, select **Organiser** → **Calendar**.
2. Press <**Options**> → **Event list** → an event type.
3. Select an event to view its details.

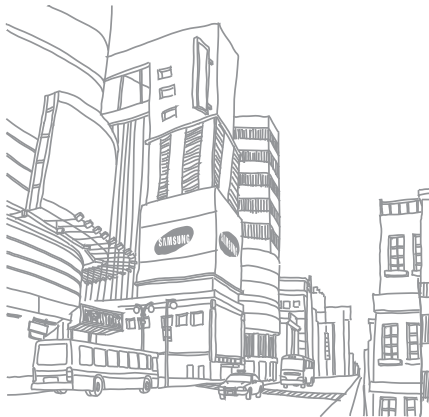

Menu	Description
Memory status	Check memory information for each items in the phone's memory or on a memory card.
Reset settings	Reset the phone's settings you have changed.
Key management	Manage the licence keys you have acquired to activate media files locked by DRM systems.

Health and safety

Exposure to Radio Frequency (RF) Signals

Certification Information (SAR)

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Counsel on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases,

the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit set by the FCC for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at

multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each model phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

For body worn operations, this model phone has been tested and meets the FCC exposure guidelines when used with a

Samsung accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum 1.5 cm from the body.

Non-compliance with the above restrictions may result in violation of FCC RF exposure guidelines.

SAR information on this and other model phones can be viewed on-line at www.fcc.gov/oet/fccid. This site uses the phone FCC ID number [A3LGTS5150](#).

Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone.

Additional product specific SAR information can also be obtained at www.fcc.gov/cgb/sar.

Consumer Information on Wireless Phones

The U.S. Food and Drug Administration (FDA) has published a series of Questions and Answers for consumers relating to radio frequency (RF) exposure from wireless phones. The FDA publication includes the following information:

What kinds of phones are the subject of this update?

The term wireless phone refers here to hand-held wireless phones with built-in antennas, often called “cell,” “mobile,” or “PCS” phones. These types of wireless phones can expose the user to measurable radio frequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with

the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called “cordless phones,” which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures well within the FCC's compliance limits.

Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radio frequency energy (RF) in the microwave range while being used. They

also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- "Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- "Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- "Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- "National Institute for Occupational Safety and Health
- "Environmental Protection Agency

- "Federal Communications Commission
- "Occupational Safety and Health Administration
- "National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power

than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the primary subject of the safety questions discussed in this document.

What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radio frequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could

accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors 69

of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phones RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable

proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years' follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF).

FDA has been a leading participant in the World Health Organization international Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and Cellular Telecommunications & Internet Association (CTIA) have a formal

Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products - and at this point we do not know that there is - it

is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

- “If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate
72 that wireless phones are harmful. But if you

are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the

United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

Do hands-free kits for wireless phones reduce risks from exposure to RF emissions?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source

of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit.

Do wireless phone accessories that claim to shield the head from RF radiation work?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that accessories that claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from

RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone. Studies have shown that these products generally do not work as advertised. Unlike “hand-free” kits, these so-called “shields” may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption. In February 2002, the Federal Trade Commission (FTC) charged two companies that sold devices that claimed to protect wireless phone users from radiation with making false and unsubstantiated claims. According to FTC, these defendants lacked a reasonable basis to substantiate their claim.

What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance

requirements for hearing aids and wireless phones so that no interference occurs when a person uses a compatible phone and a compatible hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations:

- FCC RF Safety Program:
<http://www.fcc.gov/oet/rfsafety/>
- Environmental Protection Agency (EPA):
<http://www.epa.gov/radiation/>
- Occupational Safety and Health Administration's (OSHA):
<http://www.osha.gov/SLTC/radiofrequencyradiation/index.html>
- National Institute for Occupational Safety and Health (NIOSH):
<http://www.cdc.gov/niosh/emfpg.html>
- World Health Organization (WHO):
<http://www.who.int/peh-emf/>
- International Commission on Non-Ionizing Radiation Protection:
<http://www.icnirp.de>
- National Radiation Protection Board (UK):
<http://www.nrpb.org.uk>
- Updated 4/3/2002: US Food and Drug Administration
<http://www.fda.gov/cellphones>

Road Safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features, such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
2. When available, use a hands-free device.

convenience and safety to your wireless phone with one of the many hands free accessories available today.

3. Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voice mail answer it for you.
4. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
5. Do not take notes or look up phone numbers while driving. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility, driving safely.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.

7. Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies. Remember, it is a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency number.

“The wireless industry reminds you to use your phone safely when driving.”

For more information, please call 1-888-901-SAFE, or visit our web-site www.wow-com.com

Provided by the Cellular Telecommunications & Internet Association

Operating Environment

Remember to follow any special regulations in force in any area and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker.

These recommendations are consistent with the independent research and recommendations of Wireless Technology Research.

Persons with pacemakers:

- should always keep the phone more than 15 cm (6 inches) from their pacemaker when the phone is switched on.
- should not carry the phone in a breast pocket.
- should use the ear opposite the pacemaker to minimize potential interference.

If you have any reason to suspect that interference is taking place, switch your phone off immediately.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your phone off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch your phone off in any facility where posted notices require you to do so.

Potentially Explosive Environments

Switch your phone off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such

areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch the phone off while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other

area where you would normally be advised to turn off your vehicle engine.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain

network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. If the phone is not on, switch it on.
2. Key in the emergency number for your present location (for example, 911 or other official emergency number).
Emergency numbers vary by location.
3. Press .

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call. Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your

phone may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

Restricting Children's access to your Phone

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

FCC Notice and Cautions

FCC Notice

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn: Publication Sales Division.

Cautions

Changes or modifications made in the radio phone, not expressly approved by Samsung, will void the user's authority to operate the equipment.

Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Other Important Safety Information

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable

wireless equipment in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.

- Switch your phone off before boarding an aircraft. The use of wireless phone in aircraft is illegal and may be dangerous to the aircraft's operation.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Product Performance

Getting the Most Out of Your Signal Reception

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal.

If you're inside a building, being near a window may give you better reception.

Understanding the Power Save Feature

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks

service availability or you can check it yourself by pressing any key.

Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

Maintaining Your Phone's Peak Performance

For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- Hold the phone with the antenna raised, fully-extended and over your shoulder.

- Try not to hold, bend or twist the phone's antenna.
- Don't use the phone if the antenna is damaged.
- Speak directly into the phone's receiver.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it is inoperable, call Customer Care for service.

Availability of Various Features/ Ring Tones

Many services and features are network dependent and may require additional subscription and/or usage charges. Not all features are available for purchase or use in all areas. Downloadable Ring Tones may be available at an additional cost. Other conditions and restrictions may apply. See your service provider for additional information.

Battery Standby and Talk Time

Standby and talk times will vary depending on phone usage patterns and conditions. Battery power consumption depends on factors such as network configuration, signal strength, operating temperature, features selected, frequency of calls, and voice, data, and other application usage patterns.

Battery Precautions

- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal strength on the cellular network

and the parameters set by the network operator.

- Battery charging time depends on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more

than a week, since overcharging may shorten its life.

- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and lifetime of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the

+ and - terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.

- Dispose of used batteries in accordance with local regulations. In some areas, the disposal of batteries in household or business trash may be prohibited. For safe disposal options for Li-Ion batteries, contact your nearest Samsung authorized service center. Always recycle. Do not dispose of batteries in a fire.

Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated

with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, a

stove or a radiator. The phone may explode when overheated.

- When the phone or battery gets wet, the label indicating water damage inside the phone changes color. In this case, phone repairs are no longer guaranteed by the manufacturer's warranty, even if the warranty for your phone has not expired.
- If your phone has a flash or light, do not use it too close to the eyes of people or animals. This may cause damage to their eyes.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger or any accessory is not working properly, take it

to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

- When the phone or battery gets wet, the label indicating water damage inside the phone changes colour. In this case, phone repairs are no longer guaranteed by the manufacturer's warranty, even if the warranty for your phone has not expired.
- If your phone has a flash or light, do not use it too close to the eyes of people or animals. This may cause damage to their eyes.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger, or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

troubleshooting

If you are having trouble with your mobile phone, try these troubleshooting procedures before contacting a service professional.

When you turn on your phone or while you are using the phone, it prompts you to enter one of the following codes:

Code	Try this to solve the problem:
Password	When the phone lock feature is enabled, you must enter the password you set for the phone.
PIN	When using the phone for the first time or when the PIN requirement is enabled, you must enter the PIN supplied with the SIM card. You can disable this feature by using the PIN lock menu.

Code	Try this to solve the problem:
PUK	Your SIM card is blocked, usually as a result of entering your PIN incorrectly several times. You must enter the PUK supplied by your service provider.
PIN2	When you access a menu requiring the PIN2, you must enter the PIN2 supplied with the SIM card. For details, contact your service provider.

The phone prompts you to insert the SIM card.

Ensure that the SIM card is installed correctly.

Your phone displays “Service unavailable” or “Not done.”

- When you are in areas with weak signals or poor reception, you may lose reception. Move to another area and try again.
- You cannot access some options without a subscription. Contact your service provider for more details.

You enter a number, but the call is not dialed.

- Ensure that you have pressed the Dial key: [].
- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the phone number.

Another caller cannot reach you.

- Ensure that your phone is turned on.
- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the phone number.

Another caller cannot hear you speaking.

- Ensure that you are not covering the built-in microphone.
- Ensure that the microphone is close to your mouth.
- If using a headset, ensure that it is properly connected.

The phone beeps and the battery icon flashes.

Your battery is low. Recharge or replace the battery to continue using the phone.

The audio quality of the call is poor.

- Ensure that you are not blocking the phone's internal antenna.
- When you are in areas with weak signals or poor reception, you may lose reception. Move to another area and try again.

You select a contact to call, but the call is not dialled.

- Ensure that the correct number is stored in the contact list.
- Re-enter and save the number, if necessary.

The battery does not charge properly or sometimes the phone turns itself off.

- The battery terminals may be dirty. Wipe both gold-coloured contacts with a clean, soft cloth and try charging the battery again.
- If the battery will no longer charge completely, dispose of the old battery properly and replace it with a new battery.

Your phone is hot to the touch.

When you use applications that require more power, your phone may heat up.

This is normal and should not affect your phone's lifespan or performance.

index

alarms

- creating, 56
- deactivating, 56
- stopping, 56

battery

- charging, 19
- installing, 17
- low battery indicator, 19

Bluetooth

- activating, 47
- receiving data, 48
- sending data, 48

Bluetooth messenger 40

browser

- see web browser

calculator

- see tools, calculator

calendar

- see tools, calendar

calls

- advanced functions, 35
- answering additional calls, 36
- answering, 26
- basic functions, 26
- dialling additional calls, 36
- dialling missed calls, 35
- from the phonebook, 37

international numbers, 37

making fake calls, 50

making, 26

multiparty, 36

placing on hold, 36

recently dialled, 35

recording conversations, 27

rejecting, 37

retrieving held calls, 36

viewing missed, 35

Communities

- see tools, mobile blog

conference calls

- see calls, multiparty

contacts

- adding, 30
- creating groups, 39
- finding, 30

convertor

- see tools, convertor

countdown timer

- see tools, countdown timer

external LED 25**fake calls**

- see calls, making fake calls

FM radio

- listening to, 32
- storing stations, 45

headset 27**images**

- adjusting, 52
- applying effects, 52
- cropping, 53
- inserting visual features, 53
- transforming, 53

internet

- see web browser

Java

- downloading applications, 54
- downloading games, 54
- launching applications, 55
- launching games, 54

key tones 24**lock**

- see phone lock

memo

- see text or voice memos

memory card 20**messages**

- sending email, 28
- sending instant (Bluetooth messenger), 40
- sending multimedia, 27
- viewing email, 29
- viewing multimedia, 29
- viewing text, 29

mobile tracker 49**multimedia**

- see messages

music finding 46

music player

- creating playlists, 44
- customising, 45
- listening to music, 33

namecards 38

offline profile 22

phone lock 26

photos

- advanced capturing, 41
- capturing, 31
- editing, 52
- viewing, 31

radio

- see FM radio

ringtone 24

Samsung PC Studio 44

shortcut keys

- see shortcuts

shortcuts 25

silent profile 24

SIM card 17

SOS message 49

stopwatch

- see tools, stopwatch

task

- see tools, task

templates

- inserting, 40
- multimedia, 40
- text, 39

text

- creating memos, 58
- entering, 28
- messages, 27

theme 25

timer

- see tools, countdown timer

tools

- alarm, 56
- calculator, 57
- calendar, 58
- converter, 57
- countdown timer, 57
- image editor, 52
- mobile blog, 53
- stopwatch, 57
- task, 58

videos

- capturing, 31
- viewing, 32

voice memos

- playing, 51
- recording, 51

volume

- call volume, 26
- key tone volume, 24

wallpaper 25

web browser

- adding bookmarks, 34
- launching homepage, 34

world clock

- creating, 55
- setting dual display, 55