


01 USING THE REMOTE CONTROL

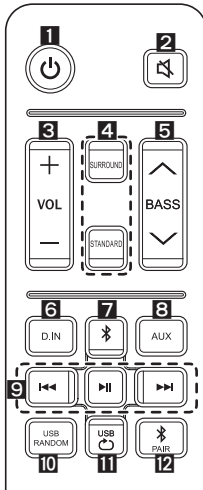


- 1** Power button
- 2** (Mute) button
- 3** VOL (Volume) button
- 4** SURROUND or STANDARD button
Press to select the desired sound effect by choosing SURROUND or STANDARD.
- 5** BASS button
- 6** D.IN button
Press to enter the "D.IN" mode.
- 7** Bluetooth button
Press to enter the "Bluetooth" mode.
- 8** AUX button
Press to enter the "AUX" mode.
- 9** button
Press the button to select the previous music file.
Press the button to play/pause a music file.
Press the button to select the next music file.
- 10** USB RANDOM button
The playback mode of the USB storage device changes to random repeat.
- 11** USB button
Press to enter the "USB" mode.
- 12** Bluetooth PAIR button
Press this button to pair a new Bluetooth device.


02 INSTALLING THE WALL MOUNT (OPTIONAL) Wallmount Components

Installation Precautions


- Install on a vertical wall only.
- Do not install in a place with high temperature or humidity.
- Verify whether the wall is strong enough to support the product's weight. If not, reinforce the wall or choose another installation point.
- Purchase and use the fixing screws or anchors appropriate for the kind of wall you have (plaster board, iron board, wood, etc.). If possible, fix the support screws into wall studs.
- Purchase wall mounting screws according to the type and thickness of the wall you want to mount the Soundbar on.
 - Diameter: M4
 - Length: 1.6 inches (40 mm) or longer.
- Connect cables from the unit to external devices before you install the Soundbar on the wall.
- Make sure the unit is turned off and unplugged before you install it. Otherwise, it may cause an electric shock.

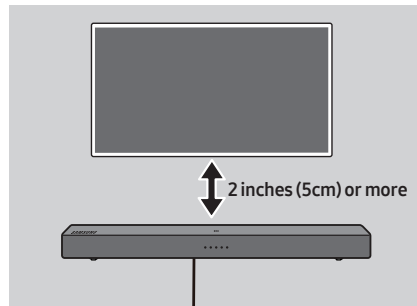


For Installation on Concrete Walls
(not supplied)

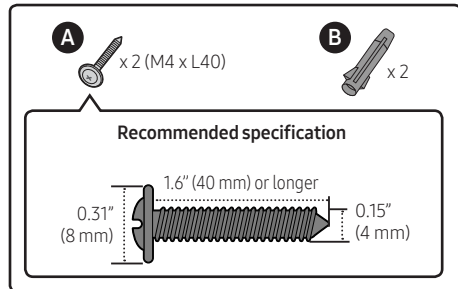


1.

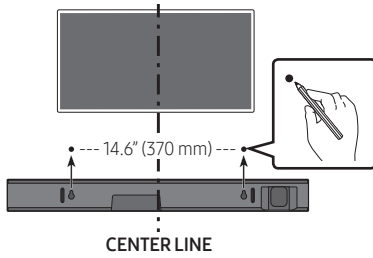


2.

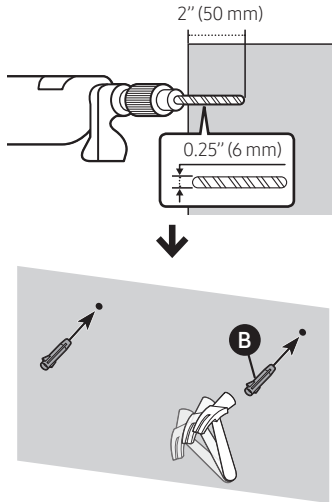


3.

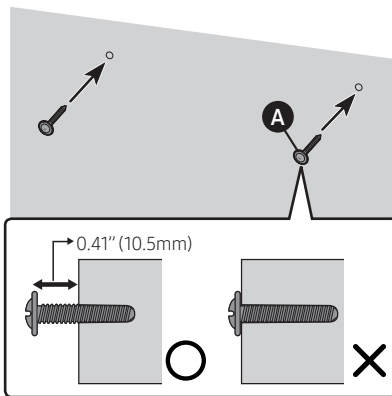

4.

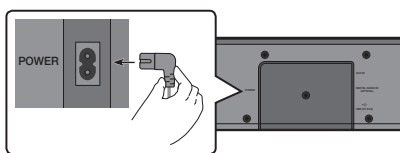

5.

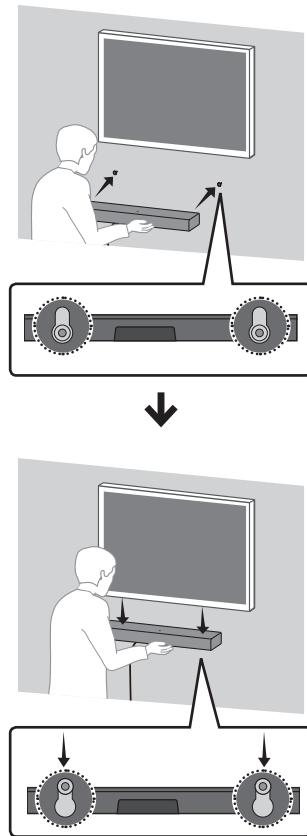

⚠ CAUTION

– Do not bump into or strike the Soundbar (especially from the bottom). The impact could detach the Soundbar from the wall, resulting in personal injury.



72-A40RZA-RCGB1-SS