

- * Depending on the software installed or your service provider or country, some of the descriptions in this guide may not match your phone exactly.
- * Depending on your country, your phone and accessories may appear different from the illustrations in this guide.

SAMSUNG ELECTRONICS



World Wide Web
<http://www.samsungmobile.com>

Printed in Korea
Code No.:GH68-xxxxxA
English (LTN). 10/2007. DRAFT



DRAFT

SGH-F256
User's Guide



Important safety precautions



Failure to comply with the following precautions may be dangerous or illegal.

Copyright information

- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide.
Bluetooth QD ID: B0xxxxx
- Java™ is a trademark or registered trademark of Sun Microsystems, Inc.
- Pictel and Pictel Viewer™ are trademarks of Pictel Technologies, Inc.
- Windows Media Player® is a registered trademark of Microsoft Corporation.

Drive safely at all times

Do not use a hand-held phone while driving. Park your vehicle first.

Switch off the phone when refuelling

Do not use the phone at a refuelling point (service station) or near fuels or chemicals.

Switch off in an aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switch off the phone near all medical equipment

Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.

Interference

All wireless phones may be subject to interference, which could affect their performance.

Be aware of special regulations

Meet any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

Water resistance

Your phone is not water-resistant. Keep it dry.

Sensible use

Use only in the normal position (held to your ear). Avoid unnecessary contact with the antenna when the phone is switched on.

Emergency calls

Key in the emergency number for your present location, then press .

Keep your phone away from small children

Keep the phone and all its parts, including accessories, out of the reach of small children.

Accessories and batteries

Use only Samsung-approved batteries and accessories, such as headsets and PC data cables. Use of any unauthorised accessories could damage you or your phone and may be dangerous.

- The phone could explode if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions.



At very high volumes, prolonged listening to a headset can damage your hearing.

Qualified service

Only qualified service personnel may repair your phone.

For more detailed safety information, see "Health and safety information" on page 41.

About this Guide

This User's Guide provides you with condensed information about how to use your phone.

In this guide, the following instruction icons appear:

-  Indicates that you need to pay careful attention to the subsequent information regarding safety or phone features.
- Indicates that you need to press the Navigation keys to scroll to the specified option and then select it.
- [] Indicates a key on the phone.
For example, []
- < > Indicates a soft key, whose function is displayed on the phone screen. For example, < **Menu** >



- **Camera and camcorder**

Use the camera module on your phone to take a photo or record a video.

Special features of your phone




- **Synchronisation with Windows Media Player**

Transfer music files to your phone directly from the Windows Media Player.



- **Music player**

Play music files using your phone as a music player. You can use other phone functions while listening to music.

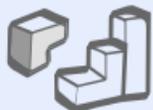

- **Java**

Enjoy Java-based embedded games and download new games.



- **Image editor**

Edit or decorate your photos.



- **FM radio**

Listen to your favourite radio stations anytime, anywhere.



- **Offline mode**

Switch your phone to Offline mode to use its non-wireless functions while on an airplane.



- **Bluetooth**

Transfer media files and personal data, and connect to other devices using wireless Bluetooth technology.



- **SOS message**

Send SOS messages to your family or friends for help in an emergency.



- **Voice recorder**

Record memos or sounds.

Contents

Unpack 6

Make sure you have each item

Get started 6

First steps to operating your phone

Assemble and charge the phone	6
Power on or off	7
Phone layout	7
Keys and icons	8
Access menu functions	11
Enter text	12
Customise your phone	13
Use an optional memory card	16

Step outside the phone 17

Begin with call functions, camera, music player, web browser and other special features

Make or answer calls	17
Use the camera	18

Play music	20
Listen to the FM radio	23
Browse the web	24
Use Phonebook	25
Send messages	25
View messages	27
Use Bluetooth	28

Menu functions 30

All menu options listed

Health and safety information 41

Overview of menu functions

To access Menu mode, press <**Menu**> in Idle mode.

1 Call log

- 1 Recent contacts
- 2 Missed calls
- 3 Dialed calls
- 4 Received calls
- 5 Delete all
- 6 Call manager

2 Phonebook

- 1 Contact list
- 2 FDN contacts
- 3 Create contact
- 4 Group
- 5 Speed dial
- 6 My namecard
- 7 Own number
- 8 Management
- 9 Service number¹

3 Music

- 1 Music player
- 2 Voice recognition

4 Browser

- 1 Home
- 2 Bookmarks
- 3 Enter URL
- 4 Clear cache
- 5 Profile settings
- 6 Current profile

5 Messages

- 1 Create new message
- 2 My messages
- 3 Templates
- 4 Delete all
- 5 Settings
- 6 SOS messages
- 7 Broadcast messages
- 8 Memory status

6 My files

- 1 Images
- 2 Videos
- 3 Music

6 My files

- 4 Sounds
- 5 Other files
- 6 Memory card²
- 7 Memory status

7 Applications

- 1 Alarms
- 2 Calendar
- 3 Voice recorder
- 4 FM radio
- 5 Image editor
- 6 Bluetooth
- 7 Java world
- 8 Memo
- 9 World clock
- 10 Calculator
- 11 Converter
- 12 Timer
- 13 Stopwatch
- 14 SIM application toolkit¹

8 Camera

9 Settings

- 1 Phone settings
- 2 Light settings
- 3 Display settings
- 4 Message settings
- 5 Call settings
- 6 Phonebook settings
- 7 Calendar settings
- 8 Browser settings
- 9 Music player settings
- 10 Network settings
- 11 Security settings
- 12 Setup wizard
- 13 Memory settings
- 14 Reset settings

1. Available only if supported by your SIM card.
2. Available only if a memory card is inserted.

Unpack

Make sure you have each item

- Phone
- Travel adapter
- Battery
- User's Guide


You can obtain various accessories from your local Samsung dealer.

- The items supplied with your phone and the accessories available at your Samsung dealer may vary, depending on your country or service provider.

Get started

First steps to operating your phone

Assemble and charge the phone

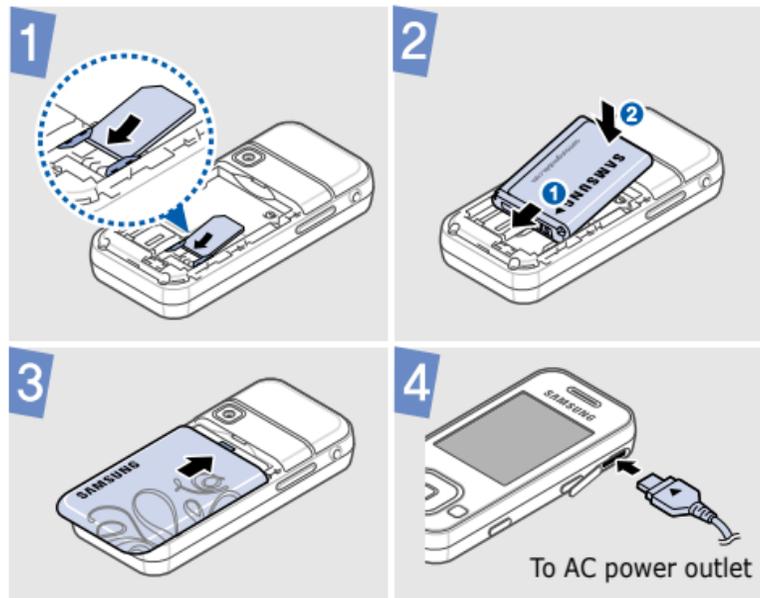

Removing the battery cover

Push down and slide off the cover.



Power on or off

Switch on


1. Open the phone.
2. Press and hold [📞].
3. If necessary, enter the PIN and press <OK>.
4. When the setup wizard opens, customise your phone according to your preferences.

Switch off

1. Open the phone.
2. Press and hold [📞].

Phone layout

Front view

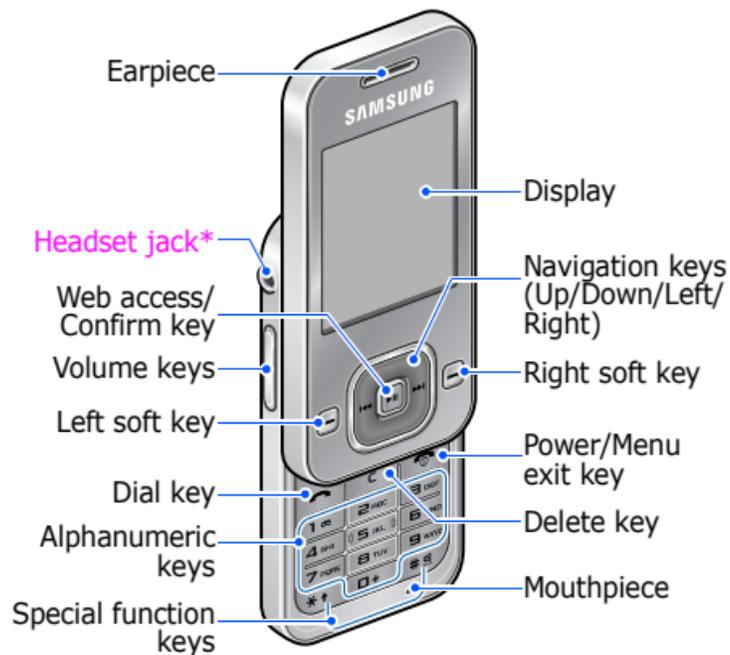

* For 3.5 mm headset

Rear view



* For S20 pin type headset



When you close the phone, it locks the exposed keys to avoid accidental key presses. To unlock the keypad, press <Unlock> and then <OK>.

Keys and icons

Keys



Perform the function indicated on the bottom line of the display.



In Idle mode, access the following menus directly:

- Up: My menu mode
- Down/Left/Right: your favourite menus

In Menu mode, scroll through menu options.



In Idle mode, launch the web browser.

In Menu mode, select the highlighted menu option or confirm input.



Make or answer a call.

In Idle mode, retrieve the numbers recently dialed, missed, or received.



Delete characters from the display or items in an application.



Press and hold to switch the phone on or off.

End a call.

In Menu mode, cancel input and return the phone to Idle mode.



Enter numbers, letters, and some special characters.



In Idle mode, press and hold [**1**] to access your voicemail server. Press and hold [**0**] to enter an international call prefix.



Enter special characters or perform special functions.



In Idle mode, press and hold [#] to activate or deactivate the Silent profile. Press and hold [*] to enter a pause between numbers.



Adjust the phone volume.



In Idle mode, press to launch the music player.



In Idle mode, press and hold to turn on the camera. In Camera mode, take a photo or record a video.

Icons

The following icons may appear on the screen to indicate your phone's status. Depending on your country or service provider, the icons shown on the display may vary.

	Signal strength
	Call in progress
	Out of your service area or Offline mode
	SOS message feature active
	Alarm set
	GPRS (2.5G) network status
	EDGE network status
	Browsing Internet

	Connected to secured web page
	Call diverting active
	Home Zone
	Office Zone
	Bluetooth active
	Bluetooth hands-free car kit or headset connected
	One of the message Inboxes is full
	New message: <ul style="list-style-type: none"> : Text message : Multimedia message : Email : Voicemail

	Memory card inserted
	Music playback in progress
	Music playback paused
	FM radio on
	Profile settings: <ul style="list-style-type: none"> •  : Normal •  : Silent •  : Driving •  : Meeting •  : Outdoor •  : Offline •  : User created
	Battery power level

Access menu functions

Select an option

1. Press a desired soft key.
2. Press the Navigation keys to move to the next or previous option.
3. Press <**Select**> or [▶||] to confirm the function displayed or option highlighted.
4. Press <**Back**> to move up one level.
Press [] to return to Idle mode.

Use menu numbers

Press the number key corresponding to the option you want.

Enter text

Change the text input mode	<ul style="list-style-type: none">• Press and hold [*] to switch between T9 mode and ABC mode.• Press [*] to change case or switch to Number mode.• Press and hold [#] to switch to Symbol mode.
ABC mode	<p>To enter a word: Press the appropriate key until the character you want appears on the display.</p>

T9 mode	<p>To enter a word:</p> <ol style="list-style-type: none">1. Press [2] to [9] to start entering a word.2. Enter the whole word before editing or deleting characters.3. When the word displays correctly, press [#] to insert a space. Otherwise, press [0] to display alternative word choices.
Number mode	<p>Press the keys corresponding to the digits you want.</p>

Symbol mode	Press the keys corresponding to the symbols you want.
Other operations	<ul style="list-style-type: none">• Press [1] to enter punctuation marks or special characters.• Press [#] to insert a space.• Press the Navigation keys to move the cursor.• Press [C] to delete characters one by one.• Press and hold [C] to clear the entire display.

Customise your phone

Display language

1. In Idle mode, press **<Menu>** and select **Settings** → **Phone settings** → **Language**.
2. Select a language.

Call ringer melody

To change the profile properties:

1. In Idle mode, press **<Menu>** and select **Settings** → **Phone settings** → **Phone profiles**.
2. Scroll to the profile you are using.
3. Press **<Options>** and select **Edit**.

-
4. Select **Voice call ringtone**.
 5. Press [Left] or [Right] to select a ringtone category.
 6. Select a ringtone.
 7. Press <**Options**> and select **Save profile**.

To change the sound profile:

1. In Idle mode, press <**Menu**> and select **Settings** → **Phone settings** → **Phone profiles**.
2. Select the profile you want.

Key tone volume

In Idle mode, press [Volume] to adjust the key tone volume.

Idle mode wallpaper

1. In Idle mode, press <**Menu**> and select **Settings** → **Display settings** → **Home screen** → **Wallpaper**.
2. Select an image category.
3. Select an image.
4. Press <**Select**> and then <**Save**>.

Menu shortcuts

1. In Idle mode, press <Menu> and select **Settings** → **Phone settings** → **Shortcuts**.
2. Select a key.
3. Select a menu to be assigned to the key.

Silent profile

You can activate the Silent profile to avoid disturbing other people. In Idle mode, press and hold [#].

Phone lock

1. In Idle mode, press <Menu> and select **Settings** → **Security settings** → **Phone lock**.
2. Select **On**.
3. Enter a new 4- to 8-digit password and press <OK>.
4. Enter the new password again and press <OK>.

Use an optional memory card


Important memory card information

- Frequent erasing and writing will shorten a card's lifespan.
- Do not remove a card from the phone or turn off the phone while data is being accessed or transferred. This could result in loss of data and/or damage to the card or phone.
- Do not subject cards to strong shocks.
- Do not touch card terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.
- Keep cards away from small children or pets.

- Do not expose cards in a place subject to electrostatic discharge and/or electrical noise.

Insert a memory card

1. Remove the battery cover and the battery.
2. Unlock the card cover and lift it.
3. Insert the card into the card slot, with the label side face up.

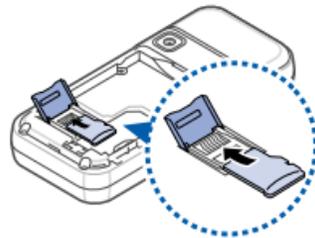

-
4. Close the card cover and lock it.
 5. Attach the battery and the battery cover.

Remove the memory card

1. Remove the battery cover and the battery, then open the card cover.
2. Remove the card from the slot.
3. Attach the battery and the battery cover.

Step outside the phone

Begin with call functions, camera, music player, web browser and other special features

Make or answer calls

Make a call

1. In Idle mode, enter an area code and phone number.
2. Press [].
Press [Volume] to adjust the volume.
3. Press [] to end the call.

Answer a call

1. When the phone rings, open the phone. If the phone is already open, press [].
2. Press [] to end the call.

Use the speakerphone feature

During a call, press [▶||] and then <Yes> to activate the speaker.

Press [▶||] again to switch back to the earpiece.

Make a multi-party call

1. During a call, call the second participant.
The first call is put on hold.
2. Press <Options> and select **Join**.
3. Repeat step 1 and 2 to add more participants.
4. During a multi-party call:
 - Press <Options> and select **Split** to have a private conversation with one participant.

- Press <Options> and select **Remove** to drop one participant.

5. Press [⏏] to end the multi-party call.

Use the camera

Take a photo

1. In Idle mode, press and hold [Camera] to turn on the camera.
2. Rotate the phone to the left for landscape view.
Make sure that the lens is not blocked by your fingers.
3. Aim the lens at the subject and make any desired adjustments.

-
4. Press [▶||] or [Camera] to take a photo. The photo is saved automatically.
 5. Press <📷> or [Camera] to take another photo.

View a photo

1. In Idle mode, press <Menu> and select **My files** → **Images** → **My photos**.
2. Select the photo you want.

Record a video

1. In Idle mode, press and hold [Camera] to turn on the camera.
2. Press [1] to switch to Record mode.

-
3. Rotate the phone to the left for landscape view.
 4. Press [▶||] or [Camera] to start recording.
 5. Press [▶||], <📺>, or [Camera] to stop recording. The video is saved automatically.
 6. Press <📷> to record another video.

View a video

1. In Idle mode, press <Menu> and select **My files** → **Videos** → **My video clips**.
2. Select the video you want.

Play music

Prepare music files

Use these methods:

- Download from the wireless web.
- Download from a computer using the optional Samsung PC Studio. See Samsung PC Studio User's Guide.
- Receive via Bluetooth.
- Copy to a memory card. See the next section.
- Synchronise music files with Windows Media Player. See p. 21.

Copy music files to the phone

1. Insert a memory card into the phone.
2. In Idle mode, press **<Menu>** and select **Settings** → **Phone settings** → **USB settings** → **Mass storage**.
3. Connect your phone and PC with an optional PC data cable.
4. Select **Open folder to view files** when a pop-up window appears on your PC.
5. Copy files from the PC to the memory card.
6. When you have finished, disconnect the phone from the PC.

Synchronise with Windows Media Player

You can copy music files to the memory card by synchronising with Windows Media Player 11.

1. In Idle mode, press <**Menu**> and select **Settings** → **Phone settings** → **USB settings** → **Media transfer**.
2. Connect your phone and PC with an optional PC data cable.
3. Select **Sync digital media files to this device** when a pop-up window appears on your PC.
4. Enter the name of your phone and click **Finish**.

5. Select and drag the music files you want to the sync list.
6. Click **Start Sync**.
7. When synchronisation is finished, disconnect the phone from the PC.

Play music files

1. In Idle mode, press [**Ⓞ**].
2. Press [**▶||**] to play music files.
3. During playback, use the following keys:
 - **▶||**: pause or resume playback.

- Left: restart playback. Press to return to the previous file within 3 seconds after the playback has started. Press and hold to scan backward in a file.
 - Right: skip to the next file. Press and hold to scan forward in a file.
 - Up: open the playlist.
 - Volume: adjust the volume.
4. Press [Down] to stop playback.

Create a playlist

You can create a playlist of your favourite music on a memory card.

1. From the music player screen, press <**Options**> and select **Open playlist** → **All** → **Playlists**.
2. Press <**Options**> and select **Create playlist**.
3. Enter the title of the playlist and press [▶||].
4. Select the added playlist.
5. Press <**Options**> and select **Add** → a source.

-
6. Select a playlist, or select the files you want and press **<Add>**.
 7. Press [**▶||**] to play music.

Listen to the FM radio

 Use either a 3.5 mm headset or S20 pin headset for listening to the radio. However, the sound quality may be different.

Listen to the radio

1. Plug the connector of a headset into the multi-function jack or headset jack on the phone.
2. In Idle mode, press **<Menu>** and select **Applications** → **FM radio**.

-
3. Press [**▶||**] to turn on the radio.
 4. When you turn on the FM radio for the first time, press **<Yes>** to start automatic tuning. Available radio stations are automatically saved.
 5. Press [Up] or [Down] to select a stored radio station. Alternatively, press [Left] or [Right] to find the radio station you want.
 6. Press [**▶||**] to turn off the radio.

Store radio stations

By automatic tuning:

1. From the radio screen, press **<Options>** and select **Self-tuning**.
2. Press **<Yes>** to confirm. Available radio stations are automatically saved.

By manual setup:

1. From the radio screen, press [Left] or [Right] to find the radio station you want.
2. Press **<Options>** and select **Add to Favourites**.

Browse the web

Launch the web browser

In Idle mode, press [▶||]. The homepage of your service provider opens.

Navigate the web

- To scroll through browser items, press [Up] or [Down].
- To select an item, press **<✓>** or [▶||].
- To return to the previous page, press **<Back>** or [C].
- To return to the homepage, press and hold [C].
- To access browser options, select  or press [*].
- To access other phone menus, press [#].

Use Phonebook

Add a contact

1. In Idle mode, enter a phone number and press **<Options>**.
2. Select **Save** → a memory location → **New**.
3. For **Phone**, select a number type.
4. Specify contact information.
5. Press **<Save>** or [**▶||**] to save the contact.

Find a contact

1. In Idle mode, press **<Contacts>**.
2. Enter the first few letters of the name you want.

-
3. Select a contact.
 4. Scroll to a number and press [**☞**] to dial, or press [**▶||**] to edit contact information.

Send messages

Send a text message

1. In Idle mode, press **<Menu>** and select **Messages** → **Create new message** → **Text message**.
2. Enter the message text.
3. Press **<Options>** and select **Send only** or **Save and send**.

-
4. Enter destination numbers.
 5. Press [▶||] to send the message.

Send a multimedia message

-
1. In Idle mode, press <Menu> and select **Messages** → **Create new message** → **Multimedia message**.
 2. Select **Subject**.
 3. Enter the message subject and press [▶||].
 4. Select **Image or video** and add an image or a video clip.
 5. Select **Music or sound** and add a music or a sound clip.

-
6. Select **Text**.
 7. Enter the message text and press [▶||].
 8. Press <Options> and select **Send**.
 9. Enter destination numbers or email addresses.
 10. Press [▶||] to send the message.

Send an email

1. In Idle mode, press <Menu> and select **Messages** → **Create new message** → **Email**.
2. Select **Subject**.

-
3. Enter the email subject and press [▶II].
 4. Select **Message**.
 5. Enter the email text and press [▶II].
 6. Select **File attach**.
 7. Add image, video, sound, music, or document files.
 8. Press <**Options**> and select **Send**.
 9. Enter email addresses.
 10. Press [▶II] to send the email.

View messages

View a text message

1. In Idle mode, press <**Menu**> and select **Messages** → **My messages** → **Inbox**.
2. Select a text message.

View a multimedia message

1. In Idle mode, press <**Menu**> and select **Messages** → **My messages** → **Inbox**.
2. Select a multimedia message.

View an email

1. In Idle mode, press <**Menu**> and select **Messages** → **My messages** → **Email inbox**.
2. Select **Check new mail**.
3. Select an email or a header.
4. If you selected a header, press <**Options**> and select **Retrieve** to view the body of the email.

Use Bluetooth

Your phone is equipped with Bluetooth technology, enabling you to connect the phone wirelessly to other Bluetooth devices and exchange data with them, talk hands-free, or control the phone remotely.

Turn on Bluetooth

1. In Idle mode, press <**Menu**> and select **Applications** → **Bluetooth** → **Activation** → **On**.
2. Select **My phone's visibility** → **On** to allow other devices to locate your phone.

Search for and pair with a Bluetooth device

1. In Idle mode, press <**Menu**> and select **Applications** → **Bluetooth** → **My devices** → **Search new device**.
2. Select a device.

-
3. Enter a Bluetooth PIN or the other device's Bluetooth PIN, if it has one, and press **<OK>**.
 4. When the owner of the other device enters the same code, pairing is complete.

Send data

1. Access an application, such as **Phonebook**, **My files**, **Calendar**, or **Memo**.
2. Select an item.
3. Press **<Options>** and select **Send via** → **Bluetooth**.

-
4. For sending a contact, select which data you want to send.
 5. Search for and select a device.
 6. If necessary, enter the Bluetooth PIN and press **<OK>**.

Receive data

1. If necessary enter a Bluetooth PIN and press **<OK>**.
2. Press **<Yes>** to confirm that you are willing to receive.

Menu functions

All menu options listed

This section provides brief explanations of menu functions on your phone.

Call log

Menu	Description
Recent contacts, Missed calls, Dialled calls, Received calls	Check the most recent calls dialled, received, or missed.
Delete all	Delete all of the records in each call type.

Menu	Description
Call manager → Call time	Check the time record for calls made and received.
Call manager → Call costs	Check the cost of your calls, if supported by your service provider.
Call manager → Reject list	Make a list of the phone numbers of callers to reject.

Phonebook

Menu	Description
Contact list	Search for contact information stored in Phonebook.

Menu	Description
FDN contacts	Create a list of contacts to be used in FDN (Fixed Dialling Number) mode, in which the phone allows outgoing calls only to the specified phone numbers, if your SIM card supports this feature.
Create contact	Add a new contact to Phonebook.
Group	Organise your contacts in caller groups.
Speed dial	Assign a speed dial number for your most frequently dialled numbers.

Menu	Description
My namecard	Create a name card and send it to other people.
Own number	Check your phone numbers, or assign a name to each of the numbers.
Management	Manage contacts in Phonebook or change the default settings for Phonebook.
Service number	View the SDN (Service Dialling Number) list assigned by your service provider, if supported by your SIM card.

Music

Menu	Description
Music player	Listen to music. You can also make your own music playlists.
Music recognition	Download information for your music files from the online database and browse recognition results.

Browser

Menu	Description
Home	Connect your phone to the network and load the homepage of the wireless web service provider.

Menu	Description
Bookmarks	Save URL addresses in order to quickly access web pages.
Enter URL	Enter a URL address and access the associated web page.
Clear cache	Clear the cache, which is a temporary memory site that stores recently accessed web pages.
Profile settings	Set up connection profiles for the web browser.
Current profile	Select a connection profile to be used for accessing the wireless web.

Messages

Menu	Description
Create new message	Create and send text, multimedia, or email messages.
My messages	Access messages that you have received, sent, or that have failed during sending.
Templates	Make and use templates of frequently used messages or passages.
Delete all	Delete messages in each message folder all at once.
Settings	Set up various options for using the messaging services.

Menu	Description
SOS messages	Specify options for sending and receiving an SOS message. You can send an SOS message by pressing [Volume] 4 times when the phone is closed and the exposed keys are locked.
Broadcast messages	Change the settings for receiving broadcast messages.
Memory status	Check information about the memory currently in use.

My files

Menu	Description
Images, Videos, Music, Sounds, Other files	Access media files and other files.
Memory card	Access the files stored on a memory card. This menu is only available when you insert a memory card into the phone.
Memory status	Check information about the memory currently in use.

Applications

Menu	Description
Alarms	Set a wake-up call to wake you up in the morning or an alarm to alert you to an event at a specific time.
Calendar	Keep track of your schedule.
Voice recorder	Record voice memos and any other sounds.
FM radio	Listen to music or news via the FM radio on your phone.
Image editor	Edit your photos using various editing tools.
Bluetooth	Connect the phone wirelessly to other Bluetooth devices.

Menu	Description
Java world	Access Java games and applications.
Memo	Make memos for things that are important and manage them.
World clock	Set your local time zone and find out the current time in another part of the world.
Calculator	Perform arithmetic functions.
Converter	Do conversions, such as length and temperature.
Timer	Set a period of time for the phone to count down.

Menu	Description
Stopwatch	Measure elapsed time.
SIM application toolkit	Use a variety of additional services offered by your service provider. Depending on your SIM card, this menu may be available but labelled differently.

Camera

Use the camera embedded in your phone to take photos and record videos.

Settings

Menu	Description
Phone settings → Phone profiles	Change the sound settings of the phone for different events or situations.
Phone settings → Language	Select a language for the display text.
Phone settings → Shortcuts	Use the Navigation keys as shortcuts to access specific menus directly from Idle mode. [Up] is fixed as a shortcut to My menu mode.
Phone settings → Time and date	Change the time and date displayed on your phone.

Menu	Description
Phone settings → Volume key	Set how the phone reacts if you press and hold [Volume] when a call comes in.
Phone settings → Show caller information	Set the phone to display or block caller information on all missed calls and incoming messages.
Phone settings → My menu	Set up a menu of your own using your favourite menu items, which can be easily accessed by pressing [Up] in Idle mode.
Phone settings → Slide settings	Set how the phone reacts when you open it for an incoming call, and when you close it while using a function.

Menu	Description
Phone settings → USB settings	Select a USB mode that will be used when you connect your phone to another device via USB interface.
Light settings → Backlight time	Select the length of time the backlight or display stays on when the phone is not used.
Light settings → Brightness	Adjust the brightness of the display for varying lighting conditions.
Light settings → Keypad light	Set how the phone controls the use of the keypad light.
Display settings → Home screen	Set up the idle screen on the main display.

Menu	Description
Display settings → Text display	Change the display settings for the text displayed on the idle screen.
Display settings → Pop up list menu	Display the pop-up list that shows the menu options.
Display settings → Dialling display	Customise the settings for the display while dialling.
Display settings → Greeting message	Enter the greeting that is displayed briefly when the phone is switched on.

Menu functions

Menu	Description
Display settings → Menu transition effect	Select a transition when you move between menus in Menu mode.
Message settings	Set up various options for using the messaging services.
Call settings	Set options for call functions.
Phonebook settings → Speed dial	Assign speed dial numbers for your most frequently dialled numbers.
Phonebook settings → Save new contacts to	Select a default memory location for saving contacts.

Menu	Description
Phonebook settings → Own number	Check your phone numbers, or assign a name to each of the numbers.
Calendar settings → Starting day	Select which day of the week the calendar starts with.
Calendar settings → Default view by	Select the default calendar view mode.
Browser settings	Create and customise the profiles containing the settings for connecting your phone to the network.
Music player settings	Change the default settings for playing music.

Menu	Description
Network services → Select network	Select the network to be used while roaming outside of your home area, or let the network be chosen automatically.
Network services → Network mode	Change to an appropriate band when you travel abroad.
Security settings → Phone lock	Activate your phone password to protect your phone against unauthorised use.
Security settings → SIM lock	Set the phone to work only with the current SIM card by assigning a SIM lock password.

Menu	Description
Security settings → PIN lock	Activate your PIN to protect your SIM card against unauthorised use.
Security settings → Privacy lock	Lock access to call logs, contacts, messages, or files.
Security settings → Fixed dialling mode	Set the phone to restrict calls to a limited set of phone numbers, if supported by your SIM card.
Security settings → Change password	Change the phone password.

Menu functions

Menu	Description
Security settings → Change PIN code	Change the PIN.
Security settings → Change PIN2 code	Change your current PIN2, if supported by your SIM card.
Security settings → Mobile tracker	Set the phone to send the preset tracking message to your family or friends when someone tries to use your phone with another SIM card. This feature may be unavailable due to certain features supported by your service provider.

Menu	Description
Setup wizard	Quickly customise basic settings of your phone. Select the option you want for each setting by the following on screen instructions.
Memory settings	Change the settings related with the memory and check information about the memory currently in use. You can also clear the memory.
Reset settings	Reset the phone's settings you have changed.

Solve problems

Help and personal needs

To save the time and expense of an unnecessary service call, perform the simple checks in this section before contacting a service professional.

When you switch on your phone, the following messages may appear:

“Insert SIM”

- Be sure that the SIM card is correctly installed.

“Phone lock”

- The automatic locking function has been enabled. You must enter the phone’s password before you can use the phone.

“Enter PIN”

- You are using your phone for the first time. You must enter the PIN supplied with the SIM card.
- The PIN check feature is enabled. Every time the phone is switched on, the PIN has to be entered. To disable this feature, use the **PIN check** menu.

“Enter PUK”

- The PIN code has been entered incorrectly three times in succession, and the phone is now blocked. Enter the PUK supplied by your service provider.

“No service,” “Network failure,” or “Not done” displays

- The network connection has been lost. You may be in a weak signal area. Move and try again.
- You are trying to access an option for which you have no subscription with your service provider. Contact the service provider for further details.

You have entered a number but it was not dialed

- Be sure that you have pressed [↵].
- Be sure that you have accessed the right cellular network.
- Be sure that you have not set an outgoing call barring option.

Your correspondent cannot reach you

- Be sure that your phone is switched on. ([📶] pressed for more than one second.)

Solve problems

- Be sure that you are accessing the correct cellular network.
- Be sure that you have not set an incoming call barring option.

Your correspondent cannot hear you speaking

- Be sure that you have switched on the microphone.
- Be sure that you are holding the phone close enough to your mouth. The microphone is located at the bottom of the phone.

The phone starts beeping and "Battery low" flashes on the display

- Your battery is insufficiently charged. Recharge the battery.

The audio quality of the call is poor

- Check the signal strength indicator on the display (📶). The number of bars indicates the signal strength from strong (📶) to weak (📶).

- Try moving the phone slightly or moving closer to a window if you are in a building.

No number is dialled when you re-call a Phonebook entry

- Use the Contact list feature to ensure the number has been stored correctly.
- Re-store the number, if necessary.

The battery doesn't charge properly or the phone sometimes turns itself off

- Wipe the charging contacts both on the phone and on the battery with a clean soft cloth.

If the above guidelines do not help you to solve the problem, take note of:

- The model and serial numbers of your phone
- Your warranty details
- A clear description of the problem

Then contact your local dealer or Samsung after-sales service.

Exposure to radio frequency (RF) signals

Certification Information (SAR)

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit set by the FCC for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Health and safety information

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each model phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

The highest SAR values for this model phone as reported to the FCC are :

GSM850 Head: 0.544 W/Kg, Body-worn: 0.747 W/Kg.

GSM1900 Head: 0.195 W/Kg, Body-worn: 0.319 W/Kg.

For body worn operations, this model phone has been tested and meets the FCC exposure guidelines when used with a Samsung accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum 1.5 cm from the body.

Non-compliance with the above restrictions may result in violation of FCC RF exposure guidelines.

SAR information on this and other model phones can be viewed on-line at www.fcc.gov/oet/fccid. This site uses the phone FCC ID number A3LSGHF256.

Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone. Additional product specific SAR information can also be obtained at www.fcc.gov/cgb/sar.

Consumer Information on Wireless Phones

The U.S. Food and Drug Administration (FDA) has published a series of Questions and Answers for consumers relating to radio frequency (RF) exposure from wireless phones. The FDA publication includes the following information:

What kinds of phones are the subject of this update?

The term wireless phone refers here to hand-held wireless phones with built-in antennas, often called "cell," "mobile," or "PCS" phones. These types of wireless phones can

expose the user to measurable radio frequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures well within the FCC's compliance limits.

Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF

that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone

industry to take a number of steps, including the following:

- "Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- "Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- "Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- "National Institute for Occupational Safety and Health
- "Environmental Protection Agency
- "Federal Communications Commission
- "Occupational Safety and Health Administration.
- "National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the primary subject of the safety questions discussed in this document.

What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radio frequency energy (RF) exposures

characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phones RF exposures. However, none of the studies can answer questions about long-term

exposures, since the average period of phone use in these studies was around three years.

What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years' follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF).

FDA has been a leading participant in the World Health Organization international Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both

laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products - and at this point we do not know that there is - it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

- “If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF

exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

Do hands-free kits for wireless phones reduce risks from exposure to RF emissions?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit.

Do wireless phone accessories that claim to shield the head from RF radiation work?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that accessories that claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone

cases, while others involve nothing more than a metallic accessory attached to the phone. Studies have shown that these products generally do not work as advertised. Unlike “hand-free” kits, these so-called “shields” may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption. In February 2002, the Federal Trade Commission (FTC) charged two companies that sold devices that claimed to protect wireless phone users from radiation with making false and unsubstantiated claims. According to FTC, these defendants lacked a reasonable basis to substantiate their claim.

What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other

groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a compatible phone and a compatible hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations:

- FCC RF Safety Program:
<http://www.fcc.gov/oet/rfsafety/>
- Environmental Protection Agency (EPA):
<http://www.epa.gov/radiation/>

- Occupational Safety and Health Administration's (OSHA):
<http://www.osha.gov/SLTC/radiofrequencyradiation/index.html>
- National institute for Occupational Safety and Health (NIOSH):
<http://www.cdc.gov/niosh/emfpg.html>
- World health Organization (WHO):
<http://www.who.int/peh-emf/>
- International Commission on Non-Ionizing Radiation Protection:
<http://www.icnirp.de>
- National Radiation Protection Board (UK):
<http://www.nrpb.org.uk>
- Updated 4/3/2002: US food and Drug Administration
<http://www.fda.gov/cellphones>

Road Safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features, such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
2. When available, use a hands-free device. If possible, add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.
3. Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voice mail answer it for you.
4. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
5. Do not take notes or look up phone numbers while driving. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility, driving safely.

6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies. Remember, it is a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be

stolen, call roadside assistance or other special non-emergency number.

“The wireless industry reminds you to use your phone safely when driving.”

For more information, please call 1-888-901-SAFE, or visit our web-site www.wow-com.com

Provided by the Cellular Telecommunications & Internet Association

Operating Environment

Remember to follow any special regulations in force in any area and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker.

These recommendations are consistent with the independent research and recommendations of Wireless Technology Research.

Persons with pacemakers:

- should always keep the phone more than 15 cm (6 inches) from their pacemaker when the phone is switched on.
- should not carry the phone in a breast pocket.
- should use the ear opposite the pacemaker to minimize potential interference.

If you have any reason to suspect that interference is taking place, switch your phone off immediately.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your phone off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch your phone off in any facility where posted notices require you to do so.

Potentially Explosive Environments

Switch your phone off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch the phone off while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. If the phone is not on, switch it on.
2. Key in the emergency number for your present location (for example, 911 or other official emergency number). Emergency numbers vary by location.
3. Press [SEND].

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call. Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

Restricting Children's access to your Phone

Your phone is not a toy. Children should not be allowed to play with it because they could

FCC Notice and Cautions

FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Battery

march Park, Quincy, MA 02269, Attn: Publication Sales Division.

Cautions

Changes or modifications made in the radio phone, not expressly approved by Samsung, will void the user's authority to operate the equipment.

Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Other Important Safety Information.

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.

- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch your phone off before boarding an aircraft. The use of wireless phone in aircraft is illegal and may be dangerous to the aircraft's operation.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Product Performance

Getting the Most Out of Your Signal Reception

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of

bars next to the signal strength icon. The more bars displayed, the stronger the signal.

If you're inside a building, being near a window may give you better reception.

Understanding the Power Save Feature

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability or you can check it yourself by pressing any key.

Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Maintaining Your Phone's Peak Performance

For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- Hold the phone with the antenna raised, fully-extended and over your shoulder.
- Try not to hold, bend or twist the phone's antenna.
- Don't use the phone if the antenna is damaged.
- Speak directly into the phone's receiver.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it is inoperable, call Customer Care for service.

Availability of Various Features/Ring Tones

Many services and features are network dependent and may require additional subscription and/or usage charges. Not all features are available for purchase or use in all

areas. Downloadable Ring Tones may be available at an additional cost. Other conditions and restrictions may apply. See your service provider for additional information.

Battery Standby and Talk Time

Standby and talk times will vary depending on phone usage patterns and conditions. Battery power consumption depends on factors such as network configuration, signal strength, operating temperature, features selected, frequency of calls, and voice, data, and other application usage patterns.

Battery Precautions.

- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Battery charging time depends on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged

hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.

- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and lifetime of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).

- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and - terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
 - Dispose of used batteries in accordance with local regulations. In some areas, the disposal of batteries in household or business trash may be prohibited. For safe disposal options for Li-Ion batteries, contact your nearest Samsung authorized service center. Always recycle. Do not dispose of batteries in a fire.
- Keep the phone dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
 - Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
 - Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
 - Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
 - Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
 - Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
 - Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
 - Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.

Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.

- Do not put the phone in or on heating devices, such as a microwave oven, a stove or a radiator. The phone may explode when overheated.
- When the phone or battery gets wet, the label indicating water damage inside the phone changes color. In this case, phone repairs are no longer guaranteed by the manufacturer's warranty, even if the warranty for your phone has not expired.
- If your phone has a flash or light, do not use it too close to the eyes of people or animals. This may cause damage to their eyes.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

Hearing Aid Compatibility with Mobile Phones

When some mobile phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("Switch" or "Telephone Switch") than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find results for your hearing device. The more immune your hearing aid is, the less likely you are to experience interference noise from mobile phones.

Declaration of Conformity (R&TTE)

We, **Samsung Electronics**

declare under our sole responsibility that the product

GSM Mobile Phone : SGH-F256

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

SAFETY

EMC

SAR

RADIO

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex [IV] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

**BART, Balfour House, Churchfield Road,
Walton-on-Thames, Surrey, KT12 2TD, UK**
Identification mark: **0168**

The technical documentation kept at :

Samsung Electronics QA Lab.

CE0168

which will be made available upon request.
(Representative in the EU)

Samsung Electronics Euro QA Lab.
Blackbushe Business Park, Saxony Way,
Yateley, Hampshire, GU46 6GG, UK

Yong-Sang Park / S. Manager
(place and date of issue) (name and signature of authorised person)

■ It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your phone.