



Attachment 7.

- DUT Antenna Information and SAR Test SETUP PHOTOGRAPHS


DUT Antenna Information

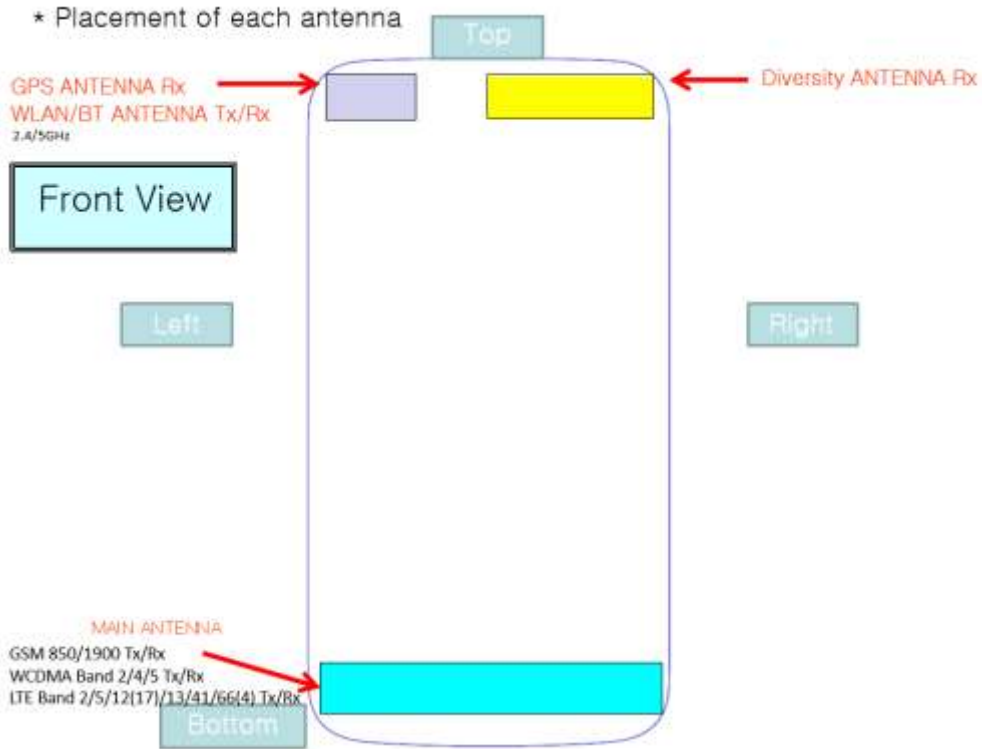


* Diagonal dimension of display and device

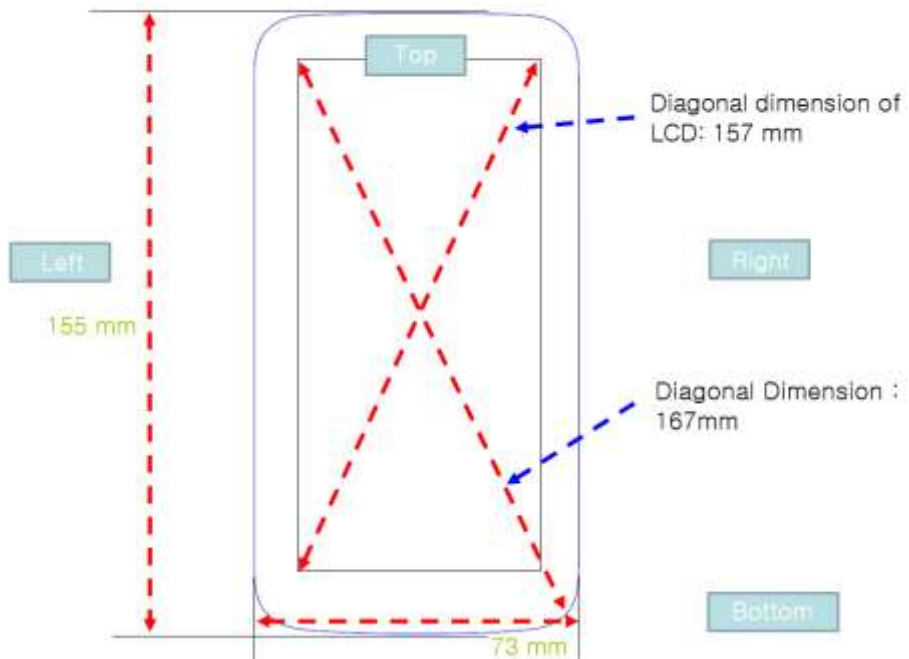

* Distance between Main antenna and edge

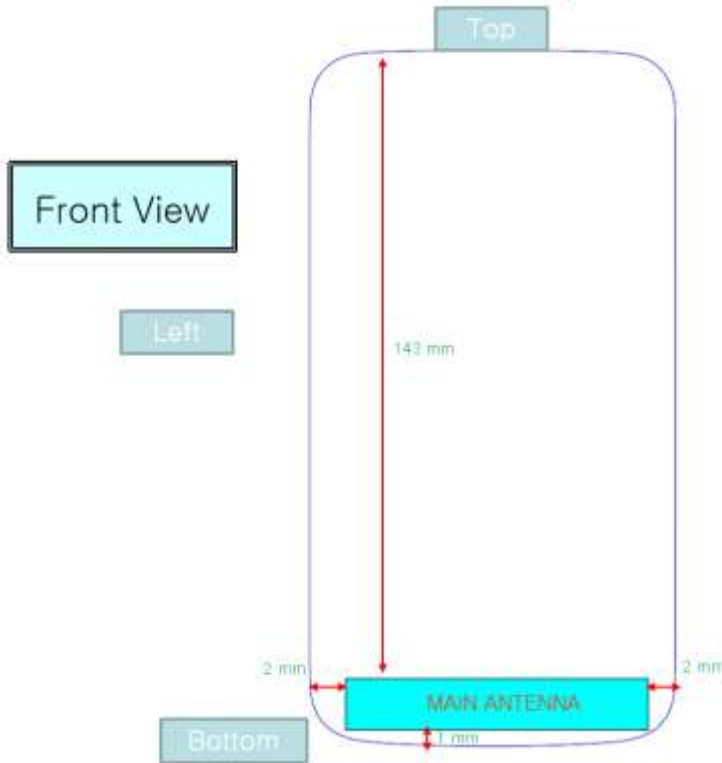

* Distance between BT/WLAN antenna and edge

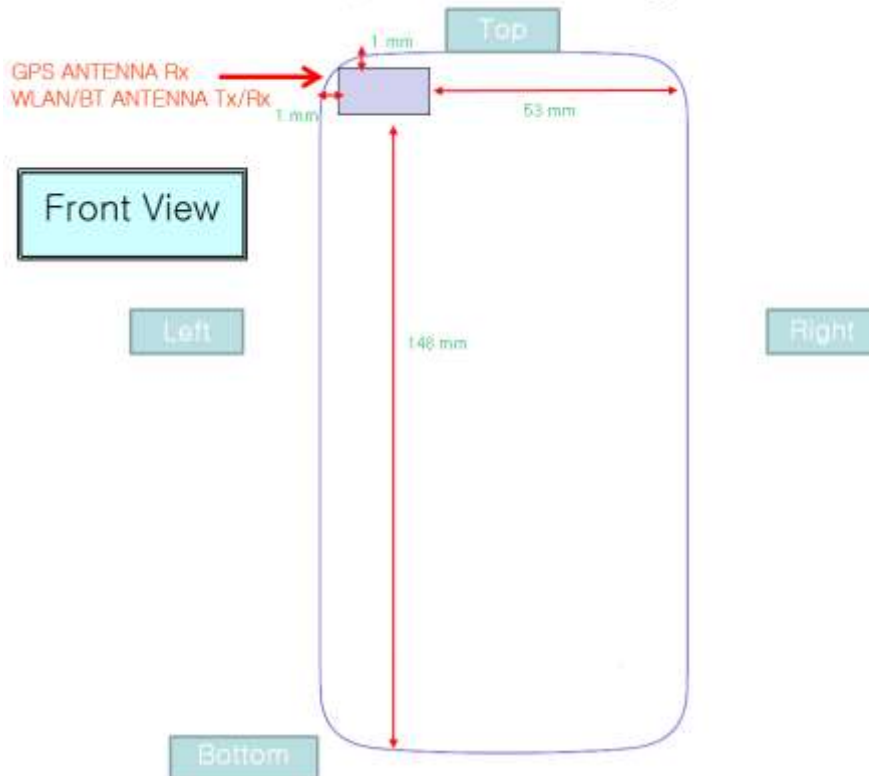

SAR Test Setup Photographs

■ **Test Setup Photo(Left All)**



■ **Test Setup Photo(Left Touch/Tilt)**



■ **Test Setup Photo(Right All)**




■ **Test Setup Photo (Right Touch/Tilt)**



■ **Test Setup Photo(Body All)**




■ **Test Setup Photo (Rear)**

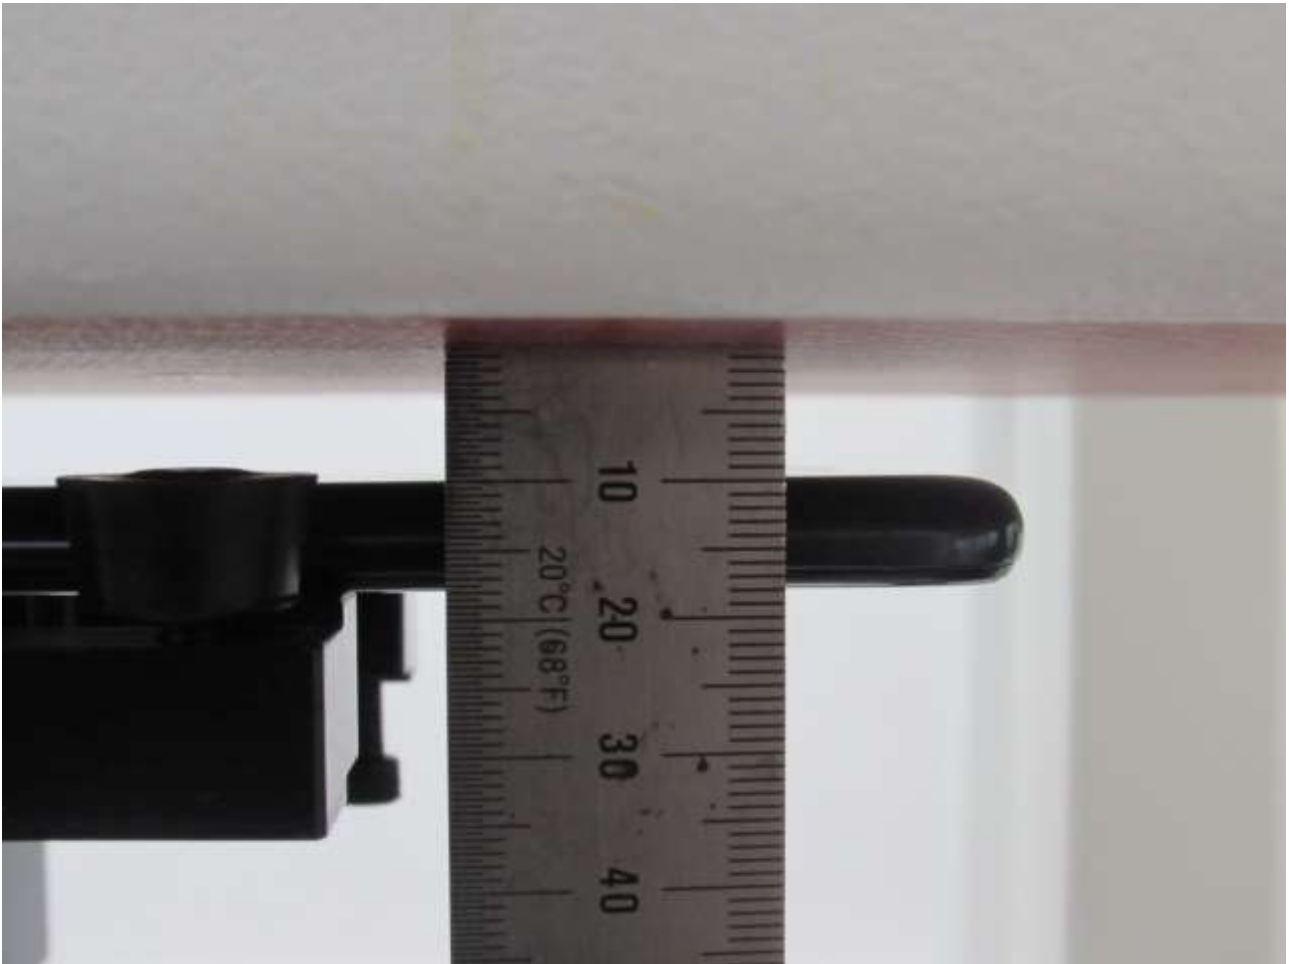


[Distance of 10 mm from the EUT]

■ **Test Setup Photo (Rear)**

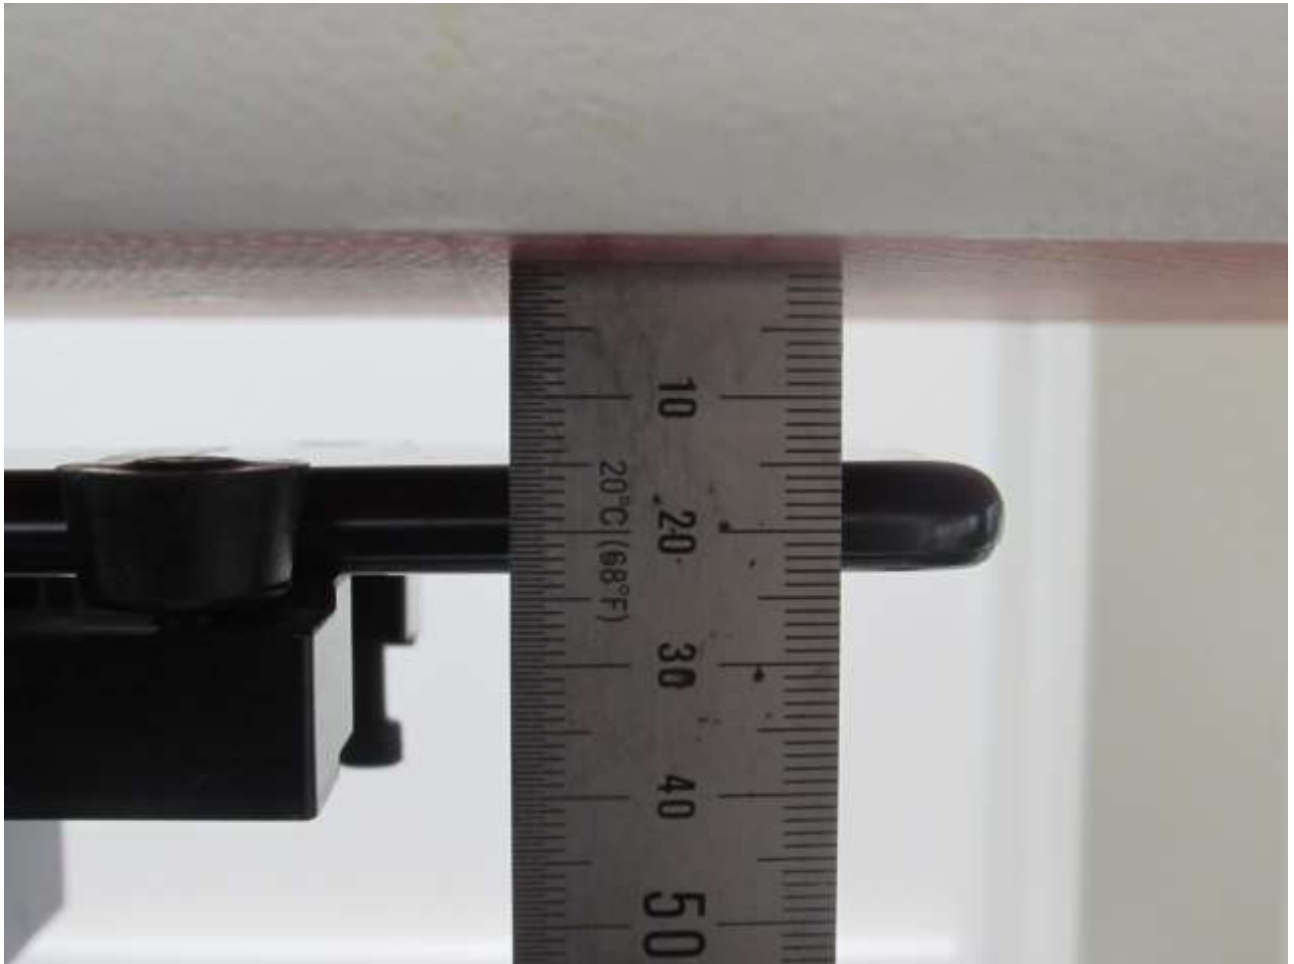

[Distance of 15 mm from the EUT]

■ **Test Setup Photo (Rear)**

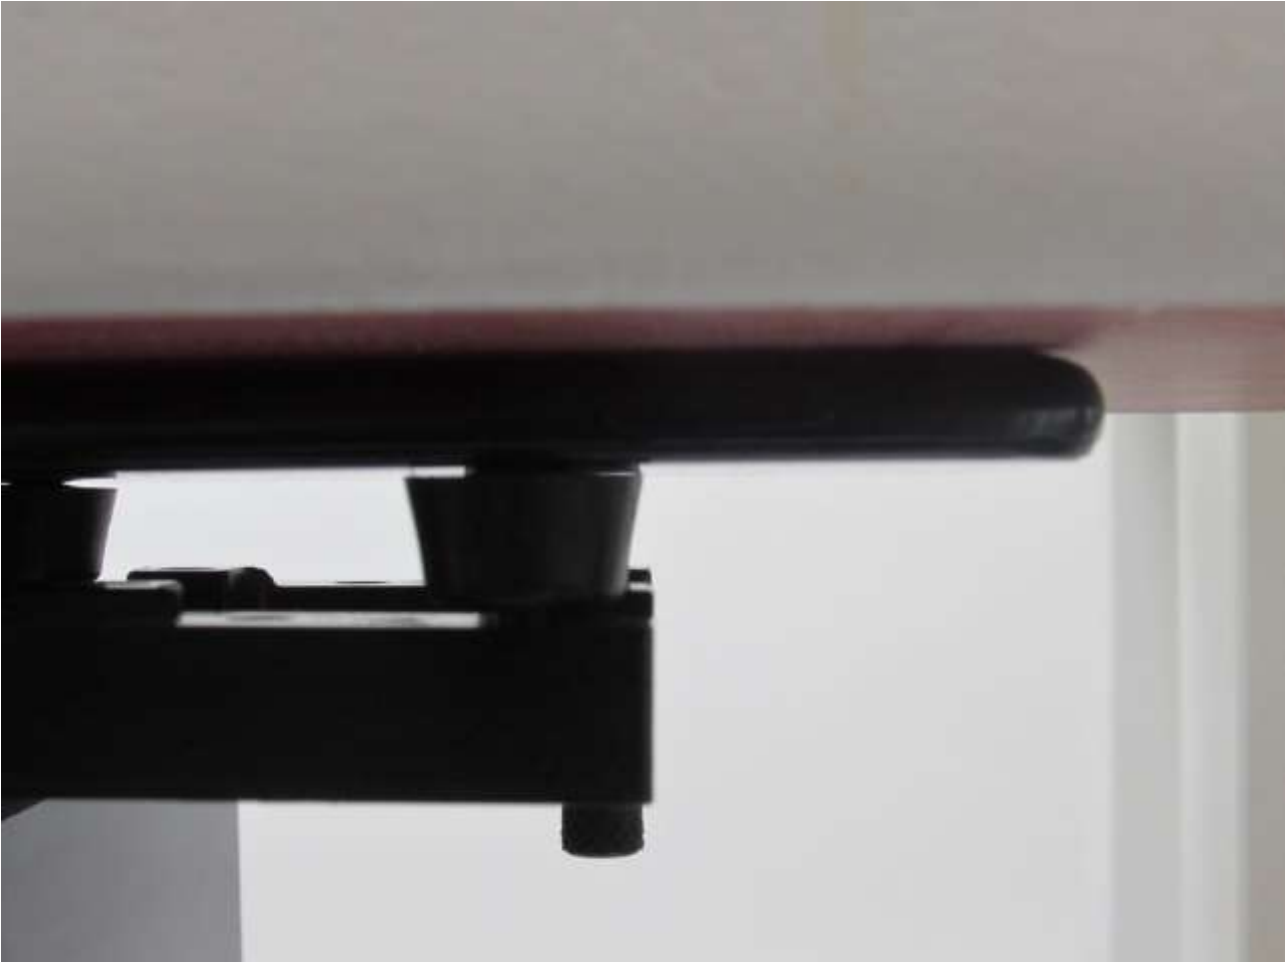


[Distance of 0 mm from the EUT]

■ **Test Setup Photo (Front)**



[Distance of 10 mm from the EUT]

■ **Test Setup Photo (Front)**

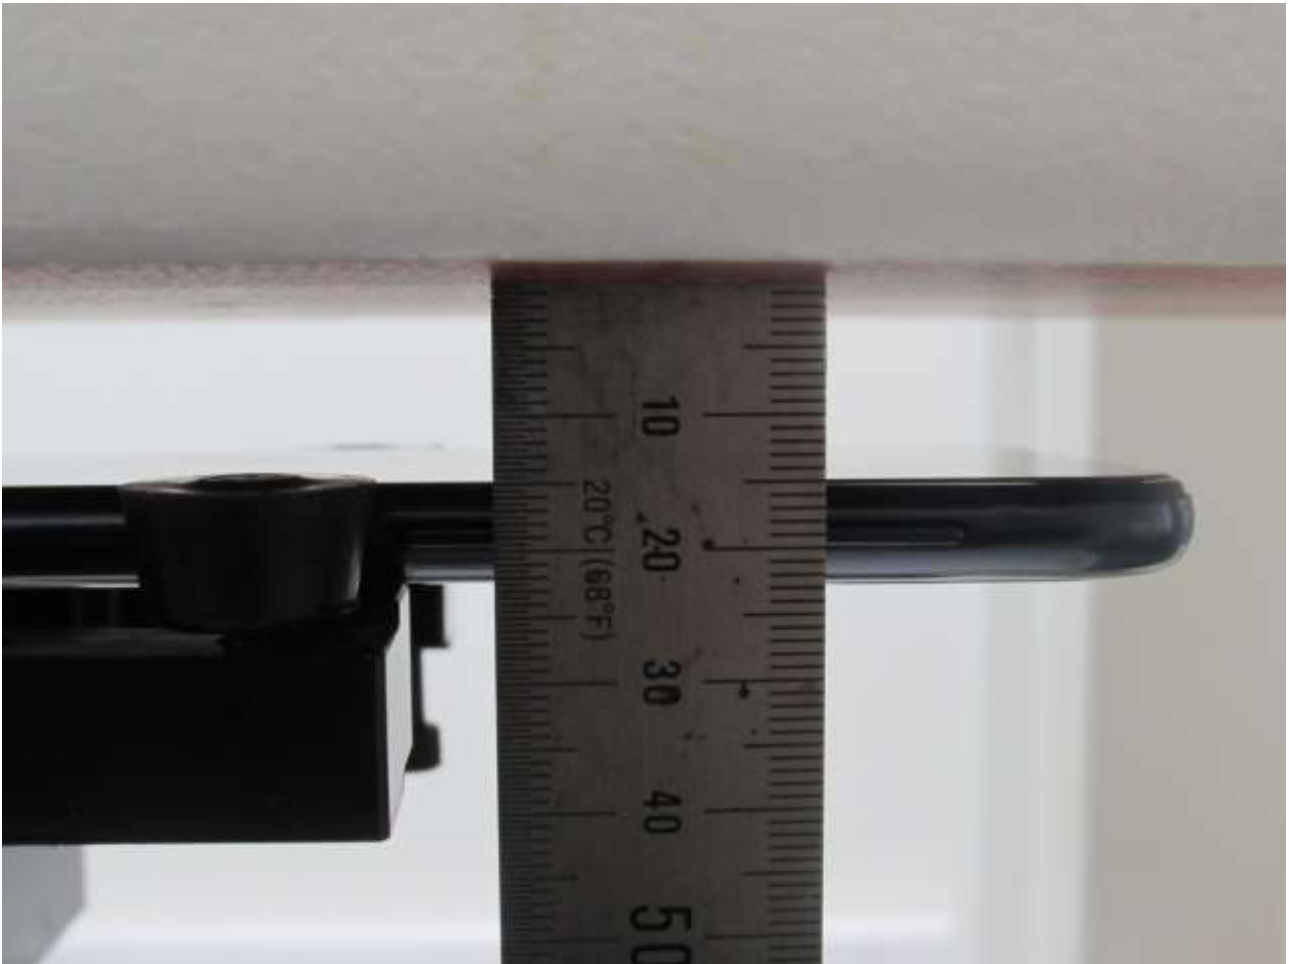


[Distance of 15 mm from the EUT]

■ **Test Setup Photo (Front)**



[Distance of 0 mm from the EUT]

■ **Test Setup Photo (Left)**

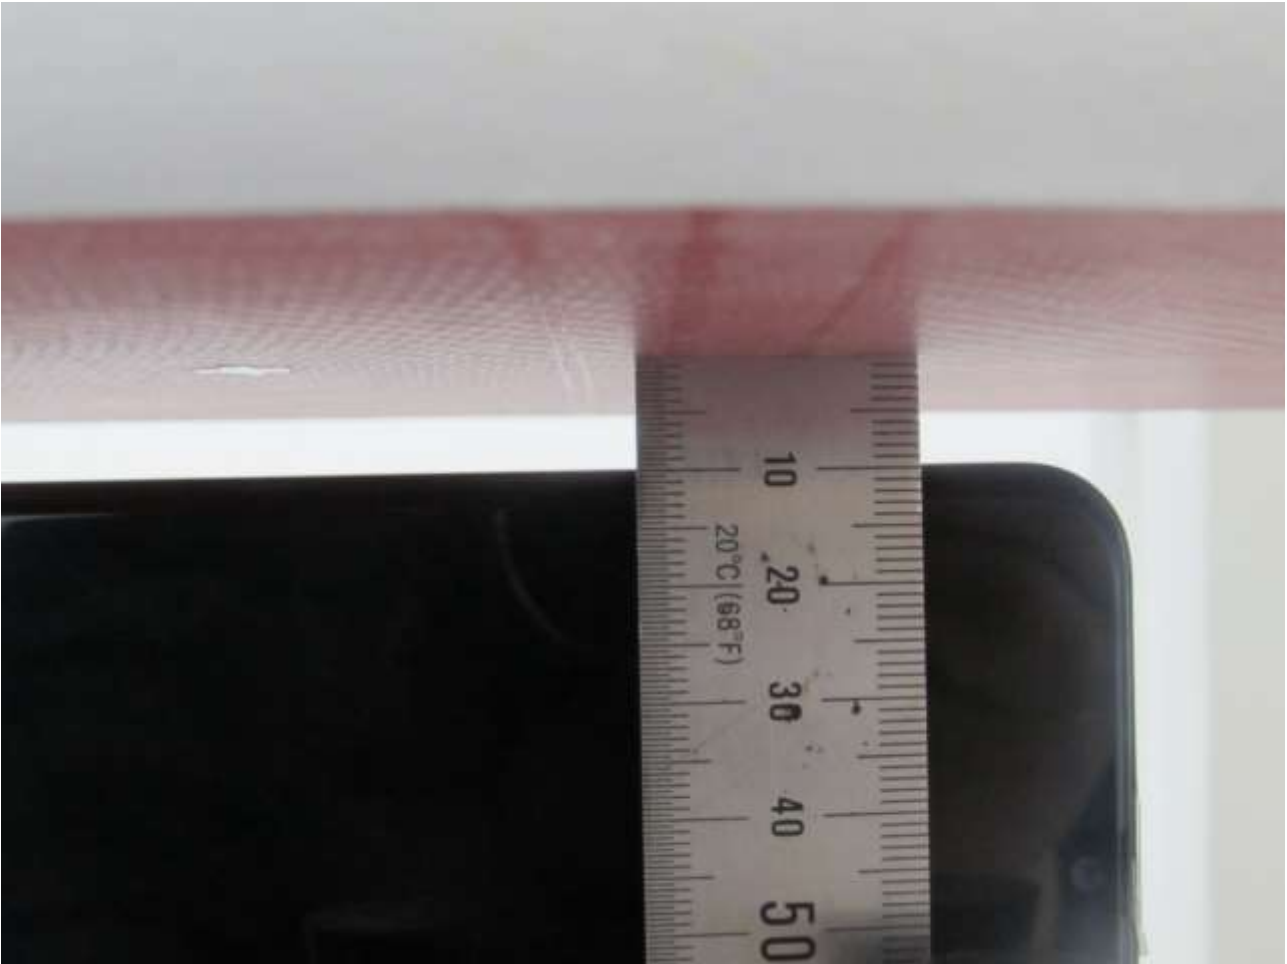


[Distance of 10 mm from the EUT]

■ **Test Setup Photo (Left)**



[Distance of 0 mm from the EUT]

■ **Test Setup Photo (Right)**

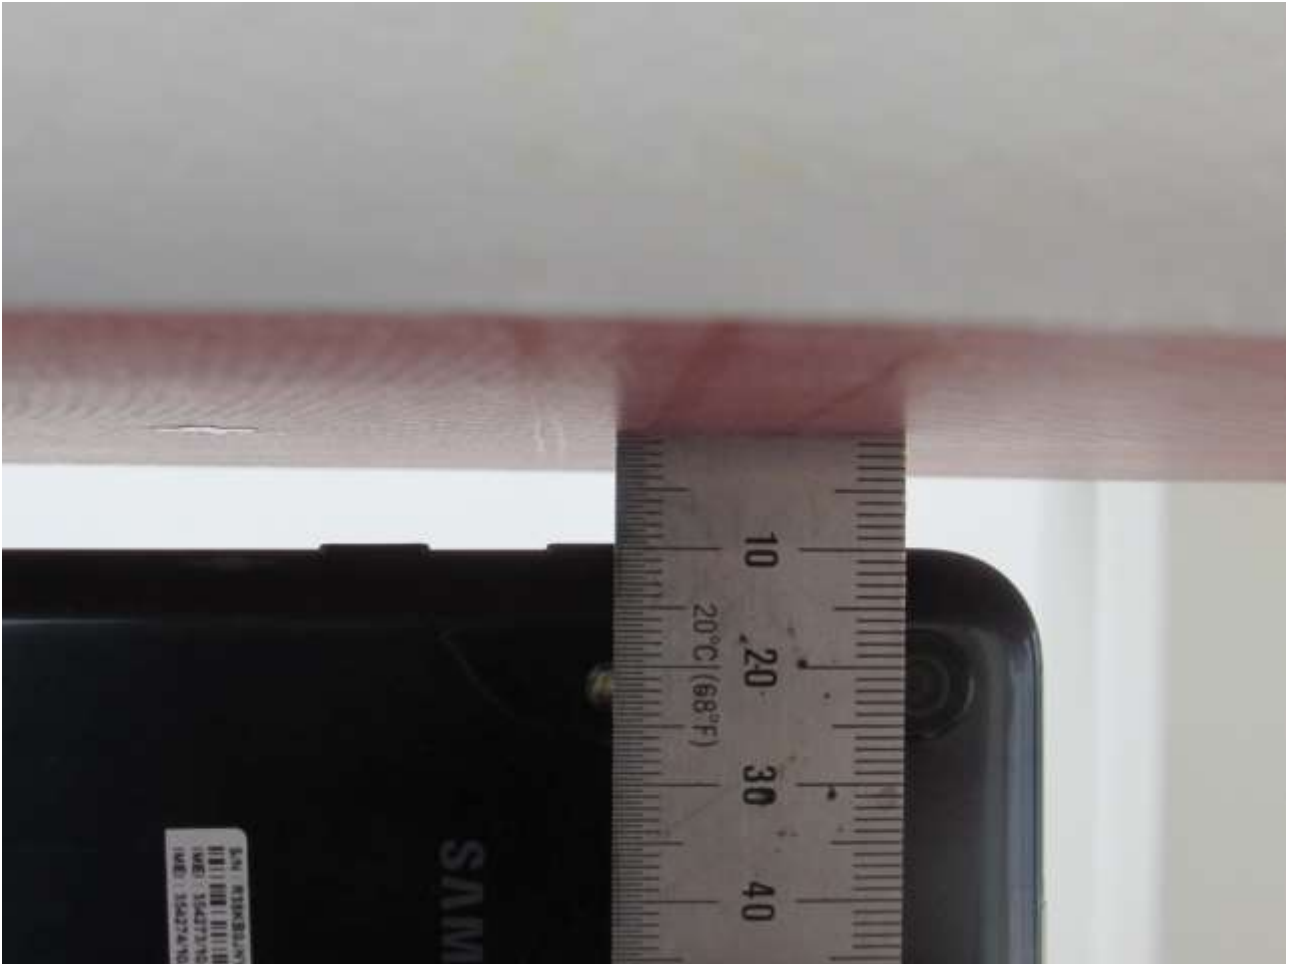

[Distance of 10 mm from the EUT]

■ **Test Setup Photo (Top)**



[Distance of 10 mm from the EUT]

■ **Test Setup Photo (Top)**



[Distance of 0 mm from the EUT]

■ **Test Setup Photo (Bottom)**



[Distance of 10 mm from the EUT]