
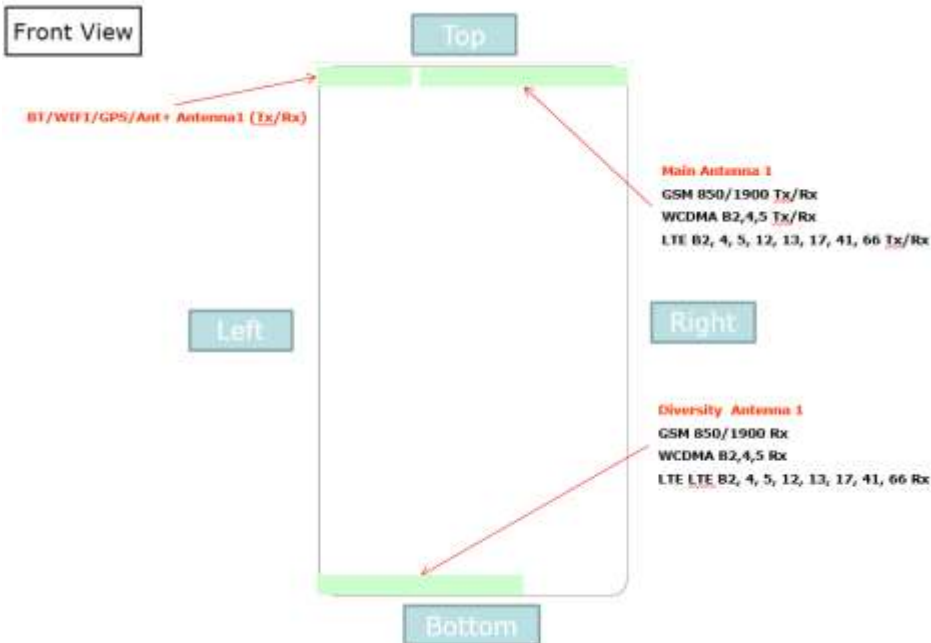


Attachment 8.


- DUT Antenna Information and SAR Test SETUP PHOTOGRAPHS

DUT Antenna Information


* Diagonal dimension of Display and device

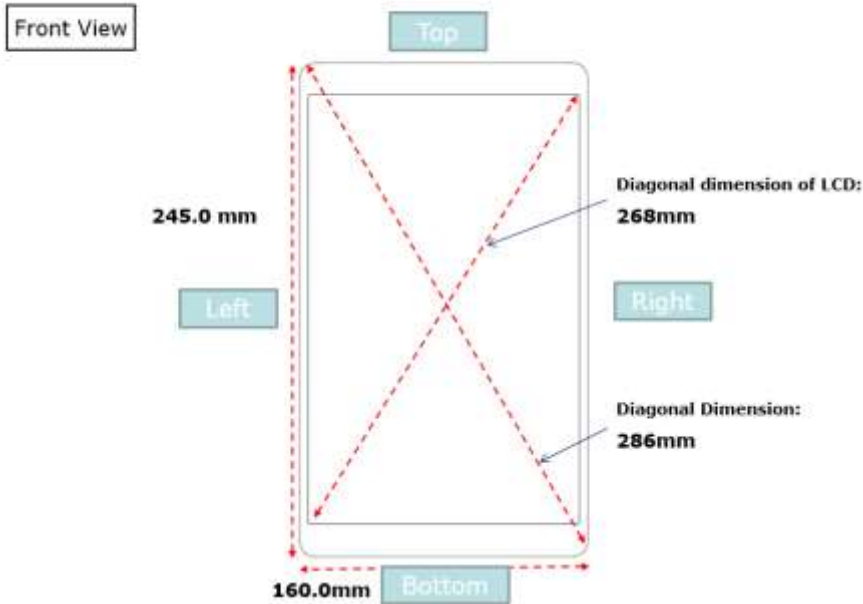


* Distance between Main antenna and edge

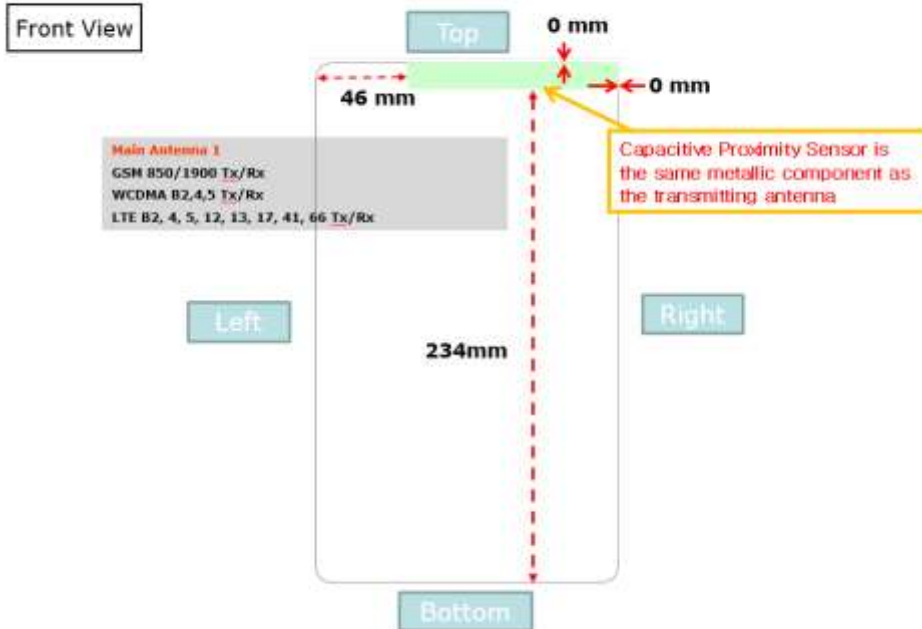

* Distance between BT/WIFI/GPS/Ant+ Antenna and edge

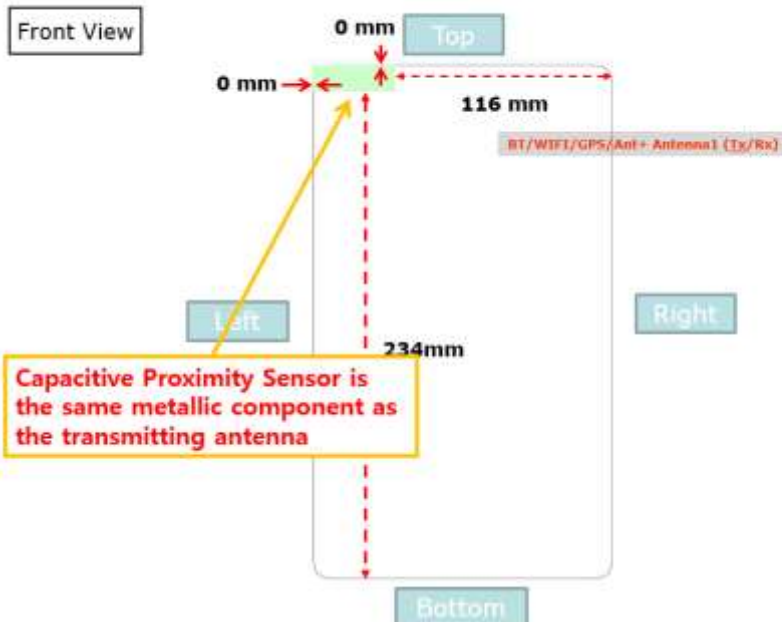


Front View

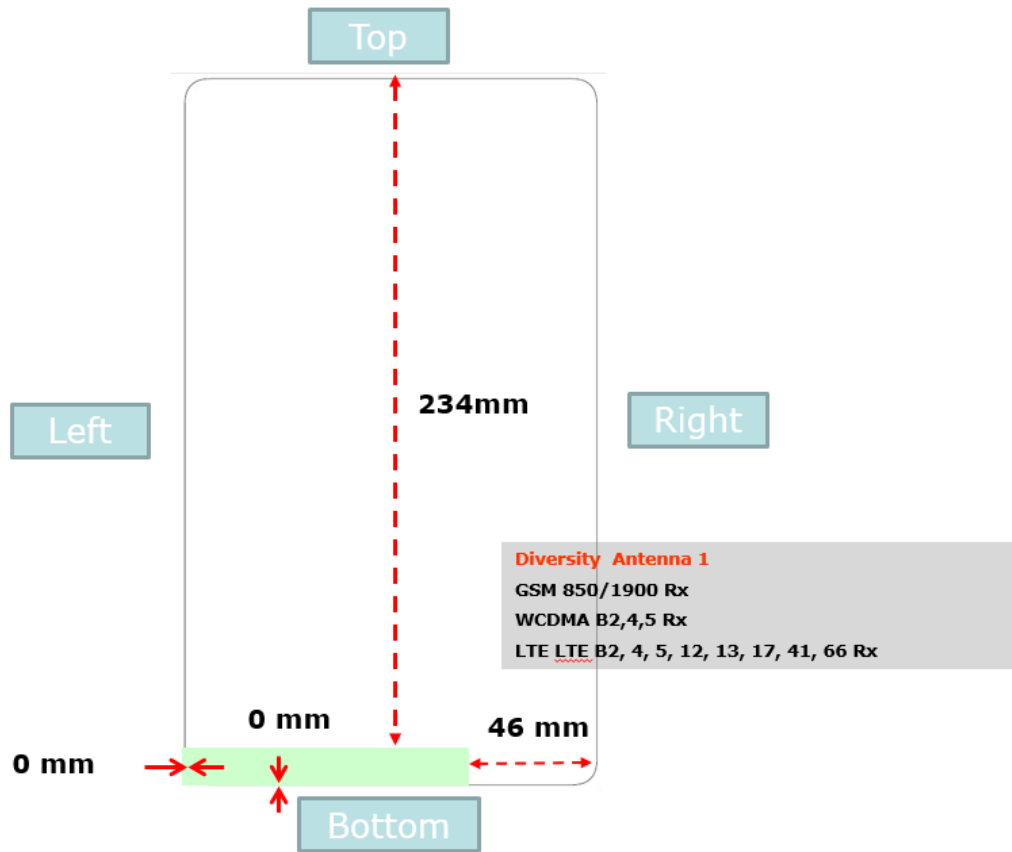

SAR Test Setup Photographs

■ Test Setup Photo (Body All)

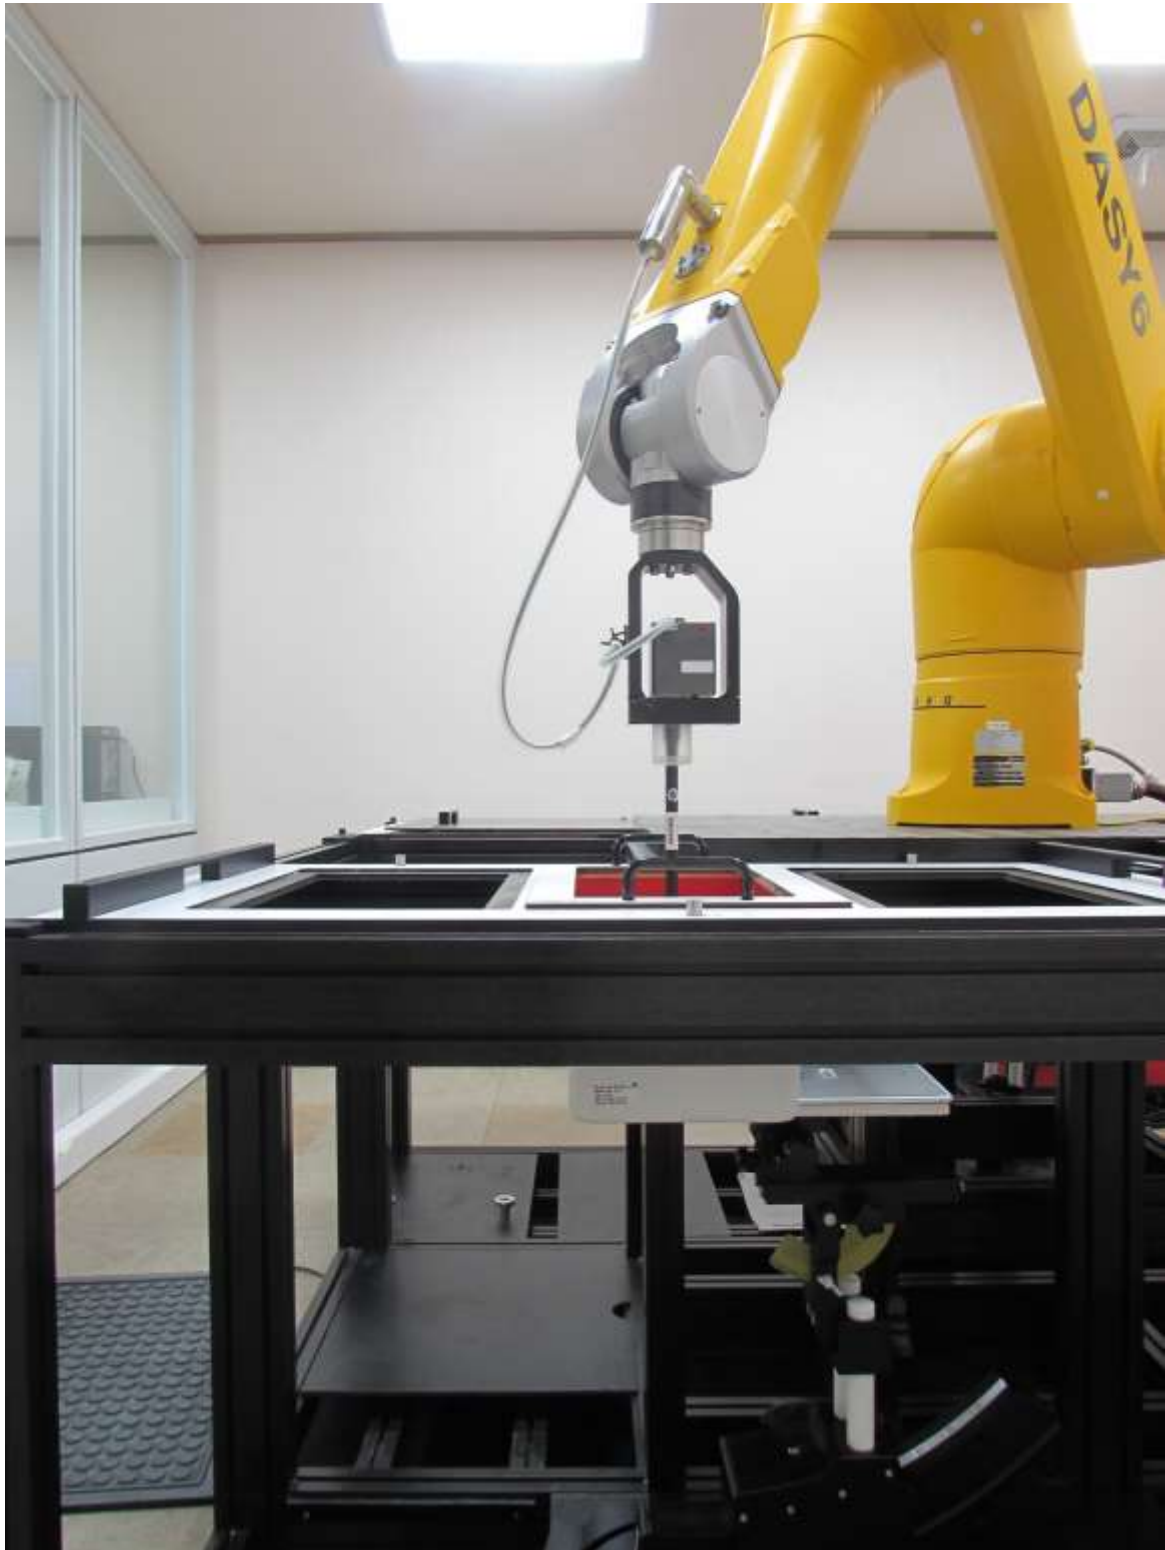

■ **Test Setup Photo (Rear)**



[Distance of 0 mm from the EUT]

■ **Test Setup Photo (Rear)**



[Distance of 8 mm from the EUT]

■ **Test Setup Photo (Rear)**




[Distance of 16 mm from the EUT]

■ **Test Setup Photo (Rear Keyboard)**



[Distance of 0 mm from the EUT]

■ **Test Setup Photo (Rear Keyboard)**

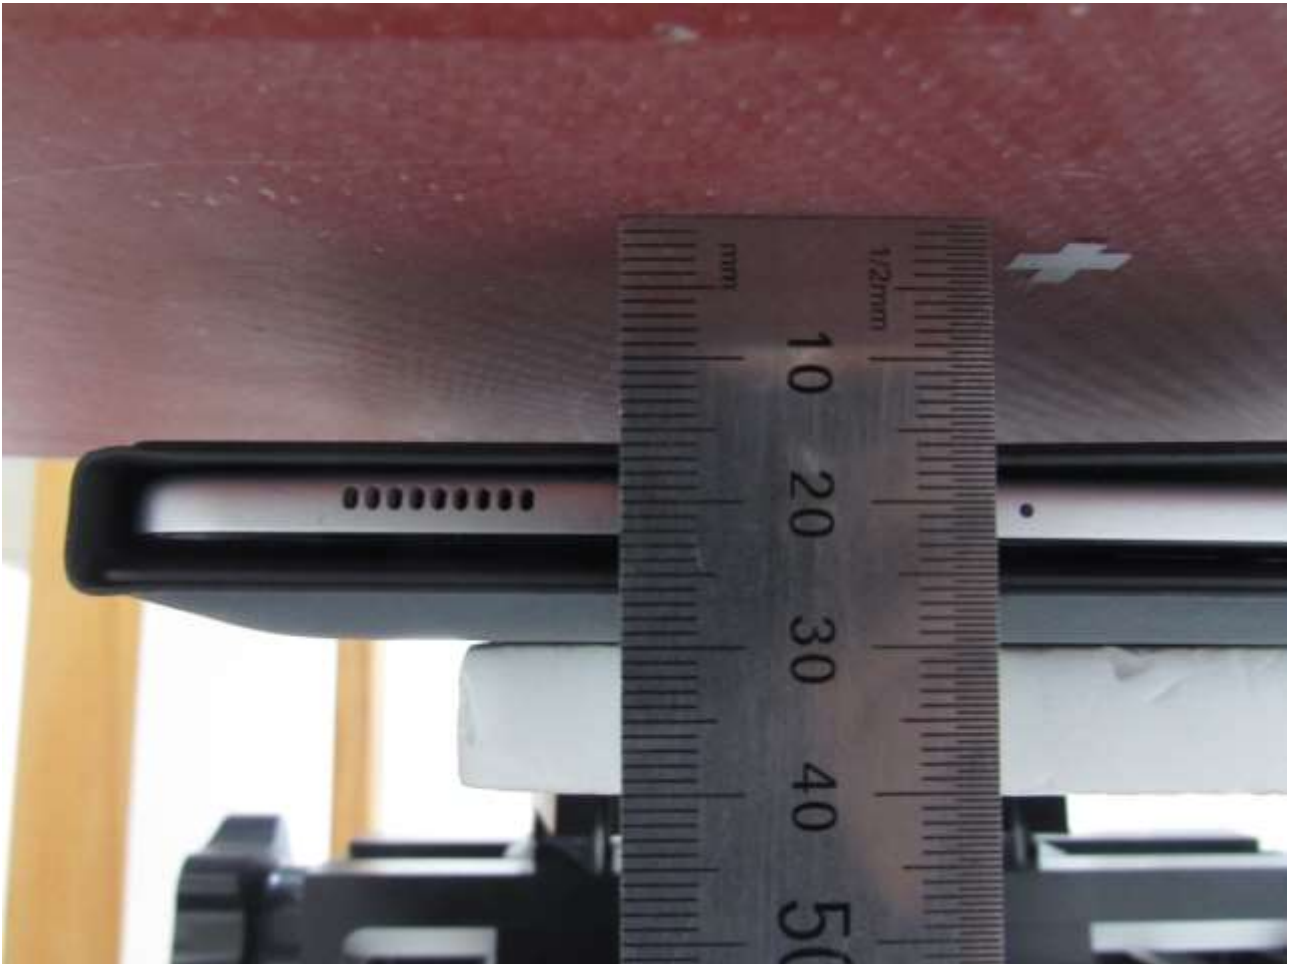

[Distance of 16 mm from the EUT]

■ Test Setup Photo (Left)



[Distance of 0 mm from the EUT]

■ Test Setup Photo (Left)



[Distance of 4 mm from the EUT]

■ **Test Setup Photo (Left Keyboard)**



[Distance of 0 mm from the EUT]

■ **Test Setup Photo (Left Keyboard)**



[Distance of 4 mm from the EUT]

■ **Test Setup Photo (Right)**



[Distance of 0 mm from the EUT]

■ **Test Setup Photo (Right)**



[Distance of 6 mm from the EUT]

■ **Setup Photo (Right Keyboard)**



[Distance of 6 mm from the EUT]

■ **Test Setup Photo (Top)**



[Distance of 0 mm from the EUT]

■ **Test Setup Photo (Top)**



[Distance of 9 mm from the EUT]

■ **Test Setup Photo (Top)**



[Distance of 17 mm from the EUT]

■ **Test Setup Photo (Top)**




[Distance of 17 mm from the EUT]

■ **Test Setup Photo (Left Corner)**



[Distance of 0 mm from the EUT]

■ **Test Setup Photo (Left Corner)**

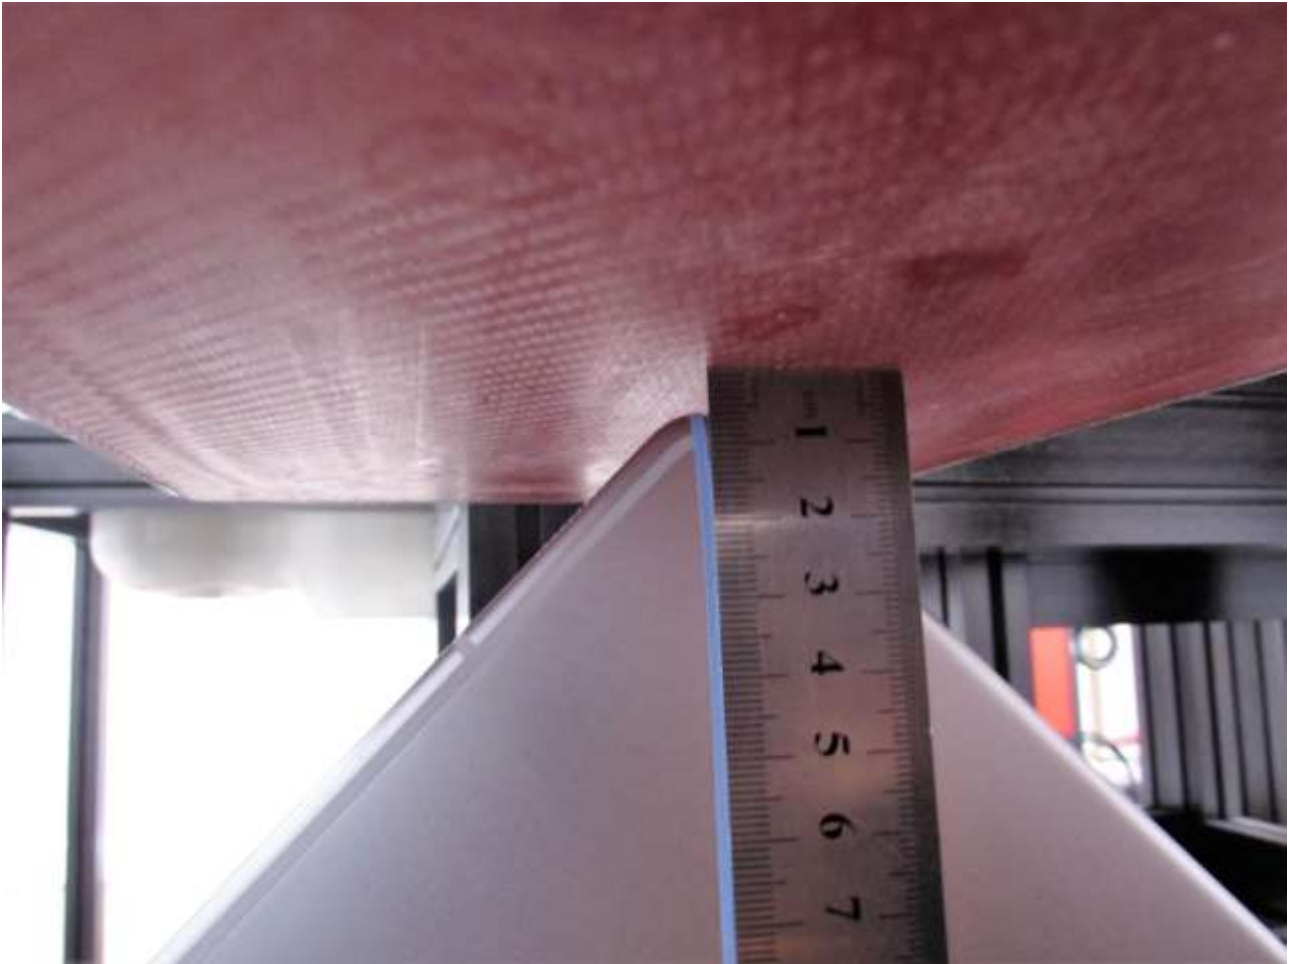


[Distance of 6 mm from the EUT]

■ **Test Setup Photo (Right Corner)**



[Distance of 0 mm from the EUT]

■ **Test Setup Photo (Right Corner)**

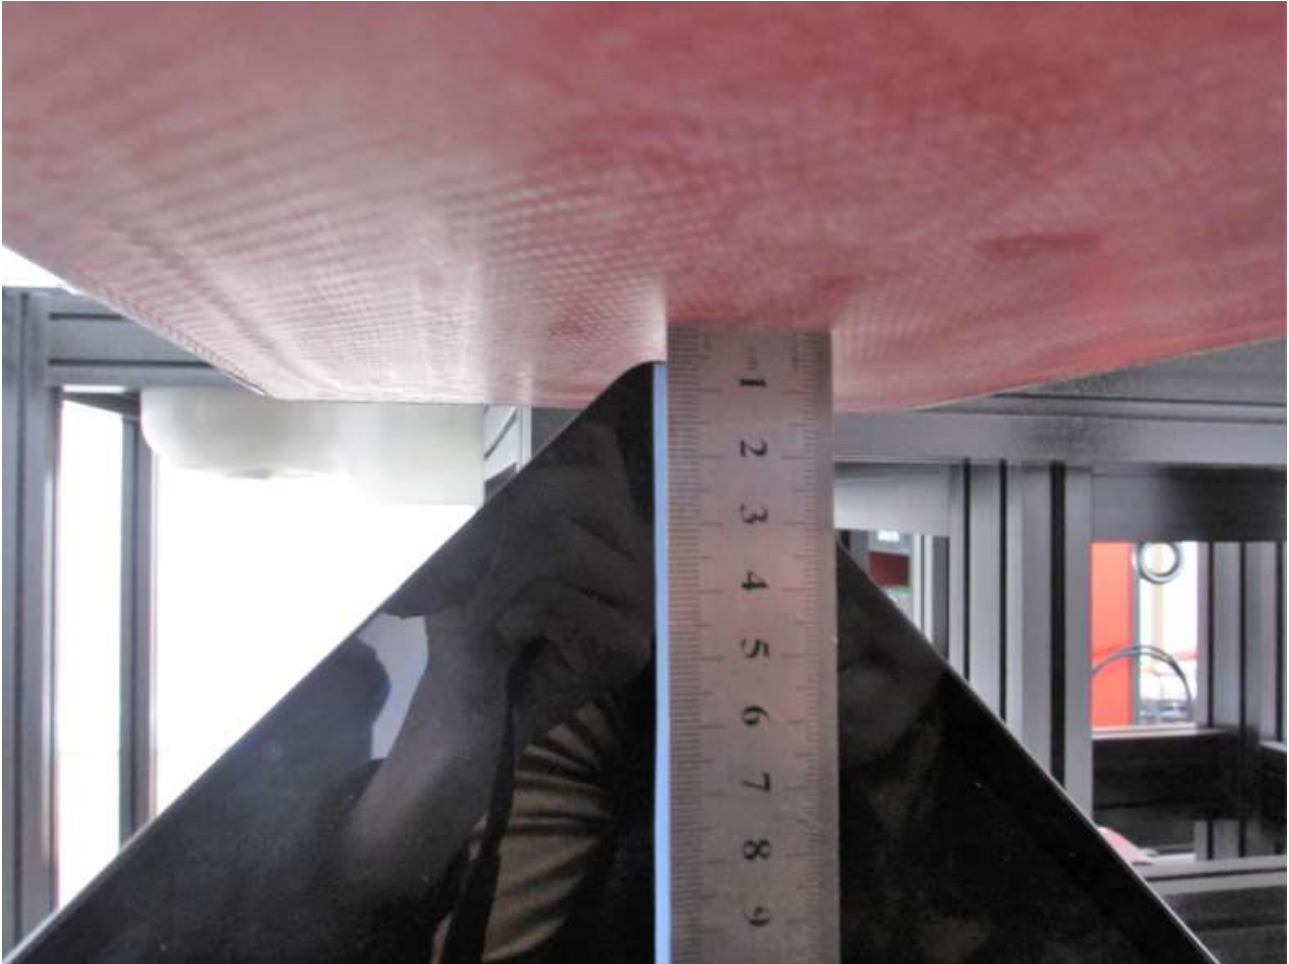

[Distance of 6 mm from the EUT]