

This document is watermarked because certain important information in the document has not yet been verified.  
This document has been sent to you as a draft and for informational purposes only.  
The document should only be used for internal purposes and may not be distributed outside of the company.  
Distributing the document outside of the company could result in legal exposure to the company if the preliminary,  
unverified information in the draft turns out to be inaccurate.

Asset will be  
updated when  
available

Asset will be  
updated when  
available

SM - X808U   Draft Ver.

# User manual

# Contents

---

## Features

[S Pen](#) | [Biometric security](#) | [Dark mode](#)

## Getting started

[Set up your device](#): [Charge the battery](#)

[Start using your device](#): [Turn on your device](#) | [Use the Setup Wizard](#) | [Bring data from an old device](#) | [Lock or unlock your device](#) | [Accounts](#) | [Navigation](#) | [Navigation bar](#) | [Customize your home screen](#) | [S Pen](#) | [Digital wellbeing and parental controls](#) | [Biometric security](#) | [Multi window](#) | [Edge panels](#) | [Enter text](#)

[Customize your home screen](#): [App icons](#) | [Wallpaper](#) | [Widgets](#) | [Home screen settings](#) | [Status bar](#) | [Notification panel](#) | [Quick settings](#)

## Camera and Gallery

[Camera](#): [Navigate the camera screen](#) | [Configure shooting mode](#) | [Record videos](#) | [Camera settings](#)

[Gallery](#): [View pictures](#) | [Edit pictures](#) | [Play video](#) | [Edit video](#) | [Share pictures and videos](#) | [Delete pictures and videos](#) | [Take a screenshot](#)

## Samsung apps

[Galaxy Essentials](#) | [Galaxy Store](#) | [PENUP](#) | [Samsung Flow](#) | [Calculator](#) | [Calendar](#) | [Clock](#) | [Contacts](#) | [Internet](#) | [Messages](#) | [My Files](#) | [Samsung Notes](#)

## Google apps

[Chrome](#) | [Drive](#) | [Duo](#) | [Gmail](#) | [Google](#) | [Maps](#) | [Photos](#) | [Google Play Movies & TV](#) | [Play Store](#) | [YouTube](#) | [YT Music](#)

## Microsoft apps

[Outlook](#) | [Office](#) | [OneDrive](#)

## Settings

**Connections:** [Wi-Fi](#) | [Bluetooth](#) | [Airplane mode](#) | [Mobile networks](#) | [Data usage](#) | [Mobile hotspot](#) | [Tethering](#) | [Nearby device scanning](#) | [Connect to a printer](#) | [Virtual Private Networks](#) | [Private DNS](#) | [Ethernet](#)

**Customization:** [Display](#) | [Notifications](#) | [Sounds and vibration](#)

**Security:** [Lock screen and security](#) | [Face recognition](#) | [Fingerprint scanner](#)

**Accounts:** [Add an account](#) | [Account settings](#) | [Remove an account](#) | [Backup and restore](#) | [Google settings](#)

**Backup:** [Samsung account](#) | [Google Account](#) | [External storage transfer](#)

**Accessibility:** [Recommended for you](#) | [TalkBack](#) | [Visibility enhancements](#) | [Hearing enhancements](#) | [Interaction and dexterity](#) | [Advanced settings](#) | [Installed services](#) | [About Accessibility](#) | [Contact Us](#)

**Other:** [Help](#) | [Android Auto](#) | [Dual Messenger](#) | [Quick share](#) | [About tablet](#)

[Learn more](#)

[Legal information](#)

# Getting started

---

Front view

 
Back view

Set up your device


Start using your device

Asset will be  
updated when  
available

# Front view

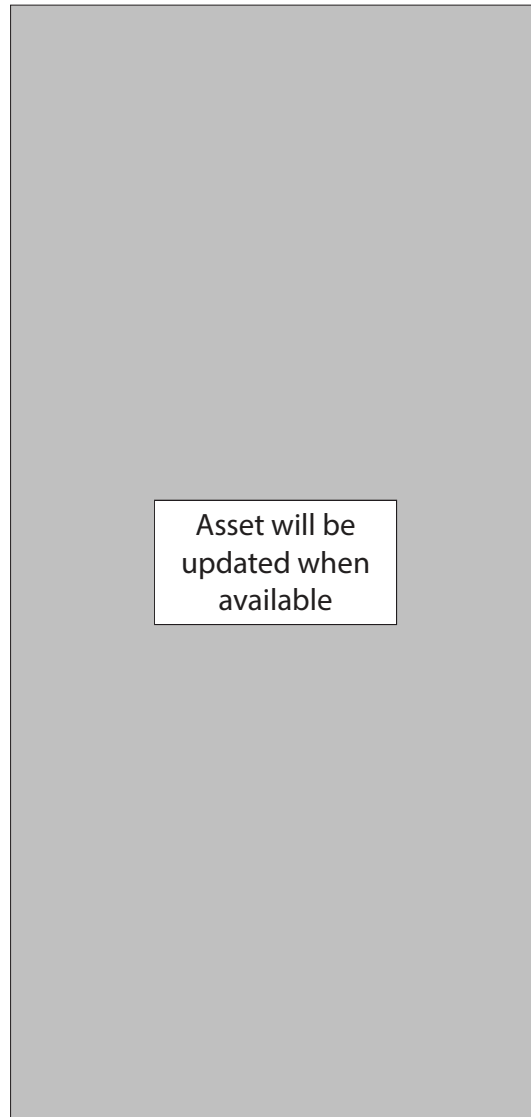


## Back view

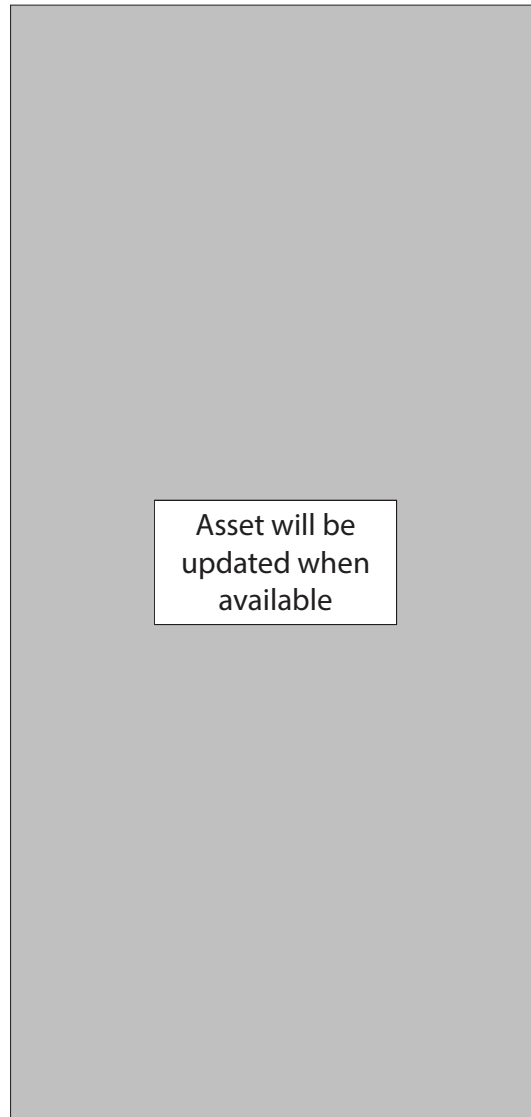 

# Set up your device

## Charge the battery

 Your device uses a nano-SIM card (unless it is the Wi-Fi model). A SIM card may be preinstalled, or you may be able to use your previous SIM card. Contact your carrier for more details.

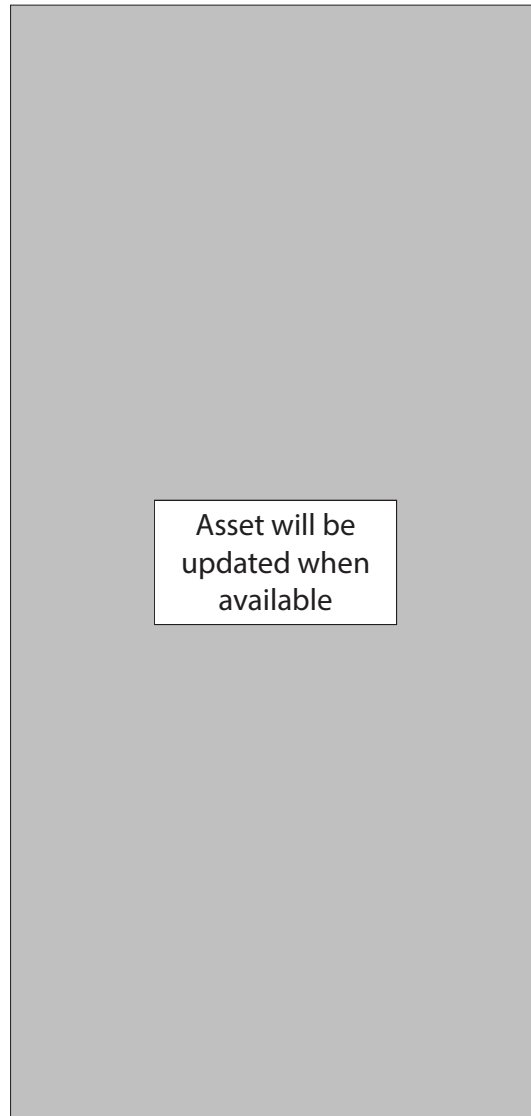



**NOTE** Use only Samsung-approved chargers and cables. To avoid injury or damage to your device, do not use incompatible, worn or damaged batteries, chargers or cables. Using other charging devices and batteries may void your warranty and may cause damage. For more information on your device, including charging compatibility, please visit [samsung.com](https://samsung.com).

## Charge the battery

Your device is powered by a rechargeable battery.





**TIP** While charging, the device and the charger may become hot and stop charging. This usually does not affect the device's lifespan or performance and is in the device's normal range of operation. Disconnect the charger from the device and wait for the device to cool down. For more information, visit [samsung.com/us/support/answer/ANS00076952](https://samsung.com/us/support/answer/ANS00076952).

## Start using your device

[Turn on your device](#) | [Use the Setup Wizard](#) | [Bring data from an old device](#) | [Lock or unlock your device](#) | [Accounts](#) | [Navigation](#) | [Navigation bar](#) | [Customize your home screen](#) | [S Pen](#) | [Digital wellbeing and parental controls](#) | [Biometric security](#) | [Multi window](#) | [Edge panels](#) | [Enter text](#)

## Turn on your device

Use the Side key to turn your device on. Do not use the device if the body is cracked or broken. Use the device only after it has been repaired.

- Press and hold the **Side** key to turn the device on.
  - To turn the device off, press and hold the **Side** key >  **Power off**. Confirm when prompted.
  - To restart your device, press and hold the **Side** key >  **Restart**. Confirm when prompted.



## Use the Setup Wizard


The first time you turn your device on, the Setup Wizard guides you through the basics of setting up your device.

Follow the prompts to choose a default language, connect to a Wi-Fi® network, set up accounts, choose location services, learn about your device's features, and more.

## Bring data from an old device

 
Download Smart Switch™ to transfer contacts, photos, music, videos, messages, notes, calendars, and more from your old device. Smart Switch can transfer your data via USB cable, Wi-Fi, or computer.

Visit [samsung.com/smartswitch](https://samsung.com/smartswitch) for more information.

1. From Settings, tap  **Accounts and backup** > **Bring data from old device**.
2. Follow the prompts and select the content to transfer.

## Lock or unlock your device

Use your device's screen lock features to secure your device. By default, the device locks automatically when the screen times out. For more information about screen locks, see [Lock screen and security](#).

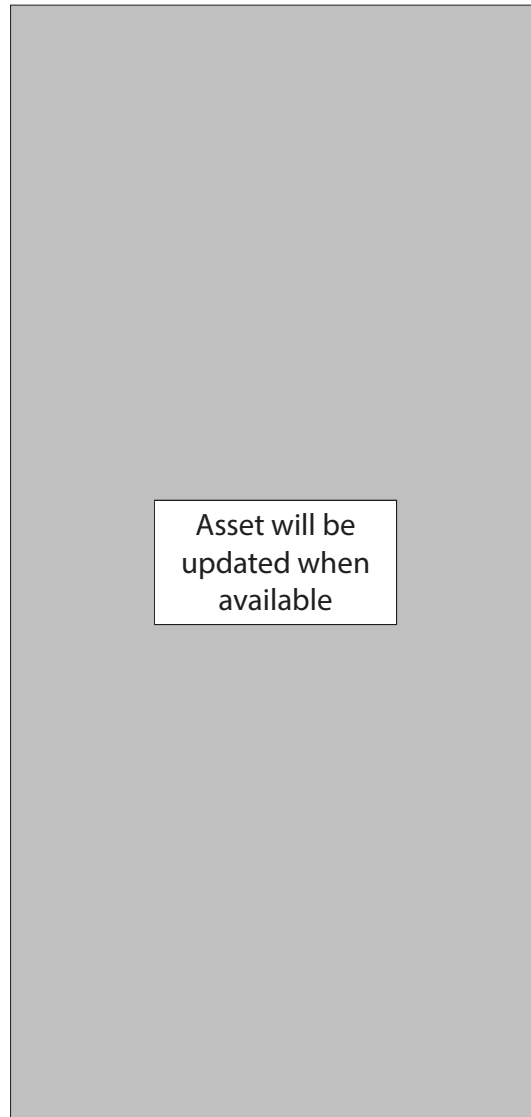

## Accounts

Set up and manage your accounts.





**TIP** Accounts may support email, calendars, contacts, and other features. Contact your carrier for more information.

### Add a Google Account

Sign in to your Google Account to access your Google Cloud Storage, apps installed from your account, and make full use of your device's Android™ features.

When you sign in to a Google Account and set a Lock screen, Google Device Protection is activated. This service requires your Google Account information when resetting to factory settings. For more information, see [Google Play Protect](#).

1. From Settings, tap  **Accounts and backup** > **Manage accounts**.
2. Tap  **Add account** > **Google**.



### Add a Samsung account

Sign in to your Samsung account to access exclusive Samsung content and make full use of Samsung apps.

- From Settings, tap **Samsung account**.

### Add an Outlook account

 
Sign in to your Outlook® account to view and manage email messages.

1. From Settings, tap  **Accounts and backup** > **Manage accounts**.
2. Tap  **Add account** > **Outlook**.

## Navigation

A touch screen responds best to a light touch from the pad of your finger or a capacitive stylus. Using excessive force or a metallic object on the touch screen may damage the surface of the screen and the damage will not be covered by the warranty.


### Tap

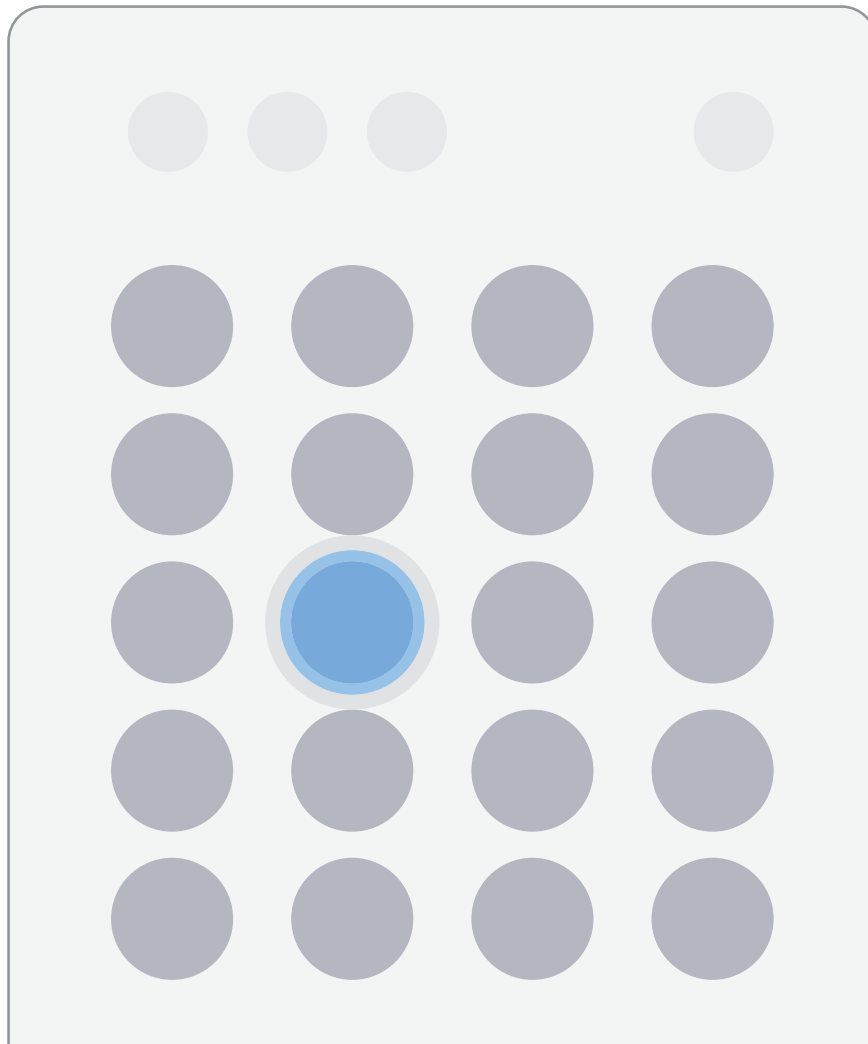

Lightly touch items to select or launch them.

- Tap an item to select it.
- Double-tap an image to zoom in or out.


## Swipe

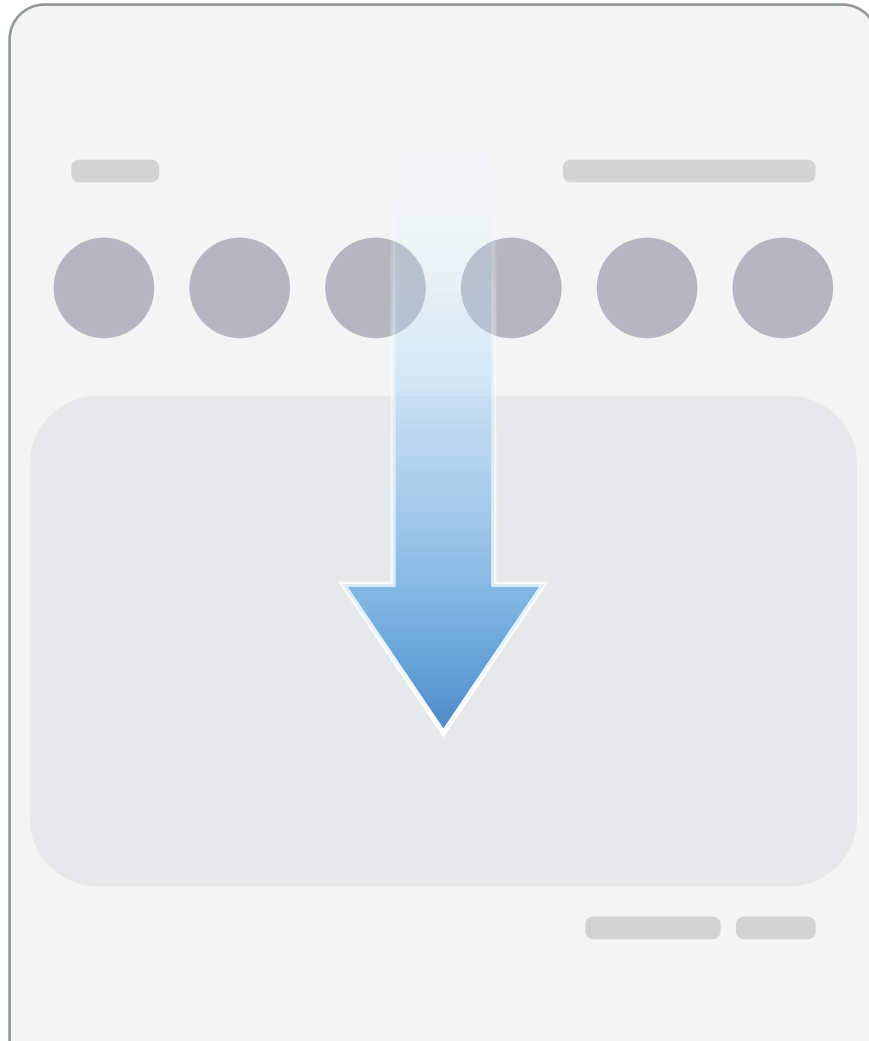 

Lightly drag your finger across the screen.

- Swipe the screen to unlock the device.
- Swipe the screen to scroll through the Home screens or menu options.


## Drag and drop

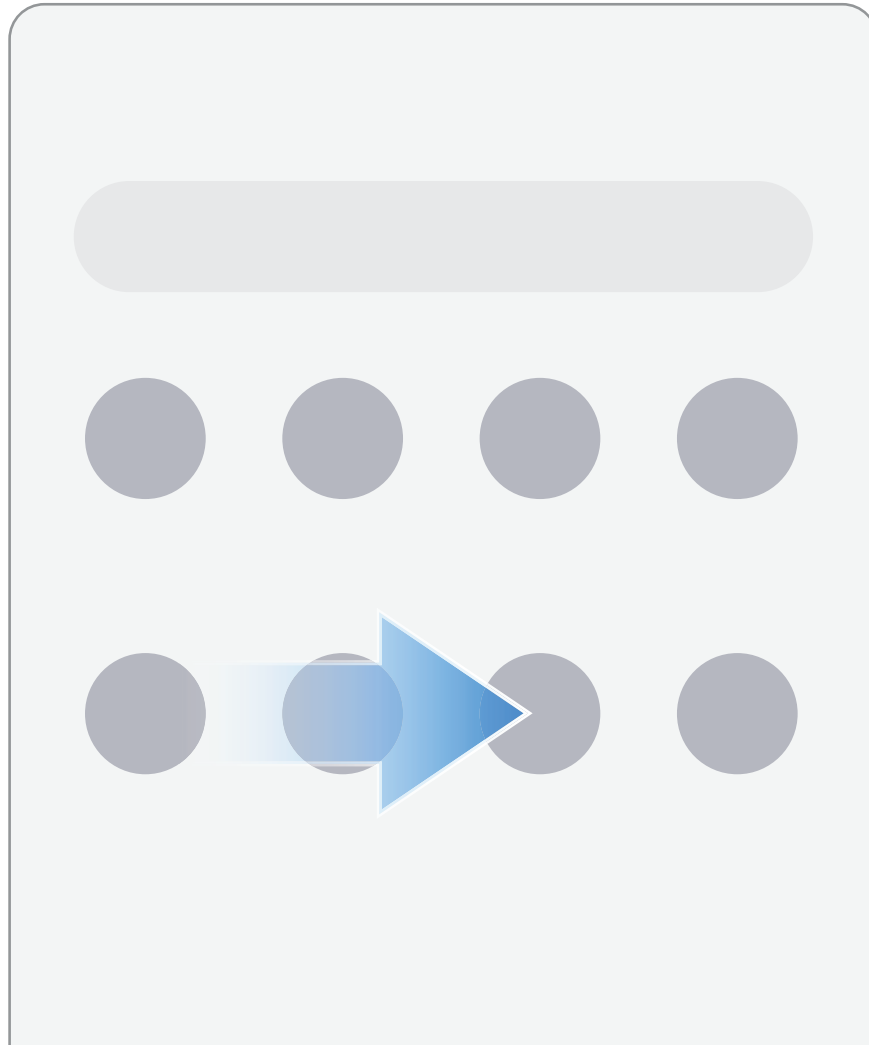 

Touch and hold an item, and then move it to a new location.

- Drag an app shortcut to add it to a Home screen.
- Drag a widget to place it in a new location.


## Zoom in and out

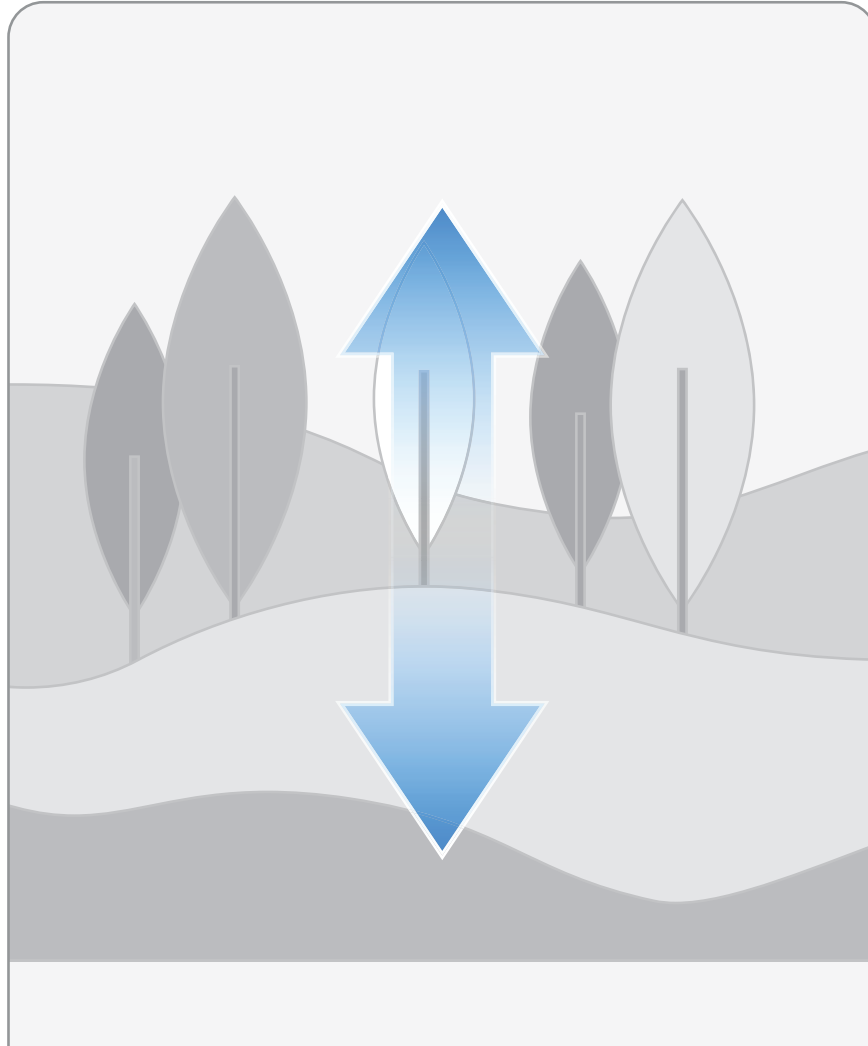 

Bring your thumb and forefinger together or apart on the screen to zoom in and out.

- Move your thumb and forefinger apart on the screen to zoom in.
- Move your thumb and forefinger together on the screen to zoom out.

## Touch and hold

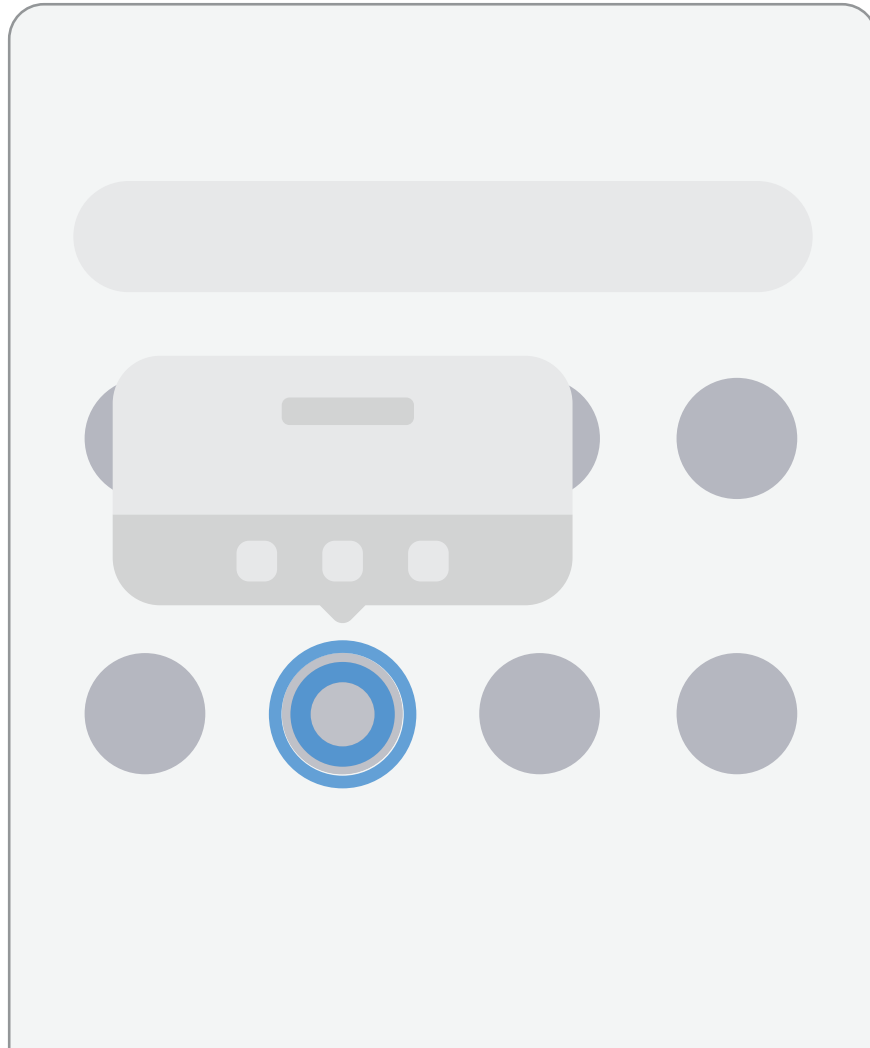 


Touch and hold items to activate them.

- Touch and hold a field to display a pop-up menu of options.
- Touch and hold a Home screen to customize the Home screen.




## Navigation bar

 You may navigate your device by using either the navigation buttons or full screen gestures.

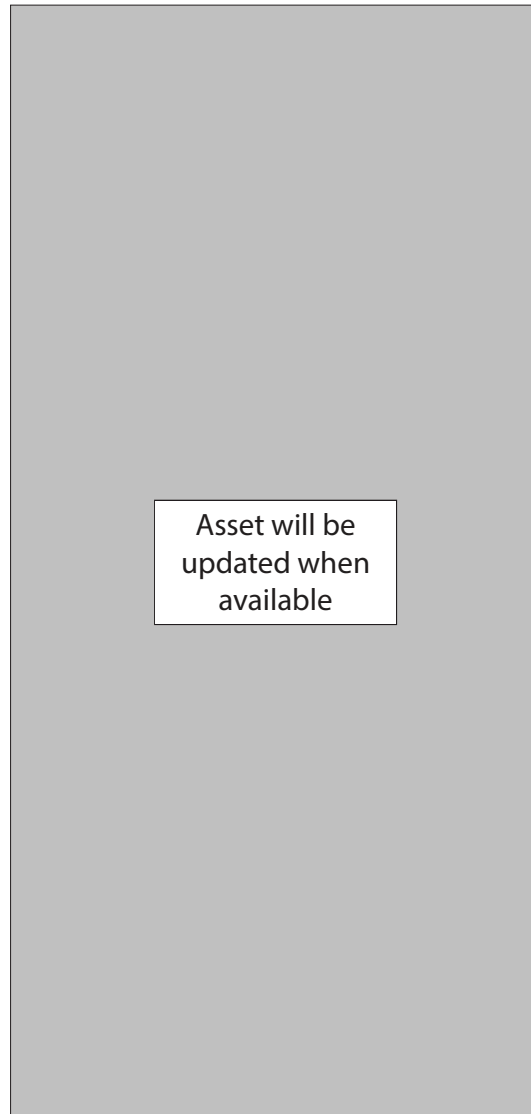


## Navigation buttons

Use buttons along the bottom of the screen for quick navigation.

1. From Settings, tap  **Display > Navigation bar > Buttons**.
2. Tap an option under **Button order** to choose which side of the screen the Back and Recent apps icons display.

## Navigation gestures

Hide the navigation buttons at the bottom of the screen for an unobstructed screen experience. Instead swipe to navigate your device.

1. From Settings, tap  **Display > Navigation bar > Swipe gestures** to enable the feature.
2. Tap an option to customize:
  - **More options:** Choose a gesture type and sensitivity.
  - **Gesture hints:** Display lines at the bottom of the screen where each screen gesture is located.
  - **Show button to hide keyboard:** Show an icon on the bottom right corner of the screen to hide the keyboard when the device is in portrait mode.
  - **Block gestures with S Pen:** Prevent the S Pen from making navigation gestures.

## Customize your home screen

The Home screen is the starting point for navigating your device. You can place your favorite apps and widgets here, in addition to setting up additional Home screens, removing screens, changing the order of screens, and choosing a main Home screen.

[App icons](#) | [Wallpaper](#) | [Widgets](#) | [Home screen settings](#) | [Status bar](#) | [Notification panel](#) | [Quick settings](#)

### App icons

Use app icons to launch an app from any Home screen.

- From Apps, touch and hold an app icon, and tap  **Add to Home**.

To remove an icon:


- From a Home screen, touch and hold an app icon, and then tap  **Remove**.



**NOTE** Removing an icon does not delete the app, it just removes the icon from a Home screen.

### Wallpaper



Change the look of the Home and Lock screens by choosing a favorite picture, video, or preloaded wallpaper.

1. From a Home screen, touch and hold the screen, and then tap  **Wallpapers**.
2. Tap one of the following menus for available wallpapers:
  - **My wallpapers:** Choose from featured and downloaded wallpapers.
  - **Gallery:** Choose pictures and videos saved in the Gallery app.
  - **Wallpaper services:** Enable additional features including guide page and Dynamic Lock screen.
  - **Apply Dark mode to Wallpaper:** Enable to apply Dark mode to your wallpaper.
3. Tap a picture or video to choose it.
  - If choosing a single picture, choose which screen or screens you want to apply the wallpaper to.
  - Videos and multiple pictures can only be applied to the Lock screen.

- If choosing videos or pictures from the Gallery, tap on one or more items, and then tap **Done**.
4. Tap **Set on Home screen**, **Set on Lock screen**, or **Set on Lock and Home screens** (depending on which screens are applicable).
    - If applying a picture from the Gallery to both the Home and Lock screens, enable **Sync my edits** if you want any edits made to that wallpaper to be applied to both screens.



## Themes

Set a theme to be applied to your Home and Lock screens, wallpapers, and app icons.

1. From a Home screen, touch and hold the screen.
2. Tap  **Themes**, and tap a theme to preview and download it.
3. Tap  **Navigation drawer** > **My stuff** > **Themes** to see downloaded themes.
4. Tap a theme, and then tap **Apply** to apply the selected theme.


## Icons

Apply different icon sets to replace the default icons.

1. From a Home screen, touch and hold the screen.
2. Tap  **Themes** > **Icons**, and tap an icon set to preview and download it.
3. Tap  **Navigation drawer** > **My stuff** > **Icons** to see downloaded icons.
4. Tap an icon, and then tap **Apply** to apply the selected icon set.




## Widgets

Add widgets to your home screens for quick access to info or apps.

1. From a Home screen, touch and hold the screen.
2. Tap  **Widgets**, and then tap a widget set to open it.
3. Swipe to the widget you want to add to the Home screen, and tap **Add**.


### Customize Widgets

Once you have added a widget, you can customize where it's located and how it functions.

- From a Home screen, touch and hold a widget, and tap an option:
  -  **Remove:** Delete a widget from your screen.
  -  **Settings:** Customize the function or appearance of the widget.
  -  **App info:** Review the widget usage, permissions, and more.

### Home screen settings

Customize your Home and Apps screens.

1. From a Home screen, touch and hold the screen.
2. Tap  **Settings** to customize:
  - **Home screen layout:** Set your device to have separate Home and Apps screens, or only a Home screen where all apps are located.
  - **Home screen grid:** Choose a layout to determine how icons are arranged on the Home screen.
  - **Apps screen grid:** Choose a layout to determine how icons are arranged on the Apps screen.
  - **Folder grid:** Choose a layout to determine how folders are arranged.
  - **Show Apps screen button on Home screen:** Add a button to the Home screen for easy access to the Apps screen.
  - **Lock Home screen layout:** Prevent items on the Home screen from being removed or repositioned.
  - **Add new apps to Home screen:** Automatically add newly-downloaded apps to the Home screen.
  - **Hide apps:** Choose apps to hide from the Home and App screens. Return to this screen to restore hidden apps. Hidden apps are still installed and can appear as results in Finder searches.
  - **App icon badges:** Enable to show badges on apps with active notifications. You can also choose the badge style.

- **Swipe down for notification panel:** Enable this feature to open the Notification panel by swiping down anywhere on the Home screen.
- **About Home screen:** View version information.


## Notification panel

For quick access to notifications, settings, and more, simply open the Notification panel.







## View the Notification panel

You can access the Notification panel from any screen.

1. Swipe down on the screen to display the Notification panel.
  - To open an item, tap it.
  - To clear a single notification, drag the notification left or right.
  - To clear all notifications, tap **Clear**.
  - To customize notifications, tap **Notification settings**.
2. Drag upward from the bottom of the screen or tap  **Back** to close the Notification panel.

## Quick settings

The Notification panel provides quick access to device functions using Quick settings.

- Swipe down with two fingers from the top of the screen to display Quick settings.
  - Tap  **Finder search** to search the device.
  - Tap  **Power off** for Power off and Restart options.
  - Tap  **Open settings** to quickly access the device's settings menu.
  - Tap  **More options** to reorder Quick settings or to change the button layout.
  - Tap **Devices** to control other devices when supported apps like SmartThings or Google Home are installed.
  - Tap **Media** to access the Media panel and control playback of connected audio and video devices.
  - Tap a quick setting icon to turn it on or off.
  - Touch and hold a quick setting icon to open the setting.
  - Drag the **Brightness slider** to adjust the screen brightness.



## Status bar

The Status bar provides device information on the right side and notification alerts on the left.

### Status icons



Battery full



Charging



Mute



Vibrate



Airplane mode



Bluetooth active



Location active



Alarm

### Notification icons



New email



Download



Upload



App update

 
Configure display options for the Status bar.



**TIP** From Quick settings, tap **More options** > **Status bar** to configure settings for Status bar notifications. For more information, see [Advanced settings](#).

## S Pen

The S Pen provides a variety of helpful functions. Use your S Pen to launch apps, take notes, or draw a picture. Some S Pen functions, such as tapping the touchscreen, may not work if the device is near a magnet.

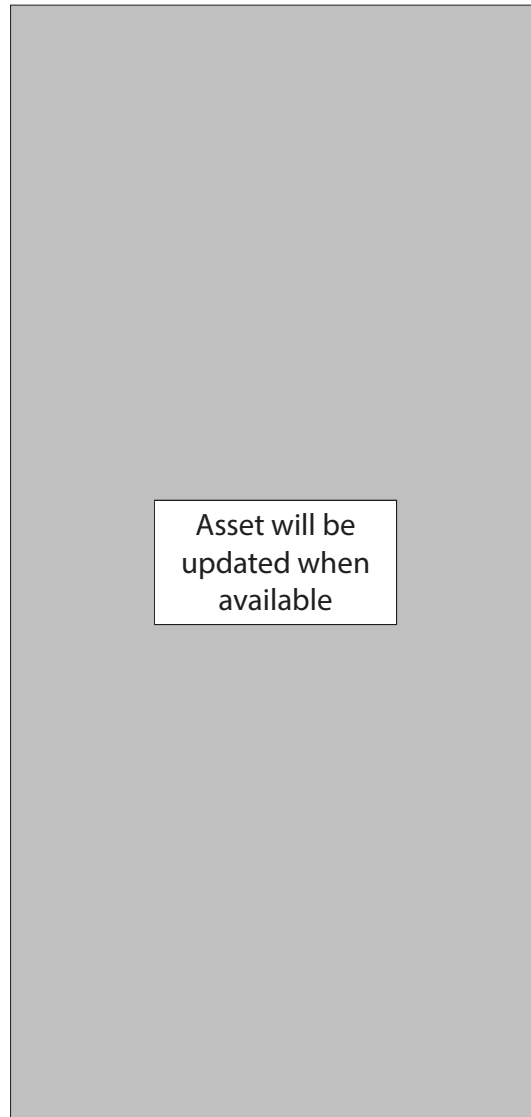



## Air Actions

The S Pen can be used to perform remote functions using the button and movements or gestures. You can set up shortcuts to your favorite apps, navigate screens on your devices, complete actions, and more.

The S Pen remote feature is only supported by Samsung-approved S Pens with Bluetooth Low Energy (BLE). If the S Pen is too far from the device, or if there is interference, the S Pen disconnects from the device. The S Pen must be connected for Air actions to work.


 



### Hold the S Pen button shortcut

Set a shortcut when you press and hold the S Pen button. By default, this option is set to launch the Camera app.


1. From Settings, tap  **Advanced features** > **S Pen** > **Air actions**.
2. Tap **Hold down Pen button to**, and tap  to enable the feature.
3. Tap an option to set the shortcut.

## Anywhere actions

Anywhere actions are configurable shortcuts that are accessed by holding the S Pen button while making one of the following gestures: up, down, left, right, or shake. These can be accessed from any screen and can include navigation, S Pen features, or apps.




|   | Action       | Gesture       |
|---|--------------|---------------|
|    | Back         | Left to right |
|    | Recent apps  | Right to left |
|    | Home         | Up and down   |
|    | Smart select | Down and up   |
|  | Screen write | Zigzag        |

You can change the Anywhere actions in Settings.



1. From Settings, tap  **Advanced features** > **S Pen** > **Air actions**.
2. Tap a Gesture icon under **Anywhere actions** to customize the shortcut.

## App actions

You can use your S Pen to do specific actions in certain apps. These are some of the default App actions:


|  |                | Single Press | Double Press   | Up/Down        | Left/Right         | Rotate      |
|--|----------------|--------------|----------------|----------------|--------------------|-------------|
|  | <b>Camera</b>  | Take picture | Switch cameras | Switch cameras | Next/Previous mode | Zoom in/out |
|  | <b>Gallery</b> | Next         | Previous       | View details   | Next/Previous      |             |
|  | <b>Media</b>   | Play/Pause   | Play next      | Volume up/down | Play previous/next |             |

You can change the app actions in Settings.

1. From Settings, tap  **Advanced features** > **S Pen** > **Air actions**.
2. Tap an app to view the available shortcuts.
3. Tap  to enable the shortcuts while using that app.

## General app actions

You can customize some general actions while using camera and media apps not specified in the app action list.

1. From Settings, tap  **Advanced features** > **S Pen** > **Air actions**.
2. Under **General app actions**, tap an action to change it.

## Air view

Hover the S Pen over the screen to preview content or view information about an item on the screen. The following Air view features are available:

 
- Preview an email message before opening it.
- Preview the contents of a photo album or enlarge a picture.
- Preview a video and navigate to a specific scene by hovering over the timeline.
- View the name or description of an icon or a button.









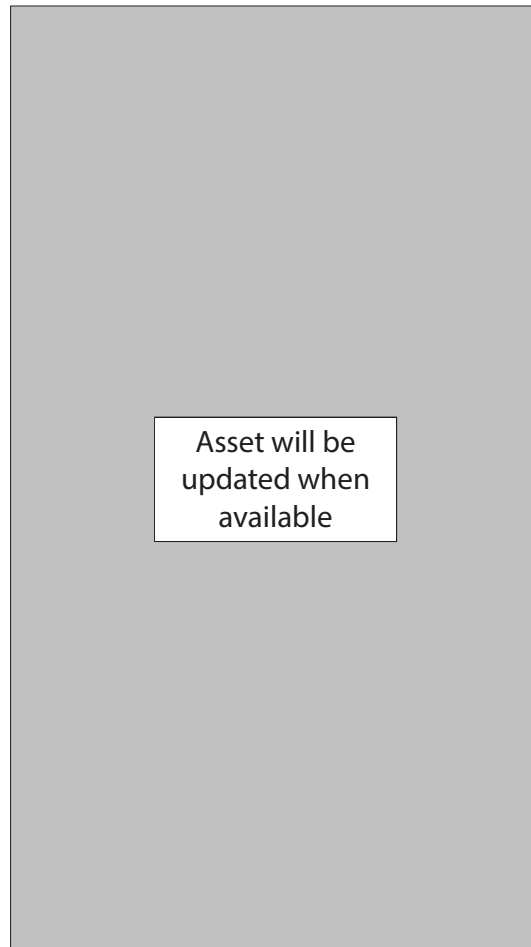



**NOTE** The preview function is only available when the S Pen's on-screen pointer is a solid color.

## Air command

Access signature S Pen features from any screen, including Smart select, Screen write, and Samsung Notes.



1. Tap  **Air command** or hold the S Pen near the screen so that the pointer appears, and then press the **S Pen** button once.
2. Tap an option:
  -  **Create note:** Launch a new note in the Samsung Notes app.
  -  **View all notes:** Launch the Samsung Notes app and view a listing of the notes you have created.
  -  **Smart select:** Draw around an area of the screen to collect it in the Gallery app.

-  **Screen write:** Capture screenshots and write or draw on them.
-  **AR Doodle:** Draw interactive doodles using the AR camera feature.
-  **Translate:** Hover the S Pen over a word to see it translated into another language and listen to its pronunciation.
-  **PENUP:** Use the S Pen to draw, color, edit, and share live drawings.
-  **Add shortcuts:** Add more apps or functions to the Air command menu.
-  **Settings:** Customize Air command by configuring apps and functions, and by changing how the Air command menu appears.

### Create note

Launch a new note directly in the Samsung Notes app. For more information, see [Samsung Notes](#).

- Tap  **Air command** >  **Create note.**







### View all notes

Launch the Samsung Notes app and view a listing of the notes you have created.




- Tap  **Air command** >  **View all notes.**

### Smart select

The Smart select feature allows you to copy content from any screen. You can then add it to your Gallery app or share it with your contacts.









1. Tap  **Air command** >  **Smart select.**
2. Tap a shape in the menu, and then drag the S Pen to select content. The following options appear:
  - **Extract text:** Identify and extract text from the selected content.
  - **Pin to screen:** Place a shortcut to the collected content on a Home screen.
  -  **Auto select:** Allow Smart select to automatically select content to extract.
  -  **Draw:** Draw on the captured content.
  -  **Share:** Choose a sharing method to share your content.
3. Tap  **Save.**




 **TIP** You can tap  **Animation** to record an animation or  **Pin to screen** to pin the content to your screen using Smart select.

## Screen write

 
Screen write allows you to capture screenshots and write or draw on them.



1. Tap  **Air command** >  **Screen write**.
2. The current screen is captured, and a pen tool appears. The following editing tools are provided:
  - **Crop**: Drag the edges of the screen to crop the captured content.
  -  **Pen type**: Draw on the screenshot. Tap the Pen icon a second time to change the pen tip, size, and color.
  -  **Eraser**: Erase the writing or drawings on the screenshot.
  -  **Undo**: Reverse the last action
  -  **Redo**: Repeat the last action that was undone.
  -  **Share**: Choose a sharing method to share your content.
  - **Scroll capture**: Capture any scrollable areas of the screen that may be hidden.
3. Tap  **Save**. The content is saved to the Gallery app.

 **TIP** Hold the **S Pen** button to erase your drawings on the screen memo.

## Live messages

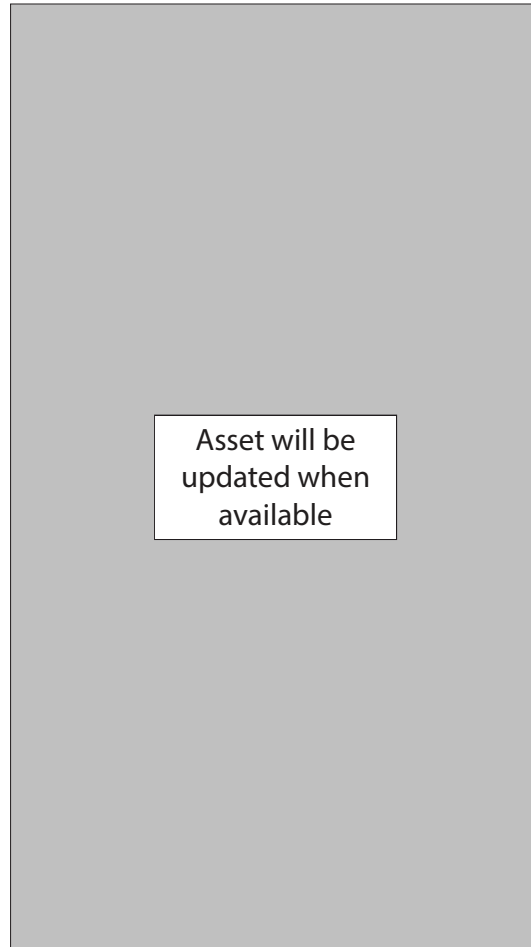
Record an animated drawing or written message.







 1. Tap  **Air command** >  **Live messages**.
2. Select one of the following background options:
  - **Collection:** See all live messages you have created.
  - **Gallery:** Pick an image or video for the background.
  - **Camera:** Capture an image to use for the background.
  - **Color:** Pick a color for the background.
3. Follow the prompts to begin creating your live message.
4. Tap **Done** to save.
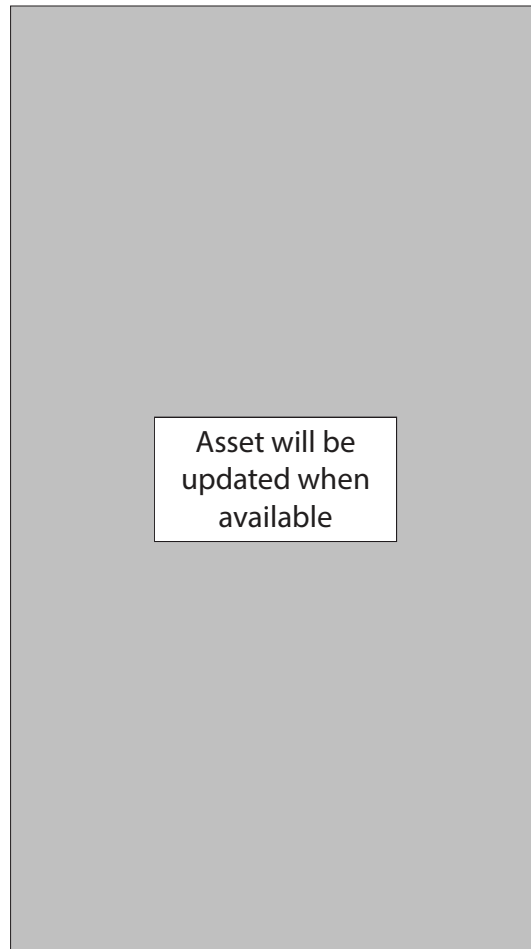
## AR Doodle






Draw interactive doodles on faces or other objects seen through the camera using augmented reality.



1. Tap  **Air command** >  **AR Doodle**.
2. Select either the front or rear cameras by tapping  **Switch cameras**.
3. Position the camera so that your target is in the center of the screen.
4. Use the S Pen to draw a doodle.
  - The doodle follows the movements of the face in real-time.
5. Tap  **Record** to save a video of your AR Doodle.

## Translate

Hover over words with the S Pen to translate them and listen to their pronunciation.

1. Tap  **Air command** >  **Translate**.
2. Tap the source and target languages to change them to the desired languages.
3. Hover the S Pen over a word.
  - Tap  **Sound** to hear the word pronounced in the source language.
  - Tap  **Copy** to save the selected text and the translation to your clipboard.
4. Tap  **Close** to close Translate.





## PENUP

Use the S Pen to draw, color, edit, and share live drawings. For more information, see [PENUP on page 1](#).

- Tap  **Air command** >  **PENUP**.


## Add shortcuts

You can customize the Air command menu by adding shortcuts to apps and functions.

1. Tap  **Air command** >  **Add shortcuts**.
2. Tap the apps or functions you would like to add to the Air command menu.
  - To remove an app shortcut, tap  **Remove**.
3. Tap  **Navigate up** to save your selection.

## Configure S Pen settings

To configure S Pen settings:

- From Settings, tap  **Advanced features** > **S Pen** to configure the following settings:
  - **Quick create notes:** Press and hold the S Pen button, then tap the screen twice with your S Pen to start a new note.
  - **S Pen to text:** Use the S Pen to write in search fields, address bars, and other text areas. Your handwriting is converted to text, and you can edit the converted text with the S Pen.

- **Air view:** Turn Air view on or off.
- **Show pointer when hovering:** Turn the pointer on or off. The pointer appears on the screen when the tip of the S Pen is near the screen, showing available actions.

### Air Command

- **Shortcuts:** Configure the Air command menu with S Pen features, apps, and functions.
- **Show Air command icon:** Show an Air command icon that you can move around the screen.
- **Open Air command with Pen button:** Open the Air command menu when you hover your S Pen over the screen and press the Pen button.

### Feedback


- **Sounds:** Set your device to make sounds when writing on the screen.

### General

- **Tips for using your S Pen:** Find out how to use S Pen features.
- **About S Pen features:** View version information for the S Pen features.
- **Contact us:** Contact Samsung support through Samsung Members.

## Digital wellbeing and parental controls

You can monitor and manage your digital habits by getting a daily view of how frequently you use apps, how many notifications you receive, and how often you check your device. You can also set your device to help you wind down before going to bed.

- From Settings, tap  **Digital Wellbeing and parental controls** for the following features:
  - Tap the Dashboard to view the following:
    - **Screen time:** View how long an app has been opened and used each day.
    - **Notifications received:** View how many notifications have been received

from an app each day.

- **Unlocks:** View how many times an app has been opened each day.

### Your goals

- **Screen time:** Set a screen time goal and view your daily average.
- **App timers:** Set a daily limit for how long you use each app.

### Ways to disconnect

- **Focus mode:** Limit app usage for set periods of time to avoid distractions from your device.
- **Bedtime mode:** Schedule when to change the screen to grayscale and mute calls, alerts, and other sounds.

### Check on your kids


- **Parental controls:** Supervise your children's digital life with Google's Family Link app. You can choose apps, set content filters, keep an eye on screen time, and set screen time limits.

## Biometric security

Use biometrics to securely unlock your device and log in to accounts.


### Face recognition

You can enable Face Recognition to unlock your screen. To use your face to unlock your device, you must set a pattern, PIN, or password.

- Face recognition is less secure than Pattern, PIN, or Password. Your device could be unlocked by someone or something that looks like your image.
  - Some conditions may affect face recognition, including wearing glasses, hats, beards, or heavy make-up.
  - When registering your face, ensure that you are in a well-lit area and the camera lens is clean.
1. From Settings, tap  **Biometrics and security > Face recognition**.
  2. Follow the prompts to register your face.

## Face recognition management

Customize how face recognition works.

- From Settings, tap  **Biometrics and security** > **Face recognition**.
  - **Remove face data:** Delete existing faces.
  - **Face unlock:** Enable or disable face recognition security.
  - **Stay on Lock screen until swipe:** When you unlock your device with face recognition, stay on the Lock screen until you swipe the screen.
  - **Brighten screen:** Increase the screen brightness temporarily so that your face can be recognized in dark conditions.
  - **About unlocking with biometrics:** Learn additional information about securing your device with biometrics.


## Fingerprint scanner

Use fingerprint recognition as an alternative to entering passwords in certain apps. You can also use your fingerprint to verify your identity when logging in to your Samsung account. To use your fingerprint to unlock your device, you must set a pattern, PIN, or password.

1. From Settings, tap  **Biometrics and security** > **Fingerprints**.
2. Follow the prompts to register your fingerprint.


## Fingerprint management

Add, delete, and rename fingerprints.

- From Settings, tap  **Biometrics and security** > **Fingerprints** for the following options:
  - The list of registered fingerprints is at the top of this list. You can tap a fingerprint to remove or rename it.
  - **Add fingerprint:** Simply follow the prompts to register another fingerprint.
  - **Check added fingerprints:** Scan your fingerprint to see if it has been registered.


## Fingerprint verification settings

Use fingerprint recognition to verify your identity in supported apps and actions.

- From Settings, tap  **Biometrics and security** > **Fingerprints**.
  - **Fingerprint unlock:** Use your fingerprint for identification when unlocking your device.
  - **Fingerprint always on:** Scan your fingerprint even when the screen is off.
  - **Use to sign in to websites:** Use your fingerprints to sign in to websites.
  - **Use with Samsung account:** Use your fingerprints to verify your identity instead of your Samsung account password.
  - **About unlocking with biometrics:** Read details on the requirements each biometric security feature has for using your pattern, PIN, or password as a backup.

## Biometrics settings

 
Configure your preferences for biometric security options.

- From Settings, tap  **Biometrics and security** > **More biometrics settings** for the following:
  - **Show unlock transition effect:** Show a transition effect when you use biometrics to unlock your device.



## Multi window

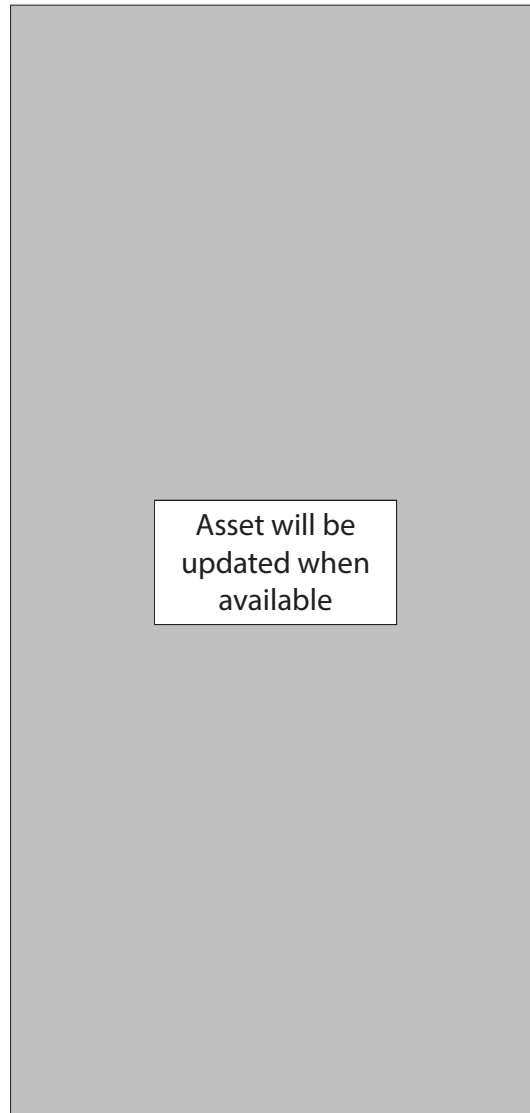

Multitask by using multiple apps at the same time. Apps that support Multi window™ can be displayed together on a split screen. You can switch between the apps and adjust the size of their windows.



1. From any screen, tap **Recent apps**.
2. Tap the app icon, and then tap **Open in split screen view**.
3. Tap an app in the other window to add it to the split screen view.
  - Drag the middle of the window border to adjust the window size.

## Window controls

The Window controls modify the way app windows are displayed in split screen view.

 
1. Drag the middle of the window border to resize the windows.
2. Tap the middle of the window border for the following options:
  -  **Switch window:** Swap the two windows.
  -  **Add app combo to Edge panel:** Create and add an app pair shortcut to the Apps panel on the Edge screen.

## Edge panels

The Edge panels feature a variety of customizable panels that can be accessed from the edge of the screen. Edge panels can be used to access apps, tasks, and contacts, as well as view news, sports, and other information.


[Apps panel](#) | [Configure Edge panels](#) | [Edge panel position and style](#) | [About Edge panels](#)

- From Settings, tap  **Display > Edge panels**, tap  to enable this feature.

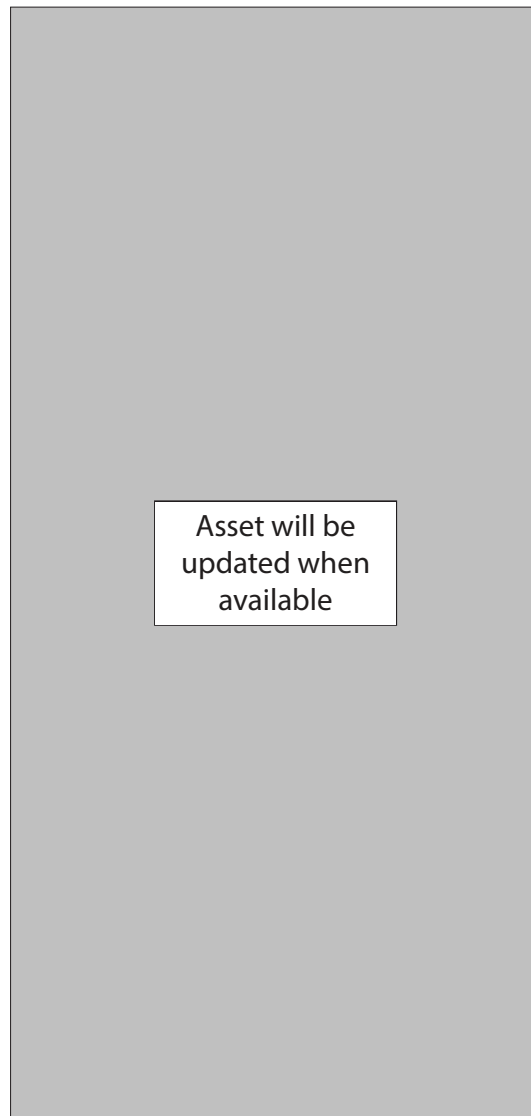




## Apps panel

You can add apps in two columns to the Apps panel.




1. From any screen, drag the **Edge handle** to the center of the screen. Swipe until the Apps panel is displayed.
2. Tap an app or app pair shortcut to open it. You can also tap  **All apps** for the complete app list.
  - To open additional windows in pop-up view, drag the app icon from the Apps panel to the open screen.


To configure Apps panel:


1. From any screen, drag the **Edge handle** to the center of the screen. Swipe until the Apps panel is displayed.
2. Tap  **Edit** to add other apps to the Apps panel.
  - To add an app to the Apps panel, find it on the left side of the screen and tap it to add it to an available space on the right column.
  - To create a folder shortcut, drag an app from the left side of the screen on top of an app in the columns on the right.
  - To change the order of the apps on the panel, drag each app to the desired location.
  - To remove an app, tap  **Remove**.
3. Tap  **Back** to save changes.

## Configure Edge panels

You can customize the Edge panels.



1. From the Edge screen, tap  **Settings**.
2. The following options are available:
  -  **Checkbox**: Enable or disable each panel.
  - **Edit** (if available): Configure individual panels.
  -  **Search**: Find panels that are either installed or available to install.

-  **More options:**
  - **Reorder:** Change the order of the panels by dragging them to the left or right.
  - **Uninstall:** Remove a downloaded Edge panel from your device.
  - **Hide on Lock screen:** Choose panels to hide on the Lock screen when a secure screen lock is set.
- **Galaxy Store:** Search for and download more Edge panels from Galaxy Store.

3. Tap  **Back** to save changes.


## Edge panel position and style

You can change the position of the Edge handle.

- From Settings, tap  **Display > Edge panels > Handle** for the following options:
  -  **Edge handle:** Drag to change the position of the Edge handle along the edge of the screen.
  - **Position:** Choose either **Right** or **Left** to set which side the Edge screen displays on.
  - **Lock handle position:** Enable to prevent the handle position from being moved when touched and held.
  - **Style:** Choose a color for the Edge handle.
  - **Transparency:** Drag the slider to adjust the transparency of the Edge handle.
  - **Size:** Drag the slider to adjust the size of the Edge handle.

 
## About Edge panels

You can view the current software version and license information for the Edge panels feature.

- From Settings, tap  **Display > Edge panels > About Edge panels**.





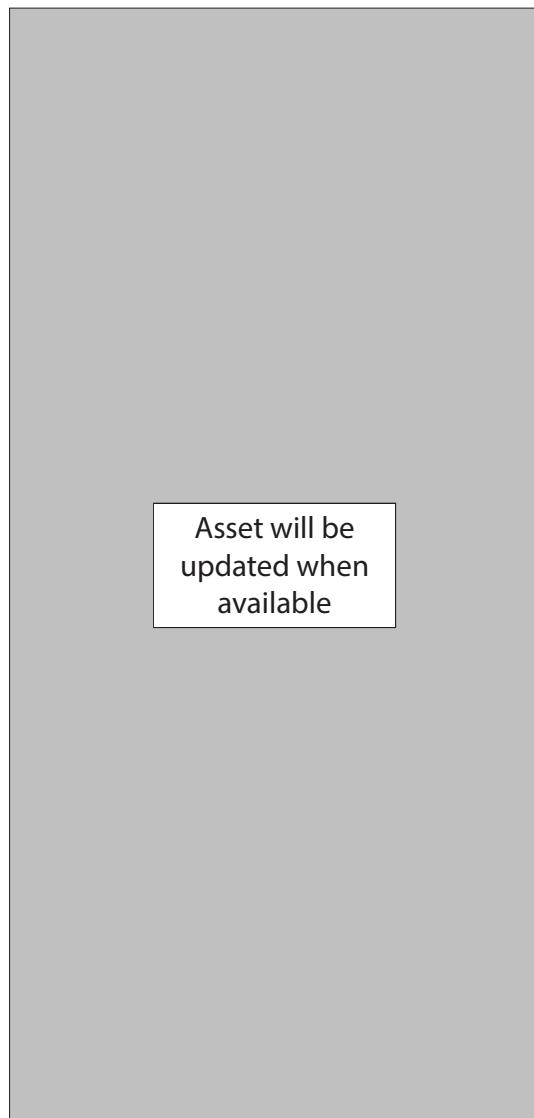






## Enter text

Text can be entered using a keyboard or your voice.




## Toolbar

The toolbar provides quick access to features of the keyboard. Options may vary by carrier.

- From the Samsung keyboard, tap **Expand toolbar** for the following options:
  -  **Emojis:** Insert an emoji.
  -  **Stickers:** Add illustrated stickers.
  -  **GIFs:** Add animated GIFs.
  -  **Voice input:** Use Google Voice™ typing.
  -  **Settings:** Access keyboard settings.
  -  **Search:** Locate specific words or phrases in your conversations.
  -  **Translate:** Type words or sentences in the keyboard to translate them into another language.
  -  **Clipboard:** Access the clipboard.
  -  **Text editing:** Use an editing panel to help pinpoint text that you want to cut, copy, and paste.
  -  **Modes:** Select a keyboard layout.
  -  **Keyboard size:** Adjust the height and width of the keyboard.

## Configure the Samsung keyboard

Set customized options for the Samsung keyboard.

- From the Samsung keyboard, tap  **Settings** for the following options:
  - **Languages and types:** Set the keyboard type and choose which languages are available on the keyboard.
    - To switch between languages, swipe the Space bar left or right.

## Smart typing

- **Predictive text:** As you type see suggested words and phrases.
- **Suggest emojis:** Include emojis when using predictive text.
- **Auto replace:** Automatically replace what you type with predictive text recommendations.
- **Auto spell check:** Underline misspelled words in red and suggest corrections.
- **More typing options:** Customize additional typing options.

## Style and layout

- **Keyboard toolbar:** View or hide the keyboard toolbar.
- **High contrast keyboard:** Adjust the size of the Samsung keyboard and change its colors to increase the contrast between the keys and the background.
- **Theme:** Choose a theme for your keyboard.
- **Mode:** Choose between portrait and landscape mode.
- **Size and transparency:** Adjust the size and transparency of the keyboard.
- **Layout:** Display numbers and special characters on the keyboard.
- **Font size:** Drag the slider to adjust the font size.

## Other settings

 
- **Swipe, touch, and feedback:** Customize gestures and feedback.
- **S Pen to text:** Use the S Pen to write in search fields, address bars, and other text areas. Your handwriting is converted to text, and you can edit the converted text with the S Pen.
- **Select third-party content to use:** Enable third-party keyboard features.
- **Reset to default settings:** Return keyboard to original settings and clear personalized data.
- **About Samsung keyboard:** View version and legal information for the Samsung keyboard.
- **Contact us:** Contact Samsung support through Samsung Members.



## Use Google Voice typing



Instead of typing, enter text by speaking.

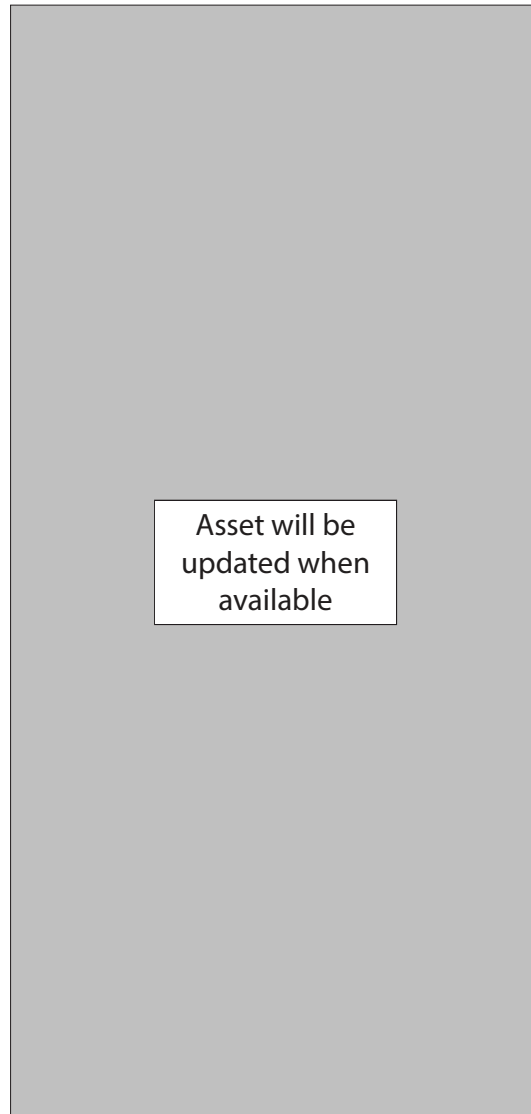- From the Samsung keyboard, tap  **Voice input** and speak your text.



## Configure Google Voice typing

 
Set customized options for Google Voice typing.

1. From the Samsung keyboard, tap  **Voice input**.
2. Tap  **Settings** for options.
  - **Block offensive words:** Hide potentially offensive words with asterisks.
  - **Languages:** Choose the language for the keyboard.
  - **Primary language:** Choose a primary language if more than one language is selected.

# Camera and Gallery

---

You can capture high-quality pictures and videos using the Camera app. Images and videos are stored in the Gallery, where you can view and edit them.

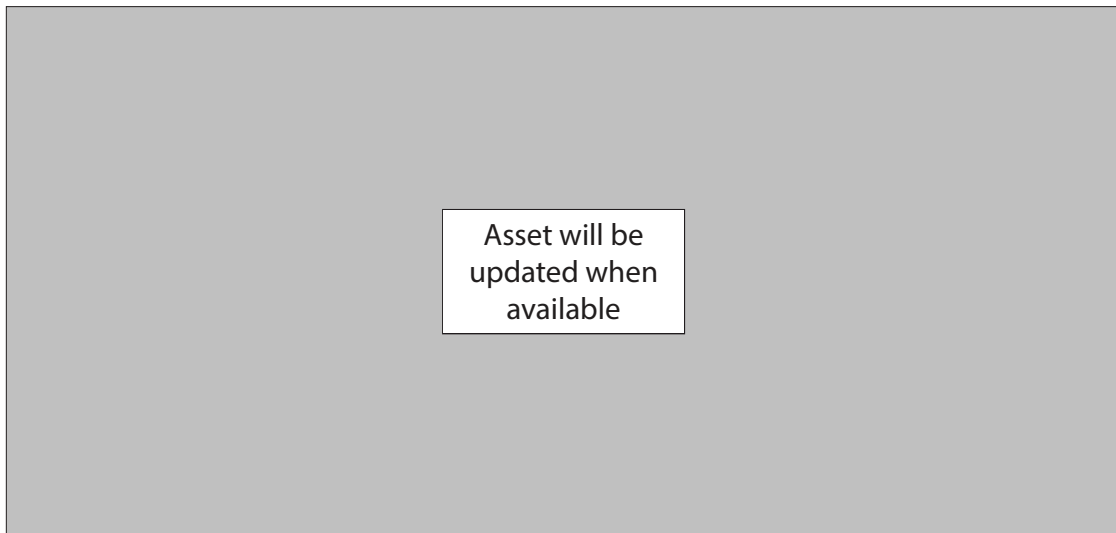

## Camera


[Navigate the camera screen](#) | [Configure shooting mode](#) | [Record videos](#) | [Camera settings](#)

## Gallery

 
[View pictures](#) | [Edit pictures](#) | [Play video](#) | [Edit video](#) | [Share pictures and videos](#) | [Delete pictures and videos](#) | [Take a screenshot](#)

# Camera

You can capture high-quality pictures and videos using the Camera app.




- From Apps, tap  **Camera**.

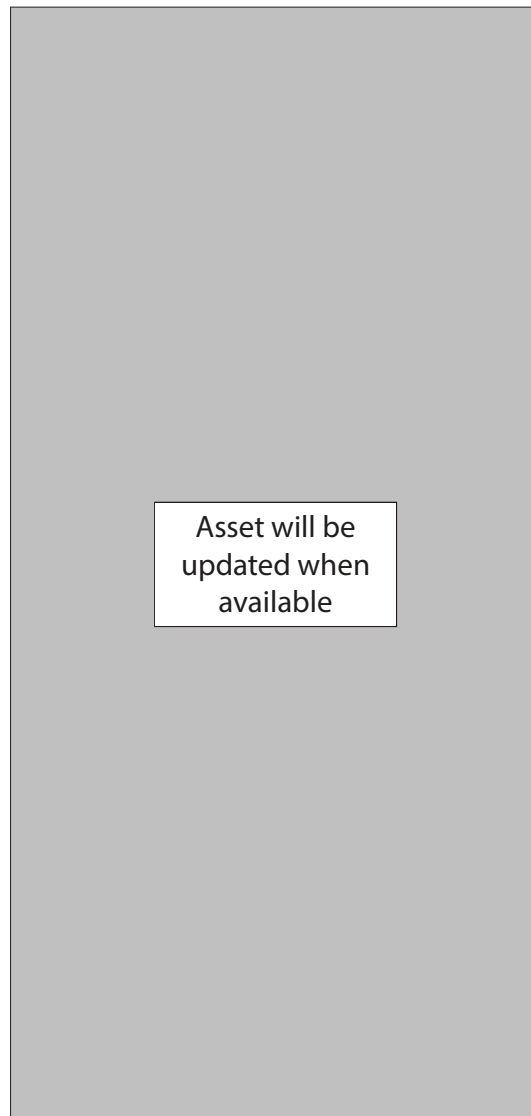 **TIP** Quickly press the **Side** key twice to open the Camera app.





## Navigate the camera screen

Take stunning pictures with your device's front and rear cameras.

1. From  **Camera**, set up your shot with the following features:
  - Tap the screen where you want the camera to focus.
    - When you tap the screen, a brightness scale appears. Drag the slider to adjust the brightness.
  - To quickly switch between the front and rear cameras, swipe the screen up or down.
  - To change to a different shooting mode, swipe the screen right or left.
  - To change camera settings, tap  **Settings**.
2. Tap  **Capture**.

## Configure shooting mode







Allow the camera to determine the ideal mode for your pictures or choose from several shooting modes.

- From  **Camera**, swipe the screen right and left to change shooting modes.
  - **Live focus:** Adjust the level of background blur in your photos so the subject stands out.
  - **Photo:** Allow the camera to determine the ideal settings for pictures.
  - **Video:** Allow the camera to determine the ideal settings for videos.
  - **More:** Choose other available shooting modes. Tap  **Add** to drag modes into or out of the shooting modes tray at the bottom of the Camera screen.
    - **Deco Pic:** Decorate photos or videos in real time with the camera.
    - **Pro:** Manually adjust the ISO sensitivity, exposure value, white balance, and color tone while taking pictures.
    - **Panorama:** Create a linear image by taking pictures in either a horizontal or vertical direction.
    - **Food:** Take pictures that emphasize the vivid colors of food.
    - **Macro:** Capture close-up images of objects from 3-5 cm away.

- **Hyperlapse:** Create a time lapse video by recording at various frame rates. The frame rate is adjusted depending on the scene being recorded and the movement of the device.

## Record videos

Record smooth lifelike videos using your device.

1. From  **Camera**, swipe right or left to change the shooting mode to **Video**.
2. Tap  **Record** to begin recording a video.
  - To take a picture while recording, tap  **Capture**.
  - To temporarily stop recording, tap  **Pause**. To continue recording, tap  **Resume**.
3. Tap  **Stop** when you are finished recording.

## Camera settings

Use the icons on the main camera screen and the settings menu to configure your camera's settings.

- From  **Camera**, tap  **Settings** for the following options:

### Intelligent features

- **Scan QR codes:** Automatically detect QR codes when using the camera.

### Pictures

- **Swipe Shutter button to edge to:** Choose to either take a burst shot or create a GIF when you swipe the shutter to the nearest edge.

### Selfies


- **Use wide angle for group selfies:** Automatically switch to wide-angle when there are two or more people in the selfie.
- **Save selfies as previewed:** Save selfies as they appear in the preview without flipping them.

 
## Useful features

- **Auto HDR:** Capture more detail in the bright and dark areas of your shots.
- **Grid lines:** Display viewfinder grid lines to help compose a picture or video.
- **Location tags:** Attach a GPS location tag to your pictures and videos.
- **Shooting methods:**
  - **Press Volume keys to:** Use the Volume keys to take pictures, record video, zoom, or control system volume.
  - **Floating shutter button:** Add an extra shutter button that you can move anywhere on the screen.
  - **Show palm:** Hold your hand out with your palm facing the camera to have your picture taken in a few seconds.
- **Settings to keep:** Choose whether to launch Camera with the same shooting mode, selfie angle, and filters as the last time.
- **Storage location:** Select a memory location.
  - A memory card (not included) must be installed to view Storage location.
- **Watermark:** Add a watermark to the bottom left corner of your pictures.
- **Shutter sound:** Play a tone when taking a picture.
- **Reset settings:** Reset the Camera settings.
- **Contact us:** Contact Samsung support through Samsung Members.
- **About Camera:** View app and software information.

# Gallery

Go to the Gallery to look at the all the visual media stored on your device. You can view, edit, and manage pictures and videos.

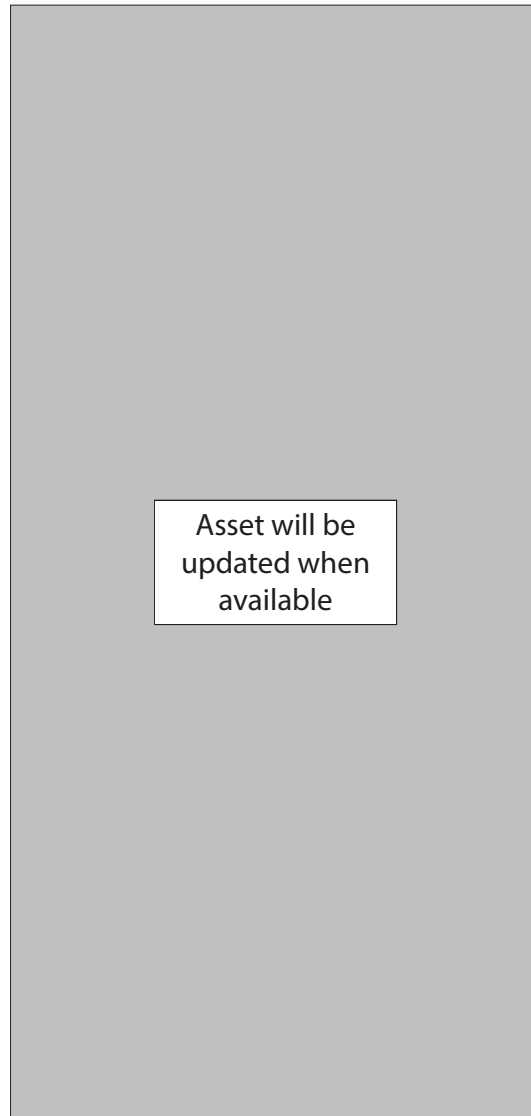


- From Apps, tap  **Gallery**.













## View pictures

Pictures stored on your device are viewable in the Gallery app.

1. From  **Gallery**, tap **Pictures**.
2. Tap a picture to view it. Swipe left or right to view other pictures or videos.
  - To mark the picture as a favorite, tap  **Add to Favorites**.
  - To access the following features, tap  **More**:
    - **Details**: View and edit information about the picture.
    - **Set as wallpaper**: Set the picture as wallpaper.
    - **Copy to clipboard**: Copy the image to paste in another app.
    - **Print**: Send the picture to a connected printer.





## Edit pictures

Enhance your pictures using the Gallery's editing tools.

1. From  **Gallery**, tap **Pictures**.
2. Tap a picture to view it, and then tap  **Edit** for the following options:
  -  **Transform**: Rotate, flip, crop, or make other changes to the overall appearance of the picture.
  -  **Filters**: Add color effects.
  -  **Tone**: Adjust the brightness, exposure, contrast, and more.
  -  **Stickers**: Overlay illustrated or animated stickers.
  -  **Draw**: Add handwritten text or hand drawn content.
  -  **Text**: Add text to the picture.
  - **Revert**: Undo the changes applied to restore the original picture.
3. Tap **Save** when finished.



## Play video

View the videos stored on your device. You can save videos as favorites, and view video details.

1. From  **Gallery**, tap **Pictures**.
2. Tap a video to view it. Swipe left or right to view other pictures or videos.
  - To mark the video as a favorite, tap  **Add to Favorites**. The video is added to Favorites under the Albums tab.
  - To access the following features, tap  **More**:
    - **Details**: View and edit information about the video.
    - **Set as wallpaper**: Set the video as wallpaper on the Lock screen.
3. Tap  **Play video** to play the video.




## Edit video

Edit videos stored on your device.

1. From  **Gallery**, tap **Pictures**.
2. Tap a video to view it.
3. Tap  **Edit** to cut segments of the video.
4. Tap **Save**, and then confirm when prompted.




## Share pictures and videos

Share pictures and videos from the Gallery app.

1. From  **Gallery**, tap **Pictures**.
2. Tap  **More options** > **Edit** and select the pictures or videos you want to share.
3. Tap  **Share**, and then choose an app or connection to use for sharing your selection. Follow the prompts.

## Delete pictures and videos

Delete pictures and videos stored on your device.

1. From  **Gallery**, tap  **More options** > **Edit**.
2. Tap pictures and videos to select them.
3. Tap  **Delete**, and confirm when prompted.


## Take a screenshot

Capture an image of your screen. Your device will automatically create a Screenshots album in the Gallery app.

- From any screen, press and release the **Side** and **Volume down** keys.

## Screenshot settings

Modify screenshot settings.

- From Settings, tap  **Advanced features** > **Screenshots**.
  - **Screenshot toolbar**: Show additional options after you take a screenshot.
  - **Hide status and navigation bars**: Do not display the status bar or navigation bars on screenshots.
  - **Delete shared screenshots**: Automatically delete screenshots after they are shared through the screenshot toolbar.
  - **Screenshot format**: Choose if you would like your screenshots to be saved as JPG or PNG files.

# Apps

---

Using apps

Samsung apps

Google apps

Microsoft apps

Asset will be  
updated when  
available

# Using apps

[Uninstall or disable apps](#) | [Search for apps](#) | [Sort apps](#) | [Create and use folders](#) | [App settings](#)

The Apps list displays all preloaded and downloaded apps. Apps can be downloaded from Galaxy Store and the Google Play™ store.

- From a Home screen, swipe the screen upward to access the Apps list.

## Uninstall or disable apps

Installed apps can be removed from your device. Some apps that are preloaded (available on your device by default) can only be disabled. Disabled apps are turned off and hidden from the Apps list.

- From Apps, touch and hold an app, and tap **Uninstall/Disable**.

## Search for apps

If you are not sure where to find an app or a setting, you can use the Search feature.

1. From Apps, tap **Search**, and enter a word or words. As you type, matching apps and settings appear as results on the screen.
2. Tap a result to go to that app.



**TIP** You can customize the search settings by tapping **More options** > **Settings**.

## Sort apps

App shortcuts can be listed alphabetically or in your own custom order.

 


- From Apps, tap **More options** > **Sort** for the following sorting options:
  - **Custom order:** Arrange apps manually.
  - **Alphabetical order:** Sort apps alphabetically.



**TIP** When apps are arranged manually (Custom order), empty icon spaces can be removed by tapping **More options** > **Clean up pages**.

## Create and use folders

You can make folders to organize App shortcuts on the Apps list.

1. From Apps, touch and hold an app shortcut, and then drag it on top of another app shortcut until it is highlighted.
2. Release the app shortcut to create the folder.
  - **Folder name:** Name the folder.
  -  **Palette:** Change the folder color.
  -  **Add apps:** Place more apps in the folder. Tap apps to select them, and then tap **Done**.
3. Tap  **Back** to close the folder.


## Copy a folder to a Home screen

You can copy a folder to a Home screen.

- From Apps, touch and hold a folder, and tap  **Add to Home**.


## Delete a folder

When you delete a folder, the app shortcuts return to the Apps list.

1. From Apps, touch and hold a folder to delete.
2. Tap  **Delete folder**, and confirm when prompted.

## App settings

Manage your downloaded and preloaded apps.

- From Settings, tap  **Apps**. Tap an option to customize:
  - **Choose default apps:** Choose which apps to use for making calls, sending messages, going to websites, and more.
  - **Samsung app settings:** View a list of Samsung apps and customize their settings.
  - **Your apps:** Tap an app to view and update information about its privacy and usage settings. Options vary by app.



**TIP** To reset app options that have been changed, tap **More options > Reset app preferences**.

## Samsung apps

The following apps may be preloaded or downloaded over-the-air to your device during setup. Apps can be downloaded from Galaxy Store and the Google Play™ store. Options may vary by carrier.

[Galaxy Essentials](#) | [Galaxy Store](#) | [PENUP](#) | [Samsung Flow](#) | [Calculator](#) | [Calendar](#) | [Clock](#) | [Contacts](#) | [Internet](#) | [Messages](#) | [My Files](#) | [Samsung Notes](#)

### Galaxy Essentials

Galaxy Essentials is a collection of specially chosen applications available through Samsung apps. You can access and download a collection of premium content.

- From Apps, tap **More options > Galaxy Essentials**.



 
### Galaxy Store

Find and download premium apps that are exclusive to Galaxy devices. A Samsung account is required to download from Galaxy Store.



## Calculator

The Calculator app features both basic and scientific math functions, as well as a unit converter.

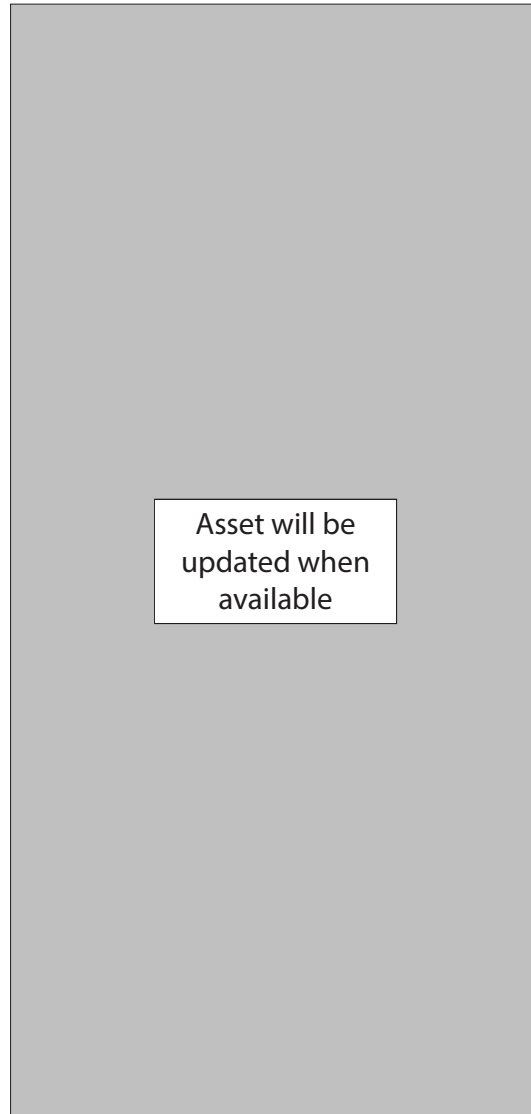 








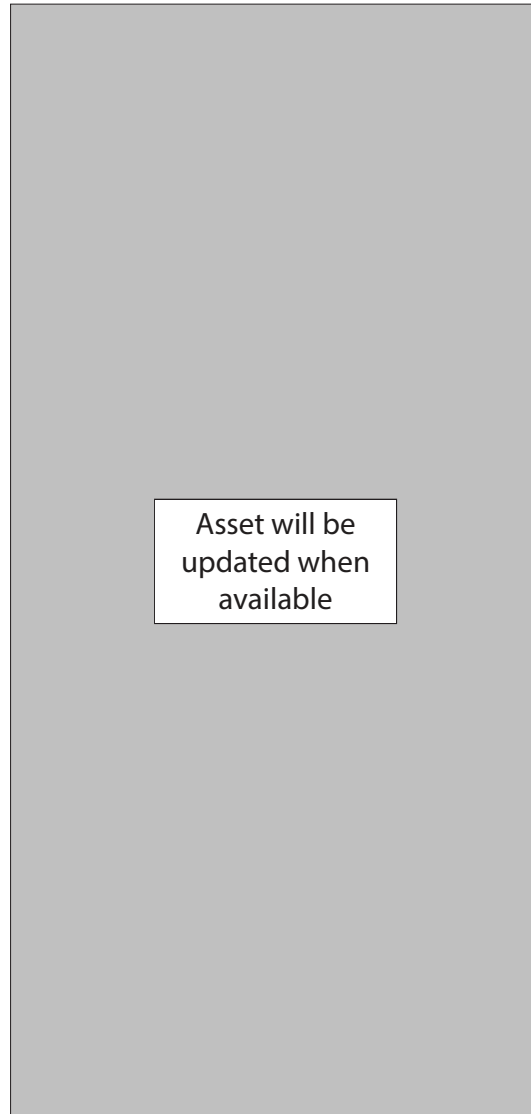

## Calendar

The Calendar app can be connected to your various online accounts to consolidate all your calendars in one place.



## Add calendars

Add your accounts to the Calendar app.




1. From  **Calendar**, tap  **Navigation drawer** >  **Calendar settings**.
2. Tap **Manage calendars** >  **Add account** and select an account type.
3. Enter your account information and follow the prompts.



**TIP** Accounts may also support email, contacts, and other features.



## Calendar alert style

Alerts from the Calendar app can be set to different styles.

1. From  **Calendar**, tap  **Navigation drawer** >  **Calendar settings** > **Alert style**.  
The following options are available:
  - **Light:** Receive a notification and hear a short sound.
  - **Medium:** Get a full screen alert and hear a short sound.
  - **Strong:** Get a full-screen alert and ring sound that persist until dismissed.
2. Depending on the alert style selected above, the following sound options are available:
  - **Short sound:** Choose the alert sound for Light or Medium alert styles.
  - **Long sound:** Choose the alert sound for the Strong alert style.



## Create an event

Use your Calendar to create events.

1. From  **Calendar**, tap  **Add event** to add an event.
2. Enter details for the event, and then tap **Save**.

 
## Delete an event

Delete events from your Calendar.

1. From  **Calendar**, tap an event, and tap again to edit it.
2. Tap  **Delete**, and confirm when prompted.



## Clock

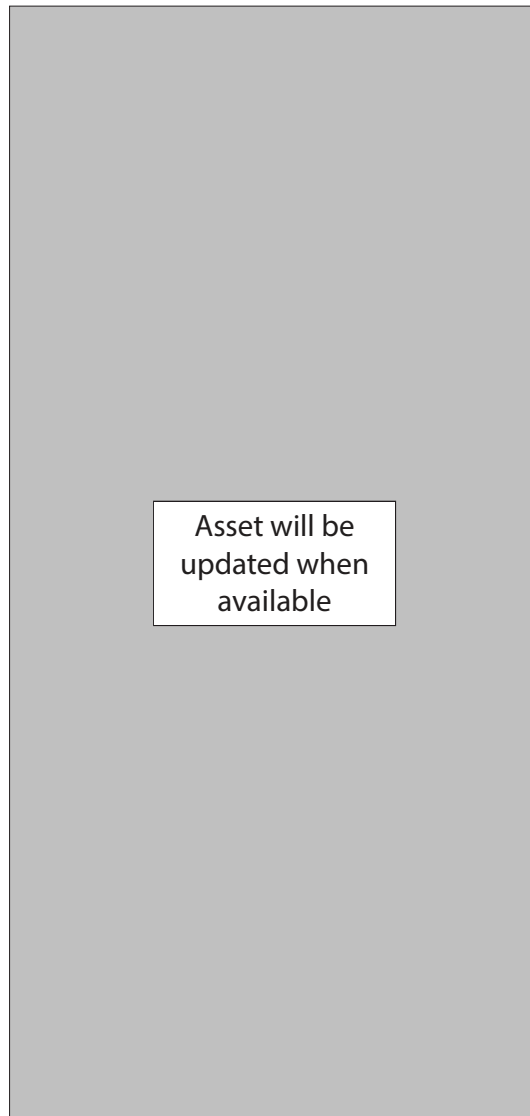The Clock app offers features for keeping track of time and setting alarms.



## Alarm

Use the Alarm tab to set one-time or recurring alarms and choose options for how to be notified.



1. From  **Clock**, tap  **Add alarm**.
2. Tap the following items to configure an alarm:
  - **Time:** Set a time for the alarm.
  - **Day:** Choose the days for this alarm.
  - **Alarm name:** Enter a name for the alarm.
  - **Alarm sound:** Choose a sound to play for the alarm and drag the slider to set the volume of the alarm.
  - **Vibration:** Choose whether the alarm uses vibration alert.
  - **Snooze:** Allow snoozing. Set interval and repeat values for the alarm while snoozing.
3. Tap **Save** to save the alarm.



**TIP** To add your sleep schedule, create a bedtime reminder, and automatically put your device in Bedtime mode, tap  **More options** > **Set bedtime**.

## Delete an alarm

You can delete an alarm that you created.

1. From  **Clock**, touch and hold an alarm.
2. Tap  **Delete**.

 
## Alert settings




You can set the device to vibrate for alarms and timers whether the Sound mode is set to Mute or Vibrate.

1. From  **Clock**, tap  **More options** > **Settings**.
2. Tap **Vibrate for alarms and timers** to enable the feature.

## World clock

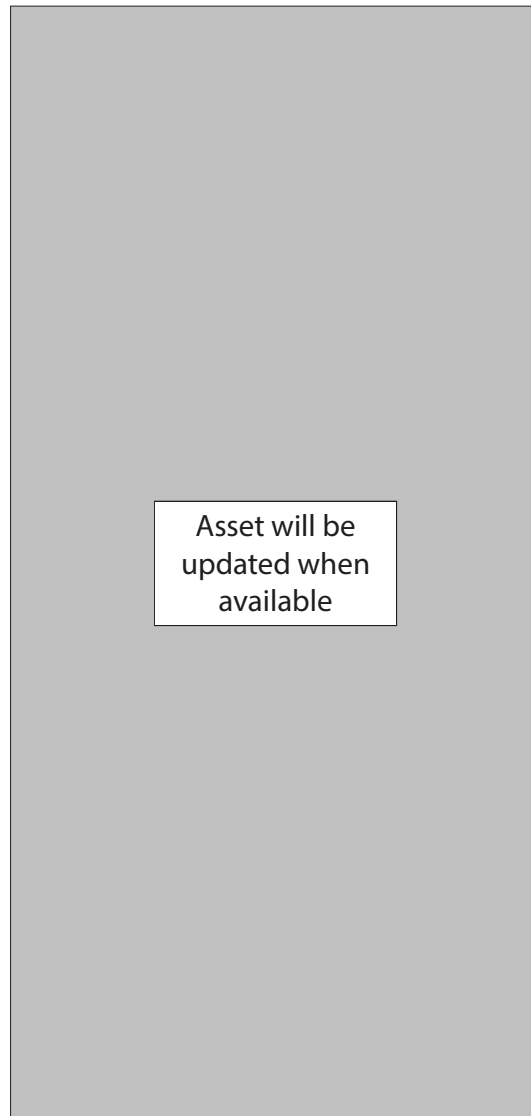



The World clock lets you keep track of the current time in multiple cities around the globe.



1. From  **Clock**, tap **World clock**.
2. Tap  **Add city**.
3. Drag the globe to spin it, tap the city you want, and then tap **Add**.
  - To remove a city, touch and hold it, and tap  **Delete**.



## Time zone converter

Set a time in a city on your World clock list to see what the local times would be in the other listed cities.

1. From  **Clock**, tap **World clock**.
2. Tap  **More options** > **Time zone converter**.
3. Tap  **Menu** to choose a different city.
  - To add a city to the list, tap  **Add city**.
4. Swipe the hours, minutes, and period (**AM** or **PM**) on the clock to set a time. Local times for the other cities listed are automatically updated.
  - To return the clock to the current time, tap **Reset**.


## Weather settings

Show weather information on your World clock.

1. From  **Clock**, tap **World clock**.
2. Tap  **More options** > **Settings** > **Show weather** to enable or disable weather information.
3. Tap **Temperature** to change from Fahrenheit to Celsius.


## Stopwatch

The Stopwatch lets you time events down to a hundredth of a second.

1. From  **Clock**, tap **Stopwatch**.
2. Tap **Start** to begin timing.
  - To keep track of lap times, tap **Lap**.
3. Tap **Stop** to end timing.
  - To continue timing after stopping the clock, tap **Resume**.
  - To reset the Stopwatch to zero, tap **Reset**.




## Timer

Set a countdown timer for up to 99 hours, 59 minutes, and 59 seconds.

1. From  **Clock**, tap **Timer**.
2. Use the keypad and tap **Hours**, **Minutes**, and **Seconds** to set the Timer.
3. Tap **Start** to begin the Timer.
  - To temporarily stop the Timer, tap **Pause**. To continue, tap **Resume**.
  - To stop and reset the Timer, tap **Cancel**.



## Preset timer

Name and save preset timers.

1. From  **Clock**, tap **Timer** >  **Add preset timer**.
2. Configure the countdown time and timer name.
3. Tap **Add** to save the timer.
  - To edit a saved preset timer, tap  **More options** > **Edit preset timers**.



## Timer options

You can customize the Timer options.

1. From  **Clock**, tap **Timer**.
2. Tap  **More options** > **Settings**.
  - **Sound**: Choose a preloaded timer sound or add your own.
  - **Vibration**: Enable vibration for the timer.

 
## General settings

View and configure settings for all Clock tools.

- From  **Clock**, tap  **More options** > **Settings**.
  - **Customization Service**: Sign in to your Samsung account to customize personal content in supported apps.
  - **About Clock**: View the current software version and check for updates.

## Contacts

Store and manage your contacts. You can synchronize with personal accounts added to your device. Accounts may also support email, calendars, and other features.

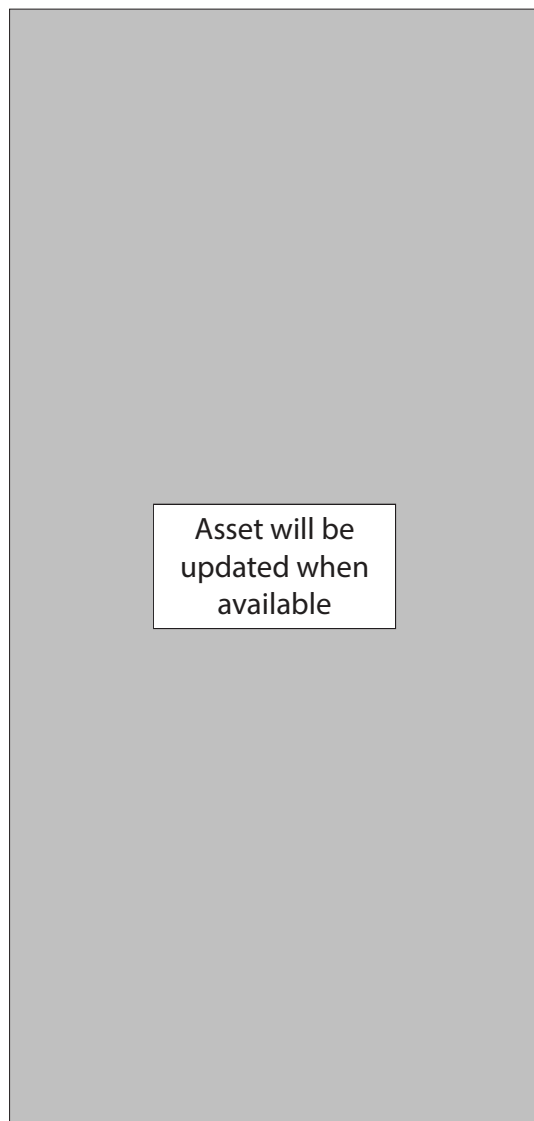





## Create a contact

1. From  **Contacts**, tap  **Create contact**.
2. Enter details for the contact, and then tap **Save**.




## Edit a contact

When editing a contact, you can tap a field and change or delete information, or you can add more fields to the contact's list of information.

1. From  **Contacts**, tap a contact.
2. Tap  **Edit**.
3. Tap any of the fields to add, change, or delete information.
4. Tap **Save**.



## Favorites

When you mark contacts as favorites, they are grouped at the top of your contact list and easily accessible from other apps.


1. From  **Contacts**, tap a contact.
2. Tap  **Favorites** to mark the contact as a favorite.
  - To remove the contact from Favorites, tap  **Favorites**.

## Share a contact

Share a contact with others by using various sharing methods and services.

1. From  **Contacts**, tap a contact.
2. Tap  **Share**.
3. Tap either **File** or **Text**.
4. Choose a sharing method and follow the prompts.



**TIP** When viewing a contact, tap  **More** > **QR code** to quickly share the information with friends or family. The QR code automatically updates when you change the contact information fields.

## Show contacts when sharing content

Share content directly with your contacts from within any app. Once enabled, your frequent contacts are displayed in the Share window.



- From Settings, tap  **Advanced features** > **Show contacts when sharing content**, and tap  to enable the feature.

## Groups

You can use groups to organize your contacts.





### Create a group

Create your own contact groups.

1. From  **Contacts**, tap  **Open drawer** > **Groups**.
2. Tap **Create group**, and then tap fields to enter information about the group:
  - **Group name:** Enter a name for the new group.
  - **Add member:** Select contacts to add to the new group, and then tap **Done**.
3. Tap **Save**.

### Add or remove group contacts

Add more contacts to a group, or remove contacts.

- From  **Contacts**, tap  **Open drawer** > **Groups**, and then tap a group.
  - To remove a contact, touch and hold a contact to select it, and then tap  **Remove**.
  - To add a contact, tap  **Edit** > **Add member**, and then tap the contacts you want to add. When finished, tap **Done** > **Save**.




### Send a message to a group

Send a text message to members of a group.

1. From  **Contacts**, tap  **Open drawer** > **Groups**, and then tap a group.
2. Tap  **More options** > **Send message**.




## Send an email to a group

Send an email to members of a group.

1. From  **Contacts**, tap  **Open drawer > Groups**, and then tap a group.
2. Tap  **More options > Send email**.
3. Tap contacts to select them, or tap the **All** checkbox at the top of the screen to select all, and then tap **Done**.
  - Only group members that have an email address in their records are displayed.
4. Choose an email account and follow the prompts.

## Delete a group

Delete a group you have created.



1. From  **Contacts**, tap  **Open drawer > Groups**, and then tap a group.
2. Tap  **More options > Delete**.
  - To only delete the group, tap **Group only**.
  - To delete the group and the contacts in the group, tap **Group and members**.

## Manage contacts

You can import or export contacts, as well as link multiple contacts into one contact entry.



## Import contacts

Import contacts to your device as vCard files (VCF).

1. From  **Contacts**, tap  **Open drawer > Manage contacts**.
2. Tap **Import or export contacts**.
3. Tap **Import** and follow the prompts.



## Export contacts

Export contacts from your device as vCard files (VCF).

1. From  **Contacts** tap  **Open drawer** > **Manage contacts**.
2. Tap **Import or export contacts**.
3. Tap **Export** and follow the prompts.



## Merge contacts

Consolidate contact information from multiple sources into one contact by linking entries into a single contact.

1. From  **Contacts**, tap  **Open drawer** > **Manage contacts**.
2. Tap **Merge contacts**. Contacts with duplicate phone numbers, email addresses, and names will be listed together.
3. Tap the contacts to select them, and tap **Merge**.

## Delete contacts

 
Delete a single contact or multiple contacts.

1. From  **Contacts**, touch and hold a contact to select it.
  - You can also tap other contacts to select them for deletion.
2. Tap  **Delete**, and confirm when prompted.



# Internet

Samsung Internet is a simple, fast, and reliable web browser for your device. Experience more secure Web browsing features with Secret Mode, Biometric Web Login, and Contents Blocker.

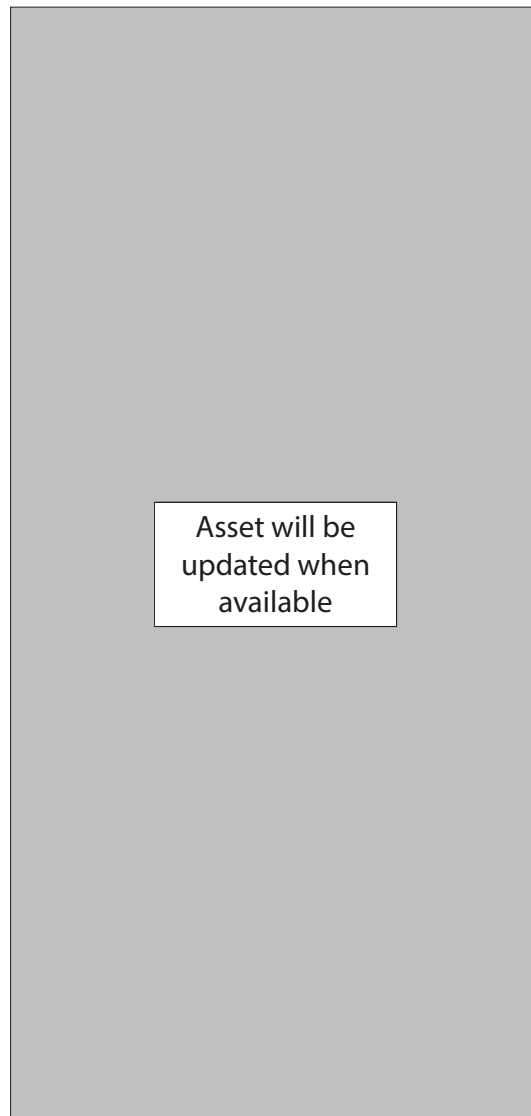

**TIP** Visit [samsung.com/us/support/owners/app/samsung-internet](https://samsung.com/us/support/owners/app/samsung-internet) for more information.

## Browser tabs

Use tabs to view multiple web pages at the same time.

- From  **Internet**, tap  **Tabs > New tab**.
  - To close a tab, tap  **Tabs >  Close tab**.



## Create a Bookmark

Bookmark your favorite webpages to quickly access them.

- From  **Internet**, tap  **Add to bookmarks** to save the open webpage.



## Open a Bookmark

Quickly launch a web page from the Bookmarks page.

1. From  **Internet**, tap  **Bookmarks**.
2. Tap a bookmark entry.

## Save a web page

There are several options to save a webpage in the Samsung Internet app.


- From  **Internet**, tap  **Tools > Add page to** for the following options:
  - **Bookmarks:** Add the webpage to your Bookmark list.
  - **Quick access:** View a list of commonly accessed or saved webpages.
  - **Home screen:** Create a shortcut to the webpage on your Home screen.
  - **Saved pages:** Save the webpage content on your device so that you can access it offline.

## View history

To view a list of recently visited web pages:

- From  **Internet**, tap  **Tools > History**.



**TIP** To clear your browsing history, tap  **More options > Clear history**.

## Share pages

Web pages can be shared with your contacts.

- From  **Internet**, tap  **Tools > Share**, and follow the prompts.

## Secret mode




Pages viewed in secret mode are not listed in your browser history or search history, and leave no traces (such as cookies) on your device. Secret tabs are a darker shade than the normal tab windows.

Any downloaded files remain on your device after you close the secret tab.

1. From  **Internet**, tap  **Tabs > Turn on secret mode**.
2. Tap **Start** to begin browsing in secret mode.

## Secret mode settings

Require a password or biometric lock to use secret mode.

1. From  **Internet**, tap  **Tabs**.
2. Tap  **More options > Secret mode settings** for the following options:
  - **Use password:** Create a password to enable secret mode.
  - **Face:** Use Face recognition to keep Secret mode private.
  - **Fingerprints:** Use Fingerprint scanner to keep Secret mode private.
  - **Reset Secret mode:** Erase your secret mode data and restore defaults.

## Turn off secret mode

Disable secret mode and return to normal browsing.

- From  **Internet**, tap  **Tabs > Turn off secret mode**.

## Internet settings

 
Modify settings associated with using the Internet app.

- From  **Internet**, tap  **Tools > Settings**.

## Messages




Keep in touch with your contacts by using the Messages app to share photos, send emojis, or just say a quick hello. Options may vary by carrier.

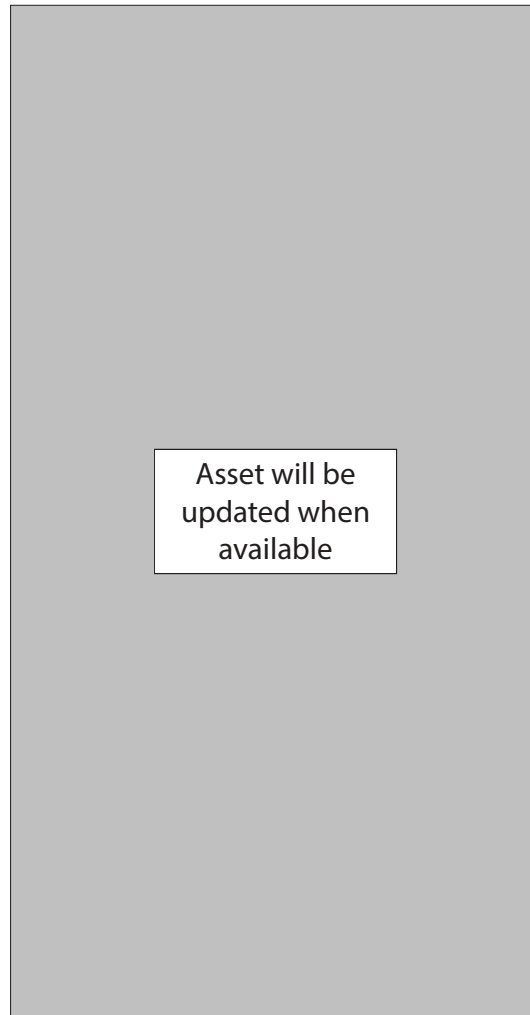- From  **Messages**, tap  **Compose new message**.



## Message search




To quickly locate a message, use the search feature.

1. From  **Messages**, tap  **Search**.
2. Enter keywords in the **Search** field, and then tap  **Search** on the keyboard.



## Delete conversations

You can remove your conversation history by deleting conversations.

1. From  **Messages**, tap  **More options** > **Delete**.
2. Tap each conversation you want to delete.
3. Tap  **Delete all**, and confirm when prompted.



## Emergency alerts

Emergency alerts notify you of imminent threats and other situations. There is no charge for receiving an Emergency alert message.

1. From Settings, tap  **Notifications** > **Advanced settings**.
2. Tap **Wireless Emergency Alerts** to customize notifications for emergency alerts.

## Send SOS messages

Send a message with your location to designated contacts when you are in an emergency situation.

1. From Settings, tap  **Advanced features** > **Send SOS messages**, and then tap  to enable this feature.
  - To choose the number of times to press the **Side** key to send an SOS message, tap either **3 times** or **4 times**.
  - To choose a contact to automatically call after you send an SOS message, tap **Auto call someone**.
  - To include a picture from your front and rear cameras, tap **Attach pictures**.
  - To include a five-second audio recording in your SOS message, tap **Attach audio recording**.
  - To add recipients by creating new contacts or selecting from Contacts, tap **Send messages to**.
2. Press the **Side** key quickly three or four times to send an SOS message.

 
## Message settings

Configure the settings for text and multimedia messages.

- From  Messages, tap  More options > Settings.

## My Files

View and manage files stored on your device, including images, videos, music, and sound clips. You can also access and manage files saved to your cloud accounts and SD card, if supported.

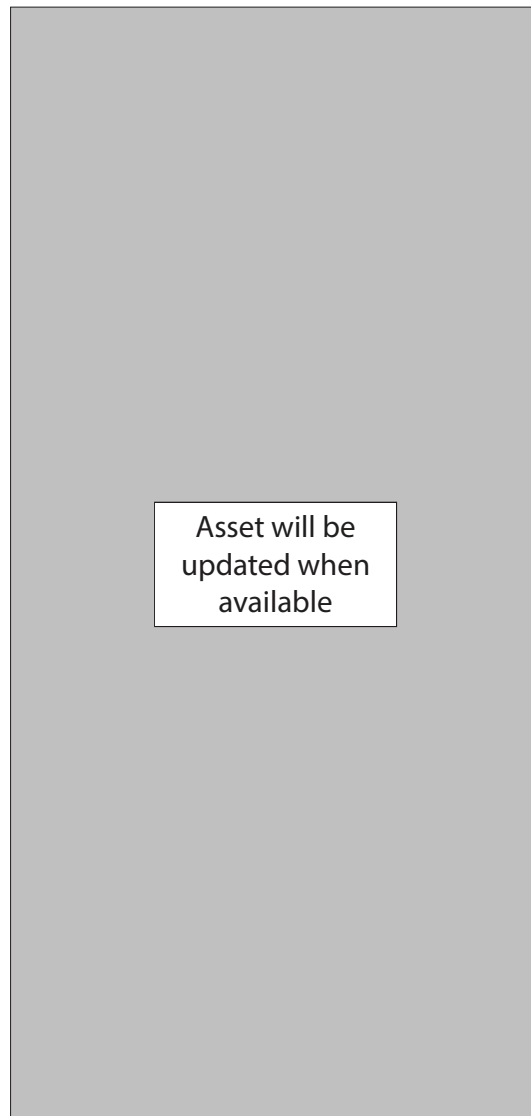




## File groups

Files stored in the device are organized into the following groups:

- **Recent files:** View recently accessed files.
- **Categories:** View your files based on the file type.
- **Storage:** View files saved on your device, optional SD card, and cloud accounts.
  - Cloud accounts vary depending on the services you sign in to.
- **Analyze storage:** See what's taking up space in your storage.

## My Files options

 
Use My Files options to search, edit, clear file history, and more. Options may vary by carrier.

- From  **My Files**, the following options are available:
  -  **Search:** Search for a file or folder.
  -  **More options:**
    - **Cloud service:** Connect to a carrier cloud service if available.
    - **Analyze storage:** See what's taking up space in your storage.
    - **Trash:** Choose to restore or permanently remove files that you delete.
    - **Settings:** View settings for the app.
    - **Contact us:** Get connected with Samsung Members.

## Samsung Notes



Use Samsung Notes to create notes containing text, images with footnotes, voice recordings, and music. You can share your notes easily using social networking services.

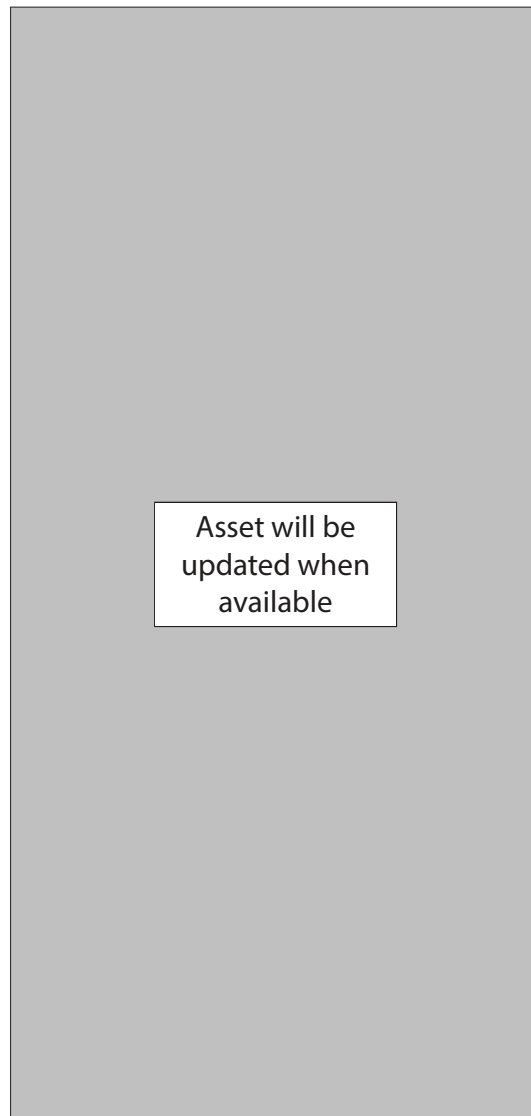Visit [samsung.com/us/support/owners/app/samsung-notes](https://samsung.com/us/support/owners/app/samsung-notes) to learn more.






## Create notes

Add text, images, voice recordings and more.

1. From  **Samsung Notes**, tap  **Add**.
2. Use the text options to create content.




## Voice recordings

Create annotated voice recordings perfect for lectures or meetings. Take notes while recording audio. Playback is synced to scroll to the corresponding text.

1. From  **Samsung Notes**, tap  **Add**.
2. Tap  **Insert** > **Voice recording**.
3. Use the text options to create content while audio is being recorded.





## Edit notes

Make edits to notes you create.

1. From  **Samsung Notes**, tap a note to view it.
2. Tap  **Edit** and make changes.
3. When you are finished, tap  **Navigate up**.




## Notes options

You can edit, sort, or manage notes.

- From  **Samsung Notes**, the following options are available:
  -  **Import PDFs**: Open a PDF in Samsung Notes.
  -  **Search**: Search for a keyword.
  -  **More options**:
    - **Edit**: Select notes to share, delete, save as file, lock, or move.
    - **Sort**: Change the way notes are organized.
    - **View**: Switch between Grid, List, or Simple list.

## Notes menu

You can view your notes by category.

- From  **Samsung Notes**, tap  **Navigation drawer** for the following options:
  -  **Settings**: View settings for the Samsung Notes app.
  - **All notes**: View all notes.
  - **Frequently used**: Quick access to commonly used notes.
  - **Shared notebooks**: View notebooks shared with your contacts through your Samsung account.
  - **Trash**: View deleted notes for up to 15 days.
  - **Folders**: View notes by groups.
  - **Manage folders**: Add, remove, and organize groups.

# Google apps

The following Google apps may be preloaded on your device. Apps can be downloaded from the Google Play™ store.

[Chrome](#) | [Drive](#) | [Duo](#) | [Gmail](#) | [Google](#) | [Maps](#) | [Photos](#) | [Google Play Movies & TV](#) | [Play Store](#) | [YouTube](#) | [YT Music](#)



Browse the Internet with Chrome™ and bring your open tabs, bookmarks, and address bar data from your computer to your mobile device.

Visit [support.google.com/chrome](https://support.google.com/chrome) to learn more.



Open, view, rename, and share files saved to your Google Drive™ cloud account.

Visit [support.google.com/drive](https://support.google.com/drive) to learn more.



Make video calls.

Visit [support.google.com/duo](https://support.google.com/duo) to learn more.



Send and receive email with Google's web-based email service.

Visit [support.google.com/mail](https://support.google.com/mail) to learn more.





Find online content with tools that learn what interests you. Turn on your personalized feed to receive customized content.

Visit [support.google.com/websearch](https://support.google.com/websearch) to learn more.



Get directions and other location-based information. You must enable location services to use Google Maps. For more information, see [Location](#).

Visit [support.google.com/maps](https://support.google.com/maps) to learn more.



Store and back up your photos and videos automatically to your Google Account with Google Photos™.

Visit [support.google.com/photos](https://support.google.com/photos) to learn more.



Watch movies and TV shows purchased from Google Play. You can also view videos saved on your device.

Visit [play.google.com/store/movies](https://play.google.com/store/movies) to learn more.



Find new apps, movies and TV shows, music, books, magazines, and games in the Google Play store.

Visit [support.google.com/play](https://support.google.com/play) to learn more.



Watch and upload YouTube™ videos right from your device.

Visit [support.google.com/youtube](https://support.google.com/youtube) to learn more.



Stream and browse playlists, albums, and artists from YouTube Music.

# Microsoft apps

The following Microsoft apps may be preloaded on your device. Apps can be downloaded from Galaxy Store and the Google Play store.

[Outlook](#) | [Office](#) | [OneDrive](#)



## Outlook

Access email, calendar, contacts, tasks, and more in Outlook. See [Add an Outlook account](#). Visit [support.office.com/en-us/article/outlook-for-ios-and-android-help-cd84214e-a5ac-4e95-9ea3-e07f78d0cde6](https://support.office.com/en-us/article/outlook-for-ios-and-android-help-cd84214e-a5ac-4e95-9ea3-e07f78d0cde6) to learn more.

Asset will be  
updated when  
available



Enjoy the Word, Excel, and PowerPoint apps on your mobile device with the Microsoft Office mobile app.



Store and share photos, videos, documents, and more in your free online OneDrive® account—accessible from your personal computer, tablet, or phone.

# Settings

---

Access Settings

Connections

Sounds and vibration

Notifications

Display

Device maintenance

Lock screen and security

Accounts

Accessibility

Other settings

Asset will be  
updated when  
available


# Access Settings

There are a couple of ways to access your device settings.

- From a Home screen, swipe down and tap  **Settings**.
- From Apps, tap  **Settings**.

## Search for Settings

If you are not sure exactly where to find a certain setting, you can search for it.

1. From Settings, tap  **Search**, and enter keywords.
2. Tap an entry to go to that setting.



# Connections

Manage connections between your device and a variety of networks and other devices.

[Wi-Fi](#) | [Bluetooth](#) | [Airplane mode](#) | [Mobile networks](#) | [Data usage](#) | [Mobile hotspot](#) | [Tethering](#) | [Nearby device scanning](#) | [Connect to a printer](#) | [Virtual Private Networks](#) | [Private DNS](#) | [Ethernet](#)




## Wi-Fi

You can connect your device to a Wi-Fi network to access the Internet without using your mobile data.


1. From Settings, tap  **Connections > Wi-Fi**, and then tap  to turn on Wi-Fi and scan for available networks.
2. Tap a network, and enter a password if required.

## Connect to a hidden Wi-Fi network

If the Wi-Fi network you want is not listed after a scan, you can still connect to it by entering the information manually. Ask the Wi-Fi network administrator for the name and password before you begin.




1. From Settings, tap  **Connections > Wi-Fi**, and then tap  to turn on Wi-Fi.
2. Tap  **Add network** at the bottom of the list.
3. Enter information about the Wi-Fi network:
  - **Network name:** Type the exact name of the network.
  - **Security:** Select a security option from the list, and enter the password if required.
  - **Advanced:** Define other advanced options, such as IP and Proxy settings.
4. Tap **Save**.



**TIP** Tap  **QR scanner** to connect to a Wi-Fi network by using your device's camera to scan a QR code.

## Advanced Wi-Fi settings




You can configure connections to various types of Wi-Fi networks and hotspots, manage saved networks and look up your device's network addresses. Options may vary by carrier.

1. From Settings, tap  **Connections > Wi-Fi**, and then tap  to turn on Wi-Fi.
2. Tap  **More options > Advanced**.
  - **Switch to mobile data:** When enabled, your device will switch to mobile data whenever the Wi-Fi connection is unstable. When the Wi-Fi signal is strong, it switches back to Wi-Fi.
  - **Turn on Wi-Fi automatically:** Turn on Wi-Fi in frequently-used locations.
  - **Network notification/Wi-Fi notifications:** Receive notifications when open networks in range are detected.
  - **Show Wi-Fi pop-up:** Alert me that Wi-Fi is available when opening apps.
  - **Manage networks:** View saved Wi-Fi networks and configure whether to auto reconnect to or forget individual networks.
  - **Wi-Fi control history:** View apps that have recently turned your Wi-Fi on or off.

- **Hotspot 2.0:** Connect automatically to Wi-Fi networks that support Hotspot 2.0.
- **Install network certificates:** Install authentication certificates.



## Wi-Fi Direct

Wi-Fi Direct uses Wi-Fi to share data between devices.

1. From Settings, tap  **Connections** > **Wi-Fi**, and then tap  to turn on Wi-Fi.
2. Tap  **More options** > **Wi-Fi Direct**.
3. Tap a device, and then follow the prompts to connect.


## Disconnect from Wi-Fi Direct

Disconnect your device from a Wi-Fi Direct device.

- From Settings, tap  **Connections** > **Wi-Fi** >  **More options** > **Wi-Fi Direct**. Tap a device to disconnect it.

## Bluetooth

You can pair your device to other Bluetooth-enabled devices, like Bluetooth headphones or a Bluetooth-enabled vehicle infotainment system. Once a pairing is created, the devices remember each other and can exchange information without having to enter the passkey again.




1. From Settings, tap  **Connections** > **Bluetooth**, and then tap  to turn on Bluetooth.
2. Tap a device and follow the prompts to connect.

 **TIP** When sharing a file, tap  **Bluetooth** to use this feature.



## Rename a paired device

You can rename a paired device to make it easier to recognize.

1. From Settings, tap  **Connections > Bluetooth**, and then tap  to turn on Bluetooth.
2. Tap  **Settings** next to the device name, and then tap **Rename**.
3. Enter a new name, and tap **Rename**.



## Unpair from a Bluetooth device

When you unpair from a Bluetooth device, the two devices no longer recognize each other and you will need to pair with the device again in order to connect to it.

1. From Settings, tap  **Connections > Bluetooth**, and then tap  to turn on Bluetooth.
2. Tap  **Settings** next to the device, and then tap **Unpair**.

## Advanced options

Additional Bluetooth features are available in the Advanced menu. Options may vary by carrier.

1. From Settings, tap  **Connections > Bluetooth**.
2. Tap **Advanced** or  **More options > Advanced** for the following options:
  - **Sync with Samsung Cloud:** Sync files transferred through Bluetooth with your Samsung account.
  - **Bluetooth control history:** View apps that have used Bluetooth recently.
  - **Block pairing requests:** Add devices to block pairing requests.

## Airplane mode

Airplane mode turns off all network connections including calling, texting, mobile data, Wi-Fi, and Bluetooth. While Airplane mode is enabled, you can turn on Wi-Fi and Bluetooth in Settings or from the Quick settings panel.


- From Settings, tap  **Connections > Airplane mode**, and then tap  to enable this feature.



**NOTE** The use of mobile devices on an aircraft or a ship may be subject to federal and local guidelines and restrictions. Check with appropriate authorities and always follow crew instructions regarding when and how you may use your device.

## Mobile networks

Use Mobile networks to configure your device's ability to connect to mobile networks and use mobile data. Options may vary by carrier.

- From Settings, tap  **Connections > Mobile networks**.
  - **Data roaming access:** Configure access to mobile networks while roaming.
  - **Roaming/Roaming state:** Enable or disable data while roaming on other mobile networks.
  - **Signal strength:** View mobile signal strength.
  - **Access Point Names:** Choose or add APNs, which have the network settings your device needs to connect to your provider.
  - **Network operators:** Choose available and preferred networks.
  - **Network extenders:** Scan for cells that can extend your network connection.



**TIP** Use these features to help manage connection settings that may affect your monthly bill.




## Data usage

Check your current mobile and Wi-Fi data usage. You can also customize warnings and limits.

- From Settings, tap  **Connections > Data usage**.


## Turn on Data saver

Use Data saver to reduce your data consumption by preventing selected apps from sending or receiving data in the background.

1. From Settings, tap  **Connections > Data usage > Data saver**.
2. Tap  to turn on Data saver.
  - To allow some apps to have unrestricted data usage, tap **Allowed to use data while Data saver is on**, and tap  next to each app to specify restrictions.

## Monitor mobile data

You can customize your mobile data access by setting limits and restrictions. Options may vary by carrier.


- From Settings, tap  **Connections > Data usage**. The following options are available:
  - **Mobile data**: Use mobile data from your plan.
  - **Alert me about data usage**: Enable alerts for when your mobile data usage reaches the amount you chose.
  - **Mobile data usage**: View data usage over mobile connections over a period of time. You can view total usage as well as usage by app.
  - **Billing cycle and data warning**: Change the monthly date to align with your carrier's billing date.



**TIP** Use these features to keep an eye on your estimated data usage.



## Monitor Wi-Fi data

You can restrict Wi-Fi data access by customizing usage limits and networks.


1. From Settings, tap  **Connections > Data usage**.
2. Tap **Wi-Fi data usage** to view data usage over Wi-Fi connections over a period of time. You can view total usage as well as usage by app.

## Mobile hotspot

Mobile hotspot uses your data plan to create a Wi-Fi network that can be used by multiple devices.


1. From Settings, tap  **Connections > Mobile hotspot and tethering > Mobile hotspot**.
2. Tap  to turn on Mobile hotspot.
3. On the devices you want to connect, activate Wi-Fi and select your device's Mobile hotspot. Enter the Mobile hotspot password to connect.
  - Connected devices are listed under the heading **Connected devices**.



**TIP** Tap  **QR code** to connect another device to your Mobile hotspot by scanning a QR code instead of entering a password.


## Configure mobile hotspot settings

You can customize your mobile hotspot's security and connection settings.

1. From Settings, tap  **Connections > Mobile hotspot and tethering > Mobile hotspot**.
2. Tap **Configure** for the following settings:
  - **Network name:** View and change the name of your Mobile hotspot.
  - **Security:** Choose the security level for your Mobile hotspot.
  - **Password:** If you choose a security level that uses a password, you can view or change it.
  - **Band:** Select one of the available bandwidth options.
  - **Advanced:** Configure additional Mobile hotspot settings.

## Tethering

You can use tethering to share your device's Internet connection with another device. Options may vary by carrier.

1. From Settings, tap  **Connections > Mobile hotspot and tethering**.
2. Tap an option:
  - Connect the computer to the device using a USB cable, and then tap **USB tethering**.
  - Connect the computer to the device using an Ethernet adapter, and then tap **Ethernet tethering**.




## Nearby device scanning

Easily set up connections to other available devices by turning on Nearby device scanning. This feature sends you a notification when there are available devices to connect to.

1. From Settings, tap  **Connections > More connection settings > Nearby device scanning**.
2. Tap  to turn on the feature.

## Connect to a printer

Connect your device to a printer on the same Wi-Fi network to easily print documents and images from your device.



1. From Settings, tap  **Connections > More connection settings > Printing**.
2. Tap **Default print service**, and then tap  **More options > Add printer**.
  - If your printer requires a plugin, tap  **Download plugin** and follow the prompts to add a print service.



**NOTE** Not all apps support printing.



## Virtual Private Networks

A Virtual Private Network (VPN) allows you to connect to a private secured network from your device. You will need the connection information from your VPN administrator.

1. From Settings, tap  **Connections > More connection settings > VPN**.
2. Tap  **More options > Add VPN profile**.
3. Enter the VPN network information provided by your network administrator, and tap **Save**.


### Manage a VPN

Use the VPN settings menu to edit or delete a VPN connection.

1. From Settings, tap  **Connections > More connection settings > VPN**.
2. Tap  **Settings** next to a VPN.
3. Edit the VPN and tap **Save**, or tap **Delete** to remove the VPN.


### Connect to a VPN

Once you have set up a VPN, connecting to and disconnecting from a VPN is easy.

1. From Settings, tap  **Connections > More connection settings > VPN**.
2. Tap a **VPN**, enter your log in information, and tap **Connect**.
  - To disconnect, tap the VPN, and then tap **Disconnect**.


## Private DNS

You can configure your device to connect to a private DNS host.

1. From Settings, tap  **Connections > More connection settings > Private DNS**.
2. Tap one of the available options to configure a private DNS connection.
3. Tap **Save**.

## Ethernet

If wireless network connection is not available, you can use an Ethernet cable to connect your device to a local network.

1. Connect an Ethernet cable to your device.
2. From Settings, tap  **Connections > More connection settings > Ethernet**, and follow the prompts.



**TIP** You need an adapter (not included) to connect an Ethernet cable to your device.


## Sounds and vibration

You can control the sounds and vibrations used to indicate notifications, screen touches, and other interactions.

[Sound mode](#) | [Vibrations](#) | [Volume](#) | [Notification sound](#) | [System sounds and vibration](#) | [Dolby Atmos](#) | [Separate app sound](#)

### Sound mode

You can change the sound mode on your device without using the volume keys.

- From Settings, tap  **Sounds and vibration**, and then choose a mode:
  - **Sound:** Use the sounds, vibrations, and volume levels you have chosen in Sound settings for notifications and alerts.
  - **Vibrate:** Use vibration only for notifications and alerts.
  - **Mute:** Set your device to make no sounds.
    - **Temporary mute:** Set a time limit for muting the device.



**TIP** Use the sound mode setting instead of the volume keys to change the sound mode without losing your customized sound levels.


## Mute with gestures

Quickly mute sounds by covering the screen or turning the device over.

- From Settings, tap  **Advanced features** > **Motions and gestures** > **Mute with gestures**, and tap  to enable.

## Vibrations


You can control how and when your device vibrates.

1. From Settings, tap  **Sounds and vibration**.
2. Tap options to customize:
  - **Notification vibration pattern:** Choose from preset vibration patterns for notifications.
  - **Vibration intensity:** Set vibration intensity levels for notifications and touch interactions by dragging the sliders.

## Volume

Set the volume level for notifications, media, and system sounds.

- From Settings, tap  **Sounds and vibration** > **Volume**, and drag the sliders for each sound type.

 **TIP** You can also use the Volume keys to adjust the volume. When pressed, a pop-up menu shows the volume level and current sound type. You can tap the menu to expand it, and then adjust the volume of the other sound types by dragging their sliders.

## Use Volume keys for media




Set the default action of the Volume keys to control the media sound volume rather than whichever sound type is in use.

1. From Settings, tap  **Sounds and vibration** > **Volume**.
2. Tap **Use Volume keys for media** to enable this feature.



## Media volume limit

Limit the maximum output of the device's volume while using Bluetooth speakers or headphones (not included).

1. From Settings, tap  **Sounds and vibration** > **Volume**.
2. Tap  **More options** > **Media volume limit**.
3. Tap  to enable this feature.
  - To set the maximum output volume, drag the **Custom volume limit** slider.
  - To require a PIN to make changes to the volume setting, tap **Set volume limit PIN**.

## Notification sound

Choose a preset sound for all notification alerts.

1. From Settings, tap  **Sounds and vibration** > **Notification sound**.
2. Tap a sound to hear a preview and select it.



**TIP** You can also customize notifications sounds to be unique for each app using the App settings menu.

## System sound themes

Choose a sound theme to use for touch interactions, charging, changing the sound mode, and Samsung Keyboard, and more.

- From Settings, tap  **Sounds and vibration** > **System sound** and choose an available option.

## System sounds and vibration

Customize your device's sounds and vibrations for actions like tapping the screen and charging the device. Options may vary by carrier.

- From Settings, tap  **Sounds and vibration** > **System sound/vibration control** for the following options:

### Sound


- **Touch interactions:** Play tones when you touch or tap the screen to make selections.
- **Screen lock/unlock:** Play a sound when you lock or unlock the screen.
- **Charging:** Play a sound when a charger is connected.
- **Samsung keyboard:** Play a sound when typing with the Samsung keyboard.

### Vibration

- **Touch interactions:** Vibrate when you tap navigation buttons or touch and hold items on the screen.
- **Navigation gestures:** Vibrate when using gestures.
- **Charging:** Vibrate when a charger is connected.
- **Samsung keyboard:** Vibrate when typing with the Samsung keyboard.


## Dolby Atmos

Enjoy Dolby Atmos quality when playing content that was specifically mixed for Atmos. This feature may only be available with a headset connected.

- From Settings, tap  **Sounds and vibration** > **Sound quality and effects** for the following options:
  - **Dolby Atmos:** Experience breakthrough audio that flows above and around you.
  - **Dolby Atmos for gaming:** Apply Dolby Atmos optimized for gaming.

## Separate app sound

You can choose to have an app play only media sound on a Bluetooth speaker or headset separate from the other sounds (like notifications). Connect to a Bluetooth device to make this option available in the Audio device menu.

1. From Settings, tap  **Sounds and vibration** > **Separate app sound**.
2. Tap **Turn on now** to enable Separate app sound, and then set the following options:
  - **App:** Choose an app to play its sound on a separate audio device.
  - **Audio device:** Choose the audio device that you want the app's sound to be played on.


# Notifications

You can prioritize and streamline app alerts by changing which apps send notifications and how notifications alert you.

[Notification pop-up style](#) | [Recently sent notifications](#) | [Do not disturb](#) | [Advanced settings](#)


## Notification pop-up style

You can change the style and additional settings for your notifications.

- From Settings, tap  **Notifications**, and then choose a pop-up style:
  - **Brief:** Enable customization of your notification colors, lighting style, and included apps.
    - **Included apps:** View brief notifications for your apps.
    - **Brief pop-up settings:** Customize the Edge lighting style, colors, and enable notifications to show even while the screen is off.
  - **Detailed:** Enable the default Samsung Notification settings.


## Recently sent notifications

You can view a list of apps that have sent notifications under Recently sent notifications.

1. From Settings, tap  **Notifications**.
2. Tap an entry under **Recently sent** to customize the notification settings.
3. Tap **More** to see the expanded list.

## Do not disturb

Do not disturb allows you to block sounds and notifications while this mode is turned on. You can also specify exceptions for people, apps, and alarms. You can also set a schedule for recurring events like sleep or meetings.

- From Settings, tap  **Notifications** > **Do not disturb** and configure the following:
  - **Do not disturb:** Enable Do not disturb to block sounds and notifications.
  - **For how long?:** Choose a default duration for Do not disturb mode when you enable it manually.

### Schedule


- **Sleeping:** Customize a schedule for Do not disturb mode while you are sleeping.
- **Add schedule:** Create a new schedule to configure the days and times to regularly put your device in Do not disturb mode.

### Exceptions

- **Calls, messages, and conversations:** Tap to allow Do not disturb exceptions.
- **Alarms and sounds:** Enable sounds and vibrations for alarms, events, and reminders while Do not disturb mode is active.
- **Apps:** Add apps that you would like to receive notifications from in Do not disturb mode. Call, message, and conversation notifications will still reach you even if you don't allow the associated apps.
- **Hide notifications:** View customization options to hide notifications.

## Advanced settings

You can configure notifications from apps and services.

- From Settings, tap  **Notifications** > **Advanced settings**.
  - **Show notification icons:** Modify how many notifications appear on the Status bar.
  - **Show battery percentage:** Display the current battery life of your device on the Status bar.
  - **Notification history:** Display recent and snoozed notifications.

- **Conversations:** View conversation notifications. Touch and hold a conversation notification to mark it as priority, set it as alerting, or silent.
- **Floating notifications:** Enable floating notifications in either Bubbles or Smart pop-up view.
- **Suggest actions and replies for notifications:** Get applicable suggestions for actions to notifications and replies to messages.
- **Notification reminders:** Enable and customize periodic reminders about notifications from selected apps and services. Clear notifications to stop the reminders.
- **App icon badges:** Identify which apps have active notifications with badges that appear on their icons. Tap to choose whether or not badges indicate the number of unread notifications.


## Display

You can configure the screen brightness, timeout delay, font size, and many other display settings.

[Dark mode](#) | [Screen brightness](#) | [Eye comfort shield](#) | [Font size and style](#) | [Screen zoom](#) | [Full screen apps](#) | [Screen timeout](#) | [Accidental touch protection](#) | [Screen saver](#) | [Double tap to turn on screen](#) | [Double tap to turn off screen](#) | [One-handed mode](#)


### Dark mode

Dark mode allows you to switch to a darker theme to keep your eyes more comfortable at night, darkening white or bright screens and notifications.

- From Settings, tap  **Display** for the following options:
  - **Light:** Apply a light color theme to your device (default).
  - **Dark:** Apply a dark color theme to your device.
  - **Dark mode settings:** Customize when and where Dark mode is applied.
    - **Turn on as scheduled:** Configure Dark mode for either **Sunset to sunrise** or **Custom schedule**.
    - **Adaptive color filter:** Turn on Blue light filter automatically between sunset and sunrise to reduce eye strain.

## Screen brightness

Adjust the screen brightness according to lighting conditions or personal preference.

1. From Settings, tap  **Display**.
2. Customize options under Brightness:
  - Drag the **Brightness** slider to set a custom brightness level.
  - Tap **Adaptive brightness** to automatically adjust the screen brightness based on the lighting conditions.



**TIP** You can also adjust screen brightness from the Quick settings panel.


## Motion smoothness

Get smoother scrolling and more realistic animations by increasing the screen's refresh rate.

1. From Settings, tap  **Display** > **Motion smoothness**.
2. Tap an option, and then tap **Apply**.



## Eye comfort shield

This feature may help you sleep better and reduce eye strain. You can set a schedule to automatically turn this feature on and off.

- From Settings, tap  **Display** > **Eye comfort shield**, and then choose one of the following options:
  - Tap **Set schedule** and choose **Always on**, **Sunset to sunrise**, or **Custom**.
  - Drag the **Color temperature** slider to set the opacity of the filter.

## Font size and style

You can change the font size and style to customize your device.

- From Settings, tap  **Display** > **Font size and style** for the following options:
  - Tap **Font style** to choose a different font.
    - Tap a font to select it, or tap  **Download fonts** to add fonts from Galaxy Store.
  - Tap **Bold font** to make all fonts appear with bold weight.
  - Drag the **Font size** slider to adjust the size of text.

## Screen zoom

Adjust the zoom level to make content easier to see.

1. From Settings, tap  **Display** > **Screen zoom**.
2. Drag the **Screen zoom** slider to adjust the zoom level.

## Full screen apps


You can choose which apps you want to use in the full screen aspect ratio.

- From Settings, tap  **Display** > **Full screen apps** and tap apps to enable this feature.

## Screen timeout

You can set the screen to turn off after a set amount of time.

- From Settings, tap  **Display** > **Screen timeout**, and tap a time limit to set it.

 **NOTE** Prolonged display of non-moving images, excluding Always On Display, may result in permanent ghost-like afterimages or degraded image quality. Turn off the display screen when not in use.




## Accidental touch protection

Prevent the screen from detecting touch input while the device is in a dark place, such as a pocket or a bag.

- From Settings, tap  **Display > Accidental touch protection** to enable the feature.

## Screen saver

You can display colors or photos when the screen turns off or while charging.

1. From Settings, tap  **Display > Screen saver**.
2. Choose one of the following options:
  - **None:** Do not display a screen saver.
  - **Colors:** Tap the selector to display a changing screen of colors.
  - **Photo table:** Display pictures in a photo table.
  - **Photo frame:** Display pictures in a photo frame.
  - **Photos:** Display pictures from your Google Photos account.
3. Tap **Preview** for a demonstration of the selected Screen saver.



**TIP** Tap  **Settings** next to a feature for additional options.

## Reduce animations

Decrease certain motion effects, such as when opening apps.

- From Settings, tap  **Advanced features > Reduce animations** to enable the feature.




## Double tap to turn on screen

Turn on the screen by double-tapping instead of using the Side key.

- From Settings, tap  **Advanced features > Motions and gestures > Double tap to turn on screen** to enable this feature.

## One-handed mode

You can change the screen layout to accommodate operating your device with one hand.

1. From Settings, tap  **Advanced features** > **One-handed mode**.
2. Tap  to enable the feature and select one of the following options:
  - **Gesture:** Swipe down in the center of the bottom edge of the screen.
  - **Button:** Tap  **Home** two times in quick succession to reduce the display size.

## Device maintenance

View the status of your device's battery, storage, and memory. You can also automatically optimize your device's system resources.

[Quick optimization](#) | [Battery](#) | [Storage](#) | [Memory](#) | [More options](#) | [Language and input](#) | [Date and time](#) | [Troubleshooting](#)

## Quick optimization

The quick optimization feature improves device performance through the following actions:


- Identifying apps that use excessive battery power and clearing unneeded items from memory.
- Deleting unnecessary files and closing apps running in the background.
- Scanning for malware.

To use the quick optimization feature:

- From Settings, tap  **Battery and device care** > **Optimize now**.


## Battery

View how battery power is used for your various device activities.

- From Settings, tap  **Battery and device care** > **Battery** for the following options:
  - **Usage since last full charge:** View your recent battery usage by time, app, and service.
  - **Power saving mode:** Save battery life by limiting background network usage, syncing, and location checking. Choose from additional power saving options to save more power when this mode is enabled.
  - **Background usage limits:** View apps that you don't use often and limit their battery usage. To disable this feature, tap **Put unused apps to sleep**.
  - **More battery settings:** Configure additional battery settings and notifications.

## Storage

View your storage capacity and detailed usage by category and file type. You can also mount, unmount, or format an optional memory card (not included).

- From Settings, tap  **Battery and device care** > **Storage**.
  - Tap a category to view and manage files.



## Memory card

Once an optional microSD memory card (not included) has been installed in your device, the card memory is displayed in the Storage setting.

For more information, see [Set up your device](#).



## Mount a memory card

When you install an optional memory card, it is automatically mounted (connected to the device) and prepared for use. However, should you unmount the card without removing it from the device, you need to mount it before it can be accessed.

1. From Settings, tap  **Battery and device care** > **Storage** >  **More options** > **Advanced**.
2. Tap your SD card, and then tap **Mount**.



## Remove a memory card

To prevent damage to information stored on the memory card, unmount the card before removing it from the device.

1. From Settings, tap  **Battery and device care** > **Storage** >  **More options** > **Advanced**.
2. Tap your SD card, and then tap **Unmount**.
3. Remove your memory card from the device.





## Format a memory card

When formatting an SD card, you should back up your music and photo files that are stored on the card because formatting the SD card deletes **ALL** stored files.

1. From Settings, tap  **Battery and device care** > **Storage** >  **More options** > **Advanced**.
2. Tap your SD card, tap **Format**, and then follow the prompts.



## Memory

Check the amount of available memory. You can close background apps and reduce the amount of memory you are using to speed up your device.

- From Settings, tap  **Battery and device care** > **Memory**. The used and available memory are shown.
  - Tap **Clean now** to free up as much memory as possible.
  - Tap **View more** to view the full list of apps and services using memory. Tap  to include or exclude these apps and services.
  - Tap **Apps not used recently** to view apps and services that are included in this group. Tap  to include or exclude these apps and services.
  - Tap **Excluded apps** to view a list of apps that have been excluded. Tap  **Add apps** to choose apps to exclude from memory usage checks.

## Advanced options

Other Device care features are available in the Advanced menu.



- From Settings, tap  **Device care** >  **More options** > **Advanced**. The following options are available:
  - **Notifications:** Enable or disable notifications from Device care.
  - **Auto optimization:** Automatically optimize the device daily.
    - **Time:** Choose a time of day to optimize the device.
    - **Close apps to free up memory:** Enable to free up memory by closing apps that are running in the background.
  - **Auto restart:** Automatically restart the device on a custom schedule.
    - **Days:** Choose one or more days to restart the device.
    - **Time:** Choose a time of day to restart the device.
  - **Optimize settings:** Save battery power by optimizing settings when the device is not in use.
    - **Reduce brightness:** Change brightness settings.
    - **Screen timeout:** Turn off the screen after 30 seconds of inactivity.
    - **Media volume:** Limit playback volume to 46%.

## Language and input

Configure your device's language and input settings.

### Change the device language

You can add languages to your list and organize them according to preference. If an app does not support your default language, then it will move to the next supported language in your list.

1. From Settings, tap  **General management** > **Language**.
2. Tap  **Add language**, and select a language from the list.
3. Tap **Set as default** to change the device language.
  - To switch to another language on the list, tap the desired language, and then tap **Apply**.

## Default keyboard

You can select a default keyboard for your device's menus and keyboards. Additional keyboards can be downloaded from the Google Play store.

1. From Settings, tap  **General management** > **Keyboard list and default**.
2. Tap **Default keyboard** and choose a keyboard.

## Google Voice typing

Speak rather than type your text entries using Google Voice™ typing.

1. From Settings, tap  **General management** > **Language and input**.
2. Tap **On-screen keyboard** > **Google Voice typing** to customize settings.

## Manage on-screen keyboards

Enable or disable on-screen keyboards.

1. From Settings, tap  **General management** > **Keyboard list and default**.
2. Tap each keyboard to customize.


## Show keyboard button

Show a button on the Navigation bar to quickly switch between keyboards.

1. From Settings, tap  **General management** > **Keyboard list and default**.
2. Tap **Keyboard button on navigation bar** to enable this feature.



## Physical keyboards

Customize options when you have a physical keyboard connected to your device (sold separately).

1. From Settings, tap  **General management**.
2. Tap **Physical keyboard**, and then choose an option:
  - **Show on-screen keyboard**: Show the on-screen keyboard while a physical keyboard is also being used.
  - **Keyboard shortcuts**: Show explanations of the keyboard shortcuts on the screen.
  - **Change language shortcut**: Enable or disable language key shortcuts for your physical keyboard.



## Autofill service

Save time entering information using autofill services.

1. From Settings, tap  **General Management**.
2. Tap **Autofill service** to view your selected service.
  - Tap  **Settings** to customize your service.
  - Tap **Autofill service** to change your default service.


## Text-to-speech

Configure your Text-to-Speech (TTS) options. TTS is used for various accessibility features, such as Voice Assistant.

- From Settings, tap  **General management** > **Text-to-speech** for options:
  - **Preferred engine**: Choose either the Samsung or Google Text-to-speech engine. Tap  **Settings** for options.
  - **Language**: Set the default speech language.
  - **Speech rate**: Set the speed at which the text is spoken.
  - **Pitch**: Set the pitch of the speech.
  - **Play**: Tap to play a short demonstration of speech synthesis.
  - **Reset**: Reset the speech rate and pitch.


## Pointer speed

Configure pointer speed for an optional mouse or trackpad (not included).

1. From Settings, tap  **General management** > **Mouse and trackpad**.
2. Under **Pointer speed**, drag the slider to the right to go faster or to the left to go slower.


## Primary mouse button

You can define which mouse button that you favor as primary.

1. From Settings, tap  **General management** > **Mouse and trackpad**.
2. Tap **Primary mouse button**, and choose either **Left** or **Right**.

## Date and time

By default, your device receives date and time information from the wireless network. Outside of network coverage, you can set the date and time manually.

- From Settings, tap  **General management** > **Date and time**. The following options are available:
  - **Automatic date and time**: Receive date and time updates from your wireless network. When Automatic date and time is disabled, the following options are available:
    - **Select time zone**: Choose a new time zone.
    - **Set date**: Enter the current date.
    - **Set time**: Enter the current time.
  - **Use 24-hour format**: Set the format for displaying time.



## Troubleshooting

You can check for software updates and, if necessary, reset services on your device.

### Software update/System updates

Check for and install available software updates for your device. Options may vary by carrier.

- From Settings, tap **Software update/System updates** for the following options:
  - **Check for software updates:** Manually check for software updates.
  - **Show software update history:** View a list of all software updates on your device.
  - **Smart updates:** Install security updates automatically.
  - **Use software upgrade assistant:** Install a tool to install system updates.

### Reset

Reset device and network settings. You can also reset your device to its factory defaults.

#### Reset all settings

You can reset your device to its factory default settings, which resets everything except the security, language, and account settings. Personal data is not affected.

1. From Settings, tap  **General management > Reset > Reset all settings**.
2. Tap **Reset settings**, and confirm when prompted.

#### Reset network settings

You can reset Wi-Fi, mobile data, and Bluetooth settings with Reset network settings.

1. From Settings, tap  **General management > Reset > Reset network settings**.
2. Tap **Reset settings**, and confirm when prompted.



## Reset accessibility settings

You can reset device accessibility settings. Accessibility settings in downloaded apps and your personal data are not affected.

1. From Settings, tap  **General management** > **Reset** > **Reset accessibility settings**.
2. Tap **Reset settings**, and confirm when prompted.

## Auto restart at set times

Optimize your device by restarting it automatically at set times. Any unsaved data will be lost when the device restarts.

1. From Settings, tap  **General management** > **Reset** > **Auto restart at set times**.
2. Tap  to activate Auto restart, and then set the following parameters:
  - **Days:** Select the day of the week to automatically restart your device.
  - **Time:** Set the time of day to restart your device.

## Factory Data Reset

You can reset your device to factory defaults, erasing all data from your device.

This action permanently erases ALL data from the device, including Google or other account settings, system and application data and settings, downloaded applications, as well as your music, photos, videos, and other files. Any data stored on an external SD card is not affected.

If you sign in to a Google Account on your device and set a Lock screen, Google Device Protection is automatically enabled.




**NOTE** If you reset your Google Account password, it can take 24 hours for the password reset to sync with all devices registered to the account.

Before resetting your device:

1. Verify that the information you want to keep has transferred to your storage area.
2. Log in to your Google Account and confirm your user name and password.

To reset your device:

1. From Settings, tap  **General management** > **Reset** > **Factory data reset**.
2. Tap **Reset** and follow the prompts to perform the reset.
3. When the device restarts, follow the prompts to set up your device.

## Google Device Protection

When you sign in to a Google Account on your device and set a Lock screen, Google Device Protection is enabled. This service protects your phone from unauthorized factory data resets by requiring your Google account information to verify your identity. For more information, visit [samsung.com/us/support/answer/ANS00083965](https://samsung.com/us/support/answer/ANS00083965).

## Enable Google Device Protection

Adding a Google Account to your device and setting a Lock screen automatically activates Google Device Protection.


## Disable Google Device Protection

To disable Google Device Protection, you can either remove all Google Accounts from the device or remove the Lock screen.

To remove Google accounts:

1. From Settings, tap  **Accounts and backup** > **Manage accounts** > [Google Account].
2. Tap **Remove account**.

To remove a secure Lock screen:

1. From Settings, tap  **Lock screen** > **Screen lock type**.
2. Tap either **Swipe** or **None**.

# Lock screen and security

You can secure your device and protect your data by setting a screen lock.

[Screen lock types](#) | [Google Play Protect](#) | [Security update](#) | [Find My Mobile](#) | [Find My Device](#) | [Private Share](#) | [Install unknown apps](#) | [Encrypt or decrypt SD card](#) | [Password for factory data reset](#) | [Set up SIM card lock](#) | [View passwords](#) | [Device administration](#) | [Credential storage](#) | [Advanced security settings](#) | [Permission manager](#) | [Samsung Privacy](#) | [Google Privacy](#) | [Location](#)

## Screen lock types



You can choose from the following screen lock types that offer high, medium, or no security: Swipe, Pattern, PIN, Password, and None.



**NOTE** Biometric locks are also available to protect access to your device and sensitive data on your device. For more information, see [Biometric security](#).

## Set a secure screen lock

It is recommended that you secure your device using a secure screen lock (Pattern, PIN, or Password). This is necessary to set up and enable biometric locks.


1. From Settings, tap  **Lock screen** > **Screen lock type** and tap a secure screen lock (**Pattern**, **PIN**, or **Password**).
2. Tap  to enable showing notifications on the lock screen. The following options are available:
  - **Icons only:** Show only notification icons with no details on the lock screen.
  - **Details:** Display notification details on the lock screen.
  - **Hide content:** Do not show notifications in the Notification panel.
  - **Notifications to show:** Choose which notifications to show on the Lock screen.
3. Tap **Done** to exit the menu.

#### 4. Configure the following screen lock options:

- **Smart Lock:** Unlock your device automatically when trusted locations or other devices have been detected. A secure screen lock is required for this feature.
- **Secure lock settings:** Customize your secure lock settings. A secure screen lock is required for this feature.

## Clock and information

You can configure features that appear on the Lock screen, like the clock and other useful information.

- From Settings, tap  **Lock screen** for the following options:
  - **Wallpaper services:** Enable additional features such as guide page and Dynamic Lock Screen.
  - **Clock style:** Set the type and color of the clock on the Lock screen.
  - **Roaming clock:** Show the time both where you are and at home while you are roaming.
  - **Widgets:** Enable widgets on the Lock screen to get quick access to useful information.
  - **Contact information:** Show your contact information, such as your phone number or email address.
  - **Notifications:** Select which notifications to display on the Lock screen.
  - **Shortcuts:** Select which app shortcuts to add to the Lock screen.
  - **About Lock screen:** Update the Lock screen's software.

## Google Play Protect

You can configure Google Play to regularly check your apps and device for security risks and threats.



- From Settings, tap  **Biometrics and security > Google Play Protect**.
  - Updates are checked for automatically.

## Find My Mobile

You can protect your device from loss or theft by allowing your device to be locked, tracked online, and for your data to be deleted remotely. A Samsung account is required, and Google location service must be turned on in order to use Find My Mobile. For more information, visit [samsung.com/us/support/owners/app/find-my-mobile](https://samsung.com/us/support/owners/app/find-my-mobile).


### Turn on Find My Mobile

Before you can use the Find My Mobile feature, you must turn it on and customize the options. To access your device remotely, visit [findmymobile.samsung.com](https://findmymobile.samsung.com).

1. From Settings, tap  **Biometrics and security** > **Find My Mobile**.
2. Tap  to enable Find My Mobile and log in to your Samsung account. The following options are available:
  - **Remote unlock:** Allow Samsung to store your PIN, pattern, or password, allowing you to unlock and control your device remotely.
  - **Send last location:** Allow your device to send its last location to the Find My Mobile server when the remaining battery charge falls below a certain level.
  - **Find My Mobile update:** View the current software version and check for updates.

## Find My Device

You can protect your device from loss or theft by allowing your device to be locked, tracked online, and for your data to be deleted remotely. A Google Account is required, and Google location service must be turned on.

1. From Settings, tap  **Biometrics and security** > **Find My Device**.
  - If you are not logged in to a Google Account, tap **Find My Device won't work** and follow the prompts to sign in.
2. The following options are available:
  - **Find My Device:** Download the app from Google Play.
  - **Web:** Access Find My Device on the Internet.
  - **Google:** Search for "find my device" topics online.

## Security update

You can easily check the date of the last installed security software update and find out if newer updates are available.

- From Settings, tap  **Biometrics and security** > **Security update** to see the latest security update installed and check if a newer update is available.

## Install unknown apps

You can allow installation of unknown third-party apps from selected apps or sources.


1. From Settings, tap  **Biometrics and security** > **Install unknown apps**.
2. Tap an app or source, and then tap **Allow from this source**.



**TIP** Installing unknown third-party apps could make your device and personal data more vulnerable to security risks.

## Encrypt or decrypt SD card

You can encrypt your optional memory card (not included) to protect its data. This only allows the SD card information to be accessed from your device with a password.


1. From Settings, tap  **Biometrics and security** > **Encrypt or decrypt SD card**.
2. Tap **Delete all data and encrypt SD card** and follow the prompts to encrypt all data on your memory card.



**NOTE** Performing a Factory data reset on your device prevents it from accessing an encrypted SD card. Before initiating a Factory data reset, make sure to decrypt the installed SD card first.

## Decrypt SD card

You can decrypt an optional memory card (not included) if it was encrypted by this device. You may want to decrypt the memory card if you plan to use it with another device or before performing a Factory data reset.

1. From Settings, tap  **Biometrics and security** > **Encrypt or decrypt SD card**.
2. Tap **Decrypt SD card** and follow the prompts to decrypt all data on your memory card.


## Password for factory data reset

You can require a password to reset your device to factory default settings. Options may vary by carrier.

- From Settings, tap  **Biometrics and security** > **Other security settings** > **Set up/change password** and enter a password.

## Set up SIM card lock

You can set up a PIN to lock your SIM card, which prevents unauthorized use of your SIM card if someone attempts to use it in another device. Options may vary by carrier.

- From Settings, tap  **Biometrics and security** > **Other security settings** > **Set up SIM card lock** and follow the prompts.
  - Tap **Lock SIM card** to turn on the feature.
  - Tap **Change SIM card PIN** to create a new PIN.

## View passwords


You can have characters displayed briefly in password fields as you type them.

- From Settings, tap  **Biometrics and security** > **Other security settings** > **Make passwords visible** to turn on the feature.




## Device administration

You can authorize security features and apps to have administrative access to your device.

1. From Settings, tap  **Biometrics and security** > **Other security settings** > **Device admin apps**.
2. Tap an option to turn it on as a device administrator.


## Credential storage

You can manage the trusted security certificates installed on your device, which verify the identity of servers for secure connections.

- From Settings, tap  **Biometrics and security** > **Other security settings** for the following options:
  - **Storage type:** Select a storage location for credential contents.
  - **View security certificates:** Display certificates in your device's ROM and other certificates you have installed.
  - **User certificates:** View user certificates that identify your device.
  - **Install from device storage:** Install a new certificate from storage.
  - **Clear credentials:** Erase credential contents from the device and reset the password.

## Advanced security settings


You can use these options to configure advanced security settings to better protect your device.

- From Settings, tap  **Biometrics and security** > **Other security settings** for the following options:
  - **Trust agents:** Allow trusted devices to perform selected actions when connected.
    - This option is only displayed when a lock screen is turned on. For more information, see [Set a secure screen lock](#).

- **Pin windows:** Pin an app on your device screen, which prevents access to other features of your device.
- **Security policy updates:** Keep your device secure by checking for security updates.



## Security update service

You can set your device to automatically check for security updates.

- From Settings, tap  **Biometrics and security** > **Other security settings**, and then tap **Security policy updates** to check for security updates.

## Location

Location services use a combination of GPS, mobile network and Wi-Fi to determine the location of your device.


1. From Settings, tap  **Location**.
2. Tap  to turn on Location services.



**TIP** Some apps require location services be turned on for full functionality.


## App permissions

Configure permissions for apps that want to access your location information.

1. From Settings, tap  **Location** > **App permissions**.
2. Tap an app and chose which location permissions to grant it. Options vary by app.



## Improve accuracy

Enable other location scanning tools.

1. From Settings, tap  **Location** > **Improve accuracy**.
2. Tap connection method to add or remove from location services:
  - **Wi-Fi scanning:** Allow apps and services to scan for Wi-Fi networks automatically, even when Wi-Fi is turned off.
  - **Bluetooth scanning:** Allow apps to scan for and connect to nearby devices automatically through Bluetooth, even when Bluetooth is turned off.

## Recent location requests

View a list of apps that have requested your location.

1. From Settings, tap  **Location**.
2. Tap  to turn on Location services.
3. Tap an entry under **Recent location requests** to view the app's settings.


## Location services

Location services store and use your device's most recent location data. Certain apps can use this data to improve your search results based on places that you have visited.

1. From Settings, tap  **Location**.
2. Tap an entry under **Location services** to see how your location information is used.

## Permission manager

Apps might access features of your device that you permit them to (like the camera, microphone, or location) when they are running in the background, not just when you are using the app. You can set your device to notify you when this happens.


1. From Settings, tap  **Privacy** > **Permission manager**.
2. Tap a category, then tap an app to select which permissions you want to be notified about.



**NOTE** When using an app or service for the first time that wants to access certain features of your device, a dialog box asks if you want to permit such access.

## Samsung Privacy

Send diagnostic information about your device to Samsung when you are having technical problems.

1. From Settings, tap  **Privacy**.
2. Under **Samsung** tap the following options to customize:
  - **Samsung Privacy:** View Samsung's privacy information.
  - **Customization Service:** Allow Samsung to provide customized content and recommendations.
  - **Send diagnostic data:** Send diagnostic information about your device to Samsung when you are having technical problems.

## Google Privacy

Customize Android and Google privacy features.

1. From Settings, tap  **Privacy**.
2. Under **Google** tap privacy services to customize them.



# Accounts

You can connect to and manage your accounts, including your Google Account, Samsung account, email, and social networking accounts. .

[Add an account](#) | [Account settings](#) | [Remove an account](#) | [Backup and restore](#) | [Google settings](#)


## Add an account

You can add and sync all your email, social networking, and picture and video sharing accounts.

1. From Settings, tap  **Accounts and backup** > **Manage accounts** >  **Add account**.
2. Tap one of the account types.
3. Follow the prompts to enter your credentials and set up the account.
  - Tap **Auto sync data** to enable automatic updates to your accounts.


## Account settings

Each account has its own custom settings. You can configure common settings for all accounts of the same type. Account settings and available features vary between account types.

1. From Settings, tap  **Accounts and backup** > **Manage accounts**.
2. Tap an account to customize its settings.

## Remove an account

You can remove accounts from your device.


1. From Settings, tap  **Accounts and backup** > **Manage accounts**.
2. Tap the account and then tap **Remove account**.

## Backup and restore

You can configure your device to back up data to your personal accounts.

### Samsung account

You can enable backup of your information to your Samsung account. Options may vary by carrier.

- From Settings, tap  **Accounts and backup** for the options under **Samsung Cloud**:
  - **Back up data**: Configure your Samsung account to back up your data.
  - **Restore data**: Use your Samsung account to restore your backup data.

### Google Account

You can enable backup of your information to your Google Account.

1. From Settings, tap  **Accounts and backup**.
2. Under **Google Drive**, tap **Back up data**.


### External storage transfer

You can back up your data to an SD card or a USB storage device, or restore backup data using Smart Switch. For more information, see [Bring data from an old device](#).

- From Settings, tap  **Accounts and backup** > **External storage transfer**.

## Google settings

You can configure your device's Google settings. Available options depend on your Google Account.

- From Settings, tap  **Google**, and select an option to customize.



# Accessibility

There are accessibility settings for people who need help seeing, hearing, or otherwise operating their device. Accessibility services are special features that make using the device easier for everyone. For more information about Accessibility for Samsung products, please contact us at [accessibility@sea.samsung.com](mailto:accessibility@sea.samsung.com).

[Recommended for you](#) | [TalkBack](#) | [Visibility enhancements](#) | [Hearing enhancements](#) | [Interaction and dexterity](#) | [Advanced settings](#) | [Installed services](#) | [About Accessibility](#) | [Contact Us](#)

## TalkBack

Use special controls and settings that let you navigate without needing to see the screen.


1. From Settings, tap  **Accessibility** > **TalkBack**.
2. Tap  to enable the feature, and tap an option to customize:
  - **TalkBack shortcut:** Choose a shortcut to quickly turn on TalkBack.
  - **Settings:** Configure TalkBack settings to better assist you.

## Visibility enhancements

You can configure Accessibility features to assist with visual aspects of your device.

### Colors and clarity


You can adjust the colors and contrast of text and other screen elements for easier viewing.

- From Settings, tap  **Accessibility** > **Visibility enhancements** and tap an option:
  - **High contrast fonts:** Adjust the color and outline of fonts to increase the contrast with the background.
  - **High contrast keyboard:** Adjust the size of the Samsung keyboard and change its colors to increase the contrast between the keys and the background.

- **Highlight buttons:** Show buttons with shaded backgrounds to make them stand out better against the wallpaper.
- **Color inversion:** Reverse the display of colors from white text on a black background to black text on a white background.
- **Color correction:** Adjust the color of the screen if you find it difficult to see some colors.
- **Remove animations:** Remove certain screen effects if you are sensitive to motion.

## Size and zoom

You can increase the size of supported screen elements and create shortcuts for accessibility features on your device.


- From Settings, tap  **Accessibility > Visibility enhancements** and tap an option:
  - **Magnifier window:** Magnify content shown on the screen.
  - **Magnification:** Use exaggerated gestures such as triple-tapping, double pinching, and dragging two fingers across the screen.
  - **Large mouse/touchpad pointer:** Use a large pointer for a connected mouse or touchpad (accessories not included).
  - **Font size and style:** Configure screen fonts.
  - **Screen zoom:** Configure the screen zoom level.

## Hearing enhancements

You can configure Accessibility features to assist with audial aspects of the device. Options may vary by carrier.

## Sounds

You can adjust audio quality when using hearing aids or earphones.


- From Settings, tap  **Accessibility > Hearing enhancements** and tap an option:
  - **Real time text:** Activate real-time text (RTT) calling.
  - **Hearing aid support:** Improve the sound quality to work better with hearing aids.



- **Left/right sound balance:** Use the slider to adjust the left and right balance when listening to audio in stereo.
- **Mono audio:** Switch audio from stereo to mono when using one earphone.

## Text display

You can convert speech to text and watch closed captions when viewing multimedia.

- From Settings, tap  **Accessibility** > **Hearing enhancements** and tap an option:
  - **Live transcribe:** Use the microphone to record speech and convert it to text.
  - **Google subtitles (CC):** Configure closed caption and subtitle services.
  - **Sound notifications:** Receive alerts when the device detects a baby crying or a doorbell.

## Interaction and dexterity

You can configure Accessibility features to assist with limited dexterity when interacting with your device.


## Alternate input

You can control your device using different kinds of inputs and controls.

- From Settings, tap  **Accessibility** > **Interaction and dexterity** and tap an option:
  - **Universal switch:** Control your device with your customized switches.
  - **Assistant menu:** Improve device accessibility for users with reduced dexterity.


## Interactions

You can simplify the motions needed to respond to notifications and alarms.

- From Settings, tap  **Accessibility** > **Interaction and dexterity** and tap an option:
  - **Interaction control:** Customize areas of screen interactions, hardkeys, and the keyboard.


## Touch settings

You can adjust your screen to be less sensitive to taps and touches.

- From Settings, tap  **Accessibility** > **Interaction and dexterity** and tap an option:
  - **Touch and hold delay:** Select a time interval for this action.
  - **Tap duration:** Set how long an interaction must be held to be recognized as a tap.
  - **Ignore repeated touches:** Set a time duration in which to ignore repeated touches.

## Mouse and physical keyboard

Configure settings for a connected mouse and physical keyboard.

- From Settings, tap  **Accessibility** > **Interaction and dexterity** and tap an option:
  - **Auto click after pointer stops:** Automatically click on an item after the pointer stops over it.
  - **Sticky keys:** When you press a modifier key like Shift, Ctrl, or Alt, the key stays pressed down, which allows you to enter keyboard shortcuts by pressing one key at a time.
  - **Slow keys:** Set how long a key must be held before it is recognized as a press, which helps avoid accidental key presses.
  - **Bounce keys:** Set how long to wait before accepting a second press from the same key, which helps avoid accidentally pressing the same key multiple times.


## Advanced settings

You can customize additional accessibility features and services for your device.




**TIP** Additional accessibility apps may be downloaded from the Google Play store.

### Accessibility shortcuts

- From Settings, tap  **Accessibility > Advanced settings** and tap an option:
  - **Accessibility button:** Choose an accessibility shortcut for the Accessibility button.
  - **Side and Volume up keys:** Configure selected Accessibility features to open by quickly pressing the Side and Volume up keys at the same time.
  - **Volume up and down keys:** Configure selected services to turn on when you press and hold the Volume up and Volume down keys for three seconds.

### Notifications

- From Settings, tap  **Accessibility > Advanced settings** and tap an option:
  - **Flash notification:** Flash either the camera light or the screen when you receive notifications or when alarms sound.
  - **Time to take action:** Choose how long to show messages that ask you to take action, but are visible only temporarily (like notifications).
  - **Speak keyboard input aloud:** The device will read aloud what you type on the keyboard.

## Installed services

You can install additional assistance services for your device.


- From Settings, tap  **Accessibility > Installed services**.



**NOTE** Additional accessibility services are listed and configured here after they are installed.

## About Accessibility

Legal and license information about the current Accessibility software is available in Settings.

- From Settings, tap  **Accessibility > About Accessibility**. The following information is available:
  - **Version:** View the current Accessibility software version.
  - **Open source licenses:** View information for the open source licenses used for Accessibility.

## Other settings

Configure features on your device that make it easier to use.

[Help](#) | [Android Auto](#) | [Dual Messenger](#) | [Quick share](#) | [About tablet](#)

## Help

View the user manual for your device.

- From Settings, tap  **Help**.

## Android Auto

Android Auto brings the most useful apps to your device screen or your compatible car display in a format that makes it easy for you to keep your main focus on driving. You can control features like navigation and maps, calls and text messages, and music.

- From Settings, tap  **Advanced features > Android Auto**.

## Connect your device

Before you connect your device for the first time, turn on your car and allow time to set up Android Auto.

1. Plug a USB cable into your vehicle's USB port and plug the other end of the cable into your device.



2. Your device may ask you to download the Android Auto app or update to the newest version of the app. Follow the prompts and complete your setup.
3. On your car's display select Android Auto and follow the prompts.



**NOTE** Your device's Bluetooth is turned on automatically when Android Auto is connected to your car through USB.


## Dual Messenger

Use two separate accounts for the same app.

1. From Settings, tap  **Advanced features** > **Dual Messenger**.
2. Tap  next to supported apps to enable the feature for each app.
  - To select which contacts have access to the secondary messenger app, tap **Use separate contacts list**.

## About tablet

View information about your device, including current status, legal information, hardware and software versions, and more.

1. From Settings, tap  **About tablet** to view your model number, serial number, and IMEI information.
2. Tap additional items to view more information about your device.



**TIP** You can view your device's FCC ID from **About tablet** > **Status information**.

# Learn more

---

## Videos

[youtube.com/samsungcare](https://youtube.com/samsungcare)

## Samsung Care+

[samsung.com/us/support](https://samsung.com/us/support)

## Talk to an agent

Contact us on [Facebook Messenger](#)

Find us on [Facebook](#)

Follow us on [Twitter](#)

## Tips

[samsung.com/us/support/tips](https://samsung.com/us/support/tips)

# Legal information

---

READ THIS INFORMATION BEFORE USING YOUR MOBILE DEVICE.

**Arbitration Agreement** – This Product is subject to a binding arbitration agreement between you and SAMSUNG ELECTRONICS AMERICA, INC. ("Samsung"). You can opt out of the agreement within 30 calendar days of the first consumer purchase by emailing [optout@sea.samsung.com](mailto:optout@sea.samsung.com) or calling 1-800-SAMSUNG (726-7864) and providing the applicable information.

The full Arbitration Agreement, Standard One-year Limited Warranty, End User License Agreement (EULA), and Health & Safety Information for your device are available online:

Tablet:

- English: [samsung.com/us/Legal/Tablet-HSGuide](https://samsung.com/us/Legal/Tablet-HSGuide)
- Spanish: [samsung.com/us/Legal/Tablet-HSGuide-SP](https://samsung.com/us/Legal/Tablet-HSGuide-SP)

This information can also be found on the device in the "About device" or "About phone" or "About tablet" section, for example:

- **Settings > About phone or About device or About tablet > Legal information > Samsung legal**
- Or, search "Legal"

If your device required Federal Communications Commission (FCC) approval, you can view the FCC certification by opening **Settings > About phone or About device or About tablet > Status information**.

## Restricting children's access to your mobile device

Your device is not a toy. Do not allow children to play with it because they could hurt themselves and others, or damage the device. Keep the device and all its parts and accessories out of the reach of small children.

# Samsung Electronics America, Inc.

Address:

85 Challenger Road  
Ridgefield Park  
New Jersey 07660

Phone: 1-800-SAMSUNG (726-7864)

Internet: **samsung.com**

©2021 Samsung Electronics Co., Ltd. Other company and product names mentioned herein may be trademarks of their respective owners.

Manufactured under license from Dolby Laboratories. Dolby, Dolby Atmos, and the double-D symbol are trademarks of Dolby Laboratories.



Some multimedia (audio/video) files contain Digital Rights Management (DRM) technology to verify you have the right to use the files. Preloaded apps on your device may not be compatible with DRM-protected files.

Screen images are simulated. Appearance of device may vary.

Descriptions are based on the device's default settings. Some content may differ depending on carrier, model, or software.

The actual available capacity of the internal memory is less than the specified capacity because the operating system and default applications occupy part of the memory. The available capacity may change when you upgrade the device.

Please check with your service provider to verify qualifying services/features.



# Health and Safety

**WARNING!** To avoid electric shock and damage to your device, do not charge device while it is wet or in an area where it could get wet. Do not handle device, charger or cords with wet hands while charging.

## Maintaining dust and water resistance

The device is not impervious to dust and water damage in any situation. It is important that all compartments are closed tightly.

Follow these tips carefully to prevent damage to the device and maintain dust and water resistance performance:

- Water resistant based on IP68 rating, which tests submersion in fresh water deeper than 1.5 meters or keep it submerged for more than 30 minutes. If device is exposed to fresh water, dry it thoroughly with a clean, soft cloth; if exposed to liquid other than fresh water, rinse with fresh water and dry as directed.
- Any device which uses accessible compartments or ports that can be opened should have these sealed or closed tightly to prevent liquid from entering the system.
- If the device has been immersed in water or the microphone or speaker is wet, sound may not be heard clearly during a call. After wiping the device with a dry cloth, dry it thoroughly before using it.
- Do not expose the device to water at high pressure.
- If the device is dropped or receives an impact, the water and dust resistant features of the device may be damaged.

**Note:** Liquid other than fresh water may enter the device faster. Failure to rinse the device in fresh water and dry it as instructed may cause the device to suffer from operability or cosmetic issues.

## **Samsung Knox**

Samsung Knox is Samsung's security platform. Additional licensing fees may be required for enterprise use. For more information about Knox, please refer to: [www.samsung.com/us/knox](http://www.samsung.com/us/knox)

## **Specific Absorption Rate (SAR) certification information**

For information about SAR, visit :

- <https://www.fcc.gov/general/radio-frequency-safety-0>
- [www.fcc.gov/encyclopedia/  
specific-absorption-rate-sar-cellular-telephones](http://www.fcc.gov/encyclopedia/specific-absorption-rate-sar-cellular-telephones)
- [www.samsung.com/sar](http://www.samsung.com/sar)

**Note:** Foldable devices can be stored in an environment with ambient temperatures of -10°C / 14.0°F to 50°C / 122°F safely; prolonged exposure to temperatures outside these recommended temperatures can pose a high risk of damage to the device.

## Samsung mobile products and recycling

**WARNING!** Never dispose of batteries in a fire because they may explode. Do not disassemble, crush, puncture, heat, burn or reuse.

For battery and cell phone recycling, go to [call2recycle.org](http://call2recycle.org) or call 1-800-822-8837.



For more recycling information, go to our website:  
[www.samsung.com/recycling](http://www.samsung.com/recycling) or call 1-800-SAMSUNG.

## Your location

Location-based information on that can be used to determine the approximate location of a mobile device. If you use applications that require location-based information (e.g., driving directions), such information may be shared with third-parties, including your wireless service provider, applications providers, Samsung, and other third-parties providing services.

## Navigation

Maps, directions, and other navigation data, including data relating to your current location, may contain inaccurate or incomplete data. Therefore, you should always pay attention to road conditions, closures, traffic, and all other factors that may impact safe driving or walking.

## FCC Part 15 Information and Notices

**. Note:** Any device that uses Bluetooth or Wi-Fi is subject to FCC Part 15. Any device with a power supply is subject to Part 15 which also covers both intentional radiators (Bluetooth and Wi-Fi) and unintentional radiators (such as emissions from power supplies and circuit boards).

Pursuant to part 15.21 of the FCC Rules, you are cautioned that changes or modifications not expressly approved by Samsung

could void your authority to operate the device. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

. **Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the mobile device if such interference cannot be eliminated.

## **GPS & AGPS**

Certain Samsung Mobile Devices can use a Global Positioning System (GPS) signal for location-based applications. Changes may affect the performance of location-based technology on your mobile device.

Certain Samsung Mobile Devices can also use an Assisted Global Positioning System (AGPS), which obtains information from the cellular network to improve GPS performance. Contact your wireless service provider for details.

## **Use of AGPS in emergency calls**

When you make an emergency call, the cellular network may activate AGPS technology in your mobile device to tell the emergency responders your approximate location.

AGPS has limitations and might not work in your area.

## **Wireless Emergency Alerts (WEA)**

The Wireless Emergency Alerts (WEA) is part of the US emergency system. Since 2012, the WEA system been used to warn the public weather condition, missing children, and other critical situations

– all through alerts on compatible cell phones and other mobile devices. For more information visit: <https://www.fcc.gov/document/fcc-renames-cmas-wireless-emergency-alerts-wea>

## **Emergency calls**

Emergency calls may not be possible on all wireless mobile device networks or when certain network services and/or mobile device features are in use. Check with local service providers. If certain features are in use (e.g. call blocking) you may first need to deactivate those features before you can make an emergency call.

## **Device temperature**

Caution! Some applications or prolonged usage may increase device temperature.

If the device feels hot to the touch, discontinue use and close all applications or turn off the device until it cools.

Always ensure that the device has adequate ventilation and air flow. Covering the device can trap any dissipating heat and redirect it back to the device while it is active.

©2020 Samsung Electronics America, Inc. Samsung is a registered trademark of Samsung Electronics Co., Ltd.