


1 From the Home screen,  → "Settings" → "言語と文字入力" → "入力方法を設定" → "設定" under "Swype"

2 Tap an item to set


項目		説明
入力方法を選択		Switch Keyboard.
Swypeの使い方		Display Tutorial of Swype to check operation.
個人辞書		Save words, etc.
優先設定	音声フィードバック	Set whether to sound key operation sound when a key is tapped.
	バイブレーション設定	Set whether to vibrate the terminal when a key is tapped.
	ヒントを表示	Set whether to show hints for Swype when performing specified operations such as selecting a candidate highlighted in blue from the word suggestions twice in a row.

Checking/Ending a running application

1 → "タスクマネージャー"



Task Manager Screen

- ① Close Task manager.
- ② Tabs are displayed.
 - Tap "Active applications" tab to display running applications.
 - Tap "RAM manager" tab to display RAM use. Tap "Clear memory" tab to erase RAM contents.
- ③ Running applications are displayed. Tap  to end the application.
- ④ End all running applications.

Initial settings

When you turn this terminal ON for the first time after purchasing, follow the onscreen instructions to make settings for language, Google account settings, Google location information settings, and initial setting for docomo service.

1 "開始"

- To change the language, select "English" → Language you want to use.

2 Set a Google account

- Tap "今は設定しない" to set an account later.

■ When not connecting to the internet

Follow the onscreen instructions to set the Wi-Fi (P. ●●) then set a Google account or perform operations for setting later.

3 Set whether to purchase by Google Play

4 Set whether to restore or back up using a Google account → "次へ"

5 Set whether to permit to use Google location → "次へ"

- When an entry screen for owner of the terminal, operate according to the onscreen instructions.

6 "完了"

- Continue to perform initial settings for DOCOMO Services.

7 "進む"

- A screen for installing applications collectively appears.
- Select "インストールする" to install applications for service you have already subscribed. To stop installing them, select "インストールしない".

8 "進む"

- Setting screen for docomo apps password appears.

9 Set a docomo apps password.

- If you select "設定する", enter a docomo apps password.


10 "進む"

- A screen for the location information appears.
- Select "位置提供ON" to permit sending location information.
- Select "位置提供OFF" to reject sending location information.
- Select "電話帳登録外拒否" not to send location information to the other party who is not saved in Phonebook.

11 "進む" → "OK"

- A Home selection screen appears.

12 "docomo Palette UI" → "OK"

- Select "TouchWizホーム" to use the Home for the terminal.
- From the Home screen, tap  → "Settings" → "ホーム選択" to change the Home.

Setting Wi-Fi

You can use Wi-Fi function of the terminal to connect to wireless access point of your home or company network. Also, you can connect to Public wireless LAN service access point to use mails and Internet.

Enabling Wi-Fi and connecting to network

1 From the Home screen, → "Settings" → "Wi-Fi"

A Wi-Fi setting screen appears.

2 Mark "Wi-Fi"

- Scanning available Wi-Fi networks starts automatically and a list is displayed.
- ネットワークが表示されない場合は「スキャン」をタップすると再度検索できます。

3 Tap a Wi-Fi network you want to connect → "接続"

- To connect to a network protected by security, enter a password and tap "OK".
- Entered password is displayed with "●". Mark "Show password" to display password.

To use Static IP address

Mark "拡張オプションを表示" → "IP設定" field → "静的" → Set IP address, Gateway, Network prefix length, DNS 1, DNS 2.

Information

- The network password connected once is automatically saved so that you do not need to enter it next time.
- You can use packet communication even when Wi-Fi function is ON. However, Wi-Fi takes precedence while connecting Wi-Fi network. When Wi-Fi network is disconnected, connection switches to 3G/GPRS network automatically. Note that packet communication fee applies for using 3G/GPRS network.

■ To change network password

- 1 Touch and hold a Wi-Fi network you want to change on the Wi-Fi settings screen → "ネットワーク設定を変更"
- 2 Enter the password → "OK"
 - Entered password is displayed with "●". Mark "パスワードを表示" to display password.

Disconnecting Wi-Fi network

- 1 On the Wi-Fi setting screen, tap a connected Wi-Fi network → "切断"

Setting online service accounts

Online service accounts such as Facebook, LinkedIn, mixi, Twitter, Google can be created on the terminal and you can synchronize or send/receive data between the terminal and each online service server.

- You can set a Microsoft Exchange ActiveSync account to synchronize with Microsoft Exchange Server 2010 (or version before that).

Information

- For setting for each account, perform under the environment where Internet connection is available.
- Depending on country/region, some function such as auto-synchronization may not be available.
- For setting each account, refer to the following website.
 - docomo account: <http://www.nttdocomo.co.jp/>
 - Facebook account: <http://www.facebook.com/>
 - LinkedIn Account: <http://www.linkedin.com/>
 - mixi account: <http://mixi.jp/>
 - Twitter account: <http://www.twitter.com/>
 - Google account: <http://www.google.co.jp/>
- To set Microsoft Exchange ActiveSync account, ask your network administrator for the setting information.

Setting synchronization

1 From the Home screen,  → "設定" → "アカウントと同期"

2 Mark an item to set

Item	Description
Background data	All applications installed to the terminal execute data communication automatically.
Auto-sync	Data of Google applications such as Gmail, S Planner or Contacts are synchronized automatically.

Setting account

1 From the Home screen,  → "設定" → "アカウントと同期"

2 "アカウントを追加" → Tap a type of account you want to add

- To set Exchange account for synchronization/transfer of data with Exchange server, tap "Microsoft Exchange ActiveSync".

When the contract conditions for the Social Hub appears

Select country → Check the contract conditions → Mark "上記の契約条件全てに同意します。" → Tap "同意".

3 Set according to the onscreen instructions

For the online services requiring log in, enter a mail address, password, etc, and tap "ログイン".

Information

- To edit a registered account, delete the account and register again.
- To change synchronizing items, tap an account on the "アカウントと同期" → mark only items to synchronize.
- To synchronize manually, on the "アカウントと同期" screen, tap an account to synchronize → Tap "すぐに同期".
- Tap "全てを同期" on the "アカウントと同期" screen to synchronize all the account manually.

■ Samsung account

Operating the terminal remotely using SamsungDive is available.

- For details on SamsungDive, refer to the following website.
<http://www.samsungdive.com>

Information

- If you set a Samsung account, you cannot execute "工場出荷状態に初期" (P.<?>). Delete Samsung account to execute "工場出荷状態に初期化".
- Samsung account password is required to delete Samsung account. Make sure to note down, etc. the password you set when registering a Samsung account not to forget it. If you forget your Samsung account password, contact a docomo Shop.

Deleting account

When registered account is deleted, the account data saved to the terminal (messages, contacts, settings, etc.) is also deleted.

- The data stored on the server is not deleted.

1 From the Home screen,  → "設定" → "アカウントと同期"

2 Tap an account to delete → "アカウントを削除" → "アカウントを削除"


Information

- Some registered account such as the first Google account may not be deleted.
- To delete Google account, perform "工場出荷状態に初期化" (P.<?>).

Status bar



Icons are displayed to indicate operation icon, status of the terminal, notification information etc. on the status bar located lower part of display.










 

- ① Return to the last screen. End application.
 - Hide keyboard etc. while  is displayed.
- ② Return to the Home screen.
 - Touch and hold to activate Task manager (P. ●●).
- ③ Display a list of recently-used applications (P. ●●).
- ④ Multi function key: Save the displayed screen as an image (P. ●●).
 - Icon to be displayed changes depending on function when item is changed by quick activation (P. ●●).
- ⑤ Display optional menu according to the status of displayed application.
 - You cannot operate from the status bar depending on application.

- ⑥ Display a list of mini applications to activate while displaying the operating application.
- "Eメール": Activate Email (P. ●●).
 - "SMS": Activate SMS (P. ●●).
 - "Sプランナー": Activate S Planner (P. ●●).
 - "アラーム": Activate Alarm (P. ●●).
 - "ペンメモ": Activate ペンメモ (P. ●●).
 - "世界時計": Activate World clock (P. ●●).
 - "電卓": Activate Calculator (P. ●●).
 - "音楽プレーヤー": Activate Music player (P. ●●).
 - "タスクマネージャー": Activate Task manager (P. ●●).
- ⑦ Display notification icon when notification information exists.
- Tap to display setting/notification panel (P. ●●).
- ⑧ Display status icon to show time and the status of the terminal.
- Tap to display setting/notification panel (P. ●●).

Information







 






- Different operating icon or  (gray circle) may be displayed depending on the activating application.
-  → tap "編集" to display the editing screen of a list of mini applications.
 - Touch and hold the application to move on the editing screen of a list of mini applications → drag to the position you want to move to and release it → tap "完了" to move application.
 - Touch and hold the application to delete on the editing screen of a list of mini applications → drag it to the top of the list and release it → tap "完了" to delete application from the list of mini applications.
 - Touch and hold the application to add on the editing screen of a list of mini applications → drag it to the list and release it → tap "完了" to add application from the list of mini applications.

Main icons displayed on the status bar

Notification icon	
	New Gmail exists
	New email exists
	New SMS exists/Delivery report of SMS exists
	Trouble in delivery of SMS
	Omakase lock is set
	New instant message exists
	Data downloading/Download completed, application downloading <ul style="list-style-type: none">• While downloading, arrow is in animation.
	Data uploading/Upload completed <ul style="list-style-type: none">• While uploading, arrow is in animation.• While uploading multiple images via Bluetooth communication, number of upload uncompleted images is displayed.
	Uploading data to Picasa etc. is completed
	Alarm exists









IN PROGRESS

Notification icon

	Alarm of S Planner, etc. exists
	Background playing/pausing Music
	USB connecting
	Error message exists
	Update for installed application from Google play exists
	Installation of application is completed
	Navigating by Google Map Navi
	Waiting for data acceptance by Bluetooth communication
	Keyboard is displayed.
	USB tethering is ON.
	Wi-Fi tethering is ON.
	USB tethering and Wi-Fi tethering are ON at the same time.
	Activating AllShare.


Notification icon

 








IN PROGRESS






	Arrival news exists in Pulse.
	GPS positioning location completed/positioning
	<p>Application whose screen can be zoomed out is running.</p> <ul style="list-style-type: none"> • Tap to open menu. Tap "Stretch to fill screen" "Zoom to fill screen" to switch screen view. • If the Compatibility Zoom screen appears when activating an application, tap "OK" to operate.
	Hiding notification information.
	VPN connected/VPN not connected
	Wi-Fi Direct in use
	Power saving mode is set
	Available memory space of the terminal drops

Status icon

IN PROGRESS

 
 (Weak Strong)	Signal levels
---	---------------


	Signal levels (During International roaming)
	Out of service area
	GPRS available/GPRS in use (arrow is green while sending/receiving, gray during stand-by)
	FOMA high-speed network available/FOMA high-speed network in use (arrow is green while sending/receiving, gray during stand-by)
	3G available/3G in use (arrow is green while sending/receiving, gray during stand-by)
	Wi-Fi available/in use (arrow is green while sending/receiving, gray during stand-by)
	Bluetooth function enabled
	Connected to Bluetooth device
	In airplane mode
	Connected to LTE network (arrow color:gray)
	LTE network communication in use (arrow color left: orange, right: green)


 ↔  Low High	Battery level
 / 	Charging battery/Charging by connecting to a PC with USB cable <ul style="list-style-type: none">• While charging via a PC, it may take longer time to charge or charging may not proceed depending on the terminal status.
	Alarm set

Setting/Notification panel

Tap time display or an icon on the status bar to display setting/notification panel. You can tap the icons to set function or check the notification information.

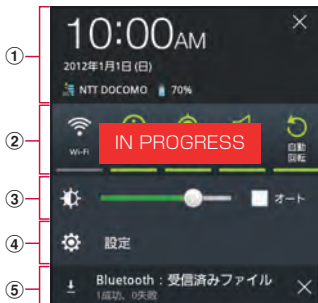

- ① Display time, date, battery level, the connecting network operator name, etc.
 - Tap  to close setting/notification panel.

- ② Change settings.
- "Wi-Fi": Switch enabling/disabling Wi-Fi function.
 - "Notification": Switch displaying/not displaying notification information
 - "GPS": Switch enabling/disabling GPS function.
 - "サウンド" / "バイブ": Switch to "サウンド" to enable each volume. Switch to "バイブ" to disable each sound and set vibration.
 - "画面回転": Switch enabling/disabling Auto-rotate screen (P.70).
 - "Bluetooth": Switch enabling/disabling Bluetooth function (P.<?>).
 - "Airplane mode": Switch enabling/disabling Airplane mode.
 - Slide left and right to display setting items not to display.
 - Icons are displayed in yellow when they are enabled.
- ③ Adjust the display brightness (P.<?>).
- Mark "オート" to adjust brightness automatically.
- ④ Display the setting menu (P.<?>).
- ⑤ Display the notification information such as reception of Email or SMS.
- Tap  to eliminate the notification information.

Action bar

When you activate an application, the action bar is displayed at the top of the display. Tabs or operation icons are displayed in the action bar.

- Depending on displaying application, displayed contents in the action bar vary.



Content of action bar (display example)

- ① An icon of the displaying application is displayed.
- ② Tabs or account name are displayed.
- ③ Operation icons which you can operate in the displayed screen are displayed.
- ④ Display menu.


docomo Palette UI

Home screen

When the terminal is powered on and started, the Home screen appears.



Home screen (example)

- ① **The current position of the Home screen is displayed. You can toggle the screens by scrolling/flicking left and right.**
- ② **Widget (e.g.:Search, iチャンネルウィジェット (i-Channel Widget))**
Tap to activate or operate widget (application located on the Home screen).
- ③ **Shortcut**
Tap to activate frequent-used application etc.
- ④ **Displayed even when the home screen is switched.**
Icons other than , shortcuts, folders and groups can be located.

Managing Home screen

Addable items on Home screen




Add shortcuts, widgets, folders, application groups, etc.













Adding shortcuts














- 1 From the Home screen, touch and hold a wallpaper in which shortcuts or widgets are not displayed
- 2 “ショートカット” → Tap an item you want to add

Adding widgets

- 1 From the Home screen, touch and hold a wallpaper in which shortcuts or widgets are not displayed
- 2 “ウィジェット” → Tap an item you want to add

Icon	Widget	IN PROGRESS	Description
	アナログ時計		Display analog clock.
	カレンダー		Display calendar to check schedule or create memo.
	ソフトウェア更新		Check/perform software update.

Icon	Widget	Description
	デジタル時計	Display clock.
	デュアル時計 (アナログ)	Display analog clock.
	デュアル時計 (デジタル)	Display digital clock.
	ドコモ位置情報	Set service that uses location information.
	パーソナルエリア	Display personal information. You can view My menu, docomo points, contractual services, charges. * Personal area is only displayed on docomo Palette UI home.
	ピクチャフレーム	Display images.
	ブックマーク	Select a bookmark to browse the web page.
	プログラムモニター	Display the number of active applications.
	ホーム画面のヒント	Display Home screen tips.
	Buddies now	send SMS to saved member. View Contact information.
	Contents Headline	Display recommended music, video, e-books, etc. in dmarket.
	docomo Wi-Fiかんたん接続	Connect/disconnect to/from DOCOMO public wireless LAN service "docomo Wi-Fi" or private Wi-Fi environment by tapping once.

Icon	Widget	IN PROGRESS	Description
	Eメール		Display the part of the Email Inbox.
	Gmail		Display the part of the Gmail Inbox.
	Google+投稿		Upload shot photo etc. to Google+.
	Google検索		Display Quick search. * Select widget that is suitable design for the using Home screen.
	iチャンネル ウィジェット		Display various information such as weather or news.
	ICタグ・バーコードリーダー		Read IC tags and barcodes.
	NOTTV ウィジェット		You can watch mobacas. Broadcast programs and contents such as "NOTTV" are available.
	Playストア		Display recommended applications.
	S Suggest		Check/Download latest applications.
	Sブックマーク		Select a bookmark saved in the terminal or Google account to browse the web page.
	TheNewsCafe		Display news.
	YouTube		Display recommended videos.
	音楽プレイヤー		Play music.

Icon	Widget	IN PROGRESS	Description
	交通状況		Display traffic information or required time from the current location to destination. * It can be used at some overseas locations.
	診断ツール		Start 診断ツール (Diagnosis tool).
	動画		Display video list.
	連絡先		Allocate registered to “連絡先” application provided by Samsung to the Home screen to make send mails.

Information

- When “TouchWizホーム” is set, available widgets are different. Also, icons of widgets may differ.

Adding folders


- 1 From the Home screen, touch and hold a wallpaper in which shortcuts or widgets are not displayed
- 2 “フォルダ” → Tap a folder you want to add

Information

- To delete folder, touch and hold the folder → “削除”.

Removing/Moving a shortcut or widget from the Home screen

e.g.: Deleting

- 1 From the Home screen, touch and hold an application or widget you want to uninstall
 -  on the upper right of the Home screen is changed to “削除”.
- 2 Drag to “削除” and release it
 - Drag to “削除”, and release it when widget or shortcut is displayed in red.

Moving

Drag to the position you want to move to and release it.

Uninstalling applications/widgets

- 1 From the Home screen, touch and hold an application or widget you want to uninstall
- 2 “アンインストール” → “OK”
Uninstallation completion screen appears.
- 3 “OK”

Changing folder name

- 1 From the Home screen, touch and hold a folder you want to rename
 - Folders can be renamed are only created at “新しいフォルダ”.
- 2 “名称変更” → Enter folder name → “OK”

Information


- Alternatively, open a folder and touch and hold a folder name to rename.

Changing Kisekae

Set wallpaper or application list at one time.

- 1 From the Home screen, touch and hold a wallpaper in which shortcuts or widgets are not displayed → “きせかえ”
- 2 Select item → “設定する”

Information


- To delete installed Kisekae theme, on the Kisekae setting screen, select theme you want to delete → “削除” → “削除する”. You cannot delete pre-installed Kisekae themes.
- To download from Kisekae site, on the Kisekae setting screen, tap “サイトから探す”. When you download contents,  appears on the status bar.

Changing wallpaper

You can change Home screen wallpaper as you like.

- 1 From the Home screen, touch and hold a wallpaper in which shortcuts or widgets are not displayed → “壁紙”
- 2 Select from “ギャラリー” / “ライブ壁紙” / “壁紙” / “壁紙ギャラリー” → Select a wallpaper
 - If you select Gallery, select a wallpaper and tap “完了”. If size requires to be changed, drag the blue frame to change the size and tap “完了”.
 - If you select Live wallpapers, select a wallpaper and tap “壁紙を設定”.
 - If you select Wallpaper gallery or Wallpapers, select a wallpaper and tap “壁紙を設定”.


Adding home screens

- 1 From the Home screen, touch and hold a wallpaper in which shortcuts or widgets are not displayed → “ホーム画面一覧”
 - You can display Home screen list to narrow two fingers' distance on the Home screen.
- 2 Tap 
 - Add up to 12 home screens.



Sorting home screens

- 1 From the Home screen, touch and hold a wallpaper in which shortcuts or widgets are not displayed → “ホーム画面一覧”
 - You can display Home screen list to narrow two fingers' distance on the Home screen.
- 2 Touch and hold a thumbnail of Home screen
- 3 Drag to the position you want to move to and release it

Deleting home screen

- 1 From the Home screen, touch and hold a wallpaper in which shortcuts or widgets are not displayed → “ホーム画面一覧”
 - You can display Home screen list to narrow two fingers' distance on the Home screen.
- 2 Long-touch a thumbnail of the home screen you want to remove → “Delete”
 - Alternatively, you can tap  of the thumbnail of the home screen you want to remove.

Searching


Tap  on the upper left of the Home screen so that you can search data such as applications or contacts saved in the terminal or Internet information by entering characters. Also, tap  on the Home screen to search Internet information by entering searching word using your voice.

Text search




1 From the Home screen,

- A search screen appears.
- You can also tap “検索” on the Applications screen to display the search screen.
- When the terms of services of Google search is displayed, follow the onscreen instructions to confirm and make settings.


2 Enter characters you want to search

- Search suggestions list of internet information appears on the right of the screen. If there are search results on the terminal, search suggestions list appears on the right of the screen.
- Tap  to search again.


Information

- On the search screen, tap  → “設定” to set search target or Google search settings.
- On the search screen, tap  → “ヘルプ” to check the help of Google search.
- To change to voice search, tap .

Voice search

- 1 From the Home screen, **
 - A Voice search screen appears displaying “お話しください”.
- 2 Speak a search text to the microphone**
 - Search suggestions list appears.
 - When only one search suggestion exists, Google home page appears with a search text entered.
- 3 Tap the search target from the list**
 - Google home page appears with a search text entered.

Information

- On the Voice Search screen, tap  → “設定” to set the Google voice recognition.

Application screen

Functions and applications of the terminal can be displayed as icons on the application screen. You can activate them or check the settings by tapping the icons.

Displaying the application screen


- 1 From the Home screen, 



① Group

- Manage applications by groups.
- Tap to show/hide applications in the group.
- The number at the right side indicates the number of applications in the group.

② Application





- If you download a new applications or update applications,  appears at the top left of each application icon.

アプリケーション一覧


The following applications are pre-installed by default.




- Some applications require subscriptions to use.

■ DOCOMO Services


Icon	Application	IN PROGRESS	Description
	dメニュー		Shortcut application for "dメニュー". You can search easily i-mode compatible contents as well as other useful contents for device.
	dマーケット		Activate dmarket. On dmarket, you can purchase contents such as music, videos, e-books, etc. Provide information of applications on Google Play.
	iチャンネル		Use iチャンネル (i-Channel).
	地図アプリ		Functions such as 地図 (Map), お店や施設検索 (Shop and facility search), ナビ (Navigation), 乗換 (Transfer function), 訪れた街 (Visited places) support your outing.

■ Basic functions

Icon	Application	IN PROGRESS	Description
	電話帳		Manage contacts using the terminal's "連絡先" application provided by Samsung.

Icon	Application	IN PROGRESS	Description
	SDカードバックアップ		Transfer/back up data such as phonebook, sp-mode mail, bookmark using an external storage such as a microSD card. For details, refer to (P. ●●).
	spモードメール		Send/Receive the mail using docomo mail address (@docomo.ne.jp). Pictogram and Deco-mail are available. Auto reception is also supported (P. ●●).
	エリアメール		An application to receive and view Early Warning "エリアメール".

■ Entertainment


Icon	Application	IN PROGRESS	Description
	メディアプレイヤー		Play music or video.

■ Osaifu/Shopping

Icon	Application	IN PROGRESS	Description
	トルカ		Acquire, display, search, or refresh ToruCa.








■ Settings

IN PROGRESS






Icon	Application	Description
	設定	Make the terminal settings.

■ Google

IN PROGRESS




Icon	Application	Description
	Eメール	Set Email account to send/receive emails.
	Gmail	Send/Receive emails via Gmail.
	トーク	Chat via Google Talk.
	ブラウザ	Web browser application.
	検索	Search various information by the quick search box.
	Play ストア	Download applications from Google Play.
	YouTube	Play/Post videos.
	マップ	Check current location or search a destination with Google Maps.











IN PROGRESS

Icon	Application	Description
	ナビ	Check route to the destination by Google Maps Navigation.
	ローカル	Search information such as shops etc. around the current location.
	Latitude	Check locations on the map with friend or send mail.
	Google+	Google SNS is available.
	メッセージャー	Invite multiple friend groups to one simple group chat to enjoy with all members on one page.

■ Download Application

IN PROGRESS

Icon	Application	Description
	7notes with mazec-T	Create memo quickly by handwritten input.
	AllShare	Share files with DLNA (Digital Living Network Alliance) device.
	Beam	

Icon	Application	Description
	BOOKストアマイ本棚	View e-books bought via dmarket book store.
	ChatON	Enjoy group chat with this application.
	Chrome	
	Gガイド番組表	An app for viewing terrestrial and BS program schedules. Program searching via keywords and genres, 1 Seg broadcast viewing and preset recording, and remote recording from outside locations are available.
	ICタグ・バーコードリーダー	Read IC tags and barcodes.
	NOTTV	You can watch mobacas. Broadcast programs and contents such as "NOTTV" are available.
	Playムービー	You can purchase videos from Google Play.
	Polaris Office	View/Edit/Create an Office document.
	S Suggest	Search/download latest applications recommended by Samsung.
	Samsung Apps	Download useful applications or update installed applications.