

iTable 406

 
User Manual



Notice

- Thank you for purchasing this product.
- Please take time to read and understand the instruction manual carefully.
- Please keep the manual in good condition for future reference.
- This product is suitable for AC 100V-240V voltage environment.
- Do not leave the unit unattended when the power is on. When the product is in standby, mode, remove the device socket and disconnect the power supply.
- Do not operate this unit if the power supply or plug is damaged.
- If your iTable406 is damaged or immersed in water, disconnect the power supply immediately and contact customer service.
- Power cables are kept away from **extreme heat**. If power cables are damaged, do not use them.
- **Do NOT insert anything** into anything into exposed opening of this product.
- This product should be used indoors. Please avoid sun exposure, moisture and extreme temperature.
- Do not attempt to replace parts on this product. Opening or removing any part may result in electric shock or injury.
- If you have any medical conditions, pacemaker, or vulnerable to electronic interference, please consult with your Doctor before using the iTable.
- If you lack relevant experience or understanding of this product, please use this product under supervision and guidance.
- Children should use this product under adult supervision.
- If the power cables are damaged, they must be replaced by the manufacturer or experienced Service technician. Tampering with the product cause harm and void any Warranty.
- Please refer to the Troubleshooting section this manual for solutions to common issues. Contact customer service immediately for repair. Do not disassemble or attempt to repair anything not listed in the troubleshooting section.
- A power cord connected to a socket-outlet with earthing connection.
- For pluggable equipment, the socket-outlet shall be easily ACCESSIBLE

 


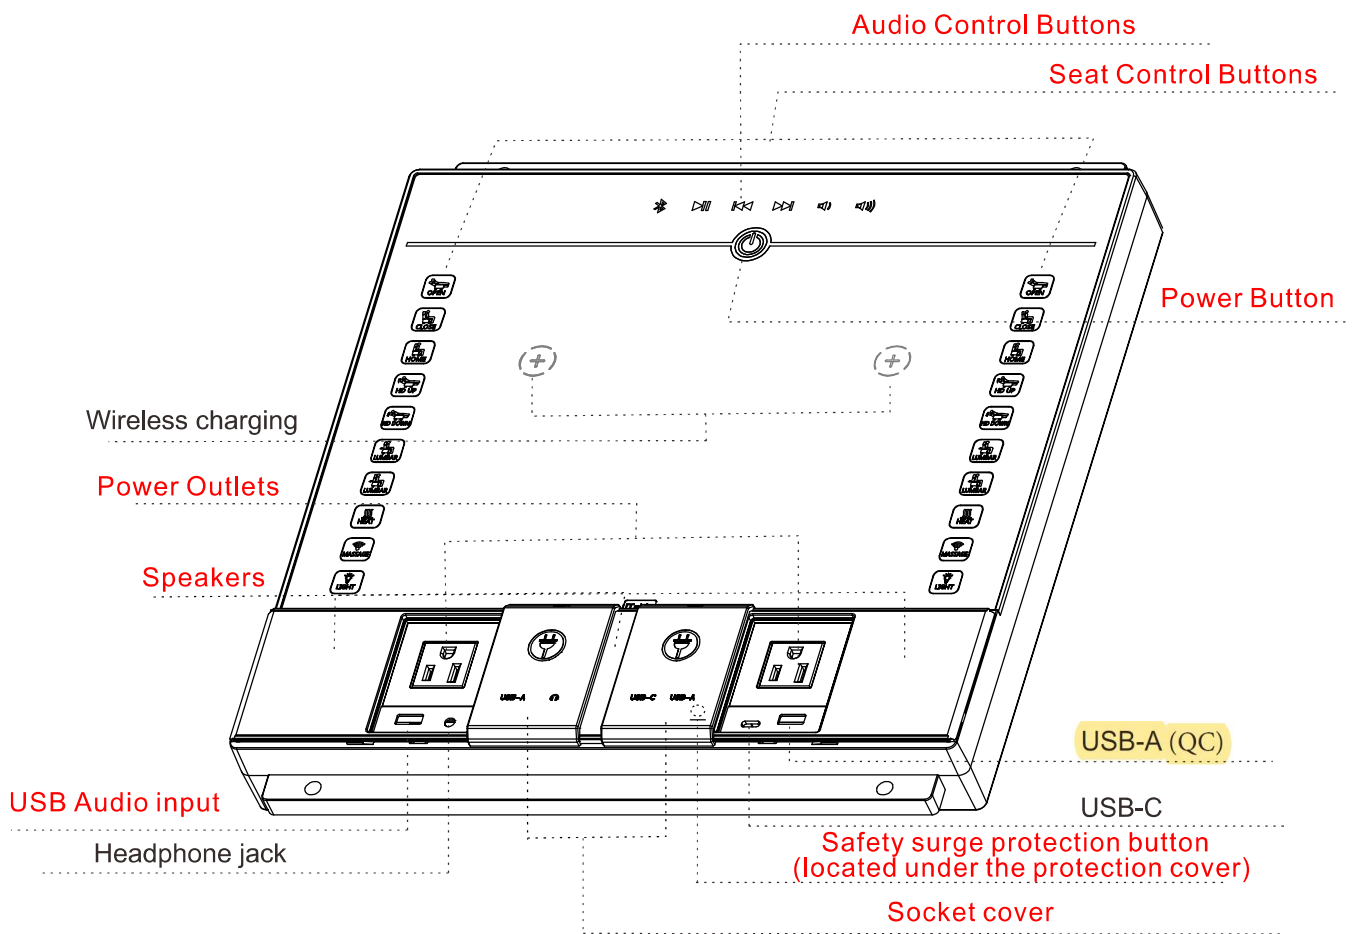











Panel Overview





 





Buttons and Functions

Icon	Function	Icon	Function	Icon	Function
	Power		Seat open		Heat
	Bluetooth		Seat close		Massage
	Pause/Play		Seat reset		lights on/off
	volume -		Headrest open		A power outlet
	volume +		Headrest close		USB-A
	Audio Back		Lumbar open		Wireless charging
	Audio Forward		Lumbar close		USB-C
	The headset model				

Instructions

- >> Plug the product into an available household electrical outlet.
- >> Position your phone's wireless charging receiver at iTable406  and lay it flat on top. If the device does not respond, move the mobile phone until the receiver is aligned .
- >> Push the slider in the middle direction to directly use the power socket (CN, US, UKCA, CE, AU optional), USB-A charging and USB-C charging.
- >> Long press to power on the audio and seat control system. The sound touch interface lights up blue, the seat touch interface lights up white. Bluetooth goes into automatic search mode.
- >> Bluetooth goes into standby mode when the sound and seat control systems are turned on. Open your Bluetooth device and search for the Bluetooth name "iTable406" and click connection is successful, the stereo plays a "beep". If you want to disconnect the current Bluetooth connection, press  and hold for about 3S, and the Bluetooth will be restored to the state to be connected.
- >> Touch  to pause or play music.
- >> Touch  to reduce the volume, Tap and hold  to quickly reduce the volume.
- >> Touch  turn up the volume. Tap and hold to  quickly increase the volume.
- >> Touch  back to the previous song.
- >> Touch  to go to the next song.
- >> Insert the USB storage (the USB port next to the headphone hole) with music files, and the product will automatically enter the USB playback mode. Disconnect the USB connection and the device automatically switches to Bluetooth mode. (supported file formats . Mp3 / . Mp2 / . wam / . asf / . WMV / . Wav / . Aif / . Aiff / . : m4a / . Aac / . mp4 / . mov / . flac format file.)
- >> If the USB connection is not disconnected, press to switch  to Bluetooth playback mode.
- >> Insert the earphone into the port , and the device automatically switches to the earphone output. Disconnect the headphone connection and automatically switch to the speaker output.
- >> Touch  to open the seat.
- >> Touch  to close the seat.
- >> Touch  to reset seat.

Instructions



- >> Touch and hold  to open the headrest.
- >> Touch and hold  to close the headrest.
- >> Touch and hold  to open the waist.
- >> Touch and hold  to close the waist.
- >> Touch  to turn on/off the sofa heating function. The system operates for 60 min by default, and automatically shuts down after 60 min.
- >> Touch  to turn on/off the sofa massage function. The system works for 30 min by default and automatically shuts down after 30 min.
- >> Touch  to turn on/off the LED light function. The system works for 4 hours by default and automatically turns off after 4 hours.
- >> Aim your phone's wireless charging receiver at iTable406  and lay it flat on top. when the charging is successful, the blue light near the wireless charging area changes color to green.
- >> If the device is faulty, such as water or short circuit, the system automatically cuts off the power supply, and the safety button near the USB-C port automatically opens. If the fault is rectified, press the safety button to reset the device. If the fault is not removed, the safety button can't be pressed and the device can't be used.

electrical machinery

Product parameters

Input	AC 100~240V
Rated power	1200W
Audio input	DC 13V
Sounds power	17W
Sound response frequency	40~22 KHZ
Signal to noise ratio	≥ 65 db
Bluetooth version	5.0
Seat control system input	DC 29V
Seat control system power	120W
USB output	USB-A output: 5Vdc, 2.1A; USB-C output: 5Vdc, 3A or 9Vdc, 2A or 12Vdc, 1.5A USB-A(QC) output: 5Vdc, 3A or 9Vdc, 2A or 12Vdc, 1.5A USB-C + USB-A(QC) output: each 5Vdc, 3A total 18W
Wireless charging output	Max 5V1A each
Socket output	Each 120V~, 60Hz, 4A, total 960W
Working Mode	Except All the linear actuator working at 10s On and 20s Off, all the other functions (Speaker, USB output, AC output, heating ect) can continuous working

Common troubleshooting

Problem/Issue	Possible causes and solutions
No Power	<ol style="list-style-type: none"> 1. The power supply is not connected 2. The cable is disconnected or the plug is not properly inserted. 3. The connected socket is faulty. 4. The safety switch activates. Press the safety reset to start again.
No sound	<ol style="list-style-type: none"> 1. The volume may be set to the minimum setting. Turn up the volume and try again. 2. Enter the pause mode. Press  to continue. 3. The audio source does not match the playing mode. Press  to switch to the corresponding mode. 4. The product is in headset mode, disconnect the headset.
Touch not responding	<ol style="list-style-type: none"> 1. Device interference. Remove the source of interference. Power off for 15 seconds and restart. 2. Improper operations result in device crash. Power off for 15 seconds and restart. 3. The connector is loose. Please check all connection headers and reconnect. 4. If the device is faulty, contact the customer service for replacement.
Bluetooth will not connect	<ol style="list-style-type: none"> 1. If another Bluetooth connection has been made, touch and hold the Bluetooth icon and try again. 2. The current mode is not Bluetooth. Press to switch to Bluetooth mode and then connect 3. Out of range. Move closer to the device. Do not attempt to connect through obstacles.
USB mode does not work	<ol style="list-style-type: none"> 1. Make sure the USB storage has audio files 2. Make sure that the USB memory is normal and properly connected. 3. Make sure that the music file is playable. 4. Make sure that the product is in USB playback mode.
Wireless charging doesn't work	<ol style="list-style-type: none"> 1. Make sure your phone has wireless charging. 2. Please ensure that there is no metal foreign matter in the back shell of the mobile phone or case. 3. Please place the mobile phone at the wireless charging position. 4. The wireless charging has the function of overheating protection. When the internal temperature exceeds F/65°C, it will stop working and continue charging after the temperature drops.
seat will not recline	The connector is loose. Please check all connections and reconnect.

If you have tried everything and still can't solve the problem, contact customer service. Do not attempt to disassemble and repair by yourself.

Quality Assurance

- The terms of service will not affect your legal rights and interests in any way.
- The warranty period of this product is 24 months. (The date of delivery will begin this shall period.)
- You can confirm the date of manufacture according to the barcode on the product. If the barcode is damaged or lost so that the date of manufacture cannot be traced back, it will be deemed to be beyond the valid warranty period.
- During the warranty period, if any quality problem occurs during normal use, free repair or replacement of your iTable406 or accessories will be provided.
- Product quality problems caused by improper storage and maintenance of the product, unauthorized disassembly, expansion and modification of products are not within the scope of Quality Assurance.

The warranty does not apply if:

- Damage caused by improper use.
- Damage caused by improper transportation and connection.
- Damage caused by operation, modification and negligence not mentioned in the instructions for use.
- Damage caused by faulty or mismatched external equipment.
- Damage caused by force majeure (such as fire, flood, earthquake, lightning, war, riot, etc.).
- Damage caused by repair or disassembly by other non-professionals.
- For repair, please contact the customer service from which you purchased the product.

Note:

Proper use and proper storage of the product can effectively extend the service life of the product.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance

could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.