Mini i Table

User Manual




Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment. Before using, please read this operation manual thoroughly in order to understand the correct methods of usage, especially taking note of the section on safety, it is important. This manual should be kept on hand for easy reference. It is your guidance to a safe and efficient operation. Using the product properly could prolong the life circle.

CAUTION

- Please use the original power supply provided by the manufacturer.
- To prevent you from burns or electric shock, the unit should never be left unattended when plugged in. Always unplug the unit when it is not in use.
- Never operate the unit if it has a damaged power or plug.
- Please unplug it and contact the store if it is not working properly, if it has been dropped or damaged, or if it has been immersed in water.
- Keep power cords away from heated surfaces and never use it if it has a damaged cord.
- Do not drop or insert anything into any of the opening of the unit.
- Liquids. Should not be spilled on the control panel.
- Indoor use only, do not put it into direct sunlight exposure.
- The unit contains no user-serviceable parts and open or disassembling any parts of it may cause an electric shock or injury.
- Persons with any of the below conditions or who are undergoing medical treatment should consult with their physicians before using the unit: Pregnant women, People who have a pacemaker, debrillator, or other personal medical devices prone to electronic interference.
- The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, Unless they have been given supervision or instruction
- Children should be supervised to ensure not to play with the appliance
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

CONTROL PANEL

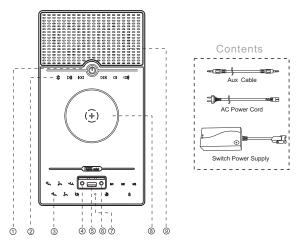

- 1 Power: ON/OFF. All switch LED will illuminate when ON.
- 2 Audio Control Panel: Bluetooth, Play/Pause, Previous Track, Next Track, Volume -, Volume +.
- ③ Chair Control Panel: Recline, Close, Lumbar up, Lumbar down, Headrest up, Headrest down, Favorite position 1/2/3, Reset, Lock
- ④ Headphone: Headset jack for listening music with handset.
- USB : Connect your smart device to the USB with an USB cable, it will charge for your device.
- 6 Aux Port: Recommended for the device with Aux function by Aux cable.
- ⑦ Bluetooth Indicator: Flashes quickly when it is standby for Bluetooth paring. Flashes slowly when it searches for another iTable mini. Keeps illuminating when it is paired successfully.
- Wireless Charging pad: Align the receiver of your cellphone with the
 to charge for your device.
- 9 Speaker: Audio player speaker.
- 2

BLUETOOTH AUDIO PLAYER

Operation Guidance

Touch and hold to pair one iTable mini to another one.

Touch and hold to cut off the Bluetooth connection between two iTabe minis.

 
NI M

NN rti rtil

- Tap to play or pause.
 Touch and hold to disconnect the Bluetooth connection with the previous device.
- K⊲ The previous track.
- DDI The next track.
- Scheme State S
- ▷ Increase volume.



Pair iTable mini to smart device




- 1) Plug iTable mini into a power source and power on.
- ② As soon as power is on, the Bluetooth indicator flashes quickly, it is standby for paring.
- ③ Enable the Bluetooth on your smart device then search for "iTable mini", tap it to connect your device to iTalbe mini. If it is paired successfully, the indicator will stop flashing and a "DI" sound will be made.

	BLUETOOTH	
iTable Mini will appear as iTable Mini	Now Discoverable as "Phone"	
	MY DEVICES	1
	My Phone	Not Connected
	My Computer	Not Connected
	iTable Mini	Connected
	Wireless Speaker	Not Connected

BLUETOOTH AUDIO PLAYER

Bluetooth Paring

 TWS Bluetooth Audio



Touch and hold both Buletooth Buttons for 3 seconds, the indicators become flashing slowly, then the iTable minis will connect to each other automatically.

If the two iTable mini are paired before establish BT connection with your phone, please long press the "Play/Pause" button to active the Bluetooth of the iTable mini. Then connect it with your phone.

If the two iTable mini failed in sync after pairing, for example, the volume adjustment is invalid, please disconnect and repair.


AUX AUDIO PLAYER



Connect the iTable mini to a TV or other device has Aux function, it will switch into Aux audio player automatically.

Disconnecting the Aux cable could turn off the Aux audio player, then it will switch in Bluetooth audio player automatically.

WIRELESS CHARGING PAD

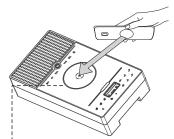

Wireless charging indicator

 
The blue LED ring illuminates, it is charging.

The blue LED ring flashes, there is interference nearby or it doesn't work well.

Align the receiver of your phone to the ④ and put it onto iTable mini, it will charge for the phone automatically. If it is charging, there will be a solid blue LED ring.

If the blue LED ring flashes, try to move your device around or take away the interference matter.

FUNCTIONAL RECLINER



- 🛀 Touch and hold to recline the chair.
- Touch and hold to close the chair.
- Touch and hold to raise the headrest
- ™ Touch and hold to lower the headrest.
- hold to raise the lumbar.
- limits and hold to lower the lumbar.
- Touch and hold to make the chair move to the Home position.
- Touch and hold to lock/unlock the iTable mini.
- M1 Touch and hold to memory the current position as your favorite position 1. Tap to make the chair move to your favorite position 1 automatically.
- M2 Touch and hold to memory the current position as your favorite position 2. Tap to make the chair move to your favorite position 2 automatically.
- M3 Touch and hold to memory the current position as your favorite position 3. Tap to make the chair move to your favorite position 3 automatically.

TROUBLESHOOTINGS

PROBLEM	TRY THESE POSSIBLE SOLUTIONS
No power	 It was plugged into a broken socket. Replace with a good socket. The power cord isn't plugged properly. Re-plug it. The unit did not be turned on, touch and hold to turn on the unit.
No sound at all	 The volume is at the minimum setting. Touch ◄)) to increase the volume. The unit is at headphone setting. Disconnect the headphone.
The chair could not be powered	The wires for the motors underneath the chair may be disconnected. Check all connectors and reconnect them if it is necessary.
The Bluetooth can not be paired	 It has been connected to another device. Touch and hold ▶I to disconnect the previous device then try to connect it. Avoid to pair the Bluetooth behind a wall or in a corner. Keep the working space in 8M.
AUX mode can't work	 The device may not support this kind of AUX jack. Try another one. The Auxin cable is broken. Change another one.
The headphone does not work or does not work well	 The headphone jack only support for standard stereo headphone, use a standard one. Headphones for different cell-phones are with different structure, if you want to use it on iTable, please try to incompletely insert the interface.
The wireless charging pad does not work at all or does not work well	 Your device does not have wireless charging receiver, attach a receiver to the device. Qi certificated receiver is recommended. The receiver of you phone is not aligned to the try to move around.

If you have tried all the actions but it still does not work well, please call the retailer for after-sale service. Do not try to disclose and repair by yourself.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.