Mini i Table 2

User Manual




Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment. Before using, please read this operation manual thoroughly in order to understand the correct methods of usage, especially taking note of the section on safety, it is important. This manual should be kept on hand for easy reference. It is your guidance to a safe and efficient operation. Using the product properly could prolong the life circle.


CAUTION

- Please use the original power supply provided by the manufacturer.
- To prevent you from burns or electric shock, the unit should never be left unattended when plugged in. Always unplug the unit when it is not in use.
- Never operate the unit if it has a damaged power or plug.
- Please unplug it and contact the store if it is not working properly, if it has been dropped or damaged, or if it has been immersed in water.
- Keep power cords away from heated surfaces and never use it if it has a damaged cord.
- Please remove cup or bottle on the dynamic cup holder before up or down the dynamic cup holder, please do not up or down the dynamic cup holder if it is load.
- Do not drop or insert anything into any of the opening of the unit.
- Liquids. Should not be spilled on the control panel.
- · Indoor use only, do not put it into direct sunlight exposure.
- The unit contains no user-serviceable parts and open or disassembling any parts
 of it may cause an electric shock or injury.
- Persons with any of the below conditions or who are under going medical treatment should consult with their physicians before using the unit: Pregnant women, People who have a pacemaker or any other person who is susceptible to electrical interference.
- The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, Unless they have been given supervision or instruction
- Children should be supervised to ensure not to play with the appliance
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- If you meet problem during using, please refer to the "Common Trouble Shooting" to remove it, if the "Common Trouble Shooting" not mentioned the problem your meet, please contact to customer service immediately. Please do not repair by yourself, other wise it will be deemed to waived the warranty.
- In order to offer the best serves, products will keep upgrade when necessary, the changed information will not inform by individual. Please keep the latest version as well

MAIN PANEL

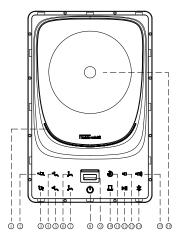

Contents

 

- Wireless charging indication light:
- a: When plug into a power source, light quick flashing 3 times and went off now power connected successful. The light may flashing if metallic stuff or some special stuff on the wireless charging area.

b:Light up when charging; Light off when full charged.

Recliner control button:

- @Recline, @Close, Headrest up, Headrest down, Lumbar up,
- ①Lumbar down (11) Reset.
- ® Power ON/OFF: Touch and hold to power on, all buttons light up; Touch and hold to power off, all buttons light off.
- USB charging port.
- (1) Dynamic cup holder control button.

Audio player button: (12) Play/Pause, (13) volume '-', (14) Bluetooth (15) volume '+'

(ii) Wireless charging: Place your phone on the centre of () to charging your phone.

Note: Function ①--⑥are optionable, some seen in the illustration may not have been used in the design of your product.

BLUETOOTH AUDIO PLAYER

 
Operation Guidance

- Bluetooth indicator flashes quickly, it is standby for pairing; Touch and hold to cut off the Bluetooth connection
- Tap to play or pause
- Decrease volume
- **◄∭** Increase volume




Bluetooth Pairing

Pair 'iTable mini 2' to smart device



- ① Plug ' iTable mini 2' into a power source and power on 😃 .
- ② As soon as power is on, the Bluetooth indicator flashes quickly, it is standby for pairing.
- ③ Enable the Bluetooth on your smart device then search for "iTable mini2", tap it to connect your device to iTalbe mini2. If it is paired successful, the indicator will turn to green or blue and stop flashing, "connected" sound also be played
- ④ If bluetooth indicator flashes quickly in 5s but still no smart device connected successful, the bluetooth indicator stop flash but still standby for pairing.



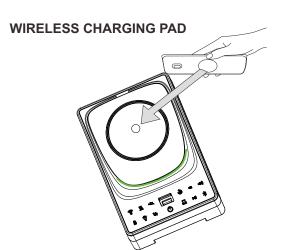

Wireless charging indicator .

Align the receiver of your phone on the centre of 'O', it will charge the phone automatically.

The 'U light'illuminates, it is charging

 
The 'U light' flashes during charging, there's interference nearby or it doesn't work well, please try to move your phone around the' () ' or take away the interference matter till the 'U light' stopped flashing.

USB Charging



USB: Connect your smart device to the USB with an USB cable, it will charge for your device.

FUNCTIONAL RECLINER



- Touch and hold to recline the chair
- Touch and hold to close the chair
- Touch and hold to raise the headrest
- Touch and hold to lower the headrest.
- 1. Touch and hold to raise the lumbar.
- 1 Touch and hold to lower the lumbar
- Touch and hold to make the chair move to the Home position.

Dynamic cup holder



Touch to up/ down the dynamic cup holder

Note: Functions are optionable, some of the functions seen in the illustration may not have been used in the design of your product.

TROUBLESHOOTINGS

PROBLEM	TRY THESE POSSIBLE SOLUTIONS
No power	1. It was plugged into a broken socket. Replace with a good socket. 2. The power cord isn't plugged properly. Re-plug it. 3. The unit did not be turned on, touch and hold o to turn on the unit.
Bluetooth can not be paired	It has been connected to another device. Touch and hold ► to disconnect the previous device then try to connect it. Avoid to pair the Bluetooth behind a wall or in a corner. Keep the working space in 8M.
No sound at all	The volume is at the minimum setting. Touch ◄□) to increase the volume. The unit is at headphone setting. Disconnect the headphone.
The chair could not be powered	1.The wires for the motors underneath the chair may be disconnected. Check all connectors and reconnect them if it is necessary.
Dynamic cup holder non level to the panel	1.Touch L to up and down the cup holder several times with nothing load till the cup holder in the same level to the panel. 2. Please attention that do not raise or down the cup holder if there is something load on the cup holder next time.
The wireless charging pad does not work at all or does not work well	Your device does not have wireless charging receiver, attach a receiver to the device. Qi certificated receiver is recommended. The receiver of you phone is not aligned to the O, try to move around.

If you have tried all the actions but it still does not work well, please call the retailer for after-sale service. Do not try to disclose and repair by yourself.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.