

Safety Warning

Thank you for using our Remo1 Bluetooth sound system!

Before using this unit please, read the manual.

This audio system was for indoor use only.

Do not place the apparatus in direct sunlight or heat.

This apparatus should be placed on a stable surface.

Do not attempt to repair this product as the warranty will be void, please contact with the store or customer service.

 
Trying to remove panels or repairing the unit by yourself could result in an electric shock.

This item should be connected to an AC 100V-240V Power outlet.

Do not use chemicals on this product.

Do not press the buttons too hard, it may damage the product.

Product

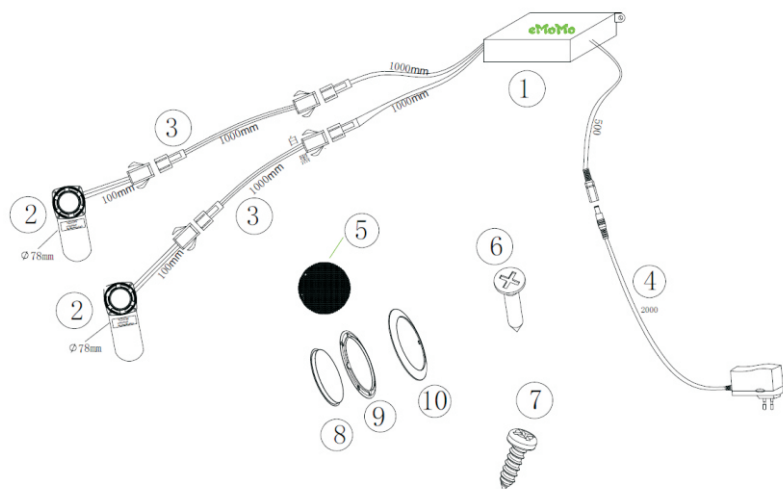

NO.	PARTS	QTY.
①	C05 control box	1PCS
②	Speaker: 3" 4Ω 20W	2PCS
③	The extension cable of speaker: L=1000mm	4PCS
④	Switch power supply: 12V 2A	1PCS
⑤	Speaker inner grill for ②	2PCS
⑥	Screw: KA3*16mm, for ⑨	8PCS
⑦	Screw: PA3. 5*15, for①	8PCS
⑧	Speaker grill for ⑨	2PCS
⑨	Speaker grill fix	2PCS
⑩	Speaker grill fix cover for⑨	2PCS

Basic operation

- Once power is supplied, the Remo4 bluetooth audio kit begins to search pairing device automatically. It keeps searching until it pairs with other device successfully. It could only pair with one bluetooth device. If you want to pair with another device, disconnect the paired one, then connect with the new one.
- The Remo4.1 Bluetooth audio kit could be controlled via the paired bluetooth. Previous track/ Next track, Increase volume/ Decrease volume, Pause / Play.
- Description of bluetooth: eMoMo XXXX
- Bluetooth reproduction rang: 8m.

Specification

Output	30V \approx 1A
Rated power	20W
Speaker	3"4 Ω 20W
Bluetooth Edition	3.0

Power supply:

Model: RSS1006-240120-W2E

INPUT: 100-240V~50/60Hz 0.6A

OUTPUT: 12V \approx 2A

Manufacturer: Dongguan GaoYi Electronic Co. , Ltd

Frequently Asked Questions

Problem	Possible cause and correction or maintenance
No sound at all	The volume switch is on minimum; the unit is not set to the correct function; please contact with the store or customer service.
Bluetooth can not pair	Please close all other pairing machines and retry; Please wait a few seconds or restart the machine; Do not pair the devices behind a wall or in corner, please keep the working space within 8 meters; Pair the device named eMoMo.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

注意事项

在使用之前,请先阅读说明书,以确保您能正确使用此产品。

 
请保存此说明书以备将来查阅。

为了更好的服务客户,产品的性能和规格有可能发生变更,所以本用户手册的内容可能随之更新,将不做另行通知。

为了维护良好的性能,请勿在太冷、太热、多尘或潮湿的地方使用,如下情况更需注意:

1. 潮湿或水下作业环境
2. 加热器或高温作业环境
3. 暴晒于阳光下的环境
4. 容易跌落的环境
5. 请勿擅自拆开组合音响,否则会失去保修的权利

产品介绍

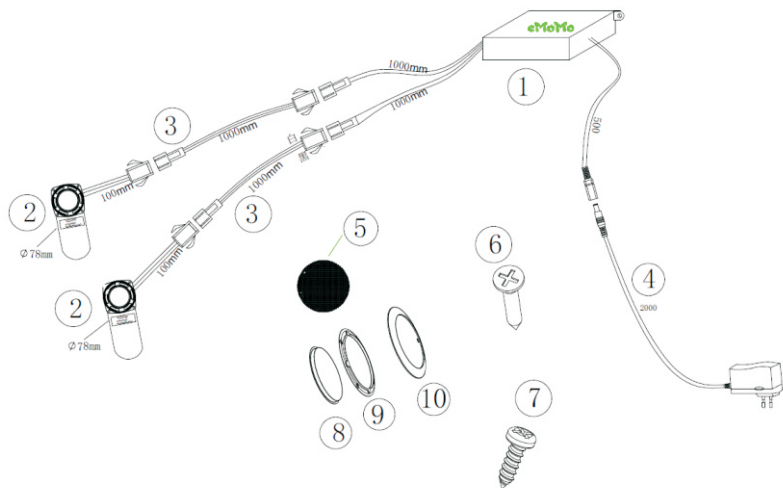

序号	部件名称及描述	用量
①	C05控制盒	1PCS
②	全频副机喇叭组件: 3" 4Ω 20W	2PCS
③	副机喇叭延长线: L=1000mm	4PCS
④	一拖二转接线	1PCS
⑤	4寸副机网, 黑色, 配①	2PCS
⑥	二类螺丝: KA3*16mm, 配⑨	8PCS
⑦	三类螺丝: PA3.5*15, 配①	8PCS
⑧	4寸副机铁网, 配⑨	2PCS
⑨	副机铁网压块	2PCS
⑩	副机网面盖, 配⑨	2PCS

操作说明

1. 通电后蓝牙自动开启搜索状态, 在未配对蓝牙设备时一直处于被搜索状态, 当配对后, 不能再与其它蓝牙设备匹配。只能在已配对的蓝牙设备断开后才可与其它蓝牙设备匹配。
2. 已配对的蓝牙设备可对本机进行控制: 上/下曲的选择, 高低音的调节, 暂停、播放的控制。
3. 本机蓝牙名称: eMoMo XXXX
4. 本机在长期通电情况下不会进入休眠状态。
5. 蓝牙的有效距离为8米。

规格说明

输出	30V $\bar{\bar{=}}$ 1A
功率	20W
喇叭参数	3"4Ω 20W全频
蓝牙版本	3.0

维修指南及疑难解答

问题	可能产生的原因及解决方法
没声音	源文件音量太低或音响没连接好。在确保操作正确以后仍然没有声音的话需要更换音响系统。
蓝牙不能配对	请检查电源是否连接好, 连接好电源或更换电源 请关闭其他所有已经配对的蓝牙设备, 重新开启音响系统及蓝牙发射设备并搜索配对。 请不要隔墙或在拐角处使用。 请保证工作距离在8米以内。 蓝牙配对名称是eMoMo XXXX