 


Cautions

- ◆ Please read the user manual carefully before using.
- ◆ Apply to 110V-240V.
- ◆ Please use the original switch power supply.
- ◆ Do not use when the fabric is fold or get wrinkled.
- ◆ Do not detach and wash the fabric.
- ◆ Please keep away from acid and alkaline liquid.
- ◆ Not apply to children, pregnant woman, people who suffer from bleeding tendency and bleeding illness, tuberculosis malignant tumor and is not sensitive to heat.
- ◆ Please troubleshoot the problems as <Frequently asked questions> on this manual. If the problem is not mentioned, please call after-sell service. Do not try to repair by yourself, or it may cause void warranty.

Buttons and functions

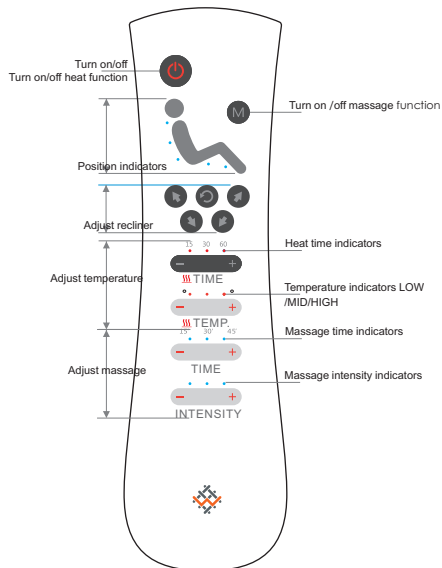

Specification

- ◆ Rated power: 58W
- ◆ Rated input: 29V
- ◆ Rated current: 2A
- ◆ Input for knob: 3V
- ◆ Remote battery: 7#AAA

Operation

- ◆ Press **▼** on the rear cover of the remote and pull towards to the remote bottom to remove the back-up cover, then install 2pcs 7#AAA batteries (Ensure "+" and "-" is proper) .
- ◆ Disconnect the power supply
- ◆ Press and hold **TIME-** for about 4s until the neck light flashes, then connect the power in 15s. The neck light lights off, pair successfully.
- ◆ **⏻** Press it to turn on the device and heat function. Press it again to turn off the device and all functions. Press and hold for 3s to turn on/off the flashlight.
- ◆ **M** Turn on/off massage function
 - 1st press: Turn on massage function and all vibrators work in 3 modes cyclically. It works in each mode for 1 min then switch into the next mode automatically.
 - 2nd press: Turn off massage function.
- ◆ **↶** Recline the headrest
- ◆ **↷** Lift the headrest.
- ◆ **↶** Open the chair.
- ◆ **↷** Close the chair.
- ◆ **↻** Reset the chair
- ◆ **TIME-** Press it to decrease the heat time. 15' /30' /60' available. If there is only 15 minutes left, press **TIME-** to turn off heat function.
- ◆ **TIME+** Increase heat time. 15' /30' /60' available.
- ◆ **TEMP-** Lower the heat temperature. Low/Med/High available. If it heats @low mode, the upper-left indicator lights red. If it heats @med mode, the upper indicator lights red. If it heats @high mode, the upper-right indicator lights red.
- ◆ **TEMP+** Upgrade the heat temperature. Low/Med/High available.
- ◆ **TIME-** Decrease massage time. 15' /30' /45' available.
- ◆ **TIME+** Increase massage time. 15' /30' /45' available.
- ◆ **INTENSITY-** Decrease massage intensity. Low/Med/High available.
- ◆ **INTENSITY+** Upgrade massage intensity. Low/Med/High available.

Frequently asked questions

ISSUE	PROBABLY REASON	TROUBLE SHOOTING
◆The remote does not work	◆Without battery or batteries are installed incorrectly. ◆The batteries have been ran out.	◆Install 2 pcs 7#AAA batteries correctly. ◆Replace 2 new batteries.
◆The device does not work.	◆Power supply is disconnected or isn't connected properly. ◆The device hasn't paired successfully.	◆Replug the power supply. ◆Re-pair signal.
◆The device shut down suddenly.	◆Shut down automatically as limited time has run out. ◆Connectors do not connect properly.	◆Restart the device. ◆Check all connectors and re-connect if it is necessary.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.