


315-10 Music Kit Manual

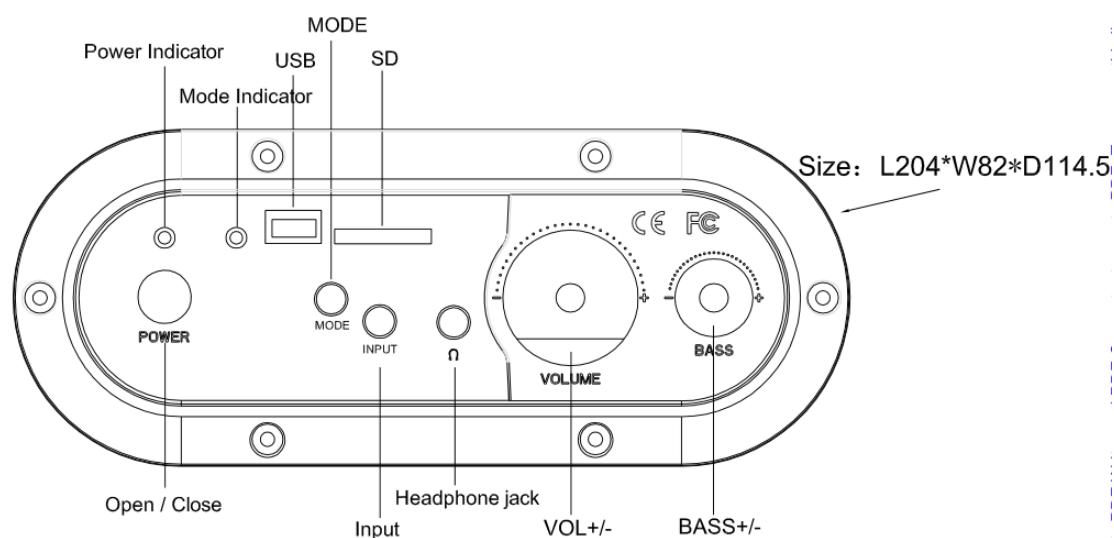

1. **POWER:** Press to turn on the music kit.
2. **Input:** Plug the AUX cable into INPUT to play the music from your MP3/MP4/mobile/pad....
3. **MODE:** For choosing the mode
4. **MODE LIGHT:** Blue light for Bluetooth mode; Green light for USB/SD card mode; All lights-off for AUX mode.
5. **BASS:** For increasing/ decreasing subwoofer volume
6. **VOLUME:** For increasing/ decreasing speaker volume
7. **Headphone:** For headset in any mode. .
8. **Bluetooth:** Use mode button switch to the Bluetooth mode. The Bluetooth name is: “eMoMo” and no need password.
9. **USB:** Can charge your mobile phone by 5V/0.5A current.

➤ How to deal with the trouble cases?

Trouble Cases	Possible Reasons	Solutions
Audio doesn't work	<ol style="list-style-type: none"> 1. Audio is switched off 2. Audio Mode is not set 	<ol style="list-style-type: none"> 1. Press Power button 2. Set a mode on the handset

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can



radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.