

## **LEGAL INFORMATION**

**Copyright © 2011 DDM CORPORATION.**

**All rights reserved.**

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of DDM Corporation.

The manual is published by DDM Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.


**Version No. :**

**Edition Time :**

**Manual No. :**

*Getting Started*

*Phone Overview*

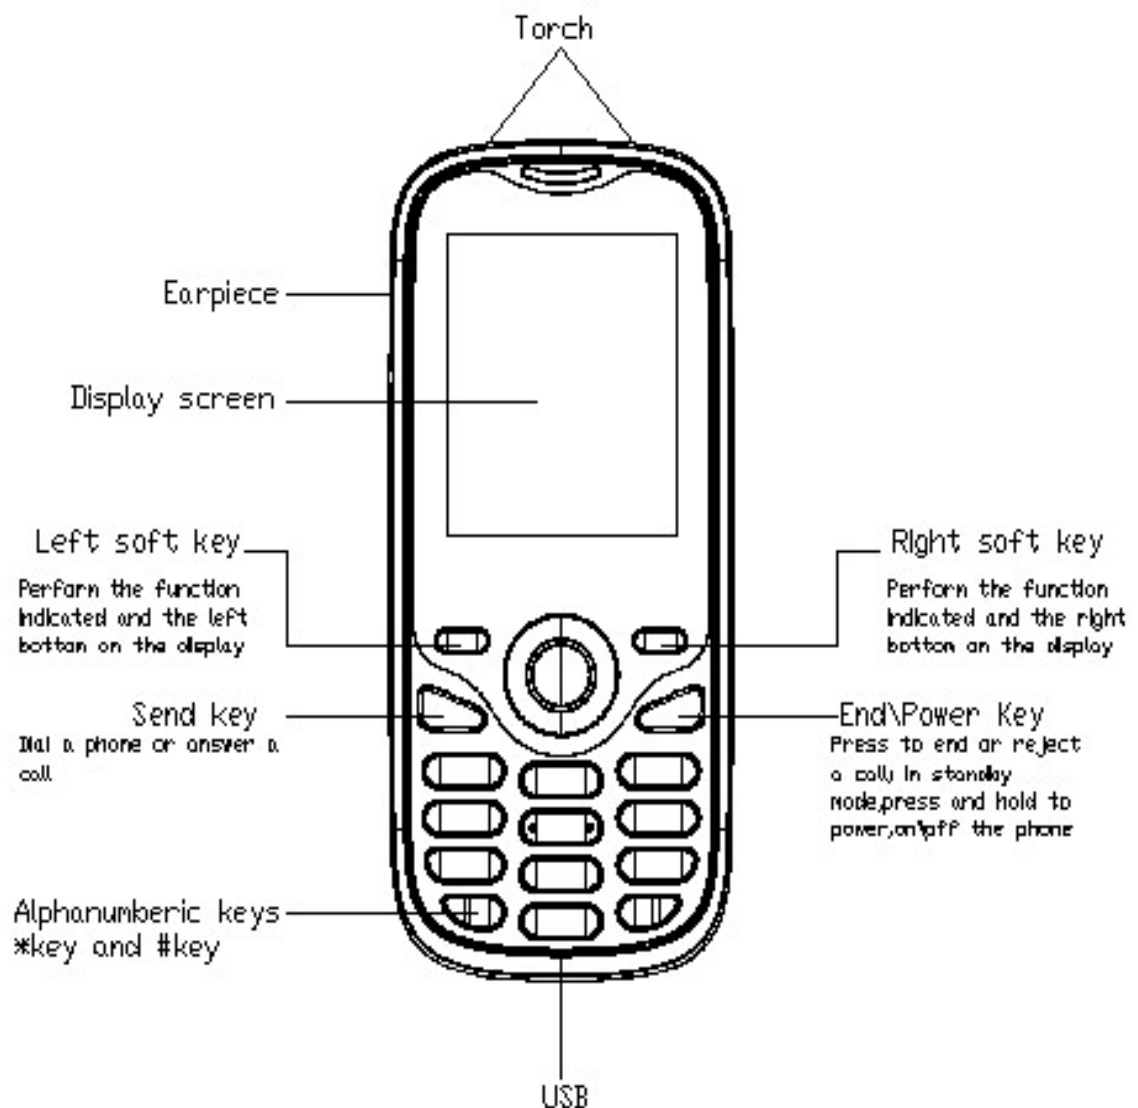

**\*Note:** The headset is only available for certain models. Your phone may not support the headset.

**Note:** The pictures and icons presented in this manual are meant for illustrative purposes only and may not accurately represent the actual phone or the icons found on the phone. Your phone contains the most up to date information.

## Battery

### the Battery

1. Hook the edge of the back cover and lift it up to remove it, as shown in the

picture.

2. Insert the battery by aligning the gold contacts on the battery with the gold contacts in the battery compartment on the phone.
3. *Push down on the upper section of the battery until it clicks into place.*
4. *Replace the back cover.*

### **Removing the Battery**

1. *Make sure that your mobile phone is switched off.*
2. Remove the back cover
3. Pull the battery up and remove it from the mobile phone.

### **Charging the Battery**

Use the battery up completely before charging the battery for the first time with the procedure indicated below.

#### **Caution:**

Do not charge the battery out of the temperature range of 0°C to 45°C.

1. Connect your adapter to the side of your mobile phone as shown in the picture. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charger jack.

#### **Powering On/Off**

1. *Make sure that your SIM card is inserted and the battery is charged.*
2. *Press and hold **End Key** to power on/off the phone.*

**Note:** *You may need to enter the Personal identification Number (PIN)*

*or phone code if you have enabled PIN lock or phone lock feature.*

## Keypad Lock

To lock the keypad, press right soft key and then press **# Key** in standby mode. To unlock the keypad, press **Unlock Key** and then press **# Key**.

## Indicators

**Note:** The headset mode is only available for certain models.

## Entering Text

2. Connect the other end of the adapter to the mains socket.

Remove the charger from both the mains socket and the phone once the charging completed.

## Installing and Removing the SIM Card

1. Make sure that the phone is switched off and the charger is disconnected from the phone.
2. Turn the phone over and remove the back cover.
3. If the battery is already inside, remove it.
4. Insert the SIM card into the card slot with its metal contacts facing



shown in the following picture.

Change input mode: Press **# Key** to change the input mode (word predictive mode, lowercase alphabetic mode, uppercase alphabetic mode and numeric mode).

Input Letters: In alphabetic mode, press **2-9 Key** repeatedly till the desired letter appears.

Input Numbers: In numeric mode, press **0-9 Key** to enter numbers.








Letters and spaces cannot be entered in this mode.

Input Symbols: Press **\* Key** to select a symbol. In word predictive and alphabetic modes, press **1 Key** to enter commonly used symbols.

Input Space: Press **0 Key** to input space. It does not work in numeric mode.

Delete Character: Press **Right Soft Key** to delete a character. Press and hold **Right Soft Key** to delete all characters.

**Note:** The available input modes on your phone depend on your country and region. They may not be exactly the same as illustrated in this manual.

Indicat	What it means
	GSM signal strength
	New message
	Missed voice call
	Alarm clock
	Battery status
	Meeting mode
	Outdoor mode
	* Headset mode

## Making and Answering a Call

### Making a Call

1. Enter a phone number in standby mode. You can also select a contact

in the contact list.

2. Press **Send Key** to make a call.
3. Press **Right Soft Key** to cancel the call, or press **End Key** to end the call.

### **Answering a Call**

When there is an incoming call, you can press **Send Key** to answer it, or press **End Key** to reject it.

### **Speed Dial Call**

In standby mode, press and hold the number key (1~9) corresponding to the phone number in the speed dial list to make a call.

**Note:** The 1 Key is reserved for your voicemail number. Press and hold 1 Key in standby mode to dial the voicemail number quickly.

### **Composing and Sending a Message**

You can use your phone to send and receive text messages.

1. Enter the new message composing interface.
2. Enter the message in the text field.
3. Select **Options** and choose Send to option. You can enter the recipient's number or add the recipient(s) from the contact list.
4. Select **Send** to send the message.

### **Torchlight**

You can access the torchlight menu to turn on or off the torch on the

phone or press and hold **0 Key** in standby mode to turn on or off the torch quickly.

## Setting up Your Phone

You can adjust various settings of your phone.

Setting the profile: You can activate or personalize a profile.

**Tip:** Press and hold **# Key** in standby mode to switch the general profile mode to the meeting profile mode.

Setting the phone: Select the phone language, Select the Home city and turn on or off the auto keypad lock function.

Setting the display: You can set the wallpaper, home screen, and the backlight duration of the display screen.

Setting the date and time: You can set the date and time and select the display format.

Setting the security: Security setting feature protects you from the illegal use of your phone and SIM card. You can activate/deactivate the PIN code or phone lock code.

**Note:** You need to input the phone lock code to enter into the security settings menu. The default phone code is 1234.

**Warning:** If you enter a wrong PIN code for three times consecutively, the SIM card will be locked. Please contact the service provider to get the PIN Unlock Key (PUK) to unlock the card.

Use hands-free function of the phone, if available.

Pull off the road and park before making or answering a call if conditions require.

#### Creating a Contact

1. Select Phone or SIM card as the contact save location.
2. Enter the Contacts menu.
3. Select **Options** and choose to add new contact.
4. Enter the contact information. You can edit the contact name, phone numbers for the contact saved in the phone, or add a name and a phone number for the contact saved in the SIM card.
5. Select **Options** and choose to save the new contact.

In the contact list, select **Options** and you can choose to call a contact, delete a contact, send message to a contact, add a contact to the speed dial list, etc.

**Tip:** To search for a contact, you can open the contact list and type the desired contact name in the search field at the bottom of the screen.

The phone will automatically scroll to the contact name that matches your input most closely.

#### \*FM Radio

With the FM radio, you can search for radio channels, listen to them, and save them on your device. Note that the quality of the radio broadcast



depends on the coverage of the radio station in that particular area.

You can search radio channels automatically or manually or set a channel by inputting a valid frequency.

You can also save your desired channels to the channel list and manage the channel list.

Press Up/Down Key to adjust the volume.

### Safety Precautions

This section includes some important information on safe and efficient operation. Please read this information before using the phone.

### Operational Precautions

Please use your phone properly. When making or receiving a call, please hold your phone as holding a wireline telephone. Make sure that the phone is at least one inch (about two point five centimeters) from your body when transmitting.

Do not touch the antenna when the phone is in use. Touching the antenna area affects call quality and may cause the phone to operate at a higher power level than needed.

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or playing video games. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult

your doctor before playing the games on your phone or enabling a flashing-light feature on your phone. (The flashing-light feature is not available on all products.)

Keep the phone out of the reach of small children. The phone may cause injury if used as a toy.

#### Precautions While Driving

Please pay attention to the traffic safety. Check the laws and regulations on the use of your phone in the area where you drive. Always obey them.

#### Precautions for Medical Devices and Facilities

When using your phone near pacemakers, please always keep the phone more than eight inches (about twenty centimeters) from the pacemaker when the phone is switched on. Do not carry the phone in the breast pocket. Use the ear opposite the pacemaker to minimize the potential for interference. Switch off the phone immediately if necessary.

Some phones may interfere with some hearing aids. In the event of such interference, you may consult your hearing aids manufacturer to discuss alternatives.

If you use any other personal medical device, please consult the manufacturer of your device to determine if it is adequately shielded

from RF energy.

In those facilities with special demand, such as hospital or health care facilities, please pay attention to the restriction on the use of mobile phone. Switch off your phone if required.

#### Mobile Phone

Please use original accessories or accessories approved by the phone manufacturer. Using any unauthorized accessories may affect your mobile phone's performance, damage your phone or even cause danger to your body and violate related local regulations about telecom terminals.

Turn off your phone before you clean it. Use a damp or anti-static cloth to clean the phone. Do not use a dry cloth or electrostatically charged cloth. Do not use chemical or abrasive cleaners as these could damage the phone.

As your mobile phone can produce electromagnetic field, do not place it near magnetic items such as computer disks.

Using the phone near electrical appliances such as TV, telephone, radio and personal computer can cause interference.

Do not expose your mobile phone to direct sunlight or store it in hot areas. High temperatures can shorten the life of electronic devices.

Keep your phone dry. Any liquid may damage your phone.

Do not drop, knock or harshly treat the phone. Rough handling can break internal circuit boards.

Do not connect the phone with any incompatible enhancement.

Do not attempt to disassemble the mobile phone or battery.

Do not store the phone with flammable or explosive articles.

Do not charge the mobile phone without battery.

#### Precautions for Potentially Explosive Atmospheres

Switch off your phone prior to entering any area with potentially explosive atmospheres, such as fueling areas, fuel or chemical transfer or storage facilities.

Do not remove, install, or charge batteries in such areas. Spark in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

To avoid possible interference with blasting operations, switch off your phone when you are near electrical blasting caps, in a blasting area, or in areas posted "Turn off electronic devices." Obey all signs and instructions.

#### Precautions for Electronic Devices

Some electronic devices are susceptible to electromagnetic interference sent by mobile phone if inadequately shielded, such as electronic system of vehicles. Please consult the manufacturer of the device

The battery can be recharged for hundreds of times, but it will eventually wear out. When the operating time (talk time and standby time) is noticeably shorter than normal, it is time to replace it with a new one.

- j Please stop using the charger and battery when they are damaged or show evidence of aging.
- j Return the worn-out battery to the provider or dispose of it in accordance with environment regulations. Do not dispose of it in household rubbish.
- j Please use original batteries or batteries approved by the phone manufacturer. Using any unauthorized battery may affect your handset performance or may cause danger of explosion, etc.

**Warning:** If the battery is damaged, do not discharge it. If the leakage does come into contact with the eyes or skin, wash thoroughly in clean water and consult a doctor.

#### Limitation of Liability

DDM shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not DDM had been advised, knew or should have known the possibility of such damages.

#### **FCC Caution.**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### **Specific Absorption Rate (SAR) information**

This mobile phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: **BINGO N103A (XX:COLOR MARKER)** **FCC-ID:A4JBINGON103** has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the **ear is 0.866W/Kg** and when properly worn on the **body is 0.471W/Kg**. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and

should be avoided.

**Body-worn Operation**

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 1.5 cm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.