User manual Contents

INTRODUCTION	3
FOR YOUR SAFETY	
1 ABOUT YOUR PHONE	4
1.1 APPEARANCE	4
1.2 ICONS	6
2 GETTING STARTED	7
2.1 THE BATTERY	7
2.2 INSTALL / REMOVE BATTERY & SIM CARDS	7
2.3 MEMORY CARD INSTALLATION	9
2.4 Charging	10
2.5 STORAGE MANAGEMENT	11
2.6 EARPHONE PLUGGED IN	12
3 BASIC FUNCTION	13
3.1 POWER ON AND OFF	13
3.2 MAKE A DOMESTIC CALL	13
3.3 MAKE AN EXTENSION CALL	13
3.4 MAKE AN INTERNATIONAL CALL	13
3.5 MAKE A CALL FROM CONTACTS	13
3.6 REDIAL A CALL BY CALL LOGS	14
3.7 Answer a call	14
3.8 CALL OPTIONS	14
4 CALL LOGS	14
4.1 DIALED CALLS	15
4.2 RECEIVED CALLS	
4.3 MISSED CALLS	15
4.4 REJECTED CALLS	15
4.5 DELETE ALL	
4.6 CALL TIMERS	15
4.7 Call cost	
4.8 GPRS COUNTER	
5 CONTACTS	15
6 INTERNET	
6.1 INPUT URL	
6.2 BOOKMARKS	
6.3 HISTORY	16

6.4 OFFLINE PAGES	17
6.5 SETTINGS	17
7 MULTIMEDIA	
7.1 CAMERA	17
7.2 AUDIO	18
7.3 VIDEO	18
7.4 FM RADIO	19
8 MESSAGES	19
8.1 .WRITE MESSAGE	19
8.2. INBOX	20
8.3. OUTBOX:	21
8.4 Drafts	21
8.5 SENT ITEMS	21
9 TOOLS	21
9.1 Alam	
9.2 Bluetooth	21
9.3 CALENDAR	
9.4 CALCULATOR	
9.5 RECORDER	
9.6 WORLD CLOCK	22
9.7 Timer	
9.8 STK	23
9.9 TORCH	23
10 APPLICATIONS	
10.1 IMAGE	23
10.2 EBOOK	
10.3 SOKOBAN	
10.4 FACEBOOK	
10.5 TWITTER	
11 MY FILES	
12 SETTINGS	
12.1 CALL SETTINGS	
12.2 PHONE SETTINGS	
12.3 DISPLAY SETTINGS	26
12 4 SECURITY	26

Introduction

Thank you very much for your choice of this product designed by our company!

Our phone complies with the Telecommunication industries standards of both the People's Republic of China and Europe.

GSM network is a global cellular communications system of international standards.

Allow you to receive an international telephone call in your homeland.

However, before using these advanced network functions, you must firstly apply for these required services.

In order to use your cell phone better, we suggest you to carefully read this statement to know all the functions well.

Note: Due to the cellular network settings and the provided services, some functions may be unavailable, please query local service providers.

For your safety

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this manual.

ROAD SAFETY

Always keep your hands free to operate the vehicle while driving. Park the vehicle before using your phone.

SWITCH OFF IN AIRCRAFT

Using of wireless telephones in aircraft may disrupt the operation of the aircraft. It is dangerous and illegal. Insure switching off the phone before going aboard.

SWITCH OFF IN HOSPITALS

Follow any restrictions or rules. Switch off the phone near medical equipment.

SWITCH OFF WHEN REFUELING

Switch off the phone at a gas station or any fuel or chemicals places. SWITCH OFF NEAR BLASTING POINT

Don't use the phone where blasting is in progress. Observe restrictions and follow any regulations or rules.

INTERFERENCE

All radiotelephones may be susceptible to interference, which could affect the performance.

USE NORMALLY

Use in the normal position explained in the product documentation. Don't touch the antenna unnecessarily.

ENHANCEMENTS AND BATTERIES

Use only the approved enhancements and batteries. Do not connect incompatible products.

EMERGENCY CALLS

Ensure the phone is switched on and in service. Enter the emergency number, and then press the call key. It will give your location. Do not end the call until the permission.

1 About your phone

1.1 Appearance





Each button instructions	
1.Left soft key	Enter into the main menu Confirm function Enter sub menu options
2. SIM 2 dial key	Standby, enter the number dialing. Standby, press this key can be derived if records of the SIM 2 cards.
3. SIM 1 dial key	Standby, enter the number dialing. Standby, press this key can be derived if records of the SIM 1 cards.
4. OK key	Press this button for determination of the function
5.Up,Down,left,Right key	The main menu interface implementation, down, left, right movement function
6. Right soft key	1.Open phonebook from standby screen

Oser manual		
	Previous page Input method, the corresponding delete button	
7.SIM 3 dial key	Standby, enter the number dialing. Standby, press this key can be derived if records of the SIM 3 cards.	
8. End key	End key is used to end a call during calling or conversation, or to quit the menu and return to idle screen.	

1.2 Icons

1.2 Icons	
-	Battery charging in progress
gřátl gřátl	Signal strength of SIM1 & SIM2.
ăil	Signal not received
G	GPRS is in use
	Battery status
0	Call in progress
	Unread messages
-	Alarm activated
Ş	General mode
	Silent mode
SS	Meeting mode
(c)	Indoor mode
\sim	A new MMS has not read
 III III III III III III III	Download MMS in
~	New MMS received

I lear manual

18	MMS full
$^{\mathbb{B}}$	Bluetooth active
-	Airplane mode is ON
€	Earphones conected

 
2 Getting started

 
2.1 The Battery

The lithium battery can be charged and discharged hundreds of times. Please use the approved batteries, and only use the battery charger approved by the phone producer to charge your battery.


2.2 Install / remove battery & SIM Cards

1. If the battery has been installed, remove it following the direction.






2. As follows, insert SIM 1 or SIM 2 with the angle towards the bottom right and SIM 3 with angle towards bottom left.

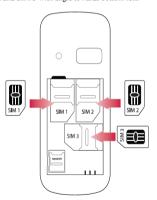

As follows, install battery, match battery metal touch point with mobile phone's metal touch point.

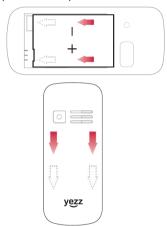

2.3 Memory card installation

Turn off the phone, and take out the battery. Keep the gold color side of the Memory card downward, and put it inside until it is locked. To remove the Card, push it inward and it will be popped up automatically.

9



2.4 Charging

Connect the charger to power supply, and then insert the charger pin into the buttom of side jack.

Note: 1. It is beneficial to the battery to charge it until full at the first three

- times.

 2. When charging, don't remove or take out the battery to avoid the
- battery circuit to burn out.

 3. While charging, it is normal that the phone and charger will become hot.
- If the battery is completely empty, it may take a period of time before the charging icon appears on the display.



2.5 Storage Management

To manage U disk and memory card storage space.

1. Connect to a computer

The USB function of the phone can be activated no matter the phone is powered on or off.

While being power off, the phone will enter resource manager directly after the USB cable has plugged in.

While being power on, the phone will enter the window of "USB Config" after the USB cable has plugged in. Please select "Mass Storage" item. If the memory card has already been installed, you will find both U disk and memory card as removable disks on your PC

Some folders have already existed. Save the file in corresponding folder in order to use it normally. For example, Mp3 in Mp3 folder, Video in Mp4 folder, Photos in Photos folder, Download Pictures in Images folder, Record in Audio folder, Files received by bluetooth in Received folder.

After finished the operation, if you want to exit, click the USB icon on underside-right of computer, select to stop the USB device, and remove it after the information "USB device can be remove" annears

Format

If you format the U disk or memory card, all files saved in it will be lost. By two ways you can format your U disk or Memory card:

Format by phone:

Enter my files—>options —>more—>format phone memory.

Format by computer:

Please complete the format work as following steps.

- (1) Right click "My computer", select "manage", and enter to select "storage"—>" Disk manage"
- (2) Right click the disk which is corresponding to the memory card, select

2.6 Earphone plug in



3 Basic Function

3.1 Power on and off

- 1. Press and hold at of power key to turn on/off the phone.
- 2. Please input password and press left soft key, if mobilephone need input password.
- 3. Type PIN code and press left soft key to confirm,if mobilephone was required to input PIN code.(PIN is personal identify code,in order to avoid using SIM illegally,usually PIN code is the same provided by net carrier as SIM card

Note:

- 1. Please contact with factory or agent's service center, if forget mobilephone open password
- 2. Delete character ahead of cursor, if type wrong keystrok when input password
- 3. Screen indicates type again, if input PIN code wrong. Screen indicates input PUK code, if type wrong three times. If PUK code correct, then back to PIN code input interface, can preset new PIN code (puk CODE as PIN code unlock code, provided by carrier). Mobilephone will display SIM card will be not used any more, if type PUK code ten times wrong.
- 4. Please contact with network carrier or service supplier, if SIM card inserted corretly, but indicate uninsert SIM card.
- 5.On standby state, press "right soft keystroke" and "*" keystorke to lock screen, press "left softkey" firstly and press **Right Softkey** to release lock.

3.2 Make a domestic call

Enter the phone number including the area code. Press dial key to make a call.

3.3 Make an extension call

When making an extension call, press and hold "*" key to get "P" that is a prefix of extension numbers.

3.4 Make an international call

Enter the country code, the area code and the phone number, press dial key. "+" is needed when input country code, and it can be got by pressing and holding "0" key.

3.5 Make a call from contacts

Enter contacts, select the phone number, and then press dial key to

make a call.

3.6 Redial a call by call logs

In standby mode, press the Dialing key to find the recent call lists, scroll to the number or name, then press dial key.

3.7 Answer a call

An incoming call window will be displayed as the phone receives a call. The number will appear on the window if you have opened this function. If this number is not saved in the phonebook, the call's district number will show it on the window.

Press left soft key or dial key to answer it. Press right soft key can set to silence.

If an incoming call arrived during your operation in sub window, a new window will be popped to inform you and your any operation will be broken. If you missed a call, a missed call log will appear after you return to the start screen.

3.8 Call options

During a call, press Left soft key to enter call options or press right soft key to open or close hand free function. And the options content is changeable according to your call status. The functions of Call Waiting Call Hold need the support of net work

4 Call logs

It also can keep such records as 20 Dialed calls, 20 Received calls and 20 Missed calls. The first two items can be check in it when mobile phone work normal and network service supported.

- Missed calls, answered and dialed phone can be viewed seperately in on-phone record.
- 2. Menu phone record including:
- --details: Check telephone details
- --call: you can use the left-soft key to call.
- --save: Keep contact number
- --send SMS: you can send an SMS to selected number.
- --add to existed contacts: Will join existing contact number in the record
- --add to blacklist: Will join contact list
- --delete: you can choose yes or no to delete it.
- --delete all: delete all call records

4.1 Dialed calls

You can check recent 20 dialed calls via this menu. Futhermore, you also can view each phone NO you dialed, exactly your diaed date and times

4.2 Received calls

You can check recent 20 received calls via this menu. Futhermore, you also can view each phone you answered, exactly on-phone date and times

4.3 Missed calls

You can check recent 20 missed calls via this menu. Futhermore, you also can view each phone NO and date, even save or delete from the phone book.

4.4 Rejected calls

Will a number to join the blacklist, the other party calls, and can realize refused to function

4.5 Delete all

You can delete unanswered, answered and dialed phone record seperately. Also you can delete all record from this menu.

4.6 Call timers

You can check total time and the last call time (dialed phone and answered phone).

- 1. Last call: last call time.
- 2. Total time of dialed calls
- Total time of received calls

Note: all these data are for reference only.

4.7 Call cost

You can view total cost, max cost and set price per unit or reset cost.

It adapt for keeping the quantity on GPRS which includes sending and receiving information.

5 Contacts

The phone provides two kinds of storage media: SIM card and phone. The capacity of the phone book on your SIM card depends on the type of SIM card provided by your network operator.

Enter a number in idle screen and press the OK key to save the number. Select the storage location. Then the edit interface appears. If To SIM1 or

SIM2 or To SIM3 is selected, you need to edit the name and number. If To phone is selected, you need to edit the items that you set in the settings of phone book, including the name, number, home number, email, caller picture, caller ringtone, caller group and SIM selection. In idle screen, press the right soft key mention in NAMES to directly access the phone book.

The phone book allows quick search through it. Input what you want to search, Enter the first letter to the black blank, Then all the records starting with such letter are displayed.

Add new contact: This option is at top in the phonebook. You can add a new phone number to SIM1, SIM2,SIM 3 or phone.

View: View the detailed information of the record.

Send text message: Send text message after selecting a designated number

Call: Make a call of the current phone number.

Edit: Edit the options included in a phone book record.

Delete: Delete the record.

Copy: Copy the record from the current storage to the other storage.

6 Internet

The Internet is a combination between wireless Internet communication and application platform. You can get information resources and e-commerce applications on the internet.

Note: 1. Your Internet service provider may not support some functions. In order to guarantee the normal operation of the browser line, please confirm your SIM card which can support the Internet and opens up the function.

If you want to browse the web, relevant traffic expenses will be charged.

6.1 Input URL

Input web page address.

6.2 Bookmarks

You can edit the bookmark on your own way. Set specific operation as follows: add new bookmarks->choose add new bookmark->enter the new bookmark address-> enter a name to save.

6.3 History

Record the web addresses you have visited.

6.4 Offline pages

Record the web addresses your have saved.

6.5 Settings

If the network support this function, the phone is configured automatically. The phone can connect to the designated network automatically or to a roaming network when you are outside the coverage of your regular network. You can manually select the local network system beyond regular network.

Account settings

SIM1 Internet account: SIM1 browser port information set.

SIM2 Internet account: SIM2 browser port information set.

SIM3 Internet account: SIM3 browser port information set.

Homepage Setup

Set the home page type: under the launch of the function, you can choose the homepage for the default and custom types.

Custom home page: according to the function, you can set the custom home page.

Content settings

Download image: turn on the function, the download page image can be shown.

Font size: you can set the font size of interface.

Restore default settings
7 Multimedia

7.1 Camera

Choose menu "camera" to enter. You may adjust camera lens and fix someone, press "photo key" to capture the image. The percentage on the screen indicate the rest of memory capacity.

- 1. Camera function options:
- 1) Shoot mode: To realize the camera & camera mutual switching function
- 2) Size: you can freely set image size (1600x1200, 1280x960, 640x480, 320x240, 176x220,) and image quality (advanced, common, low). Generally the higher pixel resolution set, the better image quality would be.
- 3) Night mode: better quality with low light
- 4) Brightness: Increase or decrease brightness
- 5) Contrast: Increase or decrease the contrast
- 6) Exposure: Increase or reduce exposure compensation

- 7) Frame: Add a frame to the photo taken
- 8) Cont.shot: Capture three continuous photos
- 9) White balance: Including auto, incandescence, fluorescent, daylight and cloudy.
- 10) Delay: Delay 3 seconds or 10 seconds taking pictures
- 11) Effect: Allow to choose six different photo effects.

7.2 Audio

Audio player allows you to play mp3 audio files by making playlist.

The music file will be added to the current playlist.

1. Now Playing: To play songs from preloaded list.

Play: Play the music files

Move up: To move the selected song up in the playlist

Move down: To move the selected song down in the playlist

Send: Send the selected song via Bluetooth to others.
Use as: To use the selected song as ringtone and alarm ringtone.

Add: Add new songs to the playlist

Remove: Remove selected song from the playlist

Details: Check the details of music files.

- Player Settings include Repeat, Shuffle
- 2. Settings:
- 1) Display Settings include Skin, Normal& Spectrum display
- 2) Equalizer Settings include Regular, Classic, Odeum, Jazz, Rock, & Soft rock
- 2. My Playlists: To make the new play list. Following options are available for the selected playlist.

New Playlist: To make a new playlist

Rename: To change the name of existing playlist

Delete: To delete the selected playlist

Delete all: To delete all the playlists

Storage: To select the storage location for the playlist

7.3 Video

Video player allows you to browse or process video recording files.

Select Video Player submenu to access movie list and you can access "Option" for the following operations:

- --Play list: Open the current play list
- --Fullscreen play: Full screen video files
- --Order play: Open or closed cycle play function

- --Video application: Set as screensaver, power on animation, power off animation
- --File attribute: Check file attributes

Select Video Play list submenu to access movie list and you can access "Option" for the following operations:

- --Play: Select a video file play
- --Add video: Add a video to the current play list
- --Search all videos: Search all video files
- -- Delete from list: From the list deletes one or more video files
- --File attribute: Check file attributes
- --Set as: Set as screensaver, power on animation, power off animation
- --Mark/unmak: Mark or cancel mark one or more video files

7.4 FM radio

This option allows you to listen to FM radio. You have to plug in the headset to listen radio.

Auto search and save: Automatic search channel and store it

Channel list: Edit channel list.

Save: Choose channel name to save it

Manual search: Manual input a channel to search in Open speaker: Open/close the put function

Background play: Allow to reproduce FM Radio while you do other tasks

Record: Perform audio recording FM radio.

Record file list: Display the recording documents.

8 Messages

8.1 .Write message

1) Character message

Enter into input interface, press left soft key to confirm choose send/save, and then finish the input.

- --send: send the message to the selected number
- --insert template: Insert common phrases
- --Add contact info: Insert the name from phone list
- -- save: save the message in the draft box

Note: The message center will display "send" when you send message by net service, which express the message have sent to the SIM card inner message center, but not express that the message

have reached the destination. Please consult to the network carrier for more details information about the message service

Multimedia message:

Multimedia message's characteristic is support multimedia function can transfer file image voice and other various kinds of multimedia format message. Please confirm SIM card support this service or not from your network carrier service center

Edit operation for multimedia message content as following:

- -- Complete: Select the finish option after complete the edition. You can press the left soft key to enter in the edition interface again.
- -- Input method: Choose input method, input information refer to "input method" part
- --Add picture: Insert picture to message from management file.
- -- Add audio: Insert voice to message from management file
- --Add video: Insert video to message from management file
- --Add attachment: Insert attachment to message from management fil.
- --Add bookmark text: Insert new bookmark homepage from WAP bookmark
- -- preview: Preview the edited multimedia message
- --Setting: Edit alternation time, character, SMIL
- After complete edit multimedia message, press left soft keystroke as following:
 - --send: send the edited multimedia messge to reciever
- --save and send: save and send the multimedia message to the reciever
 - -- save to draft: save the edited multimedia message to draft box
- --save as template: edit multimedia save as template.
- --send options: set the related parameter of the multimedia message
- -- read confirmation; optional for open or close. --priority: optional for "normal" "high" "low"

8. 2 Inbox

The inbox message's icon will show if you have unread messages. Press left soft keystroke to enter message option list.

- --reply: reply to sender:
- -- forward: forward direct to others' or forward after edit
- --edit: edit choosed information

- --delete: delete choosed information and press left soft keystroke to
- --delete all: delete inbox's all information.
- --copy to phone: copy the message to the phone
- --move to the phone: moves the information to the phone
- --copy all message: copy all message
- --move all messages: move all messages

8.3 Outhox:

The message will be store in draft box automatically when it fail to send.

Information list option including following items:

- --send: sen the message to the destination
- --edit: send the message directly or after re-edit
- --delete: delete choosed information, press left soft keystroke, and choose "yes" or "not"
- --delete all: delete all messages
- --use connects: connect the information's website
- --advance rank option: (including following content)
- --copy to phone: copy the message to the phone
- --copy all message: copy all message
- --copy all message: copy all message
- --move all messages: move all messages

8.4 Drafts

The messages unprepared for sending are stored in the Draft, waiting to be modified and sent.

8.5 Sent items

Save the successful text message

9 Tools

9.1 Alam

User can set three types of alarm clock time if required. Then the alarm icon will be displayed on the idle screen.

Scroll to an alarm and select Edit for settings. You can set whether to enable the alarm, message, time, ringtone, snooze minutes and alert type.

9.2 Bluetooth

Power: Allow you to switch on/off Bluetooth.

Inquiry audio device: Allow you to find all other Bluetooth

hands-free devices within the allowable scope of Bluetooth, and list all items; You can connect and match the hands-free device in the list (the Bluetooth connection icon would appear in the status column on the top of screen).

Remote control: the device can control the pc to play music and video etc.

My Device: It would display the history records of various devices connected to the Bluetooth for the following operations of the devices in the records:

Active device: To display the devices and services in connected and disconnect them.

Settings: Allow you to make the following operations: this cell phone may be searched; Device names of this phone; Authentication; File transmission setting.

About: display the device name, Bluetooth address and services supported by the device.

9.3 Calendar

You can enter events in the calendar. In the calendar interface, press the up, down, the left and right direction keys to scroll to different days.

Go to date: Enter a specific date to be located and the cursor will jump to the date quickly.

Weekly: According to the week show calendar trip

9.4 Calculator

You can calculate the mathematical calculation using calculator.

- 1. Enter the amount to be calculated.
- 2. Use navigation keys to operate and OK key to get the result.

9.5 Recorder

User can use mobile phone a microphone and stored in recording in cell phones.

9.6 World clock

User can check the current local date and time of major cities in the world.

9.7 Timer

Enter the function list and select Countdown timer.

- 1. Select Countdown timer
- 2. Select Start button to start the timer.

3. Press Exit to close the warning tone when the timer stops.

9.8 STK

In addition to the functions available on the phone, your SIM card may provide additional services that you can access in this menu. It is shown only if it is supported by your SIM card. The name and contents of the menu depends on the available services

9.9 Torch

In the menu, you can choose to open or close the flashlight function

10 Applications

10.1 lmage

Pictures can be accessed quickly in Image viewer. Select Options for available options while viewing pictures.

Change folder: You can choose the phone internal memory or the external memory card

Delete: Delete the picture.

Set image as wallpaper: Put the pictures set to standby wallpaper

10.2 eBook

You can read TXT format file. While reading, press "Option" for options like Find, Jump to, Go to bookmark, Add bookmark etc.

10.3 Sokoban

Following is a detailed game operation instruction:

- 1. Right the direction key: press the right button move to the right box or press 6to move right
- 2. Left the direction key: press the left button move to the left box or press 4to move left
- 3. Up key: press the up key move up the box or press 2 to move up
- 4. Down key: press the down key move down the box or press 8 to move down
- 5.# key:press # to revoke

10.4 Facebook

Access to the social network Facebook

10.5 Twitter

Access to the social network Twitter.

11 My files

It provides you the functions such as browsing media files, checking storage space and formatting function.

When browsing the media files, you can operate the selected files

such as view, rename, copy, move, delete etc.

12 Settings

12.1 Call settings

Set Three SIM open. SIM1 open. SIM2 open. SIM3 open

When you are on a flight where the use of mobile phones is prohibited, select flight mode so that the phone will not connect to any network. However, alarm and calendar reminder will remain on. You can still use the entertainment features such as audio player and camera in flight mode.

Warning: In specific areas where the use of phone is prohibited (such as in aero planes), please remember to disable the automatic switch-on function before entering the areas to prevent unexpected accidents

12.1.2 Network selection

Use the default setting provided by the network operator.

You may not be able to make calls if you have selected other network manually

12.1.3 Call divert

You can specify the conditions under which calls should be diverted to your voice mail box or another number.

Divert all voice calls: All calls are diverted

Divert if unreachable: A call is diverted if the phone is switched off or is out of range.

Divert if no answer: A call is diverted if not answered.

Divert if busy: A call is diverted if another call is in progress.

Divert all data calls: All data calls are diverted.

Cancel all divert: Cancel all call diverts settings.

12.1.4 Call barred

Restrict the dialing or receiving of certain calls. To activate or cancel call barring, you have to enter the network password provided by your network operator.

Outgoing calls: If all calls are activated, no calls can be made.

Incoming calls: If all calls are activated, no calls can be received. When roaming is activated, you may not receive calls outside your home network.

Active all: Allow you to activate all call barring services by inputting

your password.

Cancel all: Cancel all restrictions to calls. Password from your network operator is required.

Change barring password: Change barring password. The original barring password is required.

12.1.5 Call waiting

--Activate: If activated, an incoming call is signaled by a call waiting tone when you are on another call. The number/name of the incoming call is displayed.

--Off: Cancel the call waiting function.

--Query status: Inquire the current status from the network.

12.1.6 Select line

This function is supported by operator to switch to Line 1 or Line 2.

12.1.7 Flight mode

Open or closed Flight mode

12.1.8 Others

50 secs warning: During a phone you will be prompted to 50 seconds

Answer/Reject mode:

1) Reply SMS after reject: choose reject call, and then select to reply with message.

2) Any key answer: Choose to answer calls using any keys.

Auto redial: Once activated, the phone will automatically redial, if there is no answer for a number you have dialed.

12.2 Phone Settings

12.2.1 Time and date

Set time: Set your time.

Set data: Set the current date

Time format: Format for the time.

Date display type: Set on display type

12.2.2 Select language

Select the language for your handset. You choose: [Espanol],

[English], [Portugues], [Francais] and [Nederlands].

12.2.3 Shortcut settings

Set all shortcut keys

12.2.4 Autopower on/off

Set time to power on/off the phone automatically.

12.2.5 Power management

You can view battery status

12.2.6 Restore factory settings

Reset the phone to default values (factory settings).

The phone password is required, which is "1234" by default.

12.3 Display settings

- --Wallpaper settings: Set the standby image of the phone.
- --Switch system: There are two main menu display forms for you to choose.
- -- Idle display setting: Set standby interface time & date, service provider, today's schedule, customized word display
- --Screen saver settings: Set Screen saver --Contrast: Set the backlight brightness
- -- Backlight: Set the backlight brightness.
- --Kevpad backlight time: Set the Kevpad backlight time
- --Animation effect: Set power on display and power off display.

12.4 Security

The phone provides several security options to protect your phone from misuse.

1. PIN

Enable: enable PIN code, every time you turn on the cellular phone, you will need to input PIN code.

Change: allow you to change the PIN code. You must know the actual PIN code to change it.

Disable: allow you to disable the PIN code.

2 PIN2·

PIN2 (PersonalIdentificationNumber2) code is used in some special functions (such as in setting fixed number, setting calls billing, etc).

3. Privacy

Using the password protection, you can lock phone specific functions in order to prevent unauthorized use. When the functions are password enabled, you must enter the correct password to use them, default "1234".

4. Auto keypad lock

Keypad lock prevents the inadvertent phone usage. However, you can still be called and you can make emergency calls.

5. Power-on password

If the phone lock is activated, the phone lock password is requested after the phone switched on. The default password is "1234". If the phone is locked, only emergency calls can be made.

12.5 Profiles

Profiles define how your phone reacts when you receive a call or a message, how your keypad sounds when you press a key, and more. Each of the available profiles can be left at their default setting or customized to suit your needs. Select and customize the most suitable profile for your situation. The available modes are Normal, Silent, Meeting, Indoor, Outdoor, Headset.

12.6 Connections

Account settings

Account settings SIM1 browser port information set. SIM2 network account: SIM2 browser port information set. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may causeundesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class Bdigital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio technician for help.

Specific Absorption Rate (SAR) information:

This wireless phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of allpersons regardless of age or health FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6W/kg averaged over one gram of tissue. Device types: CLASICO 2 (FCC ID: A4ICLASICO2) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 1.53W/kg and when properly worn on the body is 0.82W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 1.5 cm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.