

**yp22**<sup>®</sup>  
Freestyle Mobile

**EPIC T7ED**



**yp22**<sup>®</sup>  
Freestyle Mobile

**[www.sayyez.com](http://www.sayyez.com)**

**USER'S MANUAL  
MANUAL DE USUARIO**



*Para instruções em português, visite a página web*

*Pour les instructions en français, visitez la page web*

*Anweisungen in deutsch, besuchen sie die webseite*

*Per le istruzioni in italiano, visita il sito web*

**[WWW.SAVVEZZ.COM](http://WWW.SAVVEZZ.COM)**

## SECURITY INFORMATION

Please remember to obey relevant rules and regulations whenever use your tablet. This will prevent bad effect from you and the environment.

### General security

|                                                                                      |                                                     |
|--------------------------------------------------------------------------------------|-----------------------------------------------------|
|  | Never text while driving.                           |
|   | Don't use at petrol stations.                       |
|   | Your tablet may produce a bright or flashing light. |
|   | Small parts may cause a choking.                    |
|   | Don't dispose of your tablet in fire.               |

|                                                                                    |                                                                        |
|------------------------------------------------------------------------------------|------------------------------------------------------------------------|
|  | <b>Your tablet can produce a loud sound.</b>                           |
|  | <b>Avoid contact with anything magnetic.</b>                           |
|   | <b>Keep away from pacemakers and other electronic medical devices.</b> |
|    | <b>Avoid extreme temperatures.</b>                                     |
|    | <b>Switch off when asked to in hospitals and medical facilities.</b>   |
|    | <b>Avoid contact with liquids. Keep your tablet dry.</b>               |

|                                                                                       |                                                             |
|---------------------------------------------------------------------------------------|-------------------------------------------------------------|
|  | <b>Switch off when near explosive materials or liquids.</b> |
|  | <b>Only use approved accessories.</b>                       |

INTRODUCING YOUR TABLET

Learn about your tablet's layout, keys, display and icons.

Unpacking

Check the product box for the following items:

- Tablet
  - Headset
  - USB cable
  - USB adapter
  - Travel adapter (charger)
  - User manual
- Function

The supplied accessories perform best for your tablet.

 
Keys

The following table offers you a quick description about the tablet's keys:

| Key                 | Function                                                                                                                         |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------|
| Power button        | Allow you to turn on/off the device and to lock the screen.                                                                      |
| Volume              | Allow you to adjust the volume of ringing and notifications. Also allow you to adjust the volume of multimedia content playback. |
| Back<br>(On screen) | Allow you to return to the previous menu or screen. Also allow you to close some applications.                                   |
| Home<br>(On screen) | It takes you directly to the home screen, leaving any application open.                                                          |
| Menu<br>(On screen) | Allow you to access to the functions menu of the application or screen you are.                                                  |

### Tablet layout

From the front view of your tablet you will observe the following elements:

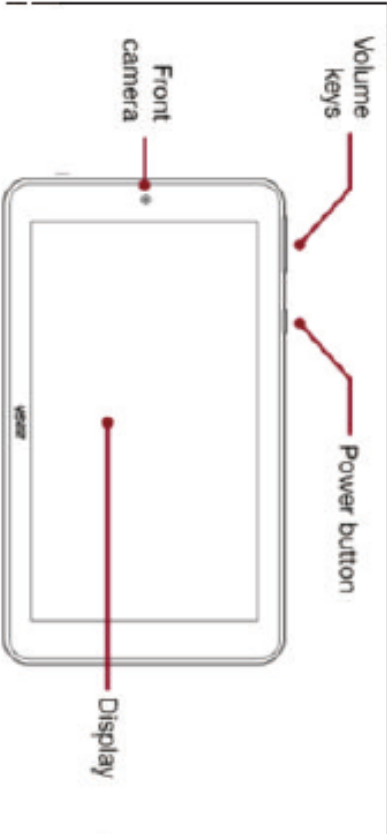


From the back view of your tablet you will observe the following elements:



### Screen

 The screen of your tablet is designed as follows:

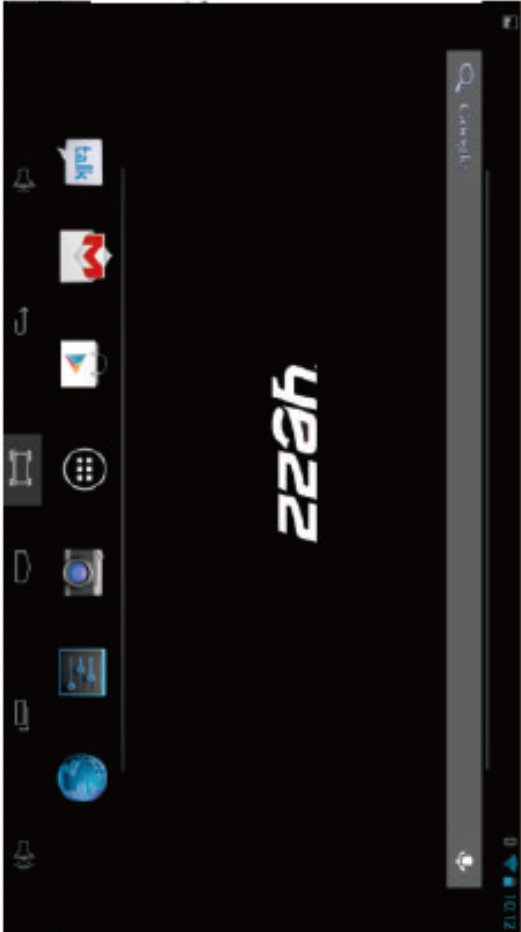

### Icons

Learn about the icons that are displayed on the top of the screen, indicating the status of the tablet:

|                                                                                     |                   |                                                                                     |                     |
|-------------------------------------------------------------------------------------|-------------------|-------------------------------------------------------------------------------------|---------------------|
|  | Headset connected |  | Wireless connection |
|  | USB connected     |  | New email           |
|  | Battery meter     |  | Alarm active        |
|  | Airplane mode     |                                                                                     |                     |

 
## PREPARING YOUR TABLET

Get started setting up your tablet for its first use.

### Insert a memory card (optional)

To store additional multimedia files, you must insert a memory card. Your tablet accepts memory cards up to 32 GB (depending on memory card manufacturer and type).

- **Formatting the memory card on a PC may cause incompatibility with your tablet.** Format the memory card only on the tablet.

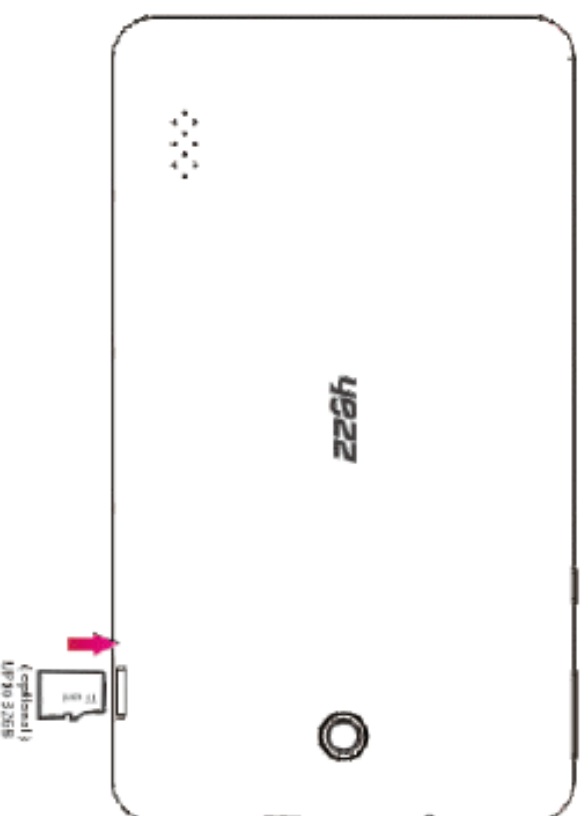

## USING BASIC FUNCTIONS

Learn how to perform basic operations of your tablet.

### Turn your tablet on and off

To turn your tablet on,

1. Long press the power button on the **topside** of your tablet.

To shut down your tablet, go to step 1 above.

### Access menus and applications

To get access to the **Menu** and **Applications**,

1. At the home screen, touch the button  on the screen to pop up the list of installed Applications in your tablet.
2. Slide your finger to the right or left to access other pages of apps.
3. Touch any icon to enter to the application.
4. To exit the application, press **Back** or **Home** at the bottom of the screen.

### Add contacts

Learn the basics of using the phonebook feature.

**Add a new contact:**

### **Add a new contact:**

1. In the application list touch Contacts, then touch [  ] on the bottom right corner to add a new contact.
2. Fill the contact information (Name, Last name and phone number). You can add more fields such as, email, address, etc.
3. Touch [  OK ] on the top of the screen to save.

### **Search for a contact**

1. In the application list touch [  ] Contacts.
2. Slide your finger from bottom to top to scroll the list or touch the search button [  ] and type in the first letters of the name or last name.
3. To see the contact details touch the name or the picture of the contact.

### **Listen to music**

Learn how to listen to music via the music player.

### **Listen to music files:**

First, copy the music files into your tablet internal memory or a MicroSD card.

1. In the application list, touch [  ] Music.
2. Select an order at the top of the screen and touch the song that you want to listen to.

2. Select an order at the top of the screen and touch the song that you want to listen to.

3. You can Pause, Loop, or change of song using the tool bar at the bottom.

### **Browse the web**

Learn how to access to your favorites Web Sites.

1. In the application list, touch [  ] Browser.
2. Touch the address bar and type in the address of the web site you want to go and touch [  ] Go.

## USING THE CAMERA

Learn the basics to capture and view photos.

---

### Capture pictures

1. In the applications list, touch [  ] Camera.
2. Adjusts the lens at the photo target and make the desired adjustments by touching the settings button [  ].
3. Touch the shot button [  ] on the screen to capture the picture. It will be saved automatically.

### See the captured pictures

In the applications list, touch [  ] Gallery and then select the Camera folder [  ] to access and visualize all the pictures captured by your tablet.

## CONNECTING TO INTERNET

Learn the basics to configure your tablet and connect to Internet.

---

### Add a new connection

1. In the applications list, touch [  ] Settings to access to the device configuration.
2. Touch the option "More...", then touch Mobile networks and touch APN.
3. Touch the Menu key and select New APN, then type in the parameters according with your Carrier.

The basic parameters are:

- Account name
- APN
- Username
- Password

Some carriers use Proxy Servers; refer to your carrier configuration for more information.

4. When you finish typing in the parameters needed, touch Menu then Save.

If you have multiples APN Configurations for the same SIM

card, choose which one you want to use touching the radio button [  ] at the right side of the name.

To add another connection, repeat from step 3.

## USING THE WIRELESS CONNECTION

Learn to use the tablet's wireless capabilities to connect to any wireless local area network compatible.

---

### Connect to a wireless network

1. In the applications list, touch [  ] Settings to access to the device configuration.
2. Touch the wireless option [  ].
3. To turn the On the wireless touching [  ] on the right top corner.
4. Choose a wireless network and enter the security password if it is needed.

### Disconnect from a wireless network

1. In the applications list, touch [  ] Settings to access to the device configuration.
2. Touch the wireless option [  ].
3. To turn off the wireless touch the button [  ] on the right top corner.

**View the technical details of a wireless network**

- 1. In the applications list, touch [  ] Settings to access to the device configuration.
- 2. Touch the wireless option [  ].
- 3. Touch the active wireless network to see details such as Link Speed, Signal strength and more.

**INFORMACIÓN DE SEGURIDAD**

Recuerde que debe obedecer las reglas y reglamentos pertinentes cada vez que utilice su tableta. Esto evitará efectos negativos a usted y el medio ambiente.

**General security**

|                                                                                      |                                                            |
|--------------------------------------------------------------------------------------|------------------------------------------------------------|
|  | Nunca escriba mensajes cuando maneje.                      |
|   | No use la tableta en estaciones de recarga de combustible. |
|   | Su teléfono puede producir luces brillantes o destellos.   |
|   | Las partes pequeñas pueden causar asfixia.                 |
|   | No deseché su tableta en el fuego.                         |

|                                                                                     |                                                                                      |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
|  | Su tableta puede producir sonidos fuertes.                                           |
|  | Evite contacto con cualquier objeto magnético.                                       |
|    | Mantenga la tableta lejos de marcapasos y otros equipos médicos electrónicos.        |
|    | Evite exponer la tableta a temperaturas extremas.                                    |
|    | Apague la tableta en hospitales e instalaciones médicas cuando se le sea solicitado. |
|    | Evite todo contacto con líquidos.<br>Mantenga su tableta seca.                       |

|                                                                                       |                                                                          |
|---------------------------------------------------------------------------------------|--------------------------------------------------------------------------|
|  | Apague su tableta cuando esté cerca de materiales o líquidos explosivos. |
|  | Use solo accesorios aprobados.                                           |

## PRESENTACIÓN DE LA TABLETA

Aprenda sobre el diseño de su tableta, teclas, pantalla e iconos.

### Desempaquetado

 
Verifique que la caja del producto provea los siguientes elementos:

- Tableta
- Auriculares
- Cable USB
- Adaptador USB
- Adaptador de viaje (cargador)
- Manual del usuario

Los accesorios que se suministran ofrecen un mejor rendimiento de su tableta.

### Diseño de la tableta.

Desde la vista frontal de su tableta podrá observar los siguientes elementos:

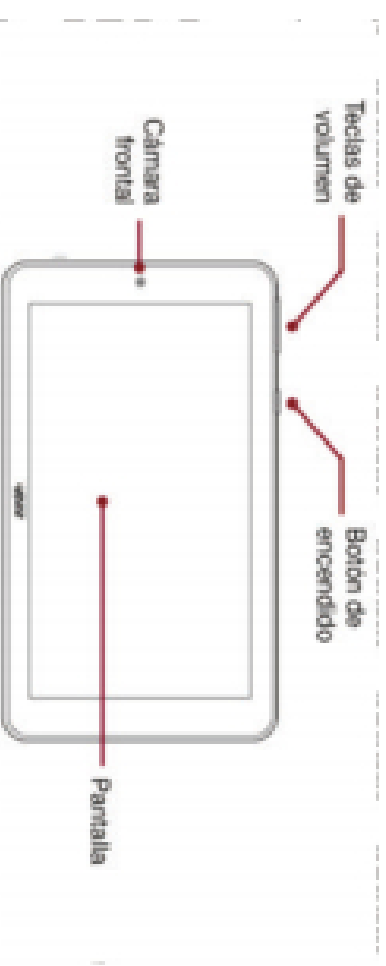

En la parte trasera del su tableta podrá observar los siguientes elementos:




## Teclas

 La siguiente tabla le ofrece una descripción breve de la función de cada tecla de la tableta:

| Tecla                   | Función                                                                                                                                   |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| Encendido               | Permite encender o apagar la tableta. Además le permitirá bloquear la pantalla.                                                           |
| Volumen                 | Le permite ajustar el volumen de repique y notificaciones. Además le permite ajustar el volumen del contenido multimedia en reproducción. |
| Atrás<br>(En pantalla)  | Le permite volver al menú o pantalla anterior. Además le permitirá cerrar algunas aplicaciones.                                           |
| Inicio<br>(En pantalla) | Lo lleva directamente a la pantalla de espera, saliendo de cualquier aplicación.                                                          |
| Menú<br>(En pantalla)   | Le permite acceder al menú de funciones de la aplicación o pantalla en la que se encuentre.                                               |

## Pantalla

La pantalla de su tableta está diseñada de la siguiente forma:

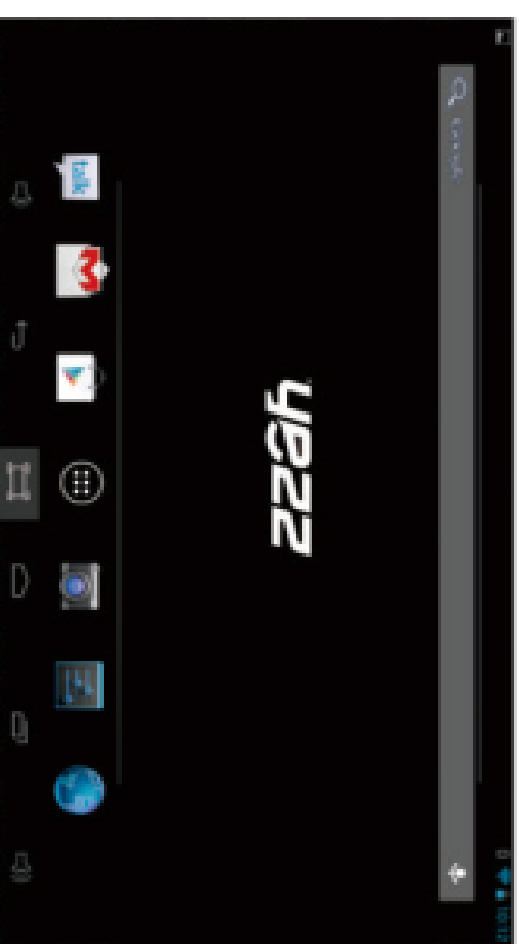

## Iconos

Conozca los iconos que se mostrarán en la parte superior de la pantalla, indicando el estado del teléfono:

|                                                                                     |                        |                                                                                     |                      |
|-------------------------------------------------------------------------------------|------------------------|-------------------------------------------------------------------------------------|----------------------|
|  | Auriculares conectados |  | Conexión inalámbrica |
|  | USB conectado          |  | Nuevo correo         |
|  | Medidor de batería     |  | Alarma activa        |
|  | Modo avión             |                                                                                     |                      |

 
## PREPARANDO SU TABLETA

Comience la preparación de su tableta para utilizarla por primera vez.

### Insertar una tarjeta de memoria (opcional)

Para almacenar archivos multimedia adicionales, usted puede insertar una tarjeta de memoria. Su tableta acepta tarjetas de memoria de hasta 32 GB (dependiendo del fabricante y el tipo de memoria).

- Formatear la tarjeta de memoria en una computadora puede causar incompatibilidad con su tableta. Formatee la tarjeta de memoria preferiblemente en la tableta.

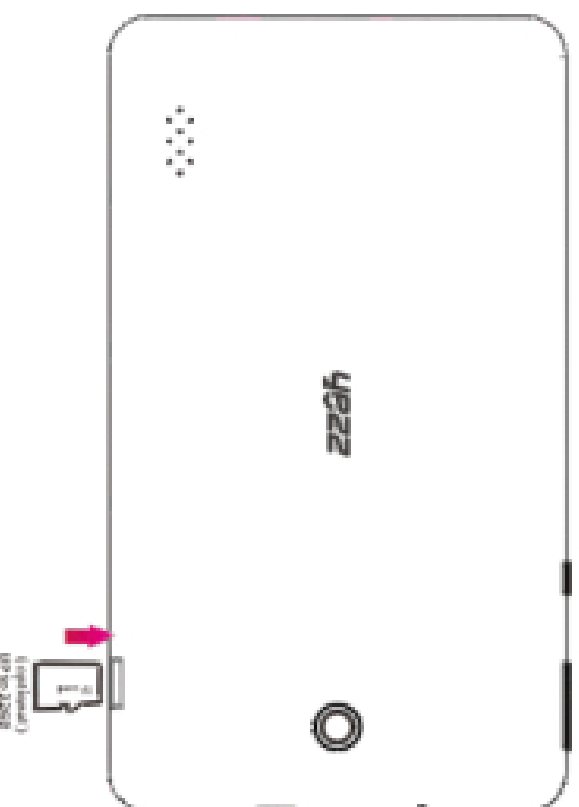

## USANDO LAS FUNCIONES BÁSICAS

Aprenda como realizar las operaciones básicas de su tableta.

### Encender y apagar su tableta.

Para encender su tableta,

1. Presione y mantenga el botón de encendido en la parte superior de su tableta.

Para apagar su tableta, repita el paso 1 señalado arriba.

### Acceder al menú y aplicaciones

Para acceder al Menú y las aplicaciones de su tableta,

1. En el modo de espera, toque el botón [  ] en la pantalla para acceder a la lista de aplicaciones instaladas en su tableta.
2. Deslice sus dedos hacia la derecha o izquierda para acceder a otras páginas de aplicaciones.
3. Para abrir una aplicación, toque el icono en la lista.
4. Para salir de la aplicación presione la tecla Atrás o la tecla Inicio en la parte inferior de la pantalla.

## Agregar contactos

Aprenda los detalles básicos de cómo agregar y buscar un contacto.

### Agregar un nuevo contacto:

1. En la lista de aplicaciones toque **Contactos** y luego toque el botón [  ] en la esquina inferior derecha para agregar un contacto.
2. Introduzca la información de contacto como Nombre, Apellido y número de teléfono. Puede agregar datos adicionales como email, dirección, etc.
3. Toque el botón [  ] en la parte superior para guardar el contacto.

### Buscan un contacto

1. En la lista de aplicaciones toque [  ] **Contactos**.
2. Deslice su dedo desde abajo hacia arriba para desplazarse por la lista o toque el botón de búsqueda [  ] e introduzca las primeras letras del nombre o apellido.
3. Para ver los detalles del contacto toque sobre el nombre o sobre la foto.

## Escuchar música

Aprenda como escuchar música utilizando el reproductor multimedia.

## Escuchar archivos de música:

Luego de transferir los archivos de música a la memoria de su tableta o tarjeta de memoria,

1. En la lista de aplicaciones toque [  ] **Música**.
2. Seleccione un orden en la parte superior y toque la canción que desee para comenzar su reproducción.
3. Puede pausar, repetir o cambiar de canción utilizando los botones de la barra inferior.

### Navegar en Internet

Aprenda como acceder a sus páginas web favoritas.

1. En la lista de aplicaciones seleccione [  ] **Navegador**.
2. Toque el campo de dirección e introduzca la dirección de la página web que desee visitar y toque el botón [  ] **Ir**.

## USO DE LA CÁMARA

Learn the basics to capture and view photos.

### Tomar fotos

1. En la lista de aplicaciones, seleccione  Cámara.
2. Apunte el lente al objetivo de la foto y haga los ajustes que desee tocando el botón de ajustes .
3. Toque el botón de disparo en la pantalla  para capturar la imagen. La foto se guardará de forma automática.

### Ver las fotos tomadas

En la lista de aplicaciones toque  Galería y luego seleccione la carpeta Cámara  para acceder y visualizar las fotos tomadas con su tableta.

## CONECTANDO A INTERNET

Aprenda los pasos para configurar su tableta y conectar a Internet.

### Agregar una nueva conexión

1. En la lista de aplicaciones toque  Ajustes para acceder a la configuración del equipo.
2. Toque en la opción Más, luego Redes móviles y finalmente APN.
3. Toque la tecla Menú y seleccione APN nuevo e introduzca los parámetros de acuerdo a su operadora.

Los parámetros básicos son:

- Nombre
- APN
- Nombre de usuario
- Contraseña

Algunas operadora utilizan servidores Proxy. Refiérase a la configuración de su operadora para más información.

4. Una vez ingresados los parámetros necesarios, toque la tecla Menú y seleccione Guardar.

Si posee múltiples configuraciones, puede activar la que

desee utilizar tocando la marca de selección  a la derecha del nombre.

Para agregar otra conexión, repita los pasos desde el número 3.

## USO DE LA RED INALÁMBRICA

Aprenda a utilizar las capacidades inalámbricas de la tableta para conectarse a cualquier red de área local inalámbrica compatible.

### Conectar a una red inalámbrica

1. En la lista de aplicaciones toque  Ajustes para acceder a la configuración del equipo.
2. Toque la opción red inalámbrica  ].
3. Para encender la red inalámbrica toque el botón de encendido (  ) en la esquina superior derecha.
4. Seleccione la red inalámbrica de su preferencia e introduzca la contraseña de seguridad si ésta lo requiere.

### Desconectar de una red inalámbrica

1. En la lista de aplicaciones toque  Ajustes para acceder a la configuración del equipo.
2. Toque la opción de red inalámbrica  ].
3. Para desactivar la red inalámbrica toque el botón de encendido (  ) en la esquina superior derecha.

## Visualizar los detalles técnicos de una red inalámbrica

1. En la lista de aplicaciones toque [  ] Ajustes para acceder a la configuración del equipo.
2. Toque la opción red inalámbrica [  ].
3. Toque la red inalámbrica a la que está conectado para visualizar información como velocidad, nivel de señal y más.

### FCC Caution,“

15.19 Labeling requirements.“

This device complies with part 15 of the FCC Rules.”

Operation is subject to the following two conditions: “

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, “

including interference that may cause undesired operation.”

15.21 Information to users.”

Any Changes or modifications not expressly approved by “

the party responsible for compliance could void the user’s “

authority to operate the equipment.”

15.105 Information to the user.”

Note: This equipment has been tested and found to “

comply with the limits for a Class B digital device.”

pursuant to part 15 of the FCC Rules. These limits are “

designed to provide reasonable protection against “

harmful interference in a residential installation.”

This equipment generates uses and can radiate radio

frequency energy and, if not installed and used in “

accordance with the instructions, may cause harmful

interference to radio communications. However, “

there is no guarantee that interference will not “

occur in a particular installation. If this equipment “

does cause harmful interference to radio or television

reception, which can be determined by turning “

the equipment off and on, the user is encouraged “

to try to correct the interference by one “

or more of the following measures: “

-Reorient or relocate the receiving antenna.”

-Increase the separation between the equipment and receiver.”

-Connect the equipment into an outlet on a circuit “

different from that to which the receiver is connected.”

-Consult the dealer or an experienced radio/TV technician for help.

4, RF warning for Portable device: “

The device has been evaluated to meet general RF exposure “

requirement. The device can be used in “

portable exposure condition without restriction.”

**Welcome to Freestyle Mobile.**