

Preface

Thank you very much for your choice of this product designed by our company!

Our phone complies with the Telecommunication industries standards of both the People's Republic of China and the European.

GSM network is a global cellular communications system of international standards.

Allow you to receive an international telephone call in your homeland.

However, before using these advanced network functions, you must firstly apply for these required services.

In order to use your cell phone better, we suggest you to carefully read this statement to know all the functions well.

Note: Due to the cellular network settings and the provided services, some functions may be unavailable, please query local service providers.

For your safety

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this manual.

ROAD SAFETY

User manual

Always keep your hands free to operate the vehicle while driving. Park the vehicle before using your phone.

SWITCH OFF IN AIRCRAFT

Using of wireless telephones in aircraft may disrupt the operation of the aircraft. It is dangerous and illegal. Insure switching off the phone before going aboard.

SWITCH OFF IN HOSPITALS

Follow any restrictions or rules. Switch off the phone near medical equipment.

SWITCH OFF WHEN REFUELING

Switch off the phone at a gas station or any fuel or chemicals places.

SWITCH OFF NEAR BLASTING POINT

Don't use the phone where blasting is in progress. Observe restrictions and follow any regulations or rules.

INTERFERENCE

All radiotelephones may be susceptible to interference, which could affect the performance.

USE NORMALLY

Use in the normal position explained in the product documentation. Don't touch the antenna unnecessarily.

ENHANCEMENTS AND BATTERIES

Use only the approved enhancements and batteries. Do not connect incompatible products.

EMERGENCY CALLS

Ensure the phone is switched on and in service. Enter the emergency number, and then press the call key. It will give your location. Do not end the call until the permission.

1 About your phone

1.1 Appearance



2 Getting started

What is a SIM card

When registering your mobile phone number, you will have a SIM card (Subscriber Identity Module) provided by the network operator.

The SIM card has information reserved for your use. It includes your phone number, PIN (Personal Identification Number), PUK (password to unlock PIN), IMSI (International Mobile Subscriber Identity) number,

network information, phone book data, SMS data and so on. If it is lost, contact your network operator immediately for help.

PIN code

PIN is the password provided by your network operator. It is usually 4 digits. When you input the PIN code, the screen displays “*” to replace the number entered.

PIN is used to access the SIM card. If the PIN protection function is enabled, the screen will display “Enter PIN” each time the phone switched on. You can deactivate this feature but risk unauthorized use of the phone. Some network operators do not permit deactivating the control.

Note: If you enter the PIN incorrectly three times in a row, the SIM card will be locked. Please contact your network operator immediately for decoding. Attempting to decode by you may result in the permanent failure of the SIM card.

PUK code

PUK (Personal Unblocking Key, 8-digit) unlocks a locked PIN. If you enter the PUK incorrectly ten times in a row, the SIM card will become invalid. Please contact your network operator for a new SIM card.

Installing the SIM card

1. Press and hold the power/ending key to turn off the phone.
2. Remove the battery cover and then the battery.
3. Insert the SIM card into the card holder. Ensure that the metal contacts face the phone.
4. Re-install the battery. Place the battery cover onto the back of your phone and slide it forward until the latch catches the cover.

Note: A SIM card can be easily damaged if its metal contacts become scratched. Therefore, take special care when holding or inserting it and keep it away from children.

Charging the battery

The battery is not fully charged when first unpacked. It takes three charging-discharging cycles for the battery to reach its peak performance. The battery can be charged and discharged hundreds of times. However, the capacity of the battery will be reduced each time it is charged/emptied, and it will eventually wear out. When the talk time and the standby time are noticeably shorter than normal, replace the battery. Use original batteries and charging devices only.

Unplug the charger from the outlet and the phone when not in use. Do not leave a fully-charged battery connected to a charger because overcharging may shorten the lifetime of the battery. If unused, a fully-charged battery

will lose its charge over time.

If the battery is completely discharged, the charging may not start immediately when you plug in the connector. Wait 10 to 15 minutes for the phone to begin charging. Use the battery only for its intended purpose. Never use any charger or battery that is damaged.

Do not short-circuit the battery. An accidental short circuit may occur when a metallic object such as a coin, clip or pen causes the direct connection of the positive (+) and negative (-) terminals of the battery, for example, when you carry a spare battery in your pocket or purse. Short circuit may damage the battery and the connecting object.

Storage at too high or low temperatures will result in a gradual capacity loss. As a result the operating time of your mobile phone may be considerably reduced, even though the battery is fully charged.

Do not dispose of batteries into fire as they may explode. Batteries may also explode if damaged. Dispose of unwanted batteries and phones as permitted in the law in your countries.

Note: The actual operation time of a battery varies based on the operation mode, network settings and call settings.

Charge a battery according to the following steps:

1. Connect the charger to the connection jack of the phone in proper direction, and connect the charger to a main socket.
2. The phone displays "Charger Connected!" and starts charging after properly connected. The battery icon dynamically displays the charging process. In switch-off state, the phone dynamically displays the charging process.
3. When the battery is fully charged, the charging process stops automatically, and the battery icon indicates full grid on the screen. After the battery is fully charged, remove the charger from the phone and socket as soon as possible.

Note:

- Do not change the parts and accessories of the battery or take off the battery cover for safety.
- Use only original batteries and charging devices. Otherwise you will risk serious damage to health and property.
- Do not charge batteries in too high or too low temperature.
- Do not use the phone while charging.
- After pulling out the battery system date and time will be reset to default values (factory settings).

T-Flash card

T-Flash card is a kind of multimedia memory card

Switching the Phone on and off

To switch on and off the phone, please press and hold the power on/off key on the top of your handset. If you switch the phone on without inserting the SIM card, then the phone will remind you to Insert SIM Card.

Even though INSERT SIM CARD comes on screen user can use all other features except SIM features.

Then the following notices will appear on the screen in sequence after inserting the SIM card and switching on the phone:

Enter the phone lock password—if you have set phone lock password on.

Enter PIN—if you have set SIM card password on.

Search the network—the phone will automatically search the network until it connects to the appropriate network

3 Basic Function

3.1 Power on and off

1. Press and hold at top of power key to turn on/off the phone.
2. Please input password and press left soft key, if mobilephone need

input password.

3. Type PIN code and press left soft key to confirm, if mobilephone was required to input PIN code. (PIN is personal identify code, in order to avoid using SIM illegally, usually PIN code is the same provided by net carrier as SIM card)

Note:

1. Please contact with factory or agent's service center, if forget mobilephone open password
2. Delete character ahead of cursor, if type wrong keystroke when input password
3. Screen indicates type again, if input PIN code wrong. Screen indicates input PUK code, if type wrong three times. If PUK code correct, then back to PIN code input interface, can preset new PIN code (puk CODE as PIN code unlock code, provided by carrier). Mobilephone will display SIM card will be not used any more, if type PUK code ten times wrong.
4. Please contact with network carrier or service supplier, if SIM card inserted correctly, but indicate uninsert SIM card.
5. On standby state, press left soft key and then press the right soft key to lock screen.

Press “*” key and then press the right soft key to release lock.

3.2 Make a call

Enter the phone number including the area code. Press dial key to make a

call.

3.3 Make an extension call

When making an extension call, press and hold “*” key to get “P” that is a prefix of extension numbers. It will dial automatically in several seconds since you dialed the telephone exchange.

viz.: area code—telephone exchange numbers—P—extension numbers, then press dial key.

3.4 Make an international call

Enter the country code, the area code and the phone number, press dial key. “+” is needed when input country code, and it can be got by pressing and holding “*” key. Dial to Hongkong, Macao and Taiwan phone ibid.

3.5 Make a call from contacts

Enter contacts, select the phone number, and then press dial key to make a call.

3.6 Redial a call by call logs

In standby mode, press the Dialing key to find the recent call lists, scroll to the number or name, then press dial key.

3.7 Answer a call

An incoming call window will be displayed as the phone receives a call.

The number will appear on the window if you have opened this function.

If this number is not saved in the phonebook , the call's district number will show it on the window.

Press left soft key or dial key to answer it. Press right soft key can set to silence.

If an incoming call arrived during your operation in sub window, a new window will be popped to inform you and your any operation will be broken. If you missed a call, a missed call log will appear after you return to the start screen.

3.8 Call options

During a call, press center (ok) key to open or close hand free function.

And the options content is changeable according to your call status. The functions of Call Waiting, Call Hold need the support of net work.

Here are some parts of the options, like “add new call”, “hold”, “start recording”, “mute”, “adjust volume”, “phone book”, “call logs” and “message”. This should be supported by the current network.

4 Call history

It also can keep such records as 20 Dialed calls, 20 Received calls and 20 Missed calls. The first two items can be check in it when mobile phone work normal and network service supported.

1. Missed calls, answered and dialed phone can be viewed separately in on-phone record.

2. Menu phone record including:

--details: Check telephone details

--call: you can choose left-soft key or sure.

--write message: Edit the number to send SMS/MMS

--add to phone book: Save the number only the phone book

--add to blacklist: Will join blacklist list

--delete: you can choose yes or no to delete it.

--delete all: delete all call records

--mark:marking operations

4.1 Missed calls

You can check recent 20 missed calls via this menu. Furthermore, you also can view each phone NO and date, even save or delete from the phone book.

4.2 Dialed calls

You can check recent 20 dialed calls via this menu. Furthermore, you also can view each phone NO you dialed, exactly your diaed date and times.

4.3 Received calls

You can check recent 20 received calls via this menu. Furthermore, you

also can view each phone you answered, exactly on-phone date and times.

4.4 Rejected calls

Will a number to join the blacklist, the other party calls, and can realize refused to function.

4.5 Delete all

You can delete unanswered, answered and dialed phone record separately. Meanwhile you can delete all from the menu.

4.6 Call timers

You can check total time and the last call time (dialed phone and answered phone).

1. Last call: the final one.
2. Total dialed phone NO
3. Total received phone NO
4. Reset all time: recover 0.00 after you delete phone time.

Note: all these data are for reference only. Actual it mainly depends on network service.

4.7 GPRS counter

It adapt for keeping the quantity on GPRS which includes sending and

receiving information. And you can also delete all, which consists of last transmission, last receiving, alltransmission, and all receiving and reverting informations.

5 Phone book

The phone provides two kinds of storage media: SIM card and phone. The phone can store 500 entries. The capacity of the phone book on your SIM card depends on the type of SIM card provided by your network operator.

In idle screen, press the right soft key mention in NAMES to directly access the phone book.

The phone book allows quick search through it. Input what you want to search, Enter the first letter to the black blank, Then all the records starting with such letter are displayed.

Add new contact: This option is at top in the phonebook. You can add a new phone number to SIM card or phone.

Caller groups: A caller group is the combination of phone settings used to identify a particular group of records. The phone provides five call groups: SIM1, SIM2, Family, Friends, Business, Classmates. You can manage and edit the details of caller groups using Group setting option.

The small icon on the left of the phone book list indicates whether the record is stored on the SIM card or the phone. Press left soft key to select following options.

View: View the detailed information of the record.

6 Message

6.1 Write message

New SMS

Create a new short message.

1. Enter text.
2. Press the menu key (**Options**) and select the required items, including **insert template, add contact info, add phiz, open send timing, save to Drafts.**

New MMS

Write MMS

Create a new multimedia message.

1. Enter recipients in **To, Cc & Bcc** by pressing the left touch key (**Edit**). Confirm with **Done**.
2. Enter a subject in **Subject** by selecting **Edit**. Press the left touch key (**Options**) and select **done**.

3. Enter text in **Edit content** by selecting **Edit**.
4. Press the left touch key (**Options**) and select the items which you want to send, including images (**Add picture**), audios (**Add audio**), files in other formats (**Add attachment**), add bookmarks, and slide (**Add slide before/after**) and so on.
5. Confirm the contents by selecting **Options** and **Done**.
6. Press the right touch key (**Done**) for send options.

6.2 Inbox

The inbox message's icon will express read or not

Press left soft keystroke to enter message option list.

---reply: reply to sender;

---delete: delete choosed information and press left soft keystroke to confirm.

----forward: forward direct to others' or forward after edit.

---edit: edit choosed information

---delete: delete choosed information and press left soft keystroke to confirm.

---call: Call the contact number

---Move: copy the message to the phone or sim card

---Copy: copy the message to the phone or sim card

---Mark: Marking operation

---Sort: Do sort operations

---Add sender to: Save the number only the phone book

---Delete repeated numbers: Delete the number all of the information

---Add to blacklist: Will join blacklist list

6. 3 Outbox:

The message will be store in draft box automatically when you send message fail.

6.4 Drafts

The messages unprepared for sending are stored in the Draft, waiting to be modified and sent.

6.5 Sentbox

Save the successful text message and MMS

6.5 Security inbox

Important information can be stored to here, into safe box to enter mobile phone password, phone the default password is “0000”.

6.7 Templates

There are several short sentences as default SMS which is used most frequently. You can use, edit & remove it.

6.8 Broadcast message

Broadcast messages are messages that your network operator broadcasts to all users within a particular area, such as weather forecast and transportation conditions.

6.9 Message Settings

Access this menu to do the following functions: Profile Settings, Common Settings, Memory Status, Preferred Storage, and Pref. Bearer.

Write message: Send SMS/MMS after selecting a designated number.

Call: Make a call of the current phone number.

Edit: Edit the options included in a phone book record.

Delete: Delete the record.

Delete multiple: delete marked, mark or unmark all.

Copy: Copy the record from the current storage to the other storage.

Others: Allow you to set own number, service number, memory status;

7 Multimedia

7.1 Camera

choose menu "camera" to enter. All indicated icon can be displayed when you enter it. When taking photo, You may adjust camera lens and focus someone, press "photo key" to finish it. The percentage on the screen indicates the rest of memory capacity.

1. Camera function options:

- 1) Store photos: Set the storage location.
- 2) Video recorder mode: Switch to the Video recorder function
- 3) Effect: total six modes for your reference.
- 4) Settings: You can set the flash, size, quality, banding, shutter sound, auto save and storage.

7.2 Video recorder

You can make video record on your way.

Enter video recorder, press left soft key can enter some options:

View video directory, Settings, Storage, and Help. After setting, press center key to start or Suspend recording. And then, press right soft key to stop and save. At the same time press the left/right soft key to return the screen in video preview status.

7.3 Image

Pictures can be accessed quickly in **Image viewer**. Select **Options** for available options while viewing pictures.

View	Browse the pictures saved here.
Use as	Set the photo as wallpaper, contact icon.
Delete	Delete the picture.
Share	You can send it through MMS or Bluetooth.
Rename	Rename the picture.
Rename	Rename the picture.
Details	Check the details

Slide show

Allow you to see your picture as slide show. Set Type of play, Speed, Effect, BGM, Sound & Sort by options for slide show.

7.4 Video

Video player allows you to browse or process video recording files.

--Play: Play the video files.

Move up: To move the selected video up in the playlist

Move down: To move the selected video down in the playlist.

Select Video Player submenu to access movie list and you can access

“Option” for the following operations:

--Local play list: Open the Local play list

-- Shuffle: Open random playback function

--Repeat: Open the repeater function

--Settings: Set local video play mode, Settings reset, Help.

--Details: View the current details play video files

--Exit: Withdraw from the video player

7.5 Sound recorder

The record format wav can be support. A call may also be recorded and saved to the phone or the memory card.

8 Audio player

Audio player allows you to play mp3 audio files by making playlist.

The music file will be added to the current playlist. You can choose a song to play and have a setting of the music.

Play: Play the music files.

Move up: To move the selected song up in the playlist

Move down: To move the selected song down in the playlist.

Music player interface Press Left soft key to the option to do the following operations

1. Music list: Open the music list by default.
2. Add: Add new songs to the playlist
3. Set as ring tone: To use the selected set incoming and alarm ringtone.
4. Shuffle: Open random playback function
5. Repeat: Open the repeater function
6. Settings: Set equalizer, BT stereo output, BT stereo headset.
7. Open review: Open the review function
8. Exit: Withdraw from the music player

9 User profiles

Profiles define how your phone reacts when you receive a call or a message, how your keypad sounds when you press a key, and more. Each of the available profiles can be left at their default setting or customized to suit your needs. Select and customize the most suitable profile for your situation. The available modes are Normal, Silent, Meeting, Indoor, Outdoor.

10 Organizer

10.1 Alarm

User can set three types of alarm clock time if required. Then the alarm icon will be displayed on the idle screen.

Scroll to an alarm and select Edit for settings. You can set whether to enable the alarm, message, time, ringtone, snooze minutes and alert type.

10.2 My files

It provides you the functions such as browsing media files, checking storage space and formatting function.

When browsing the media files, you can operate the selected files such as view, rename, copy, move, delete etc.

10.3 Services

The Internet is a combination between wireless Internet communication and application platform. You can get information resources and e-commerce applications on the internet.

Note: 1. Your Internet service provider may not support some functions. In order to guarantee the normal operation of the browser line, please confirm your SIM card which can support the Internet and opens up the function. If you want to browse the web, relevant traffic expenses will be charged.

10.3.1 Bookmarks

You can edit the bookmark on your own way. Set specific operation as follows: add new bookmarks->choose add new bookmark->enter the new bookmark address->name made after the preservation.

10.3.2 History

Record the web addresses you have visited.

10.3.3 Offline pages

Record the web addresses you have saved.

10.3.4 Settings

This is network supported function. The network that your phone uses is configured automatically. The phone can connect to the designated network automatically or to a roaming network when you are outside the coverage of your regular network. You can manually select the local network system beyond regular network.

Account settings

Internet account: SIM card browser port information set.

Homepage Setup

Set the home page type: under the launch of the function, you can choose the homepage for the default and custom types.

Custom home page: according to the function, you can set the custom home page.

Content settings

Download image: turn on the function, the download page image can be shown.

Google transcoding: according to the function, the download page can be turn yards.

Font size: you can set the font size of interface.

Restore default settings

Reset the parameters value cell phone; make sure your mobile phone is resetted to the default Settings.

10.4 Calendar

You can enter events in the calendar. In the calendar interface, press the up, down, the left and right direction keys to scroll to different days.

Add new schedule: Add event memos.

View schedules: View or edit event memos for the day.

All schedules: View stored all the events and memos

Clear today's tasks: Delete events memos.

Clear all: Delete all events memos.

Go to date: Enter a specific date to be located and the cursor will jump to

the date quickly.

Weekly: According to the week show calendar trip

Daily: According to the daily show calendar trip

10.5 Calculator

The phone can be used as a calculator to finish some simple arithmetic work.

Press number key to enter the number. Press the key “*” to enter radix point. Press the scroll up, down, left or right key to enter plus, minus, multiplication or division. Press the right soft key can delete a number; Press OK key to get the result

10.6 World clock

User can check the current local date and time of major cities in the world.

10.7 STK

In addition to the functions available on the phone, your SIM card may provide additional services that you can access in this menu. It is shown only if it is supported by your SIM card. The name and contents of the menu depends on the available services.

Warning: Contact your service provider for more information.

10.8 Flash LED

In the menu, you can choose to open or close the flashlight function

10.9 Games

Sokoban

The following is a detailed game operation instruction

1. Right the direction key: press the right arrow key to move to the right
2. Left the direction key: press the left arrow key to move to the left
3. Up key: press the up arrow key to move to the up
4. Down key: press the down arrow key to move to the down

11 FM Radio

This option allows you to listen to FM radio. You plug in headset or not in that can enter FM

Auto search and save: Automatic search channel and preserved

Channel list: Edit channel list.

Save: Choose channel name to save other names

Manual search: Manual input a channel to search in

Background play: Backstage play FM

Record: Perform audio recording FM radio.

Timing record: Time to record your favorite FM channels

Record file list: Display the recording documents.

Help: The use of some methods about FM

Note: Make sure enough free memory on Schedule FM record

Or the memory card to store the recordings.

12 Settings

12.1 Call settings

Dual SIM setting

Set Dual SIM open, Only SIM1 open, Only SIM2 open or Flight mode.

When you are on a flight where the use of mobile phones is prohibited, select flight mode so that the phone will not connect to any network.

However, alarm and calendar reminder will remain on. You can still use the entertainment features such as audio player and camera in flight mode.

Warning: In specific areas where the use of phone is prohibited (such as in aero planes), please remember to disable the automatic switch-on

function before entering the areas to prevent unexpected accidents.

Call divert

You can specify the conditions under which calls should be diverted to your voice mail box or another number.

Divert all voice calls: All calls are diverted.

Divert if unreachable: A call is diverted if the phone is switched off or is out of range.

Divert if no answer: A call is diverted if not answered.

Divert if busy: A call is diverted if another call is in progress.

Divert all data calls: All data calls are diverted.

Cancel all divert: Cancel all call diverts settings.

Call waiting

--Activate: If activated, an incoming call is signaled by a call waiting tone when you are on another call. The number/name of the incoming call is displayed.

--Off: Cancel the call waiting function.

--Query status: Inquire the current status from the network.

Others

Call time reminder: If activated, the phone beeps at the interval time you set during a call.

Auto redial: Once activated, the phone will automatically redial, if there is no answer for a number you have dialed.

Call time reminder

Vibration when connect: After open, then call, when each other through your telephone, mobile phone will have a vibrating alert

Reply SMS after reject: After open refused to call, choose whether to reply message.

Call barred

Restrict the dialing or receiving of certain calls. To activate or cancel call barring, you have to enter the network password provided by your network operator.

Outgoing calls: If all calls are activated, no calls can be made. If International calls are activated, no international calls can be made. If International calls except to home PLMN is activated, only local calls or calls to the home country (that is, the country to which the network operator belongs) can be made.

Incoming calls: If all calls are activated, no calls can be received. When roaming is activated, you may not receive calls outside your home network.

Active all: Allow you to activate all call barring services by inputting

your password.

Cancel all: Cancel all restrictions to calls. Password from your network operator is required.

Change barring password: Change barring password. The original barring password is required.

Hide ID

When you make a call, your number can be shown or hidden on the display of the called party. Select Set by Hide ID, depending on the network setting.

Others

Call time reminder: If activated, the phone beeps at the interval time you set during a call.

Auto redial: Once activated, the phone will automatically redial, if there is no answer for a number you have dialed.

Vibration when connect: After open, then call, when each other through your telephone, mobile phone will have a vibrating alert

Reply SMS after reject: After open refused to call, choose whether to reply message.

12.2 Phone Settings

12.2.1 Time and date

Set time: Set your time.

Set data: Set the current date

Time format: Format for the time.

Date display type: Set on display type

Update time setting: Update date and time automatically from network

10.2.2. Select language

Select the language for your handset. There are a variety of languages for you to choose: [English] and [Espanol]

Input method settings: Set input method for text entry.

12.2.3 Shortcut settings

Set all shortcut keys

12.2.4. Auto power on/off

Set time to power on/off the phone automatically.

12.2.5. Restore factory settings

Reset the phone to default values (factory settings).

The phone password is required, which is "1234" by default.

12.3 Display settings

Wallpaper settings: Set the standby image of the phone.

Idle display setting: Set Idle display.

Contrast: Set the backlight brightness.

Keypad backlight time: Set the Keypad backlight time

Auto keypad lock : Keypad lock prevents the inadvertent phone usage.

However, you can still be called and you can make emergency calls.

12.4 Security

The phone provides several security options to protect your phone from misuse.

1. PIN

Open: enable PIN inspection, every time you open the cellular phone, need to input PIN code.

Update: you must open the PIN code firstly to modify PIN code.

Close: enter the correct PIN code.

Warning: Warning: please careful use this function, such as forget PUK password, and please consult the network operators. If for 10 times PUK yards input errors, SIM card will be scrapped.

2. Modify PIN2:

PIN2 (PersonalIdentificationNumber2) code is in some special function into (such as in setting fixed number, setting calls billing, etc) will enter personal identification number.

Warning: please careful use this function, if continuous 10 times PUK2 yards input errors, SIM card will be scrapped.

3. Phone lock

If the phone lock is activated, the phone lock password is requested after the phone switched on. The default password is "1234". If the phone is locked, only emergency calls can be made.

4. Modify the cell phone password

The password of mobile phones can be reset

5. Privacy

To through the unit password protection phone specific functions, in order to prevent others see stealing. When [call records], [message] functions enable password protection, in the corresponding main menu or child function, must be to enter the correct password to just can be used, default "0000".

5. Lock screen by end-key

Set a key lock according to hang up key screen

6. Guard lock

Open: Before enabling this function, you must first set password, if not

set password, cell phone tip "please first change password", to [modified password] menu set the security password again open, open the requirement in the input password and security notice mobile phone number (receiving the illegal use of the mobile phone SIM card to send about the illegal SIM card information), has been set up correctly, anti-theft functions start.

Close: close security function. Close security function must first input security password.

Change the password: modify security password

7. Fixed dial number

Open the fixed dial-up function. If not you should find an operator for help.

8. Blacklist

The phone cannot receive the call from this number if this number was added to the black list of the phone.

12.5 Connections

Network settings

1、Data account

Customize the Internet account Such As China Mobile GPRS、China Unicom WAP. To add to the Internet account, In the Internet inte

rface, press the [option], the following actions:

New connection: Through the editing "connection Settings" new Internet account

- ✧ **Auth type:** set on confidential function.
- ✧ **User name:** make the edit network user name
- ✧ **Password:** setting inelastic password
- ✧ **Access point:** set name network access points
- ✧ **Gateway IP:** set up network IP address
- ✧ **Gateway IP:** set network port
- ✧ **Rename:** may make the edit the Internet account name
- ✧ **Set home page:** home page set up network address
- ✧ **Advanced Settings:** set the DNS address and network type

New connection: choose to add multiple defaults Internet account

Search: search area nearby on the registration network configuration, after searching use directly

Delete, delete selected Internet account

Edit: editing the selected Internet account

2、GPRS Service

You can choose to open or closed

3、Data connection settings

Mobile phones can accord to your SIM card default network configuration.

4、 Network Selection

Choose SIM1 and SIM2 network of choice for automatic selection or manual way choice.

4、 Bluetooth

1. Power: Allow you to switch on/off Bluetooth.
2. Bluetooth visibility: Allow you to find all other Bluetooth hands-free devices within the allowable scope of Bluetooth, and list all items; You can connect and match the hands-free device in the list (the green Bluetooth connection icon would appear in the status column on the top of screen).
3. Paired device: It would display the history records of various devices connected to the Bluetooth for the following operations of the devices in the records.
4. My Bluetooth name: View or modify the device name
5. Bluetooth file storage: Setting bluetooth receiving file storage location
6. About: To display the device names of this phone, Bluetooth device address of this phone and services supported by the device.

FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to

operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body.

Non-compliance with the above restrictions may result in violation of RF exposure guidelines.