

Quick Start Guide

For

TEK3.5D2

© 2014. All rights are reserved. No part of this document may be reproduced without permission.

While all efforts have been made to ensure the accuracy of all contents in this manual, we assume no liability for errors or omissions or statements of any kind in this manual, whether such errors or omissions or statements resulting from negligence, accidents, or any other cause. The contents of this manual are subject to change without notice.

Protect our environment! We strive to produce products in compliance with global environmental standards. Please consult your local authorities for proper disposal.

Note: User's Manual is Just to guide the user about the functionality of the phone. This does not substantiate any certificate of technology. Some functions may vary due to modifications and up-gradation of software or due to printing mistake.

Please ensure you read the important product user guide before using the product.

Content

Welcome	4
Your Phone	6
Keypad Descriptions	6
Start to Use	6
Charge the Battery	7
Use Touch Screen	7
Make a Call	8
Answer a Call	8
Emergency Service	8
1. Browser	8
2. Calculator	8
3. Calendar	9
4. Camera	9
5. Clock	9
6. Downloads	9
7. Email	9
8. File Manager	10
9. FM Radio	10
10. Gallery	10
11. Gmail	10
12. Google	10
13. Google Settings	10
14. Local	10
15. Maps	10
16. Messaging	10
17. Music	11
18. Navigation	11
19. People	11
20. Phone	11
21. Play Store	11

22. Settings	11
23. SIM Toolkit.....	13
24. Sound Recorder	13
25. Video Player.....	13
26. Voice Search.....	13
Widgets	13
Care and Maintenance.....	13







Welcome





 
Congratulations on your purchase of the mobile phone. Your phone provides many functions which are practical for daily use, such as a hands-free loudspeaker, camera, MP3 player, video recorder, and more. Your phone can also connect to a PC, laptop, or other device using a USB data cable.

You can read the manual to understand how to use the mobile phone and experience the well-established functions and simple operation method. Please use the original accessory in order to achieve the best use of effects. Use of non-original components results in of the damage caused of by machinery, in which case we shall not be responsible.

For Your Safety

Before using your phone, please read the following important information to eliminate or reduce any possibility of causing damage and personal injury.

	Safe power on Do not use your mobile phone where it is forbidden to use or it might cause disturbance or danger.
	Safe transportation first Please observe all local laws and regulations. Do not use your mobile phone while driving. Safe transportation should be considered first when driving.
	Disturbance Mobile phone's performances may fluctuate during a disturbance.
	Turn off when in the hospital Please follow location-specific applicable limitations. Please switch your mobile phone off when near a medical instrument.
	Turn off on an airplane Please follow location-specific applicable limitations. Do not use your mobile phone on an airplane.
	Turn off when at a gasoline station Do not use your mobile phone at a filling station or around fuels or chemicals.

	<p>Turn off around explosive Area</p> <p>Please observe location-specific applicable limitations.</p> <p>Do not use your mobile phone near an area where explosions can occur.</p>
	<p>Proper use</p> <p>As described in this manual, your mobile phone can be used only in the locations free from mobile phone usage restrictions.</p> <p>Please do not touch the antenna area of your phone.</p>
	<p>Use qualified after sales service</p> <p>Only a qualified technician can install or repair your mobile phone. Please contact authorized service center in case of phone failure.</p>
	<p>Accessories and batteries</p> <p>Only use the authorized accessories and batteries.</p>
	<p>Backup</p> <p>Remember to make a backup or keep a written record of all important information saved in your mobile phone.</p>
	<p>Connect to other devices</p> <p>Please read the user manual of the device to get more detailed security instructions before connecting to other devices and do not connect to an incompatible product.</p>
	<p>SOS emergency calls</p> <p>Make sure your mobile phone is switched on and in a service area. Dial the SOS number. Advise where you are and do not hang up without permission.</p>

Improper use will invalidate the warranty! These safety instructions also apply to original accessories.

Backup Copies

Remember to make back-up copies or keep a written record of all important information stored in your phone.

Your Phone

The phone appearance is shown as below. The picture is for reference only; your phone may be different. Please take your actual phone as the standard.



Keypad Descriptions

Key	Description
Power Key	Long press the key to turn on the phone. In the power on status, press the key to lock keypad and screen; long press the key to show phone options.
Back Key	In the menu mode, press the key to go back to upper menu.
Home Key	Press the key to return to standby mode. Long press the key to show recent applications list.
Menu Key	Press the key to enter option menu.
Volume Keys	To adjust volume. During a call, playing music, video, or listening to radio, press the keys to adjust volume.

Start to Use

Remove or install the back cover

Remove or install the SIM Card

When you apply for a network, you will get a plug-in SIM card. SIM (Subscriber Identity Module) card that contains phone number, service projects and can be used to store phone numbers and personal information.

To install, place the SIM card with chip face downwards. Make sure that it is correctly inserted. To remove the card, press and slide it out.

Remove or install the Memory Card

Insert the external microSD card into the slot with the gold contact facing down. To remove the microSD card, gently press and slide it out.

Remove or install the battery

Insert the battery into place, then close the phone cover.

Charge the Battery

1. Before charging, check the battery slot to ensure the battery has been installed correctly.
2. Plug one end of the charger into phone.
3. Connect another end of the charger to the socket.
4. Start charging. It can be charged whether power on or power off. When the battery icon on screen start rolling means it is been charged. When the icon is full and stop rolling means charge is completed.
5. Unplug the charger from the socket.
6. Disconnect the charger and phone.

Use Touch Screen

- Press: Use finger to press the desired option to confirm selection or start an application.
- Long press: Long press the screen in current operation interface, icon, or input area; you can open the option menu in current interface.
- Slide: Slide the finger on screen horizontally or vertically. For example, slide the screen in standby mode or main menu horizontally to change menu page.
- Drag: Use finger to long press desired item, drag it to anywhere on screen. For example, you can drag the icon in main menu to standby screen.

Make a Call

1. In standby mode or in main menu, press the dial icon to enter dial panel, press numbers on screen to enter phone number.
2. Press dial icon at bottom, select SIM card to dial the number.
3. Press end icon to cancel the call.



- You need to unlock the phone if the keypad and screen is locked.
- You can make calls through call log, contacts, and messages.
- During a call, press Volume Keys to adjust the volume.
- Your phone supports intelligent dial. When input numbers, the phone will search the corresponding contact in phonebook or call log.

Answer a Call

When there is an incoming call, you can:

- Drag the icon toward right to answer the call.
- Drag the icon toward left to decline the call.
- Drag the icon upward to reject the call with SMS.

Emergency Service

You can call emergency service number directly without SIM card. Different networks use different emergency numbers, please query your network operator.

1. Browser

You can use your phone to access Wireless Application Protocol (WAP) sites and use WAP-based services. To browse WAP pages, you must subscribe to the data service from your service provider and configure your phone's relevant settings or use Wifi function.

Select the website list on screen or input URL in address bar to visit.

2. Calculator

The calculator can execute simple calculations. Slide the screen toward left or right, you can change the calculator in **Basic panel** and **Advanced panel**.

3. Calendar

In the calendar, you can check schedules for current month. It has alarm for the date with schedule. Select one date to check all schedules for that day, or you can edit or delete the schedules.

4. Camera

By using the camera application, you can take photos or video records for around people or events anytime. Press the **Camera** icon in main menu to enter. Press the shoot icon or record icon to take photos or video records.

Press the icons on screen or Menu Key to set parameters of the camera or recorder.

5. Clock

In the clock interface, you can check time and date. Press the alarm icon, you can add new alarm clock or turn on/off existing alarm clocks.

In the clock interface, you can also press the icons to enter count down function, stopwatch, cities settings, night mode, and settings.

6. Downloads

To check all downloads applications.

7. Email

You can use **Email** to send and receive emails.

Setup Email Account

According to the tips on screen to input email address and password, and press **Next**.

Check Emails

In the **Inbox**, select the email you want to check to enter. Press the icons to do the options such as delete, reply, etc.

Compose and Send Email

In the **Inbox**, press new mail icon to create new email. Input receiver email address, subject, and content, and then press send icon to send the email.

Delete Accounts

In the **Inbox**, press Menu Key to select **Settings**. Select the account you want to delete and then select **Remove account** in the option list. Press **OK** to confirm and delete the account.

8. File Manager

In this menu, you can select to check Phone storage and SD card. Allow you to manage files.

9. FM Radio

Select **FM Radio** in the main menu and plug earphone to enter. Press Power icon to turn on/off the radio. Press setting icon and select **Search**, the phone will search available channels and save in the list.

10. Gallery

You can use Gallery to view or manage photos and videos.

11. Gmail

Add an existing gmail account or create a new one, and then sign in to send or receive email.

12. Google

Press the icon in main menu, and then input what you want to search, the phone will automatically search.

13. Google Settings

Allow you have a setting associated with Google.

14. Local

The phone provides you with google map. It is convenient for you to view maps or get directions in Google Maps.

15. Maps

The phone provides you with google map. It is convenient for you to view maps or get directions in Google Maps.

16. Messaging

Select **Messaging** in the main menu or standby mode to enter. Select new message icon at left down corner to create new SMS or MMS and send.

1. Enter receiver's number or add number from contacts.
2. Press "**Type text message**" to input message content.
3. If you want to send picture or video file, press "+" to add pictures, videos and audio. The message will shift to multimedia message automatically.
4. Press send icon and select SIM card to send the message.

17. Music

Select **Music** in main menu. Press **Artists**, **Albums**, **Songs**, and **Playlists** at the top of screen to change category. Select one audio file to play the music. Press the icons on screen to operate the audio player.

18. Navigation

Select **Navigation** in google maps navigation menu. According to GPS receiving coordinates, realize real-time navigation.

19. People

In the **People**, press search icon to search contact, press add new icon to add new contact. Press Menu Key to enter:

Delete Contact

Select one or more contacts, then press OK to delete all selected contacts.

Contacts to Display

Select All contacts, contacts on SIM card, Phone, or Customize the contacts to display.

Import/Export

Copy the contacts from SIM cards, phone, phone storage or SD card, and then select location to copy.

Accounts

Select whether to Auto-sync app data.

Settings

To set display usage of contact.

Share Visible Contacts

Select one or more contacts, press OK and then share the selected contacts via Bluetooth, Email, etc.

20. Phone

Press the icons on screen to input numbers in sequence. After inputting numbers, press dial icon and select SIM card to dial. Press the icons at the top of screen, you can enter call log or contact.

21. Play Store

Login your Google account, and you can download apps in Play Store.

22. Settings

Wireless & Networks

In this menu, you can select and set **SIM management**, **Wi-Fi**, **Bluetooth**, **Data usage**, under **More...** - **Airplane mode**, **VPN**, **Tethering & portable hotspot**, **Mobile networks**, and **USB Internet**.

- **Wi-Fi**

You can connect to a wireless LAN (Wi-Fi), use it to access and download with high speed.

In **Menu/Settings/WIRELESS & NETWORKS**, slide the icon beside **Wi-Fi** toward right to turn on Wi-Fi. Press **Wi-Fi** to check available Wi-Fi networks. Select one open network, you can access to the network directly. If the network you selected is encrypted, you need to input password.

- **Bluetooth**

The phone supports Bluetooth. It can exchange information between devices including mobile phones wirelessly. Through Bluetooth, you can sync phone and computer, exchange data with other Bluetooth devices, and can connect to Bluetooth earphone.

In **Menu/Settings/WIRELESS & NETWORKS**, slide the icon beside **Bluetooth** toward right to turn on Bluetooth and set. Before transmit data, you may need to match with other Bluetooth devices.

Device

In this menu, you can set **audio profiles** and **display**, check **storage** and **battery**, and manage **apps**.

Personal

- **Location Access**

Select whether to access to my location, whether to turn on GPS satellites, or whether to use Wi-Fi & mobile network location.

- **Security**

You can select **SCREEN SECURITY**, **SIM CARD LOCK**, **PASSWORDS**, **DEVICE ADMINISTRATION**, and **CREDENTIAL STORAGE** in this menu.

- **Language & Input**

Select and set Language, keyboard & input methods, speech, and mouse/trackpad.

- **Backup & Reset**

In this menu, select **Factory data reset** and then select **Reset phone** to clear all data in the phone memory. Select **DRM reset** to delete all DRM licenses.

Accounts

- **Add Account**

To add new account of BBM, Corporate, Email, and Google.

System

- **Date & Time**

Set time and date for the phone.

- **Scheduled Power On & Off**

Set time to power on/off the phone automatically.

- **Accessibility**

To set accessibility functions for the phone.

- **About Phone**

To check status, legal information, etc.

23. SIM Toolkit

If your SIM card supports STK (SIM Tool Kit) function, the phone can display different first level menu according to different STK card. This function needs the network provider support. If user finds STK function can't operate normally, please contact the network provider. If the network provider does not support this function, we do not claim any responsibility whatsoever.

24. Sound Recorder

The phone support sound record function, recorded files will be saved with different quality.

25. Video Player

You can use Video player to view or manage videos.

26. Voice Search

Google voice search can be used to talk instead of typing.

Widgets

In the widgets list, you can select desired widget to add to idle screen.

Care and Maintenance

- **Battery Care**

- Your device is powered by a rechargeable battery. When the power is weak, please charge the battery. In order to extend the lifespan of the battery, use all the battery's power before recharging.

- Unplug the charger from the electrical plug and the device when not in use. Do not leave the battery connected to a charger more than a week. Overcharging may shorten its lifespan.

- Extreme temperatures can affect the ability of your battery to charge. Battery needs the fit temperature. If the surrounding temperature is over 40°C, the battery cannot be charged.
- Use the battery only for its intended purpose. Never use any charger or battery that is damaged.
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) Short-circuiting the terminals may damage the battery or the connecting object.
- Leaving the battery in hot or cold places, such as in a closed car in summer or a freezer in winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 59°F and 77°F (15°C and 25°C). A hot or cold battery may not function temporarily, even when the battery is fully charged.
- Battery performance is particularly limited in temperatures below freezing.
- Do not dispose of batteries in a fire! Dispose of batteries according to local regulations. Please recycle when possible. Cellphones are not considered household waste.
- Mobile phone maintenance
 - Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the battery and allow the device to dry completely before replacing it.
 - Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
 - Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
 - Do not attempt to open the device other than as instructed in this guide.
 - Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
 - Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
 - Do not paint the device. Paint can clog the moving parts and prevent proper operation.

- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.

All of the above suggestions apply to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorized service facility for service.

Caution: The manufacturer assumes no responsibility for the consequences of the users does not comply with the above suggestions or misuse of the phone.

Frequently Asked Questions

Frequently Asked Questions	Cause and Solution
Fail to turn on	<p>Press the power key for over 2 second.</p> <p>Check if the battery is properly connected.</p> <p>Please remove and install it again and retry;</p> <p>Check if battery is appropriately charged.</p>
Fail to connect network	<p>In case of Weak signal, please try and move to a location with strong signal and try connecting to the network again;</p> <p>Please ensure that you are not beyond the network coverage of service providers;</p> <p>Please ensure you have a valid SIM card.</p> <p>Please contact your network provider for further information.</p>
Display information while turning on	<p>Check if the SIM card is installed correctly</p> <p>Handset lock password: If the handset lock is activated, you have to input handset password.</p> <p>Input PIN: if Inputting PIN while turning the phone on each time is activated, you have to input the PIN code.</p> <p>Input PUK code: When you've input wrong PIN code for 3 times will lock the SIM card. You need to input the PUK code provided by your network provider.</p>
Poor quality of calling	<p>Please check if the sound volume is tuned properly</p> <p>In an area with poor network conditions, example: basement, the signal might be weak. Try searching a location with stronger signal reception and call again.</p> <p>While using the mobile phone in the peak period of communication, like commute time, you may not be able to call because of line congestion.</p>
Standby duration shortened	<p>The standby duration is relative to the network systems. While the mobile phone is in an area with poor signal strength and cannot receive the signal, the handset will continuously search for a base station. This will significantly reduce battery charge. It is recommended that you turn off your mobile in area with no signal reception to save battery.</p> <p>Need replacing the battery: Please change to</p>

	a new battery as battery performance may decrease after prolonged usage.
SIM Card Error	<p>Dirt on the metal surface of an SIM card: Use clean cloth to wipe the metal touch point on an SIM card.</p> <p>The SIM card is not installed.</p> <p>The SIM card is damaged. Please contact your network service provider.</p>
Fail to dial out	<p>Please check if you press the dial key after typing the number.</p> <p>Please check if calling is forbidden because of default settings.</p> <p>Please check if the SIM is valid.</p> <p>Please check if the call barring is set.</p> <p>Please check if the fixed dial function is set.</p>
Callers can not contact you	<p>Please check if the mobile phone is on and connected with the network.</p> <p>Please check if the Call barring or call divert is activated.</p> <p>Please check if the SIM card is valid.</p>
Fail to charge	<p>May be due to poor contact. Please check if the plug is connected well.</p> <p>Please confirm if the environment temperature is within the range of 0°C ~40°C while charging.</p> <p>The battery or charger is damaged in which case you need to replace it.</p>

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and

used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that

Contains no metal and that positions the handset a minimum of 1.0 cm from the body.

Non-compliance with the above restrictions may result in violation of RF exposure guidelines