 
 


4

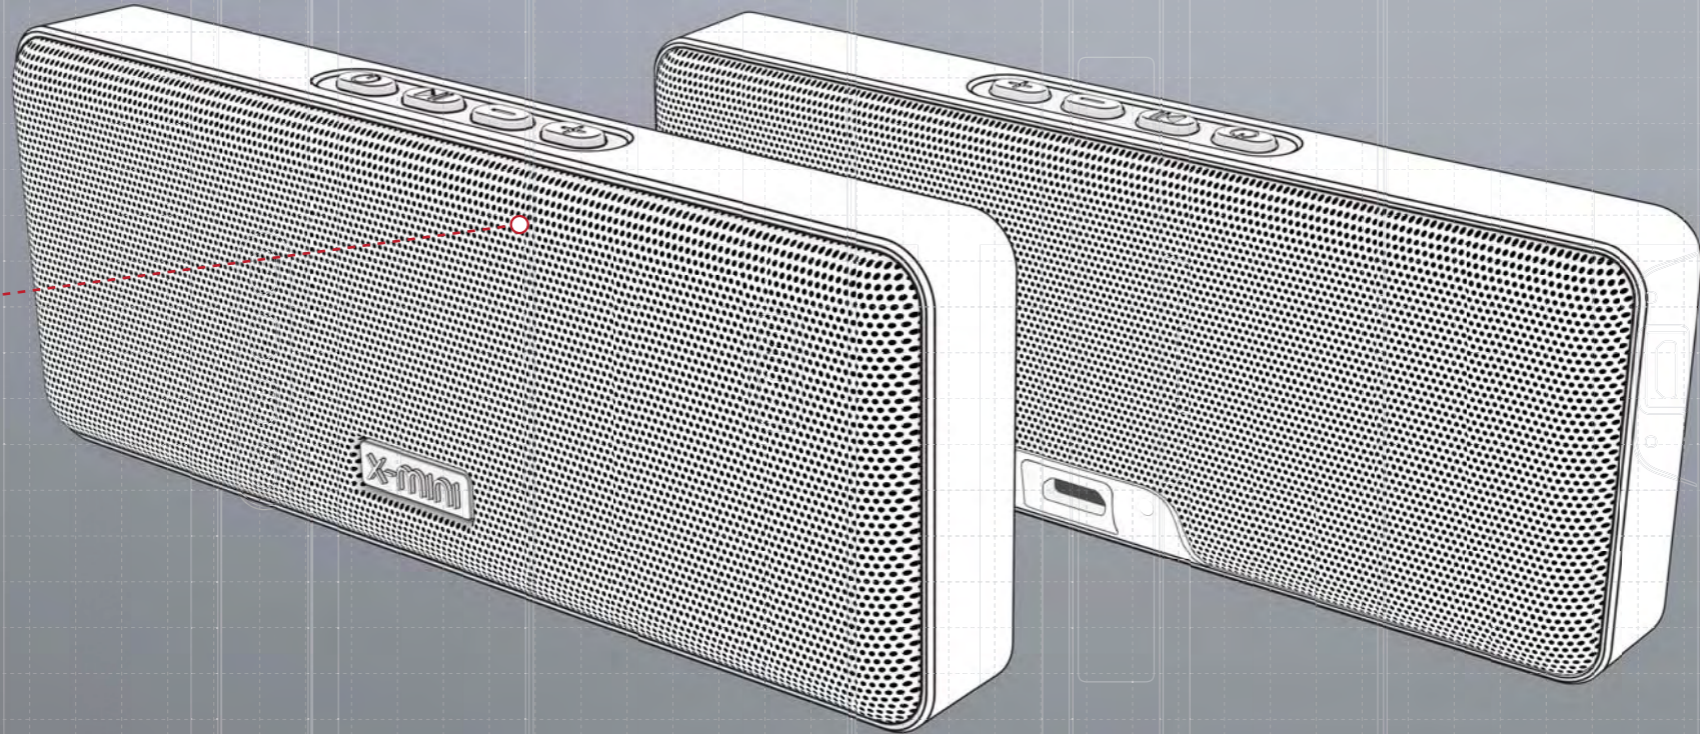

x-mini
XOUNDBAR

Back view



5 Micro-USB port
Reset / LED hole / light

Close view



1 Power button
2 Play/Pause
3 Volume buttons

1 Power button

 


Pairing devices:
Press and hold power button until power on prompt is heard. Search for new Bluetooth device and select X-mini™ XOUNDBAR. The connected prompt is heard once the speaker is paired successfully.

*If pairing is unsuccessful, switch off and on X-mini™ XOUNDBAR to reattempt.

Disconnecting devices:
Press and hold power button until power off prompt is heard.

2 Play/Pause button

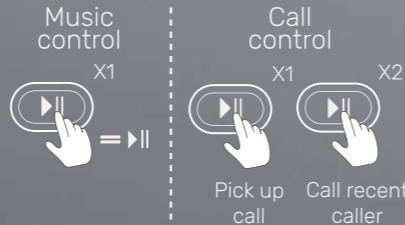

Music control:
Press play/pause button once to change to next song

 
Call control:
Press play/pause button once to pick up call
Press play/pause button twice to call most recent caller

Stereo mode:
Power on two X-mini™ XOUNDBARs. Press and hold play/pause button on one X-mini™ XOUNDBAR (master, left side). Connected prompts are heard once the speakers are paired successfully.

*If pairing is unsuccessful, switch off and on both X-mini™ XOUNDBARs and repeat steps to reattempt.

Disconnecting stereo mode:
Power off secondary (right side) X-mini™ XOUNDBAR

3 Volume(+/-) buttons

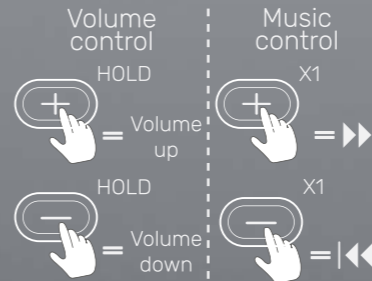

Volume control:
Press and hold + volume button to increase volume
Press and hold - volume button to decrease volume

Music control:
Press + volume button once to change to next song
Press - volume button once to change to previous song

4 Microphone



Answering call:
Press play/pause button once
End call:
Press play/pause button once

*Functions and indication tones may vary between devices.

5 LED light

- Power on
- Charging
- Low battery
- Connected/Incoming call/TWS secondary (right side)
- Pairing mode/TWS master (left side)
- Fully charged

*Audio output gets softer and a warning tone is heard when the battery level of the speaker is low. Recharge before use.