


JACKSON HOME AUTOMATION SYSTEM

ONETOUCH TRANSMITTER OPERATION MANUAL

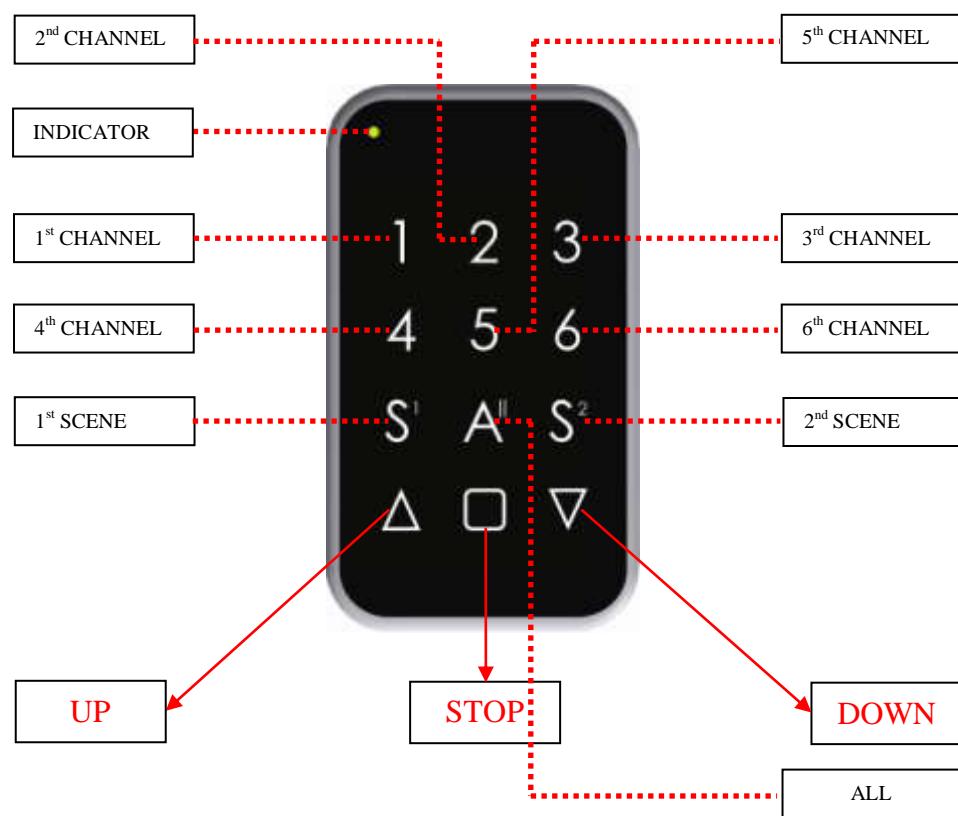

1 Press and hold S^2 and follow by S^2 to enter setting mode of remote.

STEP A: ASSIGNING TRANSMITTER TO MOTOR

- Insert motor power plug(240V AC), switch on
- Key in 5-dig ID
- Indicator on/off (Motor moves)
-

STEP B: Configure and Cancel SINGLE channel control (on a 6 CHANNEL transmitter)

1 2 3 4 5 6 to select individual

- Press and hold one of channel
- After 5s, indicator slowly blink then release to confirm
- (Cancel channel control)
- Press and hold one of channel
- After 12s, indicator fast blink then release to confirm

1 2 3 4 5 6 to select individual

STEP C: SETTING UPPER AND LOWER LIMITS

(C1) Setting UPPER limit and shade reverse function

- Press Δ to set shade to desired position
- (Reverse shade direction) Press and hold Δ and follow by ∇
- (Micro adjustment) Press and hold \square and follow by Δ
- Press and hold \square and follow by S^1 to confirm upper limit (Motor moves to indicate confirmation)

(C2) Setting LOWER limit and shade reverse function

- Press ∇ to set shade to desired position
- (Micro adjustment) Press and hold \square and follow by ∇
- Press and hold \square and follow by S^2 to confirm lower limit (Motor moves to indicate confirmation)
- (Exit configuration mode) Press and hold ∇ and follow by Δ (Motor moves down and up once)

Other Configuration Options:

(B2) Configure MULTIPLE channel control (on a 6 CHANNEL transmitter)

- Press and hold **1** to select 1st channel
- After 5s, indicator slowly blink then release to confirm
- Wait for LED to stop blinking
- Press **2 3 4 5 6** to select individual 2nd ~ 6th channel
- After 5s, indicator slowly blink then release to confirm

(B3) Configure GROUP channel control (on a 6 CHANNEL transmitter)

- Make sure all of motor that is desired under setting mode
- Press and hold **S¹** or **S²** to select individual group
- After 5s, indicator slowly blink then release to confirm

(B4) Configure ALL channel control (on a 6 CHANNEL transmitter)

- Make sure all of motor under setting mode
- Press and hold **A^{II}** to select all channel
- After 5s, indicator slowly blink then release to confirm

Continue with STEP C

ASSIGNING SPARE TRANSMITTERS(OPTIONAL FUNCTION)

- Press and hold **2** and follow by **△** to enter sending mode (Master),indicator light on
- Press and hold **2** and follow by **▽** to enter receiving mode (Slave),indicator light on
- Joint Master and Slave with USB cable(Master first)
- Indicator light off ,Done

LOCK AND UNLOCK SCREEN

- Press and hold **3** and follow by **S1** for 3s to lock screen
- Press and hold **3** and follow by **5** for 3s to unlock screen

FAQ

Transmitter LEDs display red color	Charge
Motor response slow	Charge
Incorrect shade direction	Enter into configuration mode for setting upper limit to correct shade direction CAUTION: Correction can only be made in setting upper limit mode

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference.
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.