

AVEEA71102A

Important Notice: Guarantee Information for customers in EEA* and Switzerland	English
For detailed guarantee information about this Yamaha product, and Pan-EEA* and Switzerland warranty service, please either visit the website address below (Printable file is available at our website) or contact the Yamaha representative office for your country. * EEA: European Economic Area	
Remarque importante: informations de garantie pour les clients de l'EEE et la Suisse	Français
Pour des informations plus détaillées sur la garantie de ce produit Yamaha et sur le service de garantie applicable dans l'ensemble de l'EEE ainsi qu'en Suisse, consultez notre site Web à l'adresse ci-dessous (le fichier imprimable est disponible sur notre site Web) ou contactez directement Yamaha dans votre pays de résidence. * EEE : Espace Economique Européen	
Wichtiger Hinweis: Garantie-Information für Kunden in der EWR* und der Schweiz	Deutsch
Für nähere Garantie-Information über dieses Produkt von Yamaha, sowie über den Pan-EWR*- und Schweizer Garantieservice, besuchen Sie bitte entweder die folgend angegebene Internetadresse (eine druckfähige Version befindet sich auch auf unserer Webseite), oder wenden Sie sich an den für Ihr Land zuständigen Yamaha-Vertrieb. *EWR: Europäischer Wirtschaftsraum	
Viktigt: Garantiinformation för kunder i EES-området* och Schweiz	Svenska
För detaljerad information om denna Yamahaprodukt samt garantiservice i hela EES-området* och Schweiz kan du antingen besöka nedanstående webbadress (en utskriftsvänlig fil finns på webbplatsen) eller kontakta Yamahas officiella representant i ditt land. * EES: Europeiska Ekonomiska Samarbetsområdet	
Avviso importante: informazioni sulla garanzia per i clienti residenti nell'EEA* e in Svizzera	Italiano
Per informazioni dettagliate sulla garanzia relativa a questo prodotto Yamaha e l'assistenza in garanzia nei paesi EEA* e in Svizzera, potete consultare il sito Web all'indirizzo riportato di seguito (è disponibile il file in formato stampabile) oppure contattare l'ufficio di rappresentanza locale della Yamaha. * EEA: Area Economica Europea	
Aviso importante: información sobre la garantía para los clientes del EEE* y Suiza	Español
Para una información detallada sobre este producto Yamaha y sobre el soporte de garantía en la zona EEE* y Suiza, visite la dirección web que se incluye más abajo (la versión del archivo para imprimir esta disponible en nuestro sitio web) o póngase en contacto con el representante de Yamaha en su país. * EEE: Espacio Económico Europeo	
Belangrijke mededeling: Garantie-informatie voor klanten in de EER* en Zwitserland	Nederlands
Voor gedetailleerde garantie-informatie over dit Yamaha-product en de garantiservice in heel de EER* en Zwitserland, gaat u naar de onderstaande website (u vind een afdrukbaar bestand op onze website) of neemt u contact op met de vertegenwoordiging van Yamaha in uw land. * EER: Europese Economische Ruimte	

<http://europe.yamaha.com/warranty/>



© 2014 Yamaha Corporation

YAMAHA CORPORATION
Printed in China CQX1A1839Z

G

YAMAHA NX-B150

BLUETOOTH SPEAKER SYSTEM
SYSTEME D'ENCEINTES BLUETOOTH

 


OWNER'S MANUAL
MODE D'EMPLOI
BEDIENUNGSANLEITUNG
BRUKSANVISNING
MANUALE DI ISTRUZIONI
MANUAL DE INSTRUCCIONES
GEBRUIKSAANWIJZING
ИНСТРУКЦИЯ ПО ЭКСПЛУАТАЦИИ

Caution: Read this before operating your unit.

To assure the finest performance, please read this manual carefully. Keep it in a safe place for future reference.

- 1 Install this unit in a well ventilated, cool, dry, clean place – away from direct sunlight, heat sources, vibration, dust, moisture, and/or cold.
- 2 Locate this unit away from other electrical appliances, motors, or transformers to avoid humming sounds.
- 3 Do not expose this unit to sudden temperature changes from cold to hot, and do not locate this unit in an environment with high humidity (i.e. a room with a humidifier) to prevent condensation inside this unit, which may cause an electrical shock, fire, damage to this unit, and/or personal injury.
- 4 Avoid installing this unit where foreign objects may fall onto this unit and/or this unit may be exposed to liquid dripping or splashing. On the top of this unit, do NOT place:
 - Other components, as they may cause damage and/or discoloration on the surface of this unit.
 - Burning objects (i.e. candles), as they may cause fire, damage to this unit, and/or personal injury.
 - Containers with liquid in them, as they may fall and liquid may cause electrical shock to the user and/or damage to this unit.
- 5 Do not cover this unit with a newspaper, tablecloth, curtain, etc. in order not to obstruct heat radiation. If the temperature inside this unit rises, it may cause fire, damage to this unit, and/or personal injury.
- 6 Do not use force on switches, knobs, and/or cords.
- 7 When disconnecting the power cable from the AC wall outlet, grasp the AC plug; do not pull the cord.
- 8 Do not clean this unit with chemical solvents; this might damage the finish. Use a clean, dry cloth.
- 9 Only the voltage specified on this unit must be used. Using this unit with a higher voltage than specified is dangerous and may cause fire, damage to this unit, and/or personal injury. Yamaha will not be held responsible for any damage resulting from use of this unit with a voltage other than that specified.
- 10 Do not attempt to modify or fix this unit. Contact qualified Yamaha service personnel when any service is needed. The cabinet should never be opened for any reasons.

- 11 When not planning to use this unit for long periods of time (i.e. when going on vacation), disconnect the power cable from the AC wall outlet.
- 12 Be sure to read the “Troubleshooting” section regarding common operating errors before concluding that the unit is faulty.
- 13 Before moving this unit, press  (power) to turn off the power, and then disconnect the cables.
- 14 Be sure to use the power cable supplied with this unit. Using a power cable other than the one provided may cause fire or damage to this unit.
- 15 Install this unit near the AC wall outlet and where the power cable can be reached easily.
- 16 For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the AC wall outlet. This will prevent damage to the product due to lightning and power-line surges.
- 17 Secure placement or installation is the owner’s responsibility. Yamaha is not liable for accidents caused by improper placement or installation of speakers.

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

There is a chance that placing this unit too close to a CRT-based (Braun tube) TV set might impair picture color. Should this happen, move this unit away from the TV set.

This unit is not disconnected from the AC power source as long as it is connected to the AC wall outlet, even if this unit itself is turned off. In this state, this unit is designed to consume a very small quantity of power.

For U.K. customers

If the socket outlets in the home are not suitable for the plug supplied with this appliance, it should be cut off and an appropriate 3 pin plug fitted. For details, refer to the instructions described below.



The plug severed from the mains lead must be destroyed, as a plug with bared flexible cord is hazardous if engaged in a live socket outlet.

FCC INFORMATION (for US customers)**1 IMPORTANT NOTICE : DO NOT MODIFY THIS UNIT!**

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modifications not expressly approved by Yamaha may void your authority, granted by the FCC, to use the product.

2 IMPORTANT : When connecting this product to accessories and/or another product use only high quality shielded cables. Cable/s supplied with this product **MUST** be used. Follow all installation instructions. Failure to follow instructions could void your FCC authorization to use this product in the USA.

3 NOTE : This product has been tested and found to comply with the requirements listed in FCC Regulations, Part 15 for Class "B" digital devices. Compliance with these requirements provides a reasonable level of assurance that your use of this product in a residential environment will not result in harmful interference with other electronic devices.

This equipment generates/uses radio frequencies and, if not installed and used according to the instructions found in the users manual, may cause interference harmful to the operation of other electronic devices.

Compliance with FCC regulations does not guarantee that interference will not occur in all installations. If this product is found to be the source of interference, which can be determined by turning the unit "OFF" and "ON", please try to eliminate the problem by using one of the following measures: Relocate either this product or the device that is being affected by the interference.

Utilize power outlets that are on different branch (circuit breaker or fuse) circuits or install AC line filter/s. In the case of radio or TV interference, relocate/reorient the antenna. If the antenna lead-in is 300 ohm ribbon lead, change the lead-in to coaxial type cable.

If these corrective measures do not produce satisfactory results, please contact the local retailer authorized to distribute this type of product. If you can not locate the appropriate retailer, please contact Yamaha Corporation of America A/V Division, 6600 Orangethorpe Avenue, Buena Park, CA 90620, USA.

The above statements apply **ONLY** to those products distributed by Yamaha Corporation of America or its subsidiaries.

FOR CANADIAN CUSTOMERS

To prevent electric shock, match wide blade of plug to wide slot and fully insert.
CAN ICES-3 (B)/NMB-3 (B)

This device complies with Part 15 of the FCC Rules and RSSGen of IC Rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received including interference that may cause undesired operation.

NOTICE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 
This equipment complies with FCC/IC radiation exposure limits set forth for uncontrolled equipment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated with at least 20 cm and more between the radiator and person's body.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

English**FCC CAUTION**

Change or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


Controls and functions

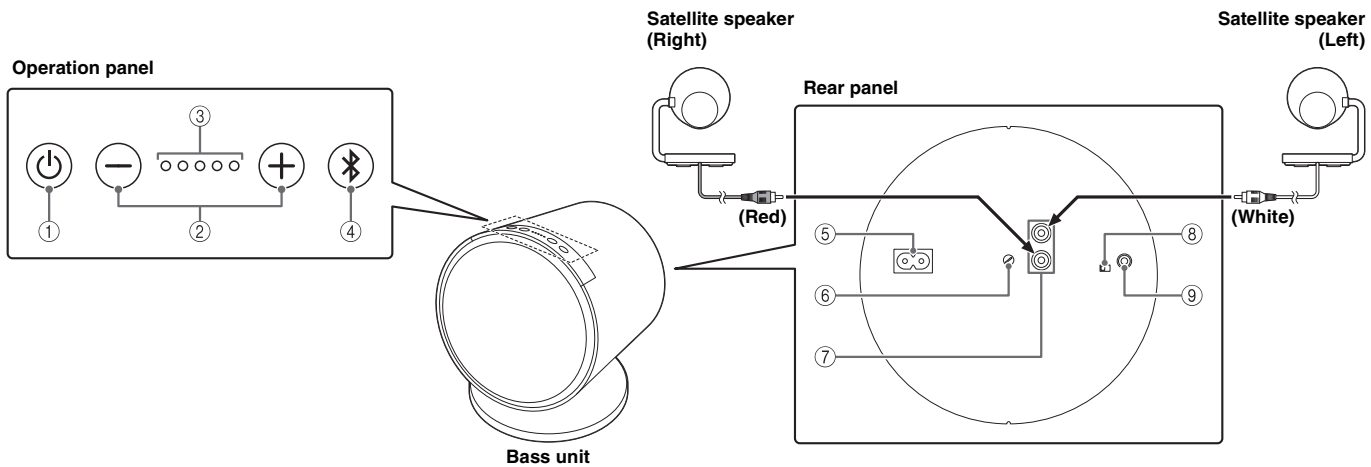




See the illustration on the left page as well.

■ Operation panel

① (power) button/indicator

When  (power) is pressed, this unit will turn on and the indicator will light white.

Indicator color	Power status
 (White)	On
 (Orange)	Standby
 (Off)	Off

② **-/+ (volume) buttons**

Adjusts the volume.
By pressing and holding, the volume changes gradually.



The Loudness control function on the unit compensates bass and high tone sound which cannot be heard well at a low volume level. You can enjoy music with rich bass sound even at a low volume level.





③ **Volume level indicators**

Indicate the volume level with brightness.
When sound mutes, the first indicator from the left will flash.



④ **(Bluetooth) button/indicator**

Performs pairing operations and disable a *Bluetooth* connection.
Indicates the *Bluetooth* connection status.

Indicator status	<i>Bluetooth</i> connection status
 (Blue)	Connected
 (Off)	Not connected
 (Flash)	Pairing in progress by pressing and holding  (<i>Bluetooth</i>)

■ Rear panel

⑤ **AC IN jack**

Connect the supplied power cable.

⑥ **BASS LEVEL (bass level control)**

Requires a flathead screwdriver for adjustments.

⑦ **TO SPEAKER (speaker jacks)**

Connect the speaker cables. (☞ page 8)

⑧ **AUTO STANDBY switch**

- **ON**: Activates the auto-standby function.
(default setting: **ON** ☞ page 9)
- **OFF**: Deactivates the auto-standby function. (☞ page 9)

⑨ **AUX (input jack)**

Connect to an external device, such as a computer, TV, etc., with the supplied 3.5 mm stereo mini plug cable.



Multi-Source Mix

If you play a device connected to **AUX** and a device connected via a *Bluetooth* connection at the same time, the sound will be mixed and output from the speakers. For example, you can listen to news while playing music.

Speaker placement/connections

Place all the speakers before connections.

You can also mount satellite speakers on the wall. (see page 7)

Connect speaker cables, and then connect the power cable to a wall outlet.

 


You can adjust angles of satellite speakers vertically.

Placing the speakers

Place the satellite speaker (Left) on the left side and the satellite speaker (Right) on the right side correctly as shown below to obtain appropriate sound at the listening position. The bass unit can be placed at your desired place.

When outputting TV sound

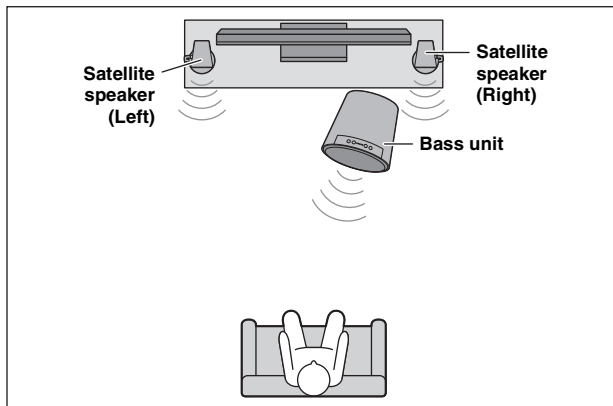

Satellite speaker (Left)



 
Satellite speaker (Right)

Speaker placement/connections


English

■ To mount the satellite speakers on the wall


You can also mount the satellite speakers on the wall as shown below. Depending on the mounting direction, you can adjust angles of the satellite speakers vertically or horizontally

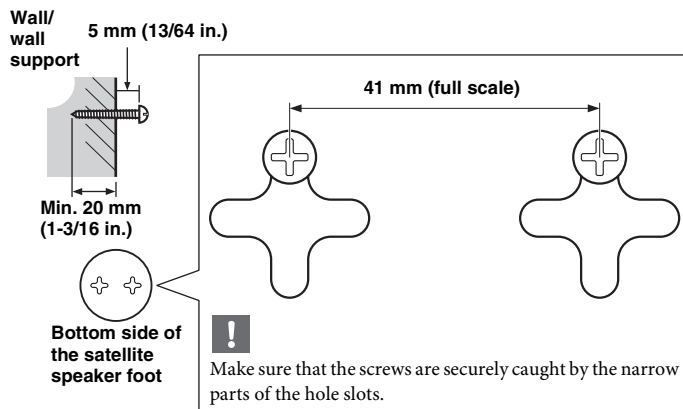

To adjust angles vertically

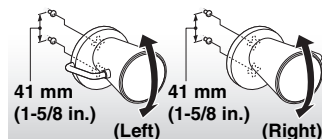 

To adjust angles horizontally

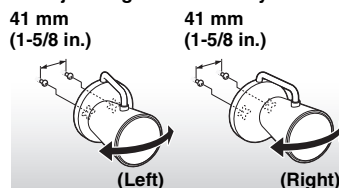 

To prevent the satellite speakers from falling, place your other hand on the speaker foot when adjusting angles.

1 Prepare 4 commercially available tapping screws 3.5 mm to 4 mm (1/8 in. to 3/16 in.) in diameter.

2 Install 2 screws for the each speaker to a firm wall or wall support as shown in the illustration on the left.

 
3 Hang the satellite speakers by their slots onto the protruding screws.



- Do not mount the satellite speakers on thin plywood or on a wall made of soft surface material. Otherwise, the screws may pull out of the surface and the satellite speakers may fall, possibly damaging them or causing personal injury.
- Do not mount the satellite speakers on a wall using nails, adhesives, or unstable hardware. Long term use and vibration may cause the satellite speakers to fall.
- To avoid accidents resulting from tripping over loose speaker cables, affix the cables.
- Secure installation is the owner's responsibility. Yamaha shall not be liable for any accident caused by improper installation.
- If you are uncertain about the wall strength, please consult an installation specialist.

Speaker placement/connections


Connecting the cables

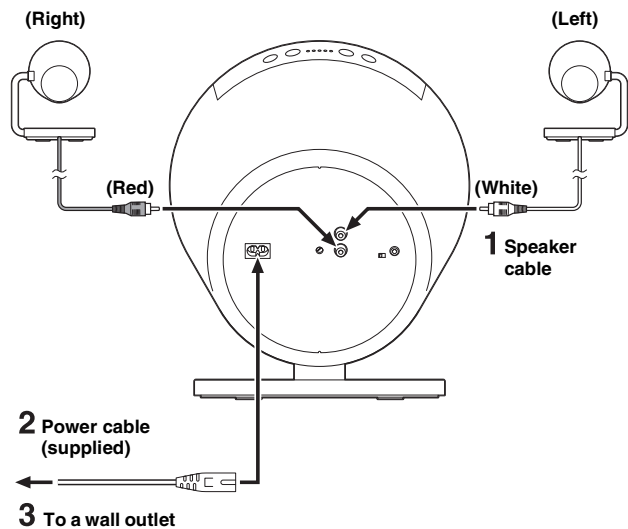

- 1 Connect the speaker cables matching the plug color to the corresponding jack color.
- 2 Connect the supplied power cable to the AC IN jack.
- 3 Connect the supplied power cable to a wall outlet.
- 4 Connect external devices.

Connecting with the supplied cable

 For details on connections, see the owner's manual supplied with the external device.

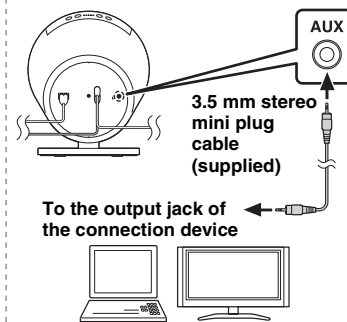


 
Using a Bluetooth connection


See "Bluetooth connection and music playback" (see page 10).




Power

Turning on/off the power

  Press  (power) to turn on/off the power.
When the power is on,  (power) lights white.

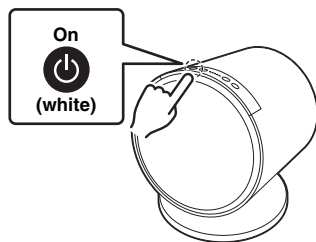


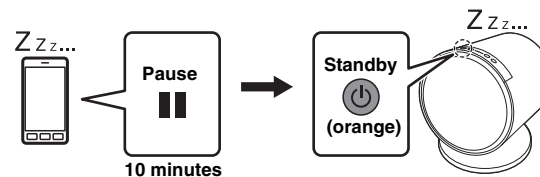 
Using the AUTO STANDBY switch

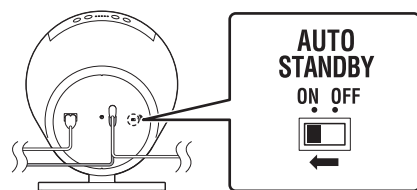

Use the **AUTO STANDBY** switch to turn on/off the function.
(Default setting: **ON**)


Auto-standby function

 
This unit is equipped with the auto-standby function which automatically sets this unit to standby mode in 10 minutes if no audio signal is input from the connection device.
In standby mode,  (power) lights orange.



If playback continues at a very low volume level, this unit will be in standby mode automatically.

Auto-power on function


If playback starts on the connection device when this unit is in standby mode, this unit turns on automatically and outputs sound.
 (power) will change from orange to white.

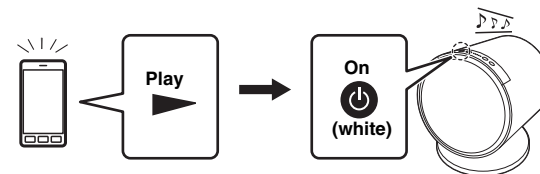

If the volume from the connection device is too low, this unit may not turn on. In this case, turn up the volume of the connection device.


Bluetooth connection and music playback

 By pairing (registering) and connecting with a *Bluetooth* device such as a smartphone, you can enjoy music from this unit wirelessly.

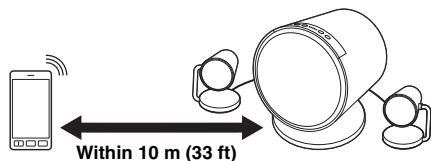

Pairing (Registering)

 Pairing is an operation to register a device (hereafter referred to as “connection device”) on this unit for communications. Pairing is required when making a *Bluetooth* connection for the first time or pairing information is deleted.

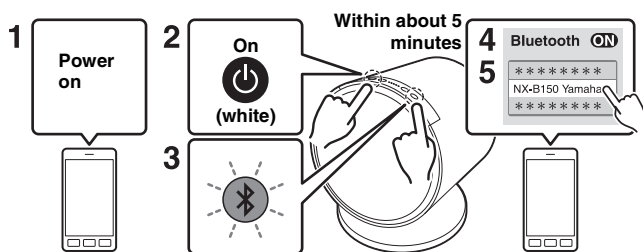

- 1 Turn on the power of the connection device you want to pair with.
- 2 Press (power) to turn on this unit.

- 3 Press and hold (*Bluetooth*) for a few seconds.

(*Bluetooth*) will flash and pairing will be in progress.

- 4 Operate the connection device within 5 minutes to enable the *Bluetooth* connection.

On the connection device, enable the *Bluetooth* function.

- 5 On the connection device, select “NX-B150 Yamaha” from the device list to start pairing.

When pairing completes, (*Bluetooth*) will stop flashing and light up.

 


- If you are prompted to input a passkey, input “0000”.
- For details on connections, see the owner’s manual supplied with the connection device.



This unit can be paired with up to 8 other devices. When pairing is conducted successfully with the 9th device, the pairing information of the least recently paired device will be deleted.

Playing music via a *Bluetooth* connection

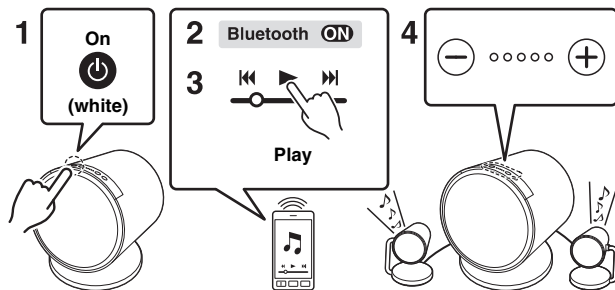

- 1 Press ⏻ (power) to turn on this unit.**
If the most recently connected device is available, it connects to this unit automatically. In such a case, proceed to step 3.
- 2 Operate the connection device paired with this unit to establish a *Bluetooth* connection.**
When a *Bluetooth* connection establishes, Ⓜ (*Bluetooth*) lights blue.
- 3 Play music on the connection device.**
- 4 Adjust the volume using $-/+$ (volume) on this unit.**

Disabling the *Bluetooth* connection

Follow one of the procedures below to disable the *Bluetooth* connection.

- (A) Press Ⓜ (*Bluetooth*) to turn off the indicator.**
- (B) Press ⏻ (power) to turn off this unit.**
- (C) Disable the *Bluetooth* function on the connection device.**

Switching the *Bluetooth* connection

Only 1 device can connect to this unit at once. Disconnect the current *Bluetooth* connection, and then operate the *Bluetooth* device you want to connect to this unit to establish a new connection.

Deleting all the pairing information

This operation deletes all the pairing information from this unit.

- 1 Press ⏻ (power) to turn on this unit.**
- 2 Press and hold Ⓜ (*Bluetooth*) for about 10 seconds.**
 Ⓜ (*Bluetooth*) will flash quickly and all the pairing information will be deleted.

Troubleshooting

Refer to the table below if this unit does not operate properly. If your problem is not listed below, or if the problem persists, turn off this unit, disconnect the power cable, and contact the nearest authorized Yamaha dealer or service center.


■ General

Problem	Cause	Solution
No sound is output from either or both of the speakers, or the sound is too quiet.	⏻ (power) is not turned on.	Turn on ⏻ (power). When the power is on, ⏻ (power) lights white.
	The speakers are not connected properly, or this unit and the connection device are not connected properly. (Or, the contact is incomplete.)	Make sure the speakers are connected properly. (☞ page 8) Or, reestablish a <i>Bluetooth</i> connection. (☞ page 11)
	The volume on this unit is too low.	Increase the volume by pressing + (volume).
	The volume on the connection device is too low.	Increase the volume on the connection device.

■ AUTO STANDBY

Problem	Cause	Solution
The auto-standby function does not work.	The AUTO STANDBY switch is set to OFF .	Set the AUTO STANDBY switch to ON . (☞ page 9)
The auto-power on function does not work.	The volume on the connection device is too low.	Increase the volume on the connection device.

 ■ Bluetooth

Problem	Cause	Solution
Cannot make this unit pair with the connection device, or cannot establish a connection.	A pairing operation was not done within about 5 minutes after pressing and holding  (<i>Bluetooth</i>).	Perform the pairing operation within about 5 minutes on the connection device. (☞ page 10)
	The connection device does not support A2DP.	Pair with a device that supports A2DP.
	There is a device (microwave oven, wireless LAN, etc.) that outputs signals in the 2.4 GHz frequency band nearby.	Place this unit apart from such devices.
	Another device is already connected to this unit.	Disable the current <i>Bluetooth</i> connection. (☞ page 11)
	The pairing information is stored on the connection device but has been deleted from this unit.	Delete the pairing information on the connection device, and then pair with this unit again. (☞ page 10)
	The <i>Bluetooth</i> function is disabled on the connection device.	Enable the <i>Bluetooth</i> function on the connection device.
	This unit has not been registered to the <i>Bluetooth</i> device list on the connection device.	Perform the pairing operation again. (☞ page 10)
No sound is produced or the sound is interrupted during playback.	The <i>Bluetooth</i> connection of this unit and the connection device has been disabled.	Reestablish a <i>Bluetooth</i> connection. (☞ page 11)
	There is a device (microwave oven, wireless LAN, etc.) that outputs signals in the 2.4 GHz frequency band nearby.	Place this unit apart from such devices.
	This unit is not set as an output destination on the connection device.	Set this unit as an output destination on the connection device.

Specifications

■ Bluetooth

Bluetooth version Ver. 3.0
 Supported profile A2DP
 Supported audio codec SBC, AAC
 RF output power Bluetooth Class 2
 Maximum communications range 10 m (33 ft) without interference

■ AUX

 
AUX input jack 3.5 mm (1/8 in) stereo mini jack

■ GENERAL

Power voltage/frequency AC 100 to 240 V, 50/60 Hz
 Power consumption 7 W
 Power consumption when powered off 0.5 W or less
 Weight

Bass unit 3.7 kg (8.2 lbs.)
 Satellite speakers (including the 4-meter cable) 0.5 kg (1.0 lbs.) × 2

Dimensions

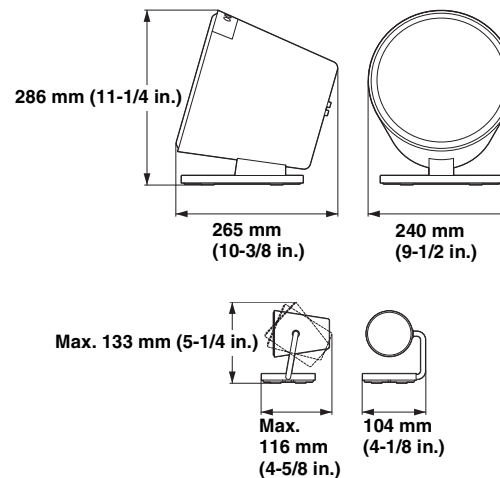

[As of August 2014]
 Specifications are subject to change without notice.

Bluetooth

- *Bluetooth* is a technology for wireless communication between devices within an area of about 10 meters (33 ft) employing the 2.4 GHz frequency band, a band which can be used without a license.
- *Bluetooth* is a registered trademark of the *Bluetooth* SIG and is used by Yamaha in accordance with a license agreement.

Handling Bluetooth communications

- The 2.4 GHz band used by *Bluetooth* compatible devices is a radio band shared by many types of equipment.
While *Bluetooth* compatible devices use a technology minimizing the influence of other components using the same radio band, such influence may reduce the speed or distance of communications and in some cases interrupt communications.
- The speed of signal transfer and the distance at which communication is possible differs according to the distance between the communicating devices, the presence of obstacles, radio wave conditions and the type of equipment.
- Yamaha does not guarantee all wireless connections between this unit and devices compatible with *Bluetooth* function.

- Radio waves may affect electro-medical devices.
Do not use this unit near medical devices or inside medical facilities.
- Do not use this unit within 22 cm (9 inches) of persons with a heart pacemaker implant or defibrillator implant.

The user shall not reverse engineer, decompile, alter, translate or disassemble the software used in this unit, whether in part or in whole. For corporate users, employees of the corporation itself as well as its business partners shall observe the contractual bans stipulated within this clause. If the stipulations of this clause and this contract cannot be observed, the user shall immediately discontinue using the software.

We, Yamaha Music Europe GmbH hereby declare that this unit is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Yamaha Music Europe GmbH

Siemensstr. 22-34 25462 Rellingen, Germany
Tel: +49-4101-303-0

**Information for Users on Collection and Disposal of Old Equipment**

This symbol on the products, packaging, and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste.

For proper treatment, recovery and recycling of old products, please take them to applicable collection points, in accordance with your national legislation and the Directives 2002/96/EC.

By disposing of these products correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.

For more information about collection and recycling of old products, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

[Information on Disposal in other Countries outside the European Union]

This symbol is only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.