# **Operating Instructions**

To raise or lower the spike, press and hold either the **UP** or **DOWN** button on the remote control. The anchor will only continue to move so long as you keep the button depressed.

Auto Mode: Double tapping (pressing and releasing 2 times within 1 second) either the UP or the DOWN button on the remote control will cause the anchor to retract or deploy automatically. The anchor will continue to move in said direction until it either retracts completely (up) or senses a solid bottom surface (down).

## **Battery Replacement:**

- Ensure the surrounding area is as dry as possible to avoid any moisture intrusion.
- 2. Use a small screwdriver to remove the Key-Fob cover. FIG. 1
- Remove the rubber membrane and the circuit board from the Key-Fob.
- Remove the battery from the holder on the front of circuit board and replace with any CR2032 3V Lithium Coin Battery. FIG. 2
- Place the circuit board and rubber membrane back into the Key-Fob base and ensure that the rubber membrane is seated properly prior to installing the cover. FIG. 3







# **KEY FOB REMOTE CONTROL**INSTRUCTIONS

NOTE: Only compatible with C-Monster 2.0.

# **Programming Instructions**

Pairing Key-Fob Remote Control:

- Press and hold the PROGRAM button on the top of the unit for 3 seconds until the LED turns green (HPU will also beep). The unit is now ready to be paired with the key-fob remote control.
- NOTE: If dual units are installed, repeat Steps 1–3 to pair multiple units to a single remote control. Up to (10) wireless controllers can be programmed to each unit.
- Press the UP button on the key-fob remote control for one second and release. The green LED on the unit will initially turn off, then flash green steadily (HPU will also beep) indicating that the pairing is complete.
- Test the paired remote control by pressing the UP and the DOWN button to ensure that the anchor is responding.



**Hydraulic Pump Unit** 

IMPORTANT: The first time your remote is paired to a recently-updated pump it may perform a firmware update. When this occurs the remote will blink for approximately 1 minute. Please do not interrupt power to either the pump or remote during this process. When the blinking has ceased your remote has finished updating and is ready to use.

#### General Statement (for all devices)

Warning: Changes or modifications to this device not expressly approved by JL Marine Systems, Inc. could void the user's authority to operate the equipment.

### **FCC Specific Statement**

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generate, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television receptio, which can be dteremined by turning the equipment off and on, he user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- · Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

FCC Part 15.19 Warning Statement – (Required for all Part 15 devices) THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

#### **FCC/ISED RF Exposure**

ENGLISH: This equipment complies with radiation exposure limits set forth for an uncontrolled environment. This equipment is in direct contact with the body of the user under normal operating conditions. The transmitter must not be co-located or operating in conjuction with any other antenna or transmitter.

FRENCH: Cet équipment est conforme aux limites d'exposition aux radiations dans un environment non controle. Cet équipment est en contact direct avec le corps de l'utilisateur dans des conditions de fonctionnement normales. Cet émetteur ne doit pas être co-localisées ou opérant en conjunction avec tout autre antenne ou transmetteur.

ENGLISH: This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must not accept any interference, including interference that may cause undesired operation of the device.

FRENCH: Le présent est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de license. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.



To activate your warranty or find a Power-Pole Certified Warranty Center, go to **www.power-pole.com** 

Hardware missing? Need help?
Contact our Technical Support Team at
1 + 813.689.9932 Option 2



9010 Palm River Road, Tampa, Florida 33619 phone 813.689.9932 fax 813.689.8883 • power-pole.com ©2017 all rights reserved. Power-Pole Shallow Water Anchor U.S. Patent No. 6,041,730