

Revised date 30-11-2017

SIZE: 442 mm (W) x 210 mm (H)

FLIP UP



When the car is upside down, push both joysticks up and down quickly for several times.

HEAD SPIN




OR




When the car is upside down, push the left joystick up and right joystick down simultaneously, or push the left joystick down and right joystick up simultaneously.

SIDE WHEELIE

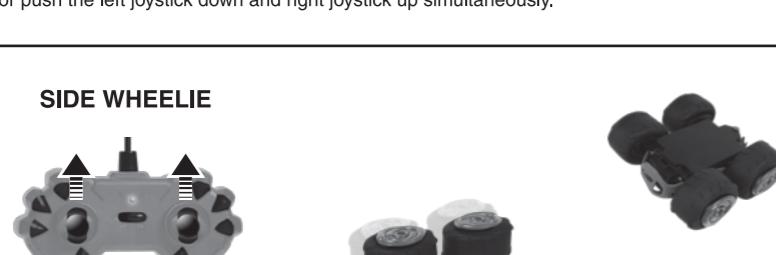


When the car is positioned on its side, push both joysticks up or down to turn it upside down or in a normal running position.

360° SPIN - CLOCKWISE

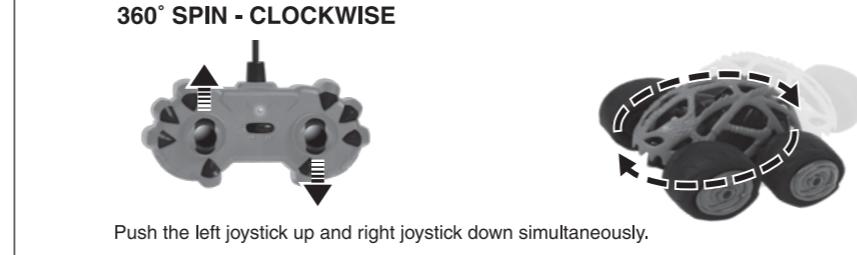

Push the left joystick up and right joystick down simultaneously.

360° SPIN - ANTI-CLOCKWISE

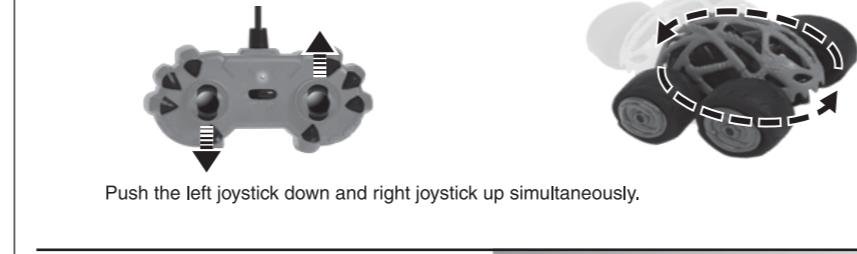

Push the left joystick down and right joystick up simultaneously.

FLIP & SPIN



Push both joysticks up to move forward. When the car bumps into a wall, it flips and spins.



NO. 60244

ADULT SUPERVISION RECOMMENDED

CONTENTS

- 1 RC BEAST BRAWLER CAR
- 1 REMOTE CONTROL




FOLD WAY



ILLUSTRATIONS ARE FOR REFERENCE ONLY. STYLES MAY VARY FROM ACTUAL CONTENTS.

BATTERY INSTALLATION - CAR

1. Make sure the power switch is at the OFF position.
2. Use a screwdriver (not included) to remove the screw and battery compartment cover from the underside of the car. (Fig. 1)
3. Install four (4) fresh 1.5V AAA / LR03 / R03 batteries (not included) in the car. Make sure the (+) and (-) ends follow the proper direction as indicated inside the battery compartment. (Fig. 1)
4. Replace the battery compartment cover and tighten the screw.

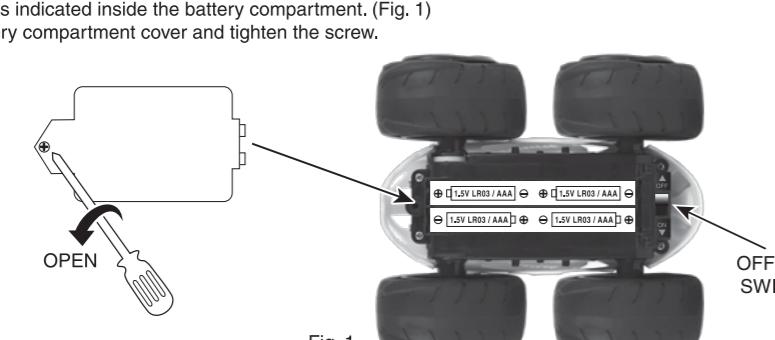


Fig. 1

BATTERY INSTALLATION - REMOTE CONTROL

1. Make sure the power switch is at the OFF position.
2. Use a screwdriver (not included) to remove the screw and battery compartment cover from the underside of the remote. (Fig. 2)
3. Install two (2) fresh 1.5V AAA / LR03 / R03 batteries (not included) in the remote. Make sure the (+) and (-) ends follow the proper direction as indicated inside the battery compartment. (Fig. 2)
4. Replace the battery compartment cover and tighten the screw.

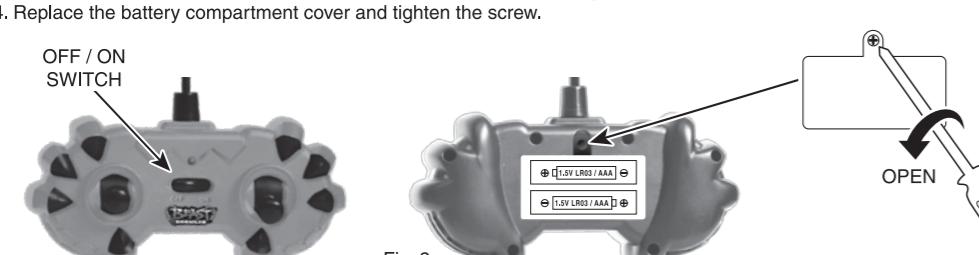


Fig. 2

QUICK TIPS

- When your vehicle starts to lose power, it may lose functions or performance. It's time for fresh batteries. Your vehicle's running time may change depending on your driving style.
- Radio interference can affect your vehicle's performance. Interference can be caused by other R/C vehicles running on the same frequency, electrical wires, large buildings or CB radios. Try to stay away from these!
- Put your transmitter up - not down toward your vehicle. If your vehicle gets too far away, it won't work properly.
- Don't store your vehicle near heat or in direct sunlight. Always turn switches OFF and remove all batteries for storage.
- Always play in a safe areas without breakable or delicate objects.
- Avoid operating the vehicle on high pile/thick carpet or dusty floors.
- DO NOT operate the toy on a slope or near stairs as the vehicle may fall and incur damage.
- If the vehicle is not responding properly or when its movements start to slow down, try reinstalling or replacing all batteries with new ones.
- DO NOT operate the vehicle on public roads or in a public place.
- DO NOT operate the vehicle on wet surfaces or near water.
- Avoid collisions on hard surfaces.

SAFETY WARNINGS

- Recommended to operate under adult supervision.
- Warning: Not suitable for children under 3 years due to small parts, Choking Hazard.
- Keep the instruction manual for future reference.
- Note: Vehicles with the same frequency cannot be played together.
- Keep fingers, hair and loose clothing away from the tires and the wheel hubs while the vehicle is switched ON.
- To avoid accidental operation, remove all batteries when not in use.
- Contents and color may vary as shown.
- Please remove all packaging attachment, and any other components which are not a part of the vehicle before giving this product to child.

BATTERY CAUTION

- Alkaline batteries recommended.
- Do not use rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries should be replaced by an adult.
- Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short-circuited.
- Remove batteries when not in use.
- Exhausted batteries are to be removed from the toy.
- Do not dispose of batteries in fire.

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION: To prevent entanglement, keep all hair away from the wheels.

CAUTION: Surfaces may become hot and cause burns if electronics get wet. Do not operate vehicle through water or snow.

WARNING: CHOKING HAZARD - small parts. Not for children under 3 years

CE 0-3

Let's care for the environment! The wheel below indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item. Do not treat old batteries as household waste. Take them to a designated recycling facility.


HOW TO PLAY

1. Switch on the remote control, and then the car.
2. After play, switch off the car, and then the remote control.

THE OVAL-SHAPED WHEELS PRODUCE QUIRKY BOCKING MOVEMENTS



MOVE FORWARD

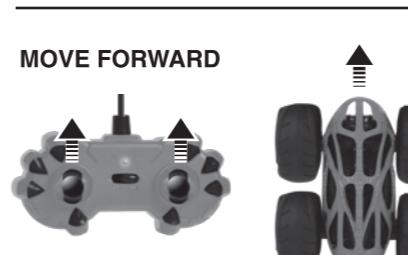

Push both joysticks up

MOVE BACKWARD



Push both joysticks down

TURN LEFT



Push the right joystick up

TURN RIGHT



Push the left joystick up

BACK LEFT



Push the right joystick down

BACK RIGHT



Push the left joystick down

INSIDE