 
 

Welcome

Thank you for purchasing this Divoom product. Fairy-ok is an elegantly crafted portable Bluetooth speaker, and it has the following functions: Bluetooth audio, FM radio, TF card MP3 audio, and karaoke.

Package Contents:

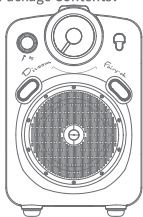

Fairy-ok



Fairy-kara



USB-C cable

 


User manual


Please follow the instruction on this manual. If you have any questions, please visit www.divoom.com and/or contact Divoom customer representative.

Disclaimer: Due to the nature of this product, the information on this manual is subject to change without any prior notice.

PARTS:

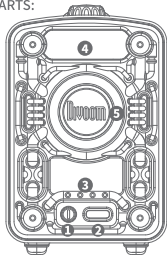

 - 1** ON/OFF
Press: Display battery level
Hold: Power ON/OFF
- 2** TYPE-C charging port
Please use a CCC certified
5V=2A charger
- 3** Battery level indicator
25%、50%、75%、100%
battery levels.
- 4** FM antenna
- 5** Indicator
Microphone is connected when the
indicator show orange light.

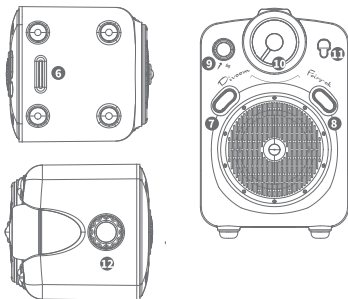

- 6** TF card port
MP3 files only, capacity support up to 128GB
- 7** Left button
Press: Previous track Hold: Switch to previous folder (TF card mode only)
- 8** Right button
Press: Next track Hold: Switch to next folder (TF card mode only)
- 9** Mode button
Press: Change audio modes (Bluetooth/TF/Radio)
Hold: Activate/Deactivate karaoke mode
- 10** Radio knob
Adjust radio channels-FM radio mode only
- 11** Indicator
Blue=Bluetooth Red=TF card Green=FM radio
- 12** Play/Volume knob
Clockwise: Increase volume
Counter clockwise: Decrease volume
Press: Play/Pause/Mute radio
Hold: Loop song(TF card mode only)

Bluetooth mode:

1. Power ON speaker, and make sure indicator⑩ is flashing Blue
2. Go to phone Settings>Bluetooth, please pair "Fairy-OK"
3. Once connected, you can play audio

*If the indicator⑩ shows solid Blue, it is currently being connected by another phone. Please disconnect its current connection by holding left⑦ & right⑧ buttons.

TF card mode

1. Power ON speaker, and insert the TF card (indicator⑩ shows red)
2. Turn the volume knob⑫ to adjust volume, Press the same knob to play and pause music, Press left button⑦ or right button⑧ to change song

*If the indicator⑩ is showing a different color, please press the mode button⑨ to change to the TF card mode(red indicator)

FM radio mode

 
- 1.Power ON speaker, and press mode button⑨ to change to the FM radio mode
- 2.Turn the radio knob⑩ to change station (Once it pick up a station, the indicator will show green)
- 3.Turn the volume knob to adjust volume

* If the indicator⑩ is showing a different color, please press the mode button⑨ to change to the FM mode(green indicator)

**You can mute the radio by press the play knob ⑫

How to enable the karaoke function

Power ON the MIC, speaker will automatically try to pair the speaker. Once connected, the speaker rear panel will light up, and the MIC will be ready to use.

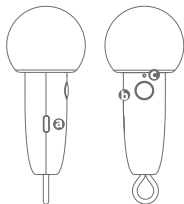

- a** USB-C charging port
Please use a CCC certified 5V==2A charger
- b** Power On/Off
Hold to power ON/OFF
Press: Switch sound profile
- c** Indicator
Blue = Power ON, Red=Charging
(off when fully charged)

How to charge?

1.Insert the USB-C cable to charging port (rear panel). You can listen to music while charging, but it may affect the FM radio signal.

2.Charging time may vary by the USB charger. We suggests to use a 5V==2A USB charger.

Fairy-OK specification

Dimension:60×65×93mm

Weight: 480g

Speaker size:45mm

Output:10W

Frequency response:40-18KHz

Signal-to-noise ratio:≥72dB

Playtime:≥6hrs

(test conducted under moderate volume & song)

Battery capacity:2000mAh

Battery voltage:3.7V

Charging time:3-4hrs

Charging voltage:5V==2A

Wireless range:≥7m

Bluetooth:5.0

Fairy-Kara specification

Dimension: 43X 43 X 110mm

Weight: 32g

Signal to noise ratio: 70-15KHz

Sensitivity: -50 (+-3) dB

Playtime: ≥ 3hrs

(test conducted under moderate volume & song)

Battery capacity: 350mAh

Battery voltage: 3.7V

Charging time: 2.5-3hrs

Charging voltage:5V==2A

Connection range: ≥ 5m

Transmitter transmitting power: < 10mW

UHF frequency band: 470-960 MHz

(depends on countries/regions)

Please read the following instructions carefully:

- Please follow our product installation and operation instructions.
- Always place the product on a smooth and stable surface.
- Do not push any objects into product vents or slots. Do not apply any great force on the product.
- Please keep the product ay a room temperature environment. Do not please the product nearany heat sources (such as radiators, heat registers, stoves, fire place, or direct sunlight). Do not place the product near any open flame source.
- Do not attempt to service the product by yourself. Always refer to the instructions by qualified service personnel.
- To avoid the risk of electrical hazard, do not expose this product to wet surface.

Declaration of conformity:



This device meets the essential requirements of the following Directive 2014/53/EU of the European parliament of the council of 16 April 2014.

.....

- This product is in compliance with Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

- The waste container symbol with the X through it on the device indicates that the device must be disposed of separately from normal domestic waste at an appropriate waste disposal facility at the end of its useful service life.

EU agent information

Company: APEX CE SPECIALISTS LIMITED
Address: UNIT 30 NORTH POINT HOUSE, NORTH POINT BUSINESS PARK, NEW MALLOW ROAD, CORK, T23 AT2P, IRELAND
Contact: Wells
Tel: +353212066339
E-mail: info@apex-ce.com

UK agent information

Company: Prolix Global LTD
Address: 27 Old Gloucester Street, London, WC1N 3AX UK
Contact: Nianzhuang Liu
Tel: 00442039661193
E-mail: eu@eulinx.eu

Warranty information:

This product is covered by a limited warranty from Divoom. For complete warranty details, visit the website www.Divoom.com

Limited Warranty

1. If within 12 months of purchase this device or any part thereof is proven to be defective by reason of faulty workmanship or defects in materials, we will at our option repair or replace the same free of charge of labor or materials on condition that:
2. The original invoice or sales receipt with the date of purchase, or stamp from the dealer is presented together with the defective unit.
3. The warranty does not cover product failures which have been caused by use of accessories other peripheral devices which are not DIVOOM branded original accessories intended for use with the product.
4. The warranty does not cover product failures caused by: Modification, repaired, and disassembled by any person who is not authorized by the manufacturer. Any defective unit or part shall become property of the manufacturer. The warranty does not cover any damage caused by misuse, drop, hit or neglect.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

PRODUCT WARRANTY CARD

Product name: _____

Serial number: _____

Purchasing store: _____

Purchasing date: _____

Owner name: _____

Contact Email: _____

Owner address: _____

Contact Us

Divoom official website:<http://www.divoom.com/>

Divoom warranty information:<http://www.divoom.com/article/detail/id/60.html>

Divoom product FAQ:<http://www.divoom.com/article/detail/id/59.html>

Divoom support Email:support@divoom.com

Divoom support contact number:0755-29494509

Our Address

Shenzhen Divoom Technology Limited Corporation 1st Floor,
5th Building, XinLianHe Industrial
Complex Shajing Town, Baoan District Shenzhen City, Guangdong Province
518000 The people' s republic of China

