

Calling

Making/receiving a call

Making a call

- 1 Tap [Phone] icon on the Home screen → Tap [Dial].
 - 2 Enter the phone number.
 - You must enter an area code even within the same city.
 - Enter "186"/"184" before the number to notify/not notify your number for that call only.
 - 3 Tap [Phone] icon.
 - Adjusting the call volume
 - Volumekey
 - Holding a call
 - Tap [Hold].
 - Tap [Unhold] to cancel hold.
 - Putting the other party on speaker
 - Tap [Speaker].
 - Toggle speaker ON/OFF.
 - Muting your voice from the other party
 - Tap [Mute].
 - Toggle microphone ON/OFF.
 - 4 Tap [End a call] icon to end the call.
- <Note>
- In the number entry screen, pressing and holding "1" makes a voice call to 1417 (voicemail service).

Making an emergency call

Emergency call	Phone number
Police emergency	110
Fire brigade/Ambulance emergency	119
Maritime distress call	118

- Your FOMA terminal supports "Emergency Location Report". Calls made to emergency service organizations (e.g. by dialing 110, 119 or 118) disclose information on the caller's location to the organization receiving the call. The location information may not be correctly sent depending on the current location or signal quality. When the location information is disclosed, the organization name appears on the standby screen.

The location information and phone number are not disclosed when, before each individual call made, "184" or another blocking prefix is dialed first. If the information is deemed necessary for the protection of life, etc., this information may be acquired by the organization being called.

Locations/timing planned for adoption of this feature vary according to the status of the preparations by the relevant emergency service organizations.

- When calling 110, 119 or 118 from the FOMA terminal, first say you are calling from a mobile phone, give your number, and state your location clearly, because the police or fire department may call you back for confirmation. Also, do not move around when making the call. Do not turn off the power immediately after ending the call, but leave it turned on for ten minutes or so, so that you can receive a call.
- Depending on the area you are calling from, you may not be connected with the nearest police or fire department, etc.

<Note>

- If PIN lock is activated, you must first cancel it to make emergency calls in Airplane mode.
- While the Screen lock is set, you cannot use FOMA terminal without releasing the Screen lock. However, you can only make an emergency call.
- In Japan, making an emergency call (110, 119 and 118) is not possible without a UIM.
- In Japan, making an emergency call (110, 119 and 118) is not possible from the PIN code input screen.

Making an international call (WORLD CALL)

WORLD CALL is an international phone service that can be used from DOCOMO mobile phones.

Customers who have subscribed to the FOMA service would also have automatically subscribed to "WORLD CALL" at the same time. However, if you declined to use "WORLD CALL" when you subscribed to the FOMA services, you need to make a separate application.

- For details on WORLD CALL, refer to DOCOMO "International Services website".

1 Tap [Phone] icon on the Home screen → Tap [Dial].

2 Touch [0] for over 1 second.

- A plus sign "+" appears. When making an international call from Japan, "+" is replaced by an international call access code.

3 Enter the country code → area code → recipient's phone number, and tap [Phone] icon.

<Note>

- If the area code begins with "0", omit "0". However, "0" may be required for calling some countries or areas, such as Italy.

Receiving a call

1 When you receive an incoming call, drag the icon to the right.

- If a call arrives in Sleep mode, while the screen is locked, etc., cancel Sleep mode, Screen lock, etc. to answer the call.

■ Declining a call

→ Drag the icon to the left.

2 Tap [End a call] icon to end the call.