

# Technics®



SC-CX700

Wireless Speaker System  
Système acoustique sans fil

Basic Owner's Manual  
Manuel d'utilisation Fonctions de base

Music is borderless and timeless, touching people's hearts across cultures and generations.

Each day the discovery of a truly emotive experience from an unencountered sound awaits.

Let us take you on your journey to rediscover music.

Sans frontières, la musique est aussi intemporelle, touchant le coeur des gens en traversant les cultures et les générations.

Tous les jours, nous attendons la révélation d'une expérience émotionnelle authentique à partir d'un son venu de nulle part.

Permettez-nous de vous emmener en voyage pour redécouvrir la musique.

Rediscover Music™

**Technics**

# Delivering the Ultimate Emotive Musical Experience to All

At Technics we understand that the listening experience is not purely about technology but the magical and emotional relationship between people and music.

We want people to experience music as it was originally intended and enable them to feel the emotional impact that enthuses and delights them.

Through delivering this experience we want to support the development and enjoyment of the world's many musical cultures. This is our philosophy.

With a combination of our love of music and the vast high-end audio experience of the Technics team, we stand committed to building a brand that provides the ultimate emotive musical experience by music lovers, for music lovers.

## Apportez à tous l'expérience musicale empreinte d'émotions

Chez Technics, nous savons que l'expérience de l'écoute n'est pas purement et simplement une question de technologie, mais de relation magique entre les personnes et la musique.

Nous voulons que tout un chacun puisse ressentir la musique telle qu'elle a été conçue à l'origine et lui permettre de ressentir le choc émotionnel qu'il brûle de connaître.

En apportant ce vécu, nous cherchons à accompagner le développement et le plaisir des nombreuses cultures musicales du monde. Telle est notre philosophie.

Ici et maintenant, alliant l'amour de la musique et la grande expérience musicale de l'équipe Technics, nous sommes pleinement déterminés à construire une marque qui apporte le vécu musical émotionnel aux fervents de la musique.

Director  
Directeur  
Michiko Ogawa

A handwritten signature in black ink, reading "Michiko Ogawa". The signature is fluid and cursive, with a long horizontal stroke extending from the end of the name.

Thank you for purchasing this product.

Please read these instructions carefully before using this product, and save this manual for future use.

- About descriptions in these operating instructions
  - Pages to be referred to are indicated as “⇒ ○○”.
  - The illustrations shown may differ from your unit.
  - Unless otherwise indicated, operations are described using the remote control.
- Illustrations and figures in this manual are of the black main body.

**A more detailed operating instruction is available in “Operating Instructions” (PDF format). To read it, download it from the website.**



[www.technics.com/support/downloads/oi/SC-CX700.html](https://www.technics.com/support/downloads/oi/SC-CX700.html)

- You will need Adobe Reader to browse or print “Operating Instructions” (PDF format). You can download and install a version of Adobe Reader that you can use with your OS from the following website.

<https://get.adobe.com/reader/>

If you have any questions, visit:

U.S.A.: <https://shop.panasonic.com/support>

Canada: [www.panasonic.ca/english/support](http://www.panasonic.ca/english/support)

 
Register online at <https://shop.panasonic.com/support> (U.S. customers only)

## Table of contents

IMPORTANT SAFETY INSTRUCTIONS	05	
About this unit	07	
Control reference guide	09	
Basic	Connections	12
	Network settings	15
	Playback	18
Licenses	20	
Specifications	21	

## Accessories

AC mains lead (2)  
K2CG3YY00219




Speaker nets (2)  
TTJ0068



04 (04)

 
Remote control (1)  
N2QAYA000257



Batteries for remote control (2)



Speaker Link cable (Approx. 3 m) (1)  
K1HY08YY0059

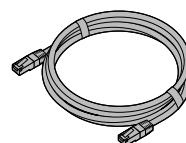

(ONLY FOR CANADA)

The enclosed Canadian French label sheet corresponds to the English display on the unit.

- Product numbers provided in these operating instructions are correct as of August 2024.
- These may be subject to change.
- Do not use AC mains lead with other equipment.

# IMPORTANT SAFETY INSTRUCTIONS

Read these operating instructions carefully before using the unit. Follow the safety instructions on the unit and the applicable safety instructions listed below. Keep these operating instructions handy for future reference.

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



## Warning

### Unit

- To reduce the risk of fire, electric shock or product damage,
  - Do not expose this unit to rain, moisture, dripping or splashing.
  - Do not place objects filled with liquids, such as vases, on this unit.
  - Use only the recommended accessories.
  - Do not remove covers.
  - Do not repair this unit by yourself. Refer servicing to qualified service personnel.
  - Do not let metal objects fall inside this unit.
  - Do not place heavy items on this unit.
- Put the speakers on a flat safe surface.
- Do not hang the speakers from the ceiling or on the wall. Doing so may cause the speaker to fall off, causing personal injury.

- Do not place any objects in the bass reflex ports on the front of the speakers. Doing so may cause fire or personal injury. Pay close attention to children.

### AC power supply cord

- The power plug is the disconnecting device. Install this unit so that the power plug can be unplugged from the socket outlet immediately.
- Ensure the earth pin on the power plug is securely connected to prevent electrical shock.
  - An apparatus with CLASS I construction shall be connected to a power socket outlet with a protective earthing connection.

## Caution

### Unit



- Do not place sources of naked flames, such as lighted candles, on this unit.
- This unit may receive radio interference caused by mobile telephones during use. If such interference occurs, please increase separation between this unit and the mobile telephone.
- This unit is intended for use in moderate and tropical climates.
- Do not put any objects on this unit. This unit becomes hot while it is on.
- Do not stand on the speakers.
- Do not place heavy items on the speakers.
- Do not hold the speaker in one hand to avoid injury by dropping the speaker when carrying.
- The speakers and speaker nets use powerful magnets. Do not put them near TVs, PCs or other equipment easily influenced by magnetism.
- You can damage your speakers and shorten their useful life if you play sound at high levels over extended periods.
- Do not touch the diaphragms. Doing so may deform the diaphragms, and as a result, sound may not be output correctly.
- Be cautious when children are near.
- Do not insert a finger into the bass reflex ports on the front of the speakers. Pay close attention to children as doing so may cause personal injury.
- Place this unit on an even surface.
- To reduce the risk of fire, electric shock or product damage,
  - Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure this unit is well ventilated.
  - Do not obstruct this unit's ventilation openings with newspapers, tablecloths, curtains, and similar items.
  - Do not expose this unit to direct sunlight, high temperatures, high humidity, and excessive vibration.

### Battery

- Danger of explosion if battery is incorrectly replaced. Replace only with the type recommended by the manufacturer.
- Mishandling of batteries can cause electrolyte leakage and may cause a fire.
  - Remove the battery if you do not intend to use the remote control for a long period of time. Store in a cool, dark place.
  - Do not heat or expose to flame.
  - Do not leave the battery(ies) in a car exposed to direct sunlight for a long period of time with doors and windows closed.
  - Do not take apart or short circuit.
  - Do not recharge alkaline or manganese batteries.

# IMPORTANT SAFETY INSTRUCTIONS

- Do not use batteries if the covering has been peeled off.
- Do not mix old and new batteries or different types at the same time
- When disposing of the batteries, please contact your local authorities or dealer and ask for the correct method of disposal.

	<b>CAUTION</b> <b>RISK OF ELECTRIC SHOCK</b> <b>DO NOT OPEN</b>	
<p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE SCREWS. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>		



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Conforms to UL STD 62368-1.  
Certified to CAN/CSA STD C22.2 No.62368-1.

**THIS FOLLOWING APPLIES IN THE U.S.A. AND CANADA.**

This device complies with part 15 of FCC Rules and Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- SC-CX700PP  
FCC: ACJ-SC-CX700  
IC: 216A-SCCX700  
Contains FCC ID: UA9800  
Contains/Contient IC: 9129A-800
- SC-CX700SP  
Contains FCC ID: UA9601  
Contains/Contient IC: 9129A-601

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter. This equipment complies with FCC/ISED radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the ISED radio frequency (RF) Exposure rules. This equipment should be installed and operated keeping the radiator at least 20 cm (7 7/8") or more away from person's body.

5150-5250 MHz band is restricted to indoor operation only

**THE FOLLOWING APPLIES ONLY IN CANADA.**  
CAN ICES-003(B)/NMB-003(B)

**THE FOLLOWING APPLIES ONLY IN THE U.S.A.**  
**FCC Note:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: To assure continued compliance, follow the attached installation instructions and use only shielded interface cables when connecting to peripheral devices.

Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.

Supplier's Declaration of Conformity

Trade Name: Technics  
Model No.: SC-CX700  
Responsible Party:  
Panasonic Corporation of North America Two  
Riverfront Plaza, Newark, NJ 07102-5490  
Support Contact:  
<https://shop.panasonic.com/support>



**Information on Disposal in other Countries outside the European Union**

This symbol is only valid in the European Union.

If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.

**Avoid the use in the following conditions**


- High or low extreme temperatures during use, storage or transportation.
- Replacement of a battery with an incorrect type.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Extremely high temperature and/or extremely low air pressure that can result in an explosion or the leakage of flammable liquid or gas.

## Installation

- Turn this unit off and disconnect all the equipment before moving this unit. Be sure to raise this unit when moving, and do not drag this unit.
- Confirm the installation location can sustain the weight of this unit. (⇒ 21)
- For the dimensions of this unit (⇒ 21)

## Attaching and removing the speaker nets

The speaker nets protect the speaker units from dust. Use the magnets to fix the speaker nets to the speakers.

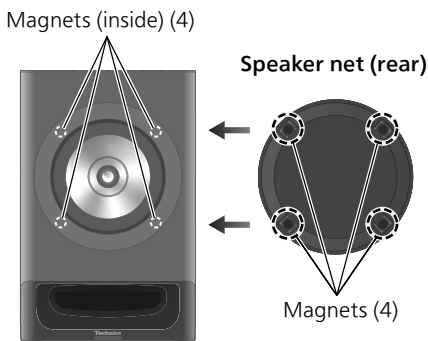

- Attach the speaker nets so that they fully cover the speaker units.
- Attach the speaker nets at the positions to meet the magnets and there is no specific direction of up and down, left and right.
- The superior sound quality can be delivered when playing back without the speaker nets.
- When carrying this unit, do not hold the speaker net.

## To dispose of or transfer this unit

- Before disposing of or transferring this unit, be sure to erase all the recorded information by restoring the settings to factory default (above).
- Before you dispose of or transfer this unit to a third party, be sure to log out of your music streaming services accounts to prevent unauthorised use of your accounts.

## Adjusting with the Space Tune function

You can adjust the sound quality automatically according to the installation location (near the wall or the corner of the room).

Press and hold [S.TUNE AUTO] for 2 seconds to start the sound adjustment.

- A test tone outputs quite big while the measurement is in progress.
- The progress of the adjustment is indicated by the blinking of the LED indicator. When the adjustment is complete, a beep sounds 2 times, and all the LED indicators on the top of this unit light up for 2 seconds.
- If the adjustment fails, a beep sounds 3 times, and all the LED indicators on the front/top of this unit blink for 3 seconds. Press and hold [S.TUNE AUTO] for 2 seconds to set the adjustment again.
- With the volume set to minimum, press and hold the [-] button of the volume control on this unit, then press [S.TUNE AUTO] to disable the Space Tune function.
- You can select the preset Space Tune function from the "Technics Audio Center" app.

## Notes on use

To protect the speakers from damage caused by excessive input, observe the following precautions:

- Reduce the volume in the following cases to avoid damage:
  - When playing distorted sound.
  - When the speakers are receiving howling from a microphone or record player, noise from FM broadcasts, or continuous signals from an oscillator, test disc, or electronic instrument.
  - When adjusting the sound quality.
- You can damage your speakers and shorten their useful life if you play sound at high levels over extended periods.

## Using “Technics Audio Center”

If you install the dedicated app “Technics Audio Center” (free of charge) on your tablet/smartphone, you can stream music files from the device on your network to this unit and configure the settings of sound quality, etc.

- You can set up the sound adjustment and other settings from the “Technics Audio Center” app.
- For details, visit:  
[www.technics.com/support/](http://www.technics.com/support/)



- This application is subject to change or be discontinued with notice.

## Unit care

Pull out the AC mains lead from the socket before maintenance.

## Top / Rear of this unit

- Clean this unit with a soft cloth.
- When dirt is heavy, wring a wet cloth tightly to wipe the dirt, and then wipe it with a soft cloth.
- Do not use solvents including benzene, thinner, alcohol, kitchen detergent, chemical wiper, etc. Doing so may cause the exterior case to be deformed or the coating to come off.

## Front/Left and Right Sides (Suede-Like Artificial Leather)

- Dampen a soft, clean cloth with lukewarm water (approximately 40 °C), wring it out tightly, and gently pat the surface to remove stains. After cleaning, smooth the surface using a soft, dry brush.

### Note

- Avoid vigorous rubbing as it may cause discoloration or damage to the surface.
- If stains persist after patting, lightly brush the surface to remove them.

## Firmware updates

Occasionally, Panasonic may release updated firmware for this unit that may add or improve the way a feature operates. These updates are available free of charge.

- For the update information, refer to the following website:  
[www.technics.com/support/firmware/](http://www.technics.com/support/firmware/)

## To restore all the settings to the factory defaults

### 1 Disconnect the AC mains lead from the primary speaker.

- Wait 30 seconds before you continue with step 2.

### 2 While you press and hold [⏻/⏪] on the primary speaker, connect the AC mains lead again.


- Keep holding down [⏻/⏪] until the two LED indicators at the left end light up and a beep sounds.

### 3 Release [⏻/⏪].

- The progress of the initialisation is indicated by the blinking of the LED indicator. When initialisation is complete, a beep sounds 2 times, and all the LED indicators on the top of this unit light up for 2 seconds.
- All the settings are set back to the factory default except wireless connection information between primary and secondary speakers.



## This unit (front)

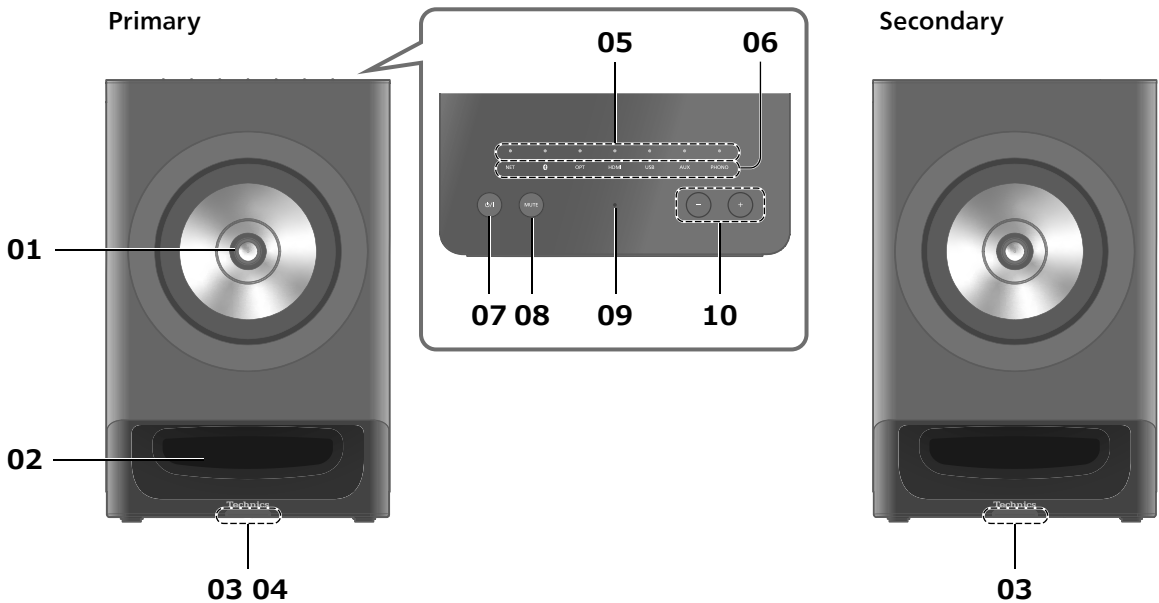**01 Speaker unit (Coaxial 2-way unit)****02 Bass reflex port****03 Power indicator**


- Blue: The unit is on.
- Off: The unit is in standby mode.

**04 Remote control signal sensor**

- Reception distance: Within approx. 7 m directly in front
- Reception angle: Approx. 30° left and right

**05 LED indicator**

The LED indicators on this unit light up in the following manner to indicate the current status.

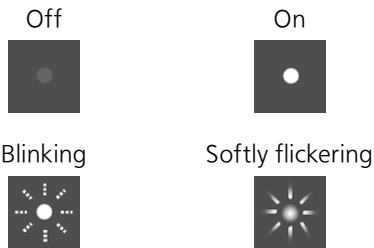**06 Switch the input source**

- Each time you press the switch, a beep sound will be heard. (You can turn the beep sound on/off from the "Technics Audio Center" app.)

**07 [⏻/⏻] Standby/on button**

- Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.


**08 Mute the sound**

- Press again to cancel. Muting is also cancelled when you adjust the volume or when you turn the unit to standby.

**09 Built-in microphone (for measurement)****10 Adjust the volume**

- LED indicators light up from 1 (minimum) to 7 (maximum) to show the current volume level when adjusting the volume or turning this unit on. (The LED indicators blink while this unit is muted.)

This unit (rear)

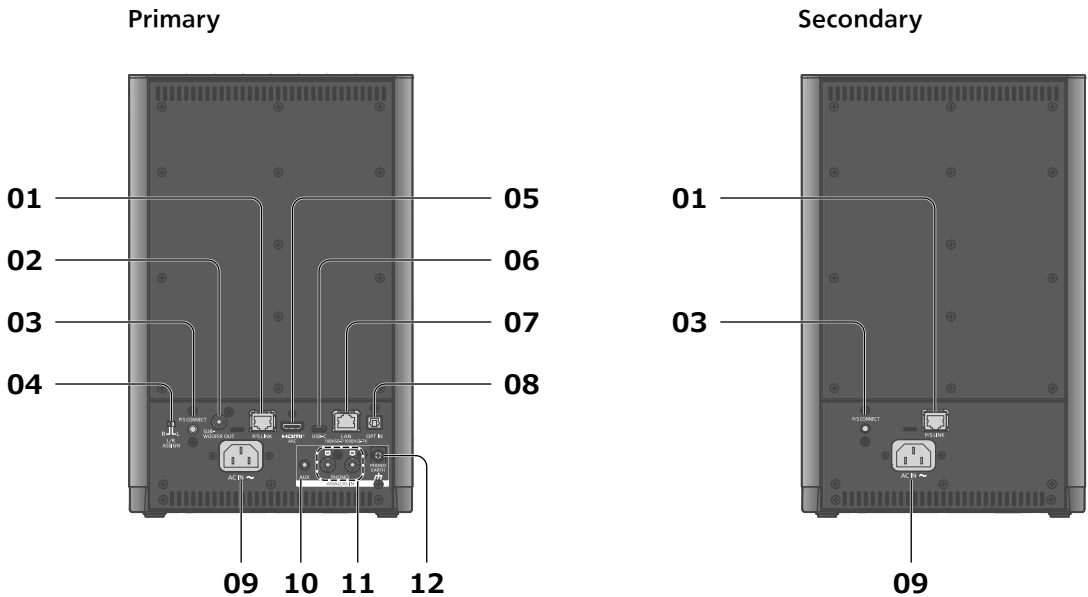

**01 P/S LINK terminal (P/S LINK)**

Use for the wired connection between primary and secondary speakers. (⇒ 12)

**02 Analogue audio output terminal (SUBWOOFER OUT)**

You can connect the subwoofer, etc. with analogue audio cable (not supplied) to output the analogue audio signals.

- You can set up the output from SUBWOOFER OUT from the “Technics Audio Center” app. (The factory default is “On”.)

**03 P/S CONNECT button**

Use for the manual connection between the primary and secondary speakers if the wireless connection is not established automatically. (⇒ 12)

**04 L/R ASSIGN switch**

- When switching the assignment (L/R) of primary speaker, the secondary speaker is automatically assigned to the opposite channel. (⇒ 12)

**05 HDMI terminal (HDMI ARC)**

You can connect the HDMI equipment with ARC function (TV, etc.) with HDMI cable (not supplied) to this unit and play back music. (⇒ 13)

- Please use Premium High Speed HDMI cable.

**06 USB-C terminal (USB-C)**

You can connect the PC, etc. or another device with USB 2.0 cable (not supplied) to this unit and play back music. (⇒ 13)

**07 LAN terminal**

(⇒ 16)

**08 Optical digital input terminal (OPT IN)**

You can connect a digital audio output device, etc. with optical digital audio cable (not supplied) and play back music. (⇒ 12)

**09 AC IN terminal (～)**

(⇒ 14)

**10 Analogue audio input terminal (AUX)**

You can connect an analogue audio output device with analogue audio cable (not supplied) to this unit and play back music. (⇒ 14)

**11 Analogue audio input terminals (PHONO)**

You can connect the turntable with PHONO cable (not supplied) to this unit and play back music. (⇒ 14)


- Please use the cable less than 3 m.

**12 PHONO EARTH terminal**

(⇒ 14)

- For connecting the ground wire of a turntable.

## Remote control

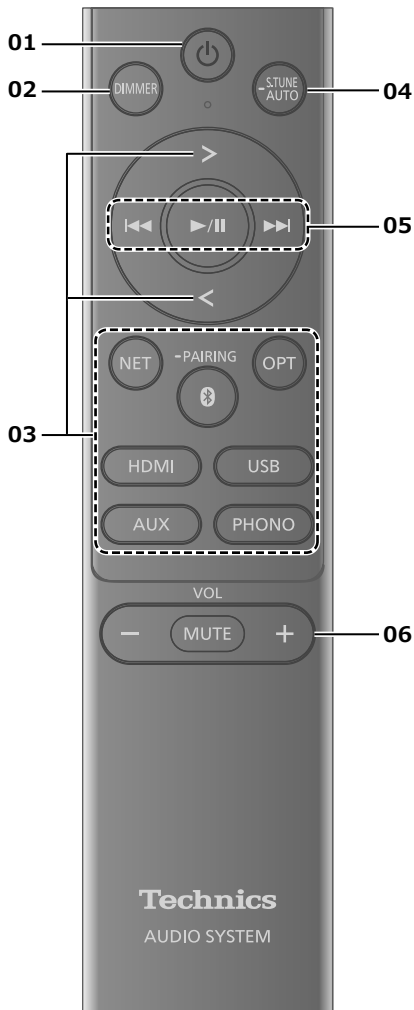

### 01 [⏻]: Standby/on switch

- Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.

### 02 [DIMMER]: Adjust the brightness of the LED indicator

- The LED indicators all turn off when pressing and holding [DIMMER] for 4 seconds.

### 03 [NET]/[Bluetooth-PAIRING]/[OPT]/[HDMI]/[USB]/[AUX]/[PHONO]: Switch the input source (⇒ 18, 19)

### 04 Start the adjustment with the Space Tune function (⇒ 07)

### 05 Playback operation buttons


### 06 [-VOL+]: Adjust the volume

- LED indicator lights 1 (min) to 7 (max) according to the current volume when adjusting the volume.

### [MUTE]: Mute the sound

- Press again to cancel. Muting is also cancelled when you adjust the volume or when you turn the unit to standby.

## ■ Using the remote control

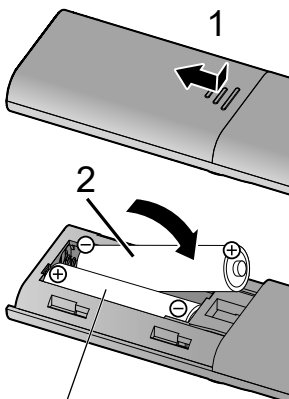


R03/LR03, AAA  
(Alkaline or manganese batteries)

### Note

- Insert the battery so the terminals (⊕ and ⊖) match those in the remote control.
- Point it at the remote control signal sensor on this unit. (⇒ 09)
- Keep the batteries out of reach of children to prevent swallowing.

## Speaker settings

### Speaker Assignments (L/R)

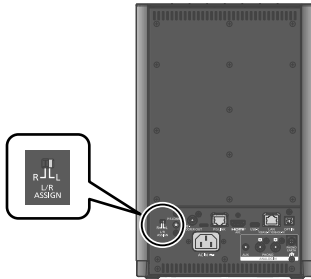

Once the connection is established, adjust the speaker assignments. (The primary speaker is factory-assigned to R by default.)


- When switching the assignment (L/R) of primary speaker, the secondary speaker is automatically assigned to the opposite channel.
- After changing the speaker assignment (L/R), turn this unit off and then on again.

### Speaker connection

When you connect AC mains lead to this unit without the Speaker Link cable connected, the speakers are automatically connected wirelessly.


#### Note

- If the connection fails, the LED indicator on the front will blink every 3 seconds (3 times). Turn this unit off and on to reconnect the speakers. If the speakers still cannot connect, press and hold the PS CONNECT button of the primary speaker for 2 seconds to connect manually.
- For higher sound quality or if the connection is unstable causing noise or interrupting sound on the secondary speaker, use a wired connection with the supplied speaker link cable.

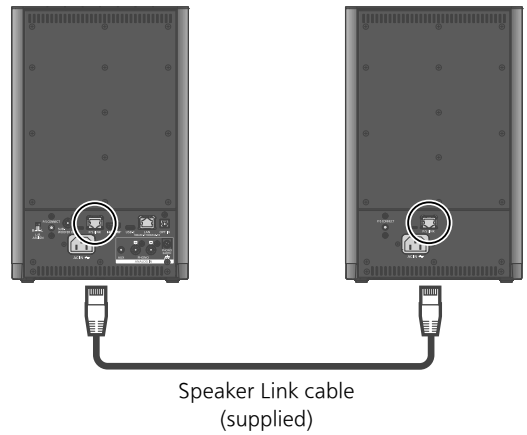


- The maximum sampling rate is 192 kHz for a wired connection and 96 kHz for a wireless connection.

### Digital audio output device connection

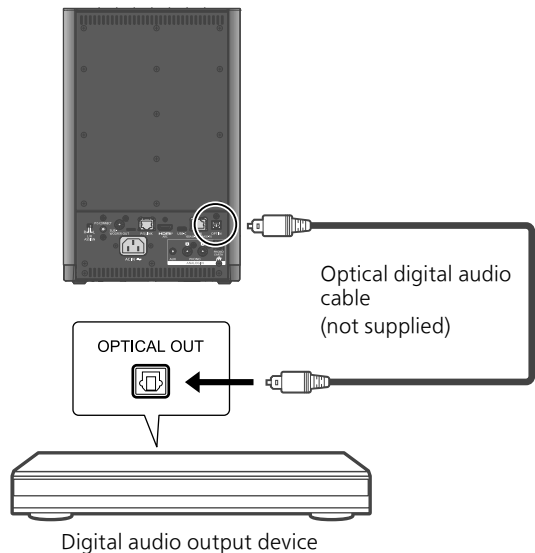

- When enjoying video contents with this function, the video and audio output may not be synchronised.
- The digital audio input terminals of this unit can only detect the following linear PCM signals. For details, refer to the operating instructions of the connected device.
  - Sampling frequency:  
32/44.1/48/88.2/96 kHz
  - Number of quantisation bits:  
16/24 bit

## Connecting HDMI equipment with ARC function (TV, etc.)

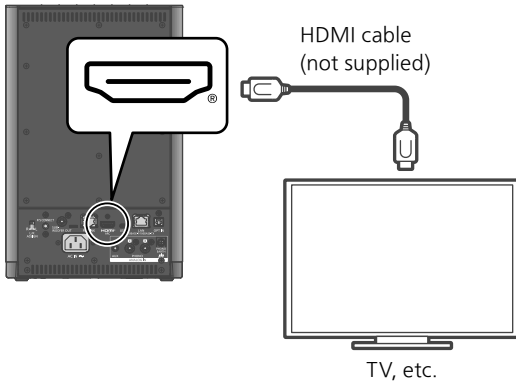


- Use Premium High Speed HDMI cables when connecting to peripheral devices.
- Connect this unit to the HDMI input terminal which has ARC (Audio Return Channel) function.
- Set the audio output from TV speakers to Off. For details, refer to the operating instructions of the TV.

### Note

- Linear PCM signal is only available for ARC function.
- Do not input the signals other than linear PCM signal, otherwise it may cause noise or damage.
- For the equipment does not support ARC function, set "HDMI ARC" to "Off" from the "Technics Audio Center" app.
- The volume may be lower depending on the connected TV.


## Connecting PC, etc.

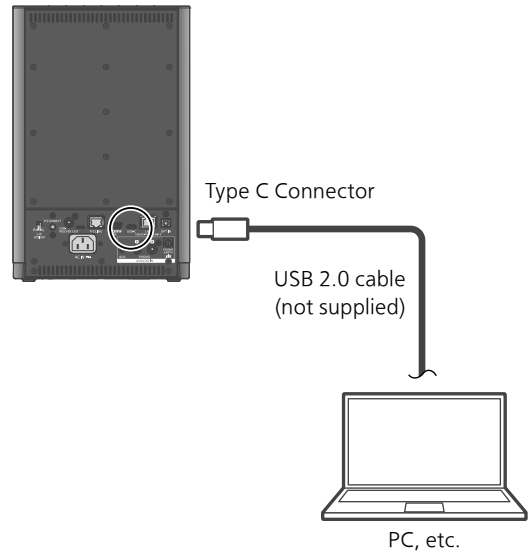

### Note

- The USB-C terminal of this unit is for data transfer only and does not support charging USB devices.

## Analogue audio output device connection

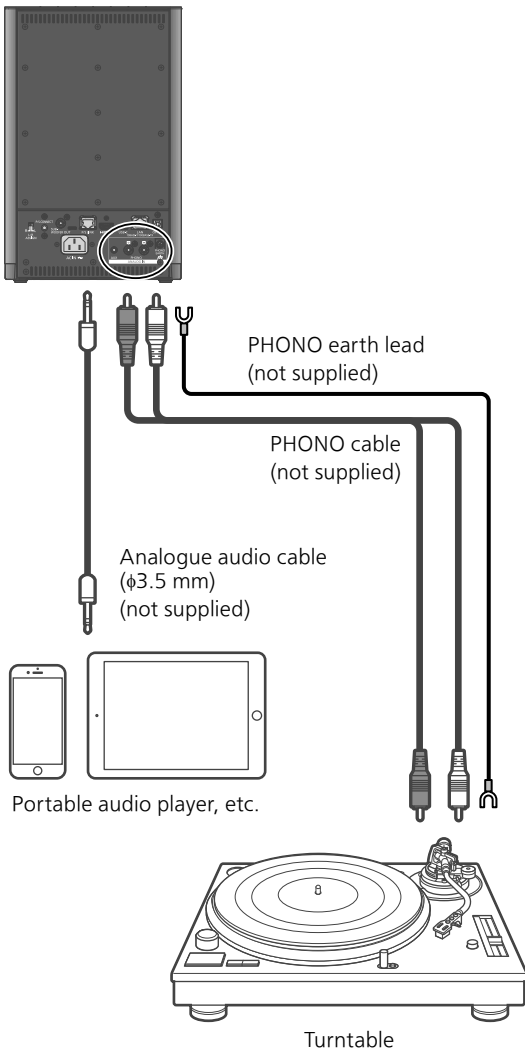


- When connecting a turntable with a built-in PHONO equalizer, turn the equalizer of turntable off or connect the PHONO cable to the analogue audio input terminals (AUX) of this unit.
- When connecting a turntable with a PHONO earth lead, connect the PHONO earth lead to the PHONO EARTH terminal of this unit.

### Note

- Tighten the PHONO EARTH terminal using a Phillips head screwdriver.

## AC mains lead connection

Connect only after all other connections are completed.

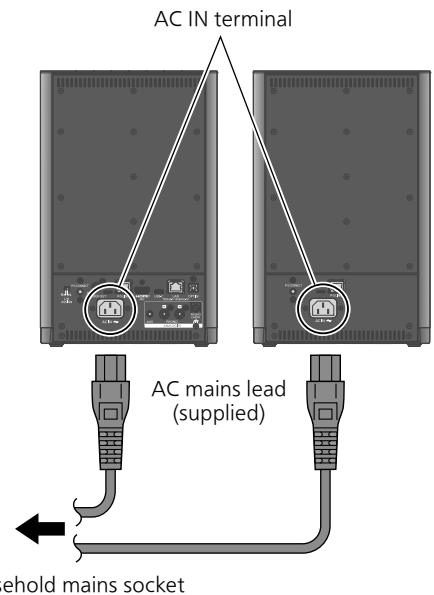


- Use only the supplied AC mains lead.
- Do not connect the AC mains lead until all other connections are complete.
- Insert the plugs of the cables to be connected all the way in.
- Do not bend cables at sharp angles.
- Wireless LAN (Wi-Fi®) setting may start when this unit is turned on and the LED indicator on the top (NET) of this unit blink. (⇒ 16)
- If the network function is not used, you can disable the Wi-Fi settings by pressing and holding [NET] on this unit, and this unit always switches to the last selected input when this unit is turned on. If you stop the Wi-Fi setting, switch the input source by pressing touch switch on the top of this unit.
- The LED indicator does not blink when a LAN cable is connected. (⇒ 16)

### Note

- When this unit is turned on, the power indicator of the secondary speaker lights up first, and when this unit is turned off, the power indicator of the secondary speaker turns off first.
- This unit consumes a small amount of AC power (⇒ 21) even when the unit is in standby mode. Remove the plug from the main electrical outlet if you will not be using the unit for an extended period of time. Place the unit so the plug can be easily removed.


You can stream online music services or music files from your smartphone/tablet to this unit. To use these features, this system must join the same internet-connected network as the compatible device.

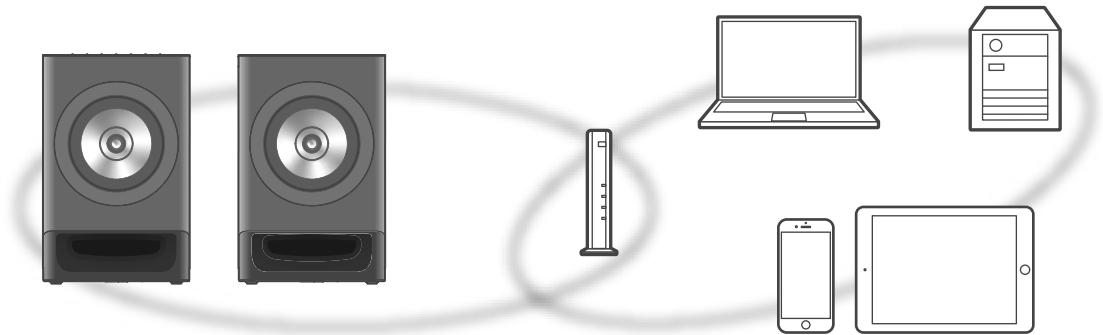

This unit can be connected to a router using a LAN cable or built-in Wi-Fi®. For a stable connection to the network, a wired LAN connection is recommended.

#### Note

- When the firmware for this unit is available, the LED indicator on the front of the primary speaker softly flickers every 10 seconds for 1 second each time.
- For the update information, refer to the following website.  
[www.technics.com/support/firmware/](http://www.technics.com/support/firmware/)

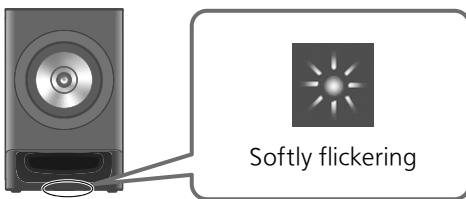

#### ■ Preparation

If you install the “Technics Audio Center” app on your smartphone/tablet, you can set up a connection using the application.

- When using Chromecast-enabled apps to play music on this unit, set up a connection using the “Technics Audio Center” app and a Google Assistant-enabled device.
- When using AirPlay to play music on this unit, add the product to Home in the Apple Home app. Adding this unit to the network via Apple Home app will also allow the user to stream audio using Siri.
- Make sure that the Wi-Fi function and Bluetooth® function are activated on your smartphones/tablet.


**1 Install the “Technics Audio Center” app on your smartphone/tablet. (⇒ 08)**



**2 Connect your smartphone/tablet to the same network as this unit before setting.**

- Make sure that the network is connected to the Internet.

## Wired LAN connection

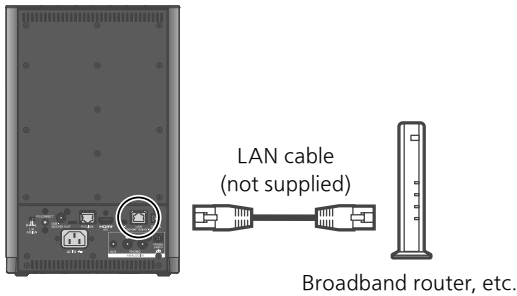

- 1 Disconnect the AC mains lead.
- 2 Connect this unit to a broadband router, etc. using a LAN cable.
- 3 Connect the AC mains lead to this unit. (⇒ 14)
- 4 Press [⏻] to turn this unit on.
  - If the connection is not established, the LED indicator on the top (NET) of this unit blinks when the input source is switched to "NET".
- 5 Open the "Technics Audio Center" app and follow the on-screen instructions to set up a connection.

### Note

- While the AC mains lead is disconnected, the LAN cable must be connected or disconnected.
- Use category 7 or above straight LAN cables (STP) when connecting to peripheral devices.
- Inserting any cable other than a LAN cable in the LAN port can damage the unit.
- When a LAN cable is connected, the Wi-Fi function may be disabled. (The LED indicators does not blink.)

## Wireless LAN connection

### ■ Preparation

- ① Disconnect the AC mains lead.
- ② Disconnect the LAN cable.
- ③ Place this unit as close to the wireless router as possible.
- ④ Connect the AC mains lead to this unit. (⇒ 14)

### Note

- The setting will be cancelled after the set time limit. In that case, try the setting again.

- To cancel this setting in the middle, switch the input source by pressing touch switch on the top of this unit.
- When the connection is established, all the LED indicators on the front/top of this unit light up for 2 seconds.


## Network setting for the first time using app

### 1 Press [⏻] to turn this unit on.


- The LED indicator on the front/top (NET) of this unit blinks.

### 2 Open the "Technics Audio Center" app.

### 3 Select "Click here for wireless setup for your new main unit".

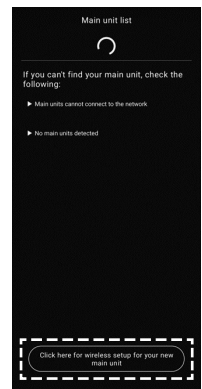

### 4 Select this unit and follow the on-screen instructions to set the network.

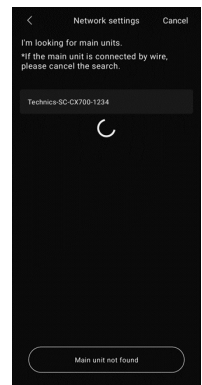

### Note

- This unit will be displayed as "Technics-SC-CX700-\*\*\*\*" if the device name is not set. ("\*\*\*\*" stands for characters unique to each set.)
- You can check your network information (SSID, MAC address and IP address) from the "Technics Audio Center" app.




When resetting the wireless setup

**1 Press and hold [NET] on this unit for 5 seconds.**


- After a beep sounds once, the LED indicators on the top (NET) and the front of this unit blink simultaneously every second.

**2 Open the “Technics Audio Center” app.**

**3 Select “Click here for wireless setup for your new main unit”.**

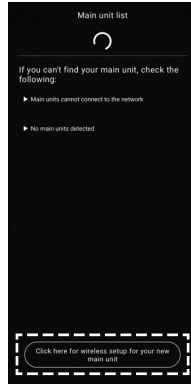

**4 Select this unit and follow the on-screen instructions to set the network.**

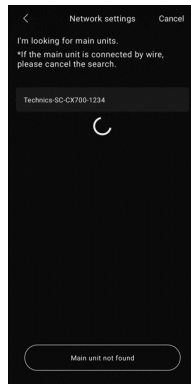

**Note**

- This unit will be displayed as “Technics-SC-CX700-\*\*\*\*” if the device name is not set. (“\*\*\*\*” stands for characters unique to each set.)
- You can check your network information (SSID, MAC address and IP address) from the “Technics Audio Center” app.

## Streaming music over the network

This unit is compatible with Chromecast-enabled apps. For detailed information of Chromecast-enabled apps, visit:

[g.co/cast/apps](https://g.co/cast/apps)

You can also stream music files from the device on your network to this unit by using the “Technics Audio Center” app. Download and install the app from the website below. (⇒ 08)

[www.technics.com/support/](http://www.technics.com/support/)

- You can also stream music over AirPlay.



### ■ Preparation

- Complete the network settings. (⇒ 15) (Make sure that the network is connected to the Internet.)
- Install the supported application on your device.
- Connect the device to the network currently used at home.

**1 Open a Chromecast-enabled app, AirPlay-enabled app or “Technics Audio Center” app on your device (smartphone, tablet, etc.), and select this unit as the output speaker.**

**2 Play back the music.**

## Online music streaming services (NET)

You can stream music services (Internet Radio / Podcasts / Spotify / TIDAL / Deezer / Amazon Music / Qobuz / Chromecast built-in / AirPlay, etc.) with this unit by using the “Technics Audio Center” app.

- Complete the network settings. (⇒ 15)

### 1 Press [NET].

- The LED indicator on the top of this unit (NET) lights up.

### 2 Open the “Technics Audio Center” app and follow the on-screen instructions.

## Network services

The services provided by their respective service providers may be changed or discontinued without notice. Panasonic bears no responsibility for change or discontinuance of their services.

Not all music streaming services are available in all countries/regions. Registration/ subscription may be required, or fees may be charged to use music streaming services. Services are subject to change or be discontinued. For details, visit an individual music streaming service’s website.

### Important notice:

Before you dispose of or transfer this unit to a third party, be sure to log out of your music streaming services accounts to prevent unauthorised use of your accounts.

## Using Bluetooth®

### ■ Registering the Bluetooth® device

- Turn on the Bluetooth® feature of the device and place the device near this unit.
- If a Bluetooth® device is already connected, disconnect it.

### 1 Press [Ⓚ-PAIRING].

- The LED indicator on the top of this unit (Ⓚ) blinks the first time to register the device. If any device has been registered before, this unit automatically tries to connect to it.
- By pressing and holding [Ⓚ-PAIRING] this unit starts waiting for registering.

### 2 Select “Technics-SC-CX700-\*\*\*\*” from the Bluetooth® device’s menu.

- The LED indicator on the top (Bluetooth) and front of this unit blinks every second while pairing.
- The MAC address “\*\*\*\*” (“\*\*\*\*” stands for a character that is unique to each set.) may be displayed before “Technics-SC-CX700-\*\*\*\*” is displayed.
- If the device name is set in your application, the set name is displayed.

### Note

- You can also enter pairing mode by pressing and holding [Ⓚ-PAIRING] when the input source is other than “Bluetooth”.
- If prompted for the passkey, input “0000”.

## ■ Listening to music stored on a Bluetooth® device

### 1 Press [0-PAIRING].

- The LED indicator on the top (Bluetooth) lights up when connection is established. (The LED blinks while connecting.)

### 2 Select “Technics-SC-CX700-\*\*\*\*” from the Bluetooth® device’s menu.

- If the device name is set in your application, the set name is displayed.

### 3 Start playback on the Bluetooth® device.

#### Note

- To use this unit’s remote control with a Bluetooth® device, the Bluetooth® device must support AVRCP (Audio Video Remote Control Profile). Depending on the status of the device, some controls may not work.
- When enjoying video contents with this function, the video and audio output may not be synchronised.
- This unit can only be connected to one device at a time.
- The Bluetooth® device will be disconnected if a different audio source is selected.

## External equipment (OPT/HDMI/USB/AUX/PHONO)

You can connect the several equipment (OPT/HDMI/USB/AUX/PHONO) to this unit and play back music.

- Connect the equipment. (⇒ 12, 14)

### 1 Press [OPT] / [HDMI] / [USB] / [AUX] / [PHONO].

- The LED indicator on the top of this unit lights up.

### 2 Start playback on the connected device.



The Wi-Fi CERTIFIED Logo is a registered trademarks of Wi-Fi Alliance.



Use of the Works with Apple AirPlay badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards. Apple and AirPlay are trademarks of Apple Inc., registered in the U.S. and other countries. To use AirPlay with Wireless Speaker System, the latest version of iOS, iPadOS, or macOS is recommended.



Google, Google Home, Google Cast, Google Play and the Google Play logo are trademarks of Google LLC. Google Assistant is not available in certain languages and countries.

Windows is a trademark or a registered trademark of Microsoft Corporation in the United States and other countries.

Windows Media and the Windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. This product is protected by certain intellectual property rights of Microsoft Corporation and third parties. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary and third parties.

Mac and OS X are trademarks of Apple Inc., registered in the U.S. and other countries.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Panasonic Holdings Corporation is under license. Other trademarks and trade names are those of their respective owners.

“DSD” is a registered trademark.

### FLAC Decoder

Copyright (C) 2000, 2001, 2002, 2003, 2004, 2005, 2006, 2007, 2008, 2009 Josh Coalson

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS “AS IS” AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The Spotify Software is subject to third party licenses found here: <https://www.spotify.com/connect/third-party-licenses>.



The terms HDMI, HDMI High-Definition Multimedia Interface, Premium HDMI, Premium High Speed HDMI Cable, Premium High Speed HDMI Cable with Ethernet, and HDMI Trade Dress, the HDMI Logos, Premium HDMI Cable Certification Label and Premium HDMI Cable Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

## ■ GENERAL

Power supply	AC 220 V to 240 V, 50/60 Hz
Power consumption	40 W (PRIMARY) 35 W (SECONDARY)
Network Standby	Approx. 2.0 W
Dimensions (W×H×D)	201 mm × 313 mm × 276 mm (PRIMARY) 201 mm × 313 mm × 272 mm (SECONDARY)
Mass	9.1 kg (PRIMARY) 8.9 kg (SECONDARY)
Operating temperature range	0 °C to 40 °C
Operating humidity range	35 % to 80 % RH (no condensation)

## ■ AMPLIFIER SECTION

Output power	
Woofer	60 W (300 Hz, T.H.D. 1.0%, 4 Ω, 20 kHz LPF)
Tweeter	40 W (10 kHz, T.H.D. 1.0%, 4 Ω, 20 kHz LPF)

## ■ SPEAKER SECTION

Type	Coaxial 2-way bass reflex
Woofer	15 cm × 1/ch, Cone Type
Tweeter	1.9 cm × 1/ch, Ring Type

## ■ Bluetooth® SECTION

Bluetooth® system specification	Bluetooth® Ver.5.1
Wireless equipment classification	Class 1 (4 mW)
Supported profiles	A2DP, AVRCP
Supported codec	AAC, SBC
Frequency band	2.4 GHz band FH-SS
Operating distance	Approx. 10 m Line of sight*1

\*1: Prospective communication distance  
Measurement environment:  
Temperature 25 °C/Height 1.0 m  
Measure in "Model1"

## ■ Wi-Fi SECTION

Standard	IEEE802.11a / b / g / n / ac / ax
Frequency Band	2.4 GHz band 5 GHz band
Security	WPA2™

- The WLAN feature of this product shall exclusively be used inside buildings.

## ■ TERMINALS SECTION

USB-C	Type C Connector
Ethernet interface	LAN (100BASE-TX/10BASE-T)
AUX input	Stereo, φ3.5 mm jack
Analogue Input	PHONO (MM) (Pin Jack)
Analogue Output	SUBWOOFER (Pin Jack)
Digital Input	OPT IN (Optical terminal)
Format support	LPCM
HDMI Output (ARC)	Type A Connector
Format support	LPCM
P/S LINK	RS-45 Connector Supports CAT6A (shielded type)

# Specifications (Continued)

## ■ FORMAT SECTION

### USB-C

USB Standard	USB 2.0 High-speed USB Audio Class 2.0, Asynchronous mode
DSD control mode	ASIO Native mode, DoP mode

### ■ Format

This unit supports the following formats.

- This unit does not support the playback of copy-protected music files.
- Playback of all files in formats supported by this unit is not guaranteed.
- Playback of a file in a format not supported by this unit may cause choppy audio or noise. In such cases, check to see if this unit supports the file format.
- This unit does not support VBR (Variable Bit Rate) playback.
- Files larger than 2 GB cannot be played.
- Some of the connected devices or servers may be capable of converting files in formats not supported by this unit and output them. For details, refer to the operating instructions for your devices or servers.
- File information (sampling frequency, etc.) shown by this unit and playback software may differ from each other.
- Depending on PC, application, etc., the content may not be played back even though the sampling frequency is supported. Check the PC, application, etc. to play back properly.

	Extension	Sampling frequency	Bit rate/ Number of quantisation bits	USB-C	LAN (DMR)*2
MP3	.mp3	32/44.1/48 kHz	16 to 320 kbps		✓
AAC	.m4a/.aac	32/44.1/48/88.2/96 kHz	16 to 320 kbps		✓
WAV	.wav	32/44.1/48/88.2/96/ 176.4/192/352.8/384 kHz	16/24/32 bit		✓
FLAC	.flac	32/44.1/48/88.2/96/ 176.4/192/352.8/384 kHz	16/24 bit		✓
AIFF	.aiff	32/44.1/48/88.2/96/ 176.4/192/352.8/384 kHz	16/24/32 bit		✓
ALAC	.m4a	32/44.1/48/88.2/96/ 176.4/192/352.8/384 kHz	16/24 bit		✓
DSD	.dff/.dsf	2.8/5.6/11.2*3 MHz		✓	✓
LPCM		32/44.1/48/88.2/96/ 176.4/192 kHz	16/24 bit	✓	

\*2: Whether or not each music file can be played back over your network is determined by the network server even if the format of the file is listed above. For example, if you are using Windows Media Player 11, not all music files on the PC are playable. You can play back only those added to the library of Windows Media Player 11.

\*3: Not valid for USB-C

### Note

- Specifications are subject to change without notice.
- Mass and dimensions are approximate.

# Limited Warranty (ONLY FOR U.S.A.)

## Technics Products – Limited Warranty

### Limited Warranty Coverage (For USA Only)

If your product does not work properly because of a defect in materials or workmanship, Panasonic Corporation of North America (referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("warranty period"), at its option either (a) repair your product with new or refurbished parts, (b) replace it with a new or a refurbished equivalent value product, or (c) refund your purchase price. The decision to repair, replace or refund will be made by the warrantor.

Product or Part Name	Parts	Labor
Technics Wireless Speaker System	3 (three) years	3 (three) years

During the "Labor" warranty period there will be no charge for labor. During the "Parts" warranty period, there will be no charge for parts. This Limited Warranty excludes both parts and labor for non-rechargeable batteries, antennas, and cosmetic parts (cabinet). This warranty only applies to products purchased and serviced in the United States. This warranty is extended only to the original purchaser of a new product which was not sold "as is".

### Mail-In Service--Online Repair Request

#### Online Repair Request

To submit a new repair request and for quick repair status visit our Web Site at

<http://shop.panasonic.com/support>

When shipping the unit, carefully pack, include all supplied accessories listed in the Owner's Manual, and send it prepaid, adequately insured and packed well in a carton box. When shipping Lithium Ion batteries please visit our Web Site at <http://shop.panasonic.com/support> as Panasonic is committed to providing the most up to date information. Include a letter detailing the complaint, a return address and provide a daytime phone number where you can be reached. A valid registered receipt is required under the Limited Warranty.

**IF REPAIR IS NEEDED DURING THE WARRANTY PERIOD, THE PURCHASER WILL BE REQUIRED TO FURNISH A SALES RECEIPT/PROOF OF PURCHASE INDICATING DATE OF PURCHASE, AMOUNT PAID AND PLACE OF PURCHASE. CUSTOMER WILL BE CHARGED FOR THE REPAIR OF ANY UNIT RECEIVED WITHOUT SUCH PROOF OF PURCHASE.**

#### Limited Warranty Limits and Exclusions

This warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, introduction of sand, humidity or liquids, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than a Factory Service Center or other Authorized Servicer, or damage that is attributable to acts of God.

**THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE".**

**THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY.**

(As examples, this excludes damages for lost time, travel to and from the servicer, loss of or damage to media or images, data or other memory or recorded content. The items listed are not exclusive, but for illustration only.)

**ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.**

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Service Center. If the problem is not handled to your satisfaction, then write to:

Panasonic Corporation of North America  
Consumer Affairs Department.  
Two Riverfront Plaza  
Newark NJ 07102-5490

**PARTS AND SERVICE, WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY, ARE YOUR RESPONSIBILITY.**

Product registration is not mandatory. Failure to complete the form does not affect the consumer's warranty rights.

## **Shop Accessories!**

for all your Technics gear

Go to

<https://shop.panasonic.com/support>

Get everything you need to get the most out of your Technics products

Accessories & Parts for your Camera, Phone, A/V products, TV, Computers & Networking, Personal Care, Home Appliances, Headphones, Batteries, Backup Chargers & more...

### **Customer Services Directory**

For Product Information, Operating Assistance, Parts, Owner's Manuals, Dealer and Service info go to <https://shop.panasonic.com/support>

For the hearing or speech impaired TTY: 1- 877-833-8855

As of March, 2023

The model number and serial number of this product can be found on either the back or the bottom of the unit. Please note them in the space provided below and keep for future reference.

MODEL NUMBER            SC-CX700  
SERIAL NUMBER            \_\_\_\_\_

User memo:

DATE OF PURCHASE            \_\_\_\_\_  
DEALER NAME                    \_\_\_\_\_  
DEALER ADDRESS                \_\_\_\_\_  
TELEPHONE NUMBER            \_\_\_\_\_

# IMPORTANTES MISES EN GARDE

Avant d'utiliser l'appareil, lire attentivement les instructions qui suivent. Se conformer tout particulièrement aux avertissements inscrits sur l'appareil et aux consignes de sécurité indiquées ci-dessous. Conserver le présent manuel pour consultation ultérieure.

- 1 Lire attentivement ces instructions.
- 2 Conserver ces instructions.
- 3 Lire toutes les mises en garde.
- 4 Suivre toutes les instructions.
- 5 Ne pas utiliser cet appareil près d'une source d'eau.
- 6 Ne nettoyer qu'avec un chiffon sec.
- 7 Ne pas bloquer les événements d'aération. Installer l'appareil selon les instructions du fabricant.
- 8 Ne pas installer l'appareil près d'un appareil de chauffage tel qu'un radiateur, une cuisinière, un registre de chaleur ou tout dispositif émettant de la chaleur (y compris un amplificateur).
- 9 Pour des raisons de sécurité, ne pas modifier la fiche polarisée ou celle de mise à la terre. Une fiche polarisée est une fiche à deux lames, dont une plus large. Une fiche de mise à la terre est une fiche à deux lames avec une broche de masse. La lame plus large ou la broche de masse procure une protection accrue. Si ce genre de fiche ne peut être inséré dans une prise de courant, communiquer avec un électricien pour remplacer la prise.
- 10 S'assurer que le cordon est placé dans un endroit où il ne risque pas d'être écrasé, piétiné ou coincé. Faire particulièrement attention à ses extrémités de branchement, y compris sa fiche.
- 11 N'utiliser que les accessoires ou périphériques recommandés par le fabricant.
- 12 N'utiliser l'appareil qu'avec un chariot, meuble, trépied, support ou table recommandé par le fabricant ou vendu avec l'appareil. Lors de l'utilisation d'un chariot, le déplacer avec le plus grand soin afin d'éviter tout dommage.
- 13 Débrancher cet appareil lors d'un orage ou en cas de non-utilisation prolongée.
- 14 Confier l'appareil à un technicien qualifié pour toute réparation : cordon d'alimentation ou fiche endommagé, liquide renversé ou objet tombé dans l'appareil, exposition à la pluie ou à une humidité excessive, mauvais fonctionnement ou échappement de l'appareil.



## AVERTISSEMENT

### Appareil

- Pour réduire les risques d'incendie, de choc électrique ou de dommages à l'appareil,
  - N'exposez pas cet appareil à la pluie, à l'humidité, à l'égouttement ou aux éclaboussures.
  - Ne placez sur l'appareil aucun objet rempli de liquide, comme par exemple des vases.
  - Utilisez exclusivement les accessoires recommandés.
  - Ne retirez pas les couvercles.
  - Ne réparez pas cet appareil vous-même. Faites effectuer la réparation par un personnel qualifié.
  - Ne laissez aucun objet en métal tomber à l'intérieur de cet appareil.
  - Ne posez pas d'objets lourds sur cet appareil.

- Installer les enceintes sur une surface plane en sécurité.
- Ne pas suspendre les enceintes du plafond ou les installer au mur. Les enceintes pourraient tomber et causer des blessures.
- Ne pas placer d'objets dans les événements reflex à l'avant des enceintes. Cela peut causer un incendie ou un risque de blessures. Porter une attention particulière aux enfants.

### Cordon d'alimentation c.a.

- La fiche d'alimentation permet de déconnecter l'appareil. L'appareil doit être installé à proximité d'une prise secteur facile d'accès.
- Assurez-vous que la lame pour la mise à la terre est insérée bien à fond afin de prévenir tout choc électrique.
  - Un appareil de classe 1 devrait être branché dans une prise secteur avec une protection pour mise à la terre.

## ATTENTION

### Appareil

- Ne placez aucune source de flamme nue, telles des bougies allumées, sur l'appareil.
- Il est possible que cet appareil reçoive des interférences provenant de téléphones cellulaires pendant son utilisation. Si de telles interférences se produisent, veuillez éloigner l'unité du téléphone cellulaire.
- Ne pas monter sur les enceintes.
- Ne pas déposer d'objets lourds sur les enceintes.
- Ne pas tenir l'enceinte avec une seule main pour éviter des blessures dans le cas où l'enceinte tomberait pendant le transport.
- Ne pas exposer les enceintes aux rayons solaires directs, à des hautes températures, à un taux élevé d'humidité et à des vibrations excessives.
- Ne pas exposer les enceintes à la pluie, condensation, égouttement ou éclaboussures.
- Les enceintes et les treillis de haut-parleur utilisent de puissants aimants. Éviter de les positionner près d'un téléviseur, d'un ordinateur ou d'autres appareils pouvant être affectés par des perturbations magnétiques.
- Ne pas effectuer d'écoute à un niveau élevé pendant une période prolongée car cela pourrait endommager les enceintes et en réduire leur durée de vie.
- Ne pas toucher les diaphragmes. Autrement, cela pourrait déformer les diaphragmes et, comme résultat, le son pourrait ne plus être reproduit correctement.
- Surveiller les enfants à proximité.
- Ne pas mettre les doigts dans les événements reflex à l'avant des enceintes. Porter une attention particulière aux enfants car cela peut causer des blessures.

### Emplacement

- Positionnez cet appareil sur une surface plane.
- Pour réduire les risques d'incendie, de choc électrique ou de dommages à l'appareil,
  - N'installez pas cet appareil dans une bibliothèque, une armoire ou tout autre espace confiné. Assurez-vous que la ventilation de l'appareil est adéquate.
  - N'obstruez pas les événements d'aération de l'appareil avec des journaux, des nappes, des rideaux ou d'autres objets similaires.
  - N'exposez pas cet appareil aux rayons directs du soleil, aux températures élevées, à une humidité élevée et à des vibrations excessives.





# IMPORTANTES MISES EN GARDE

- Ne soulevez pas ou ne transportez pas cet appareil en le tenant par les molettes ou l'antenne. Cela pourrait faire tomber l'appareil, ce qui pourrait causer des blessures ou des dysfonctionnements de cet appareil.

## Piles

- Il y a un danger d'explosion si les piles ne sont pas correctement remplacées. Remplacez uniquement par le type recommandé par le fabricant.
- La manipulation incorrecte des piles peut causer une fuite d'électrolyte, ainsi qu'un incendie.
  - Retirez les piles si vous n'avez pas l'intention d'utiliser la télécommande pendant un long moment. Rangez-les dans un endroit frais et sombre.
  - Ne chauffez pas et n'exposez pas les piles à une flamme.
  - Ne laissez pas la (les) pile(s) dans un véhicule exposé directement aux rayons du soleil pendant un long moment avec fenêtres et portières fermées.
  - Ne démontez pas les piles et ne les court-circuitiez pas.
  - Ne rechargez pas des piles alcalines ou au manganèse.
  - N'utilisez pas des piles dont le revêtement a été enlevé.
  - Ne mélangez pas des piles usées avec des piles neuves ou différents types de piles.
- Pour jeter les piles, veuillez contacter les autorités locales ou votre revendeur afin de connaître la procédure d'élimination à suivre.

	<b>AVIS</b> <b>RISQUE DE CHOC ÉLECTRIQUE</b> <b>NE PAS OUVRIR</b>	
AVIS :	AFIN DE PRÉVENIR LE RISQUE DE CHOC ÉLECTRIQUES, NE PAS RETIRER LES VIS. AUCUNE PIÈCE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. FAITES EFFECTUER LA RÉPARATION PAR UN PERSONNEL QUALIFIÉ.	



Le symbole de l'éclair dans un triangle équilatéral indique la présence d'une tension suffisamment élevée pour engendrer un risque de chocs électriques.



Le point d'exclamation dans un triangle équilatéral indique que le manuel d'utilisation inclus avec l'appareil contient d'importantes recommandations quant au fonctionnement et à l'entretien de ce dernier.

Conforme à la norme UL 62368-1.

Conforme à la norme CAN/CSA STD C22.2 No.62368-1.

## CE QUI SUIT NE S'APPLIQUE QU'AUX ÉTATS-UNIS ET AU CANADA.

Le présent appareil est conforme à la partie 15 des règles de la FCC et aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'appareil doit accepter tout brouillage subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

SC-CX700PP

FCC: ACJ-SC-CX700

IC: 216A-SCCX700

Contains FCC ID: UA9800

Contains/Contient IC: 9129A-800

SC-CX700SP

Contains FCC ID: UA9601

Contains/Contient IC: 9129A-601

Cet émetteur ne doit pas être placé à proximité d'une autre antenne ou d'un autre émetteur, ni être utilisé de pair avec de tels autres appareils.

Cet équipement est conforme aux limites d'exposition aux rayonnements énoncées pour un environnement non contrôlé et respecte les lignes directrices d'exposition aux radiofréquences de la FCC et de la norme CNR-102 de l'ISDE sur l'exposition aux radiofréquences. Cet équipement doit être installé et utilisé en gardant une distance de 20 cm (7 7/8 po) ou plus entre l'émetteur et le corps humain.

La bande 5150-5250 MHz est restreinte à une utilisation à l'intérieur seulement.

## CE QUI SUIT NE S'APPLIQUE QU'AU CANADA.

CAN ICES-003(B)/NMB-003(B)



### Information sur la mise au rebut dans les pays n'appartenant pas à l'Union européenne

Ce symbole est uniquement valide dans l'Union européenne.

Si vous désirez mettre ce produit au rebut, contactez l'administration locale ou le revendeur et informez-vous de la bonne façon de procéder.

## Conditions à éviter :

- Températures extrêmement basses ou élevées durant l'utilisation, le stockage ou le transport.
- Remplacement d'une batterie par une de type incorrect.
- Mise au rebut d'une batterie dans le feu ou dans un four chaud, ou écrasement ou coupure mécanique d'une batterie, pouvant entraîner une explosion.
- Température extrêmement élevée et/ou pression de l'air extrêmement basse pouvant entraîner une explosion ou une fuite de liquide ou de gaz inflammable.

---

**Panasonic Corporation of North America**

Two Riverfront Plaza, Newark, NJ 07102-5490

**<https://www.panasonic.com>**

**Panasonic Canada Inc.**

5770 Ambler Drive,  
Mississauga, Ontario,  
L4W 2T3

**[www.panasonic.com](http://www.panasonic.com)**