

## IK3600F Manual

Product	RKE TXE
Model	IK3600F
FCC ID	ACJ932IK3600F
Operational frequency band	433.87 to 433.97 (MHz)
Maximum Output Power	80.8dBuV/m @3m


Since this device is always used with vehicle, it is not sold to general end users separately. Therefore there is no user manual of this device by alone. The following statements must be described on the user manual of the vehicle:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### FCC CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### How to replace the battery and check the FCC ID

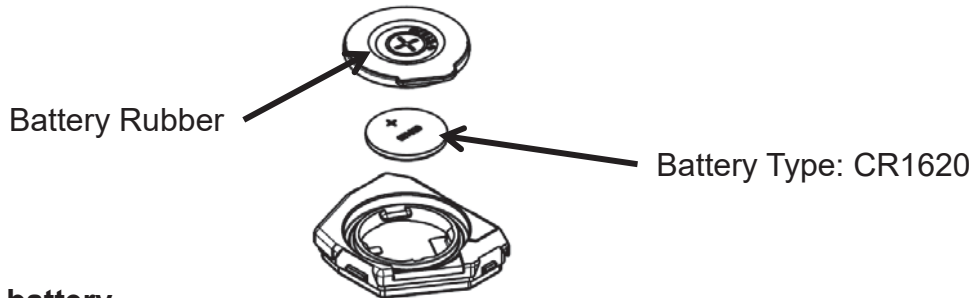

#### ■ replace the battery

Remove the Battery Rubber and replace the battery.

#### ■ FCC ID Display

The FCC ID display can be confirmed by removing the emblem case. The FCC ID display is stamped on the switch face of Built-in module.

