


Control Panel

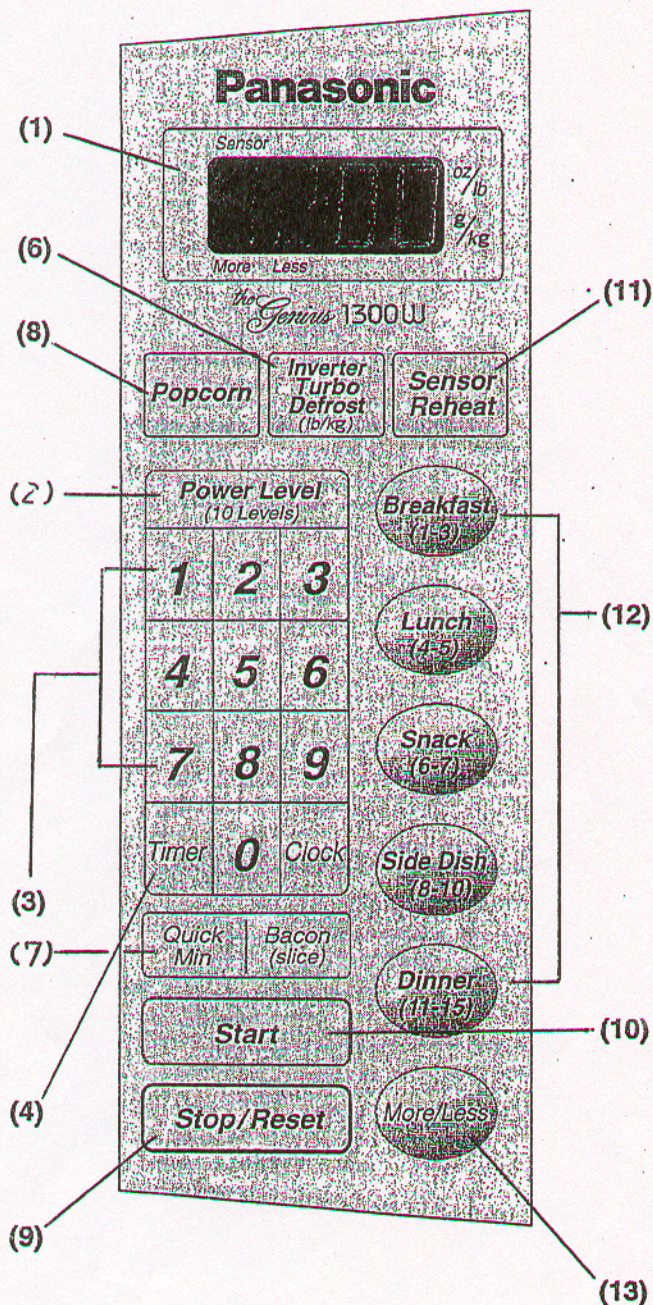

- (1) **Menu Action Screen**
Step by step instructions scroll for easy operation.
- (2) **Power Level Pad**
- (3) **Number Pads**
- (4) **Timer/Clock Pad**

- (6) **Defrost Pad**
- (7) **Quick Min Pad**
- (8) **Popcorn Pad**
- (9) **Stop/Reset Pad**
Before cooking: One tap clears your instruction.
During cooking: One tap temporarily stops the cooking process. Another tap cancels all your instructions and time of day or colon appears on the screen.
- (10) **Start Pad**
One tap allows oven to begin functioning. If door is opened or **Stop/Reset** Pad is pressed once during oven operation, **Start** Pad must again be pressed to restart oven.
- (11) **Sensor Reheat Pad**
- (12) **Sensor Cooking Pads**
- (13) **More/Less Pad**
One tap allows you to add to the Sensor cooking time. Two taps allows you to program less time when using the Sensor cook pads.

Prompters:

When pads are pressed, a beep sound is heard and the corresponding letter or word(s) appear and scroll across the **Menu Action Screen** (either the **Beep Sound** or prompts may be disabled using the **Function Pad**). If a pad is pressed and no beep is heard, the unit has not or cannot accept the instruction. As each pad is pressed the corresponding word(s) scroll(s) across the screen. Words will automatically appear to prompt user to perform the next step. It is not necessary to wait for the words to appear before pressing pads for the next step. A two beep sound is usually heard between stages. A five beep sound is heard at the end of all programs.