


Control Panel

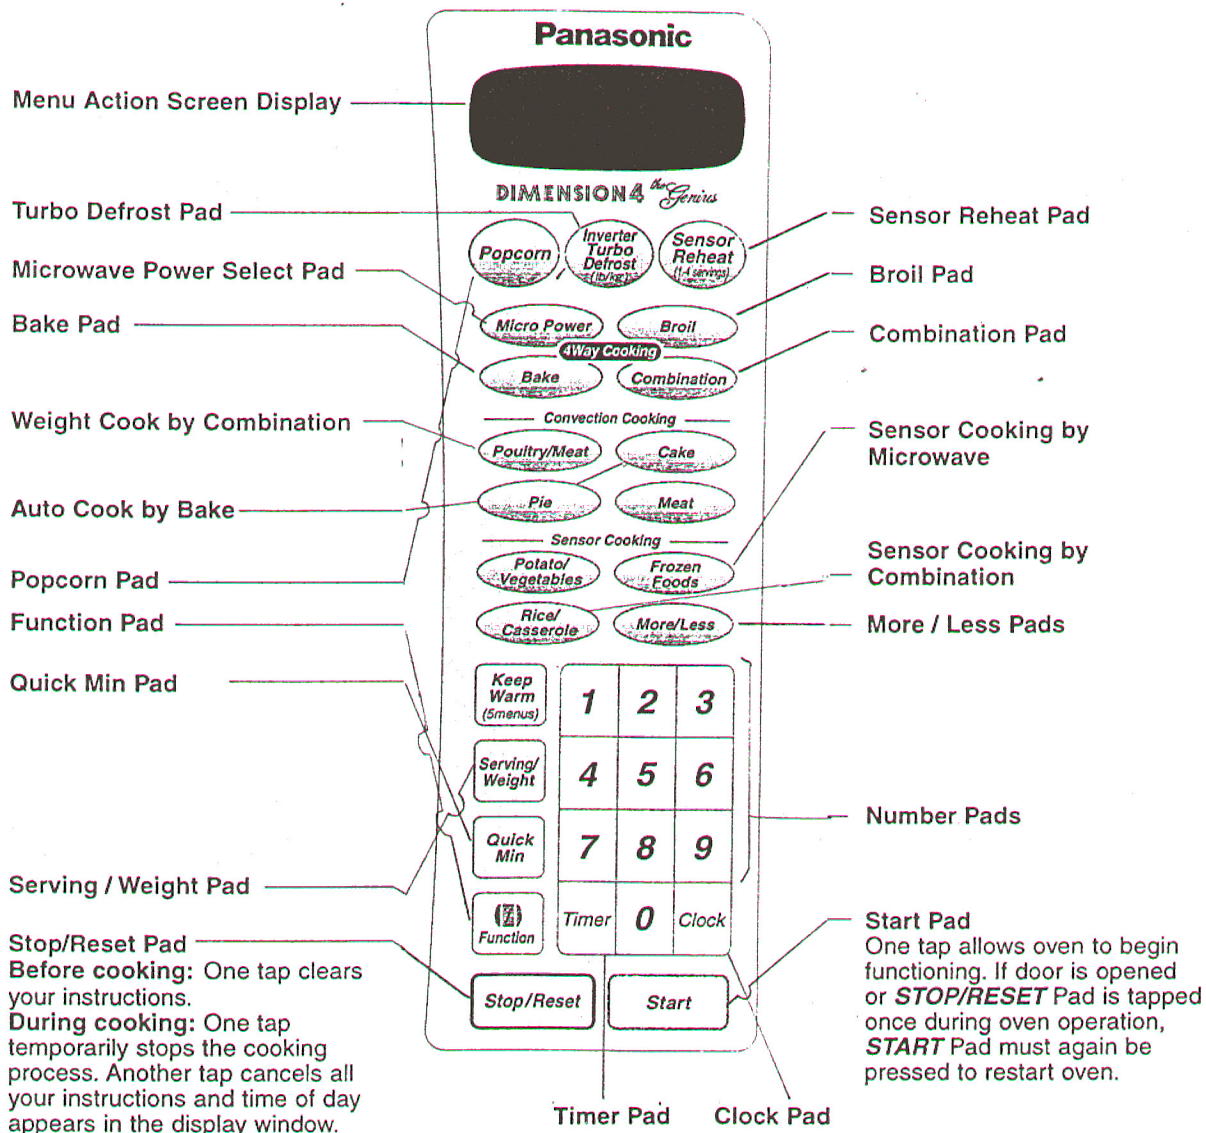

Before Operation

Prompters:

When a pad is pressed, a beep sound is heard and the corresponding letter or word(s) appear and scroll across the **Menu Action Screen Display**. If a pad is pressed and no beep is heard, the unit does not or cannot accept the instruction. As each pad is pressed the corresponding word(s) scroll across the screen. Words will automatically appear to prompt user to perform the next step. It is not necessary to wait for the words to appear before pressing pads for the next step. A two beep sound is heard between stages. At the end of any complete program, the oven will beep five times.