

FCC RF EXPOSURE INFORMATION

WARNING! *Read this information before using your phone*



In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.



Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations.

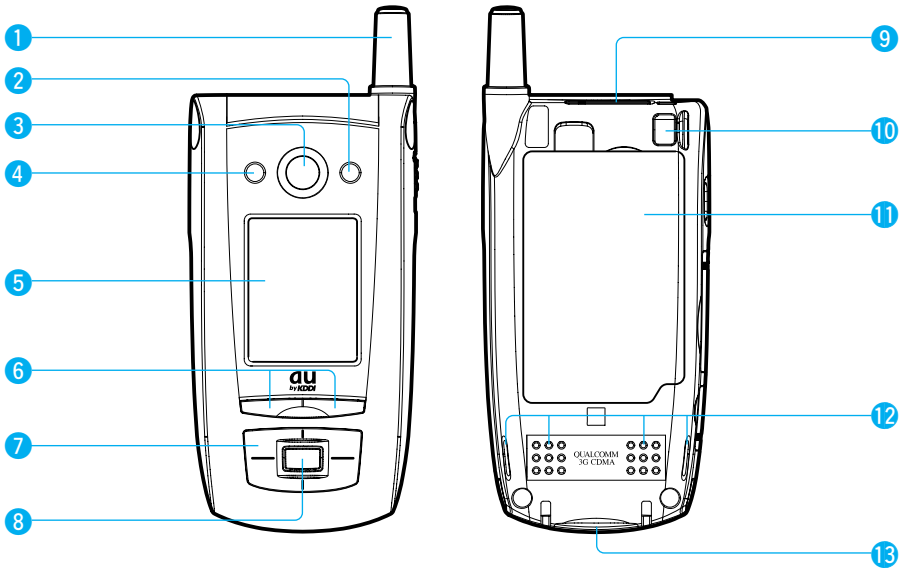 
Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

Body-worn Operation

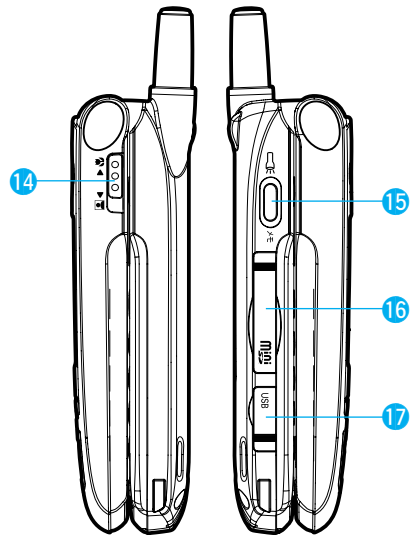 
This device was tested for typical body-worn operations with the back of the phone kept 1.9 cm. from the body. To maintain compliance with FCC RF exposure requirements, use only belt-clips, holsters or similar accessories that maintain a 1.9 cm. separation distance between the user's body and the back of the phone, including the antenna, whether extended or retracted. The use of belt-clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Operating Instructions

Name & Function of Parts

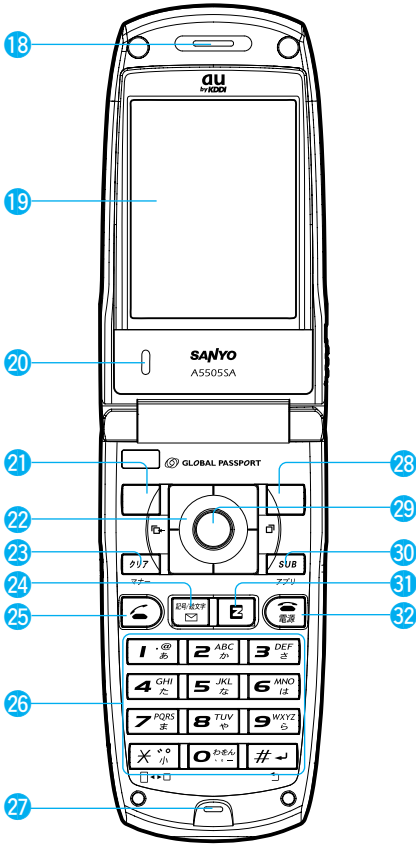 
















- 1 Antenna
- 2 Incoming call light
- 3 Built-in camera (Lens)
- 4 Flash pocket light
- 5 Sub-display (External display)
- 6 Flexible keys (External)
- 7 Cursor key (External)
- 8 OK keys (External)
- 9 Ear-microphone jack (Flat-plug)
- 10 Strap hole
- 11 Battery pack
- 12 Speaker
- 13 External connection terminal



- 14 Camera zoom select switch (Macro
- 15 Side key
- 16 miniSD card slot
- 17 USB terminal

Normal)




- 18 Earpiece
- 19 Display
- 20 Optical sensor
- 21 Flexible key (left)
- 22  Search/Cursor key
- 23  Volume/Conversion key
- 24  Receiving History (☒) key
- 25  Redial (☐) key
- 26  (Clear/Manner)key
- 27  (Mail) key
- 28  (Start) key
- 29  Dial keys
- 30  Microphone
- 31  Flexible key (right)
- 32  Flexible key (center)
- 33  SUB key
- 34  (EZweb)key
- 35  (End) key

Power saving during standby

In order to minimize the power consumption, the A5505SA display turns automatically to power saving mode when key operation is stopped for a while. The indication restores with key operation.



In this manual, the point at which to press the  key is indicated as shown below.


Example) Press  or  


Getting Ready to Make a Call

1 Charging with the Sanyo AC Adapter 02






The battery charger can also be charged by directly inserting the SANYO AC Adapter 02 connector into the external connection terminal on the A5505SA Main Unit.

2 Turning the power on




Press and hold  for more than one second.

Turning the power off
Press and hold  for more than one second.




Switch to English

1. Press  (メインメニュー).
2. Select "基本設定" and press  (選択).
3. Press  .
4. Select "English" and press  (Set).


Displaying your own phone number

1. While in standby mode or while making a call, press  (MeinMenu).
2. Select "Private Info" and press  (Select).
3. Select "Profile" and press  (Select) to display your au telephone number.


Calling to general, mobile and PHS phones

1. Enter the phone number you want to call.
Area code - Local code - Subscriber's number.
Example: 03-0001-XXXX
Always include the area code, even when calling to a number in the same area you are in.
If you enter a wrong number:
Press  briefly - the last dialed digit will be deleted.
Press and hold  - the entire phone number will be deleted.
2. Press  to make a call.

Making an International Call




1. Enter the phone number you want to call using the following pattern.
International dial code - Country code - Area code - Subscriber's number
2. Press  to make a call.

Example: to call United States, number 212-123-XXXX.


	Operation	Explanation
1	Pressing "005345"	Access code
2	Pressing "1"	Country code of United States: 1
3	Pressing "212"	Area code : 212
4	Pressing "123-XXXX"	Subscriber's number: 123-XXXX
5	Press 	The following operation is the same as the normal telephone operation.



 
 
 
 
 




When the first number of the area code is "0", press the area code number without "0".

Adjusting the receiver volume

1. During a call, press .
: Volume level raised
: Volume level lowered

Answering a call














1. The ringer tone sounds/vibrator buzzes, and the incoming call lamp flashes.
2. Press  to answer the call.


An incoming call can also be answered by pressing any of the  ~ , , , , , , , , , or  keys when M52: Any Key Answer is set.

If you do not answer the call or the caller disconnects before the call is answered, "Missed Call X" will be displayed. (A number appears in the "X".)

Entering characters

This is the method of entering names for registering address book and writing mail.

1. Press  (Char.).
2. Select the entry mode you want.
 - : "Kanji", "Hiragana" entry mode (full size)
 - : "Katakana" entry mode (full size)
 - : "Katakana" entry mode (half size)
 -  : "Alphanumeric" entry mode (full size)
 - : "Number" entry mode (full size)
 -  : "Alphanumeric" entry mode (half size)
 - : "Number" entry mode (half size)
 - : "Pictographs" entry mode (full size)
 - : "Symbol" entry mode
 - : "Face marks" entry mode

When you press the  (Undo) just after the characters are confirmed, the characters return to the previous state.

[Assignment of characters and key functions]

Characters are assigned to each key as shown below. Press a key repeatedly to cycle through characters assigned to that key.

entry mode key	Kanji · Hiragana 漢	Katakana ア · アI	Alphanumeric A · AB	Alphanumeric a · ab	Number 1 · 12
1 .@あ	▶ あいうえお ◀ おえういあ ◀	▶ アイウエオ ◀ オエウイア ◀	▶ .@-_/ : 1 ▶	▶ .@-_/ : 1 ▶	1
2 ABCか	▶ かきくけこ ▶	▶ カキケケコ ▶	▶ ABC2 ▶	▶ abc2 ▶	2
3 DEFさ	▶ さしすせそ ▶	▶ サシスセソ ▶	▶ DEF3 ▶	▶ def3 ▶	3
4 GHIた	▶ たちつとと ▶	▶ タチツテト ▶	▶ GHI4 ▶	▶ ghi4 ▶	4
5 JKLな	▶ なにぬねの ▶	▶ ナニヌネノ ▶	▶ JKL5 ▶	▶ jkl5 ▶	5
6 MNOは	▶ はひふへほ ▶	▶ ハヒフヘホ ▶	▶ MNO6 ▶	▶ mno6 ▶	6
7 PQRSま	▶ まみむめも ▶	▶ マミムメモ ▶	▶ PQRS7 ▶	▶ pqrs7 ▶	7
8 TUVや	▶ やゆよゃゅょ ▶	▶ ヤユヨャュョ ▶	▶ TUV8 ▶	▶ tuv8 ▶	8
9 WXYZら	▶ らりるれろ ▶	▶ ラリルレロ ▶	▶ WXYZ9 ▶	▶ wxyz9 ▶	9
0 わもん ・ -	▶ わをんわ、。 - ◀ (space) ? ! ~ . ◀	▶ ワラン、。 - ◀ (space) ? ! ~ . ◀	0	0	0
* °が	Switches lowercase/uppercase		Switches lowercase/uppercase		
# ↵	Reverse toggle of entered characters, line change (after confirm)				
印字文字 ☐	▶ Symbol (full size) ▶ Symbol (half size) ▶ Pictographs ▶ Face marks ▶				

Remarks:

To enter a Japanese character with (°) or (°), enter the desired character without confirming and press [* °] in this order. When you enter a capital character without confirming and press [* °], the character changes to the lowercase, and when you enter a lowercase character and press [* °], the character changes to the capital.

(Example: た だ た... / は ば ば は... / つ づ っ つ... / A a A...)


A character is switched into reverse order by pressing [# ↵] after entering character using the dial keys. (Example: か こ け く き か)

Registering in the Address Book

You can register frequently used phone numbers and E-mail addresses.

Up to 500 addresses can be registered in the address book.



Registering in the address book

1. Press and hold  (Adrs.Bk.) for more than one second.


The address book item list is displayed.

The smallest free memory number (No.000 - No.499) is displayed.

2. Enter the item you want.

























 

Select the icon of the item you want by  and press  (Select) to enter it.

As for the items you can enter, see "Items to register in the address book".

3. Press  (Reg.) to complete registration.

Items to register in the address book





The following data can be put in the address book.

Item	Maximum entry characters	Remarks
 Memory No.	-	000 - 499
 Name	Up to 12 full size (24 half size) characters	-
 Pronunciation	Up to 24 half size characters	Registered automatically after "Name" is entered.
 Phone No.1	Up to 36 digits	Used for speed call. (Page 16)
 Phone No.2	Up to 36 digits	You can register only when "Phone No.1" is entered.
 Phone No.3	Up to 36 digits	You can register only when "Phone No.2" is entered.
 E-mail address 1	Up to 64 half size alphanumeric characters	Used for speed mail.
 E-mail address 2	Up to 64 half size alphanumeric characters	You can register only when "E-mail address 1" is entered.
 Group	-	You can classify it into 20 classes for managing.
 Link image	-	An image stored in the data folder is selected.
 Voice reception	-	You can prevent disclosing the content of registration to other persons.
 E-mail reception	-	You cannot register it.
 C-mail reception	-	Behavior for specified caller to be changed.
 Chat reception	-	Behavior for specified E-mail sender to be changed.
 Message	-	Behavior for specified C-mail sender to be changed.
 GPS information	-	Behavior for specified chat mailer to be changed.
 Secret Setup	-	Message for specified caller to be changed.
 Option	-	Optional items YES/NO to be preset.
 Blood type	-	Optional items (1)
 Birthday	-	
 Constellation	-	
 Postal code	Up to 7 half size numbers	
 Address	Up to 40 full size (80 half size) characters	
 Hobby	Up to 10 full size (20 half size) characters	
 URL	Up to 256 half size alphanumeric characters	
 Memo	Up to 40 full size (80 half size) characters	




(1) Up to 100 entries for any optional item can be registered in any memory number.

Calling from the Address Book





Saved phone number in the Address Book can be loaded and a call is placed to that number.


















1. Press  (Adrs.Bk.).
2. Use  to scroll through and display the name you want.
3. Press  (Detail).
4. Select the phone number, and press .

Creating and Sending E-Mail

1. Press  in the Standby Screen.
2. Use  to select “ Create New ” and press  (Select).

Icons

- : “To ” to which you send E-Mail
- : “Title ” of E-Mail
- : “Attachment data ” of E-Mail
- : “Body ” which is the mail contents.








3. Use  to select “  [Address] ” and press  (Select).
4. Use  to select “ Address Entry ” and press  (OK).
5. Enter the address and press  (OK).
6. Use  to select “  [Title] ” and press  (Select).
7. Enter the title and press  (OK).
8. Use  to select “  [Body] ” and press  (Select).
9. Enter the body sentences and press  (OK).
10. Press  (Send).
11. Use  to select “ Send ” and press  (“ OK ”).

Reading Received C-Mail

When you receive C-Mail








The message " New C-Mail # " appears when receive new C-Mail.

The received C-Mail is stored in the Inbox.



1. Press  (Confirm).
2. Use  to select " New C-Mail # " and press  (OK) .
The received C-Mail is usually stored in the " メインフォルダ "(Main folder).
3. Use  to select the folder with stored new C-Mail and press  (Select) .
4. Use  to select the new C-Mail and press  (Disp.) .

Reading C-Mail from the Inbox


C-Mail can be read from the Standby Screen when any now-read mail read again.

 
 
1. Press and hold  for over a second in the Standby Screen.
2. Use  to select " Inbox " and press  (Select) .
3. Use  to select the folder with the C-Mail to read and press  (Select) .
4. Use  to select the C-Mail to read and press  (Disp.) .

Using the EZweb Service


1. Press  in the standby display.
2. Select "Top Menu" and press  (Select).

To access information sites (sites that provide information):

Select the desired information site, and press  (Select).

Pressing  returns the display to the previous display. Holding down  for a longer time returns you to EZ Top menu.

Pressing  exits EZweb.

you can scroll the display up and down by turning .

Pressing  returns the display to the previous display.

List of Basic Setup

M0 Profile

Mode No.	Function	Description
M0	Profile	Displaying own phone number and E-mail address

M1 Call/Toll

Mode No.	Function	Description
M11	Time/Toll	
M12	TalkTime Disp.	Displaying estimated talk time during call
M13	Toll Display	Displaying estimated charge after call
M14	Toll Rate	Setting the multiplication of charge

M2 Sounds/Vibes

Mode No.	Function	Description
M21	Speaker Volume	Adjusting speaker sound volume
M211	Ringer Volume	Setting speaker sound volume for voice call reception
M212	E-Mail Notice	Setting speaker sound volume for E-mail reception
M213	Unreg.E-Mail	Setting speaker sound volume for unspecified E-mail
M214	Server Notice	Setting speaker sound volume for Server Notice reception
M215	C-Mail Notice	Setting speaker sound volume for C-mail reception
M216	Chat Notice	Setting speaker sound volume for chat
M217	Alarm Volume	Setting speaker sound volume for alarm
M218	Browser Volume	Setting speaker sound volume for browser
M22	Ringer/Vibes	Selecting ringer tone/vibrator
M221	Call Notice	Setting voice reception mode
M222	E-Mail Notice	Setting E-mail reception mode
M223	Unreg.E-Mail	Setting unspecified E-mail reception mode
M224	Server Notice	Setting Server Notice reception mode
M225	C-Mail Notice	Setting C-mail reception mode
M226	Chat Notice	Setting chat reception mode
M23	Effect Sound	Setting sound effects
M231	Key Tone	Setting key-in confirm tone
M232	OK Tone	Setting OK sound effects
M233	NG Tone	Setting NG sound effects
M234	Opening Tone	Setting sound effects when opening the handset
M235	Closing Tone	Setting sound effects when closing the handset
M24	Wake-Up	Setting wake-up tone
M25	Power Off	Setting power-off tone
M26	Quality Alert	Announcing in case of talk interruption
M27	Rcvr. Vol.Adj.	Adjusting receiver volume
M28	Call Vibration	Setting the call-up vibrator

M3 Screen

Mode No.	Function	Description
M31	Main Display	Setting Main display
M311	Standby Screen	Setting wallpaper on standby screen
M312	Screen-Saver	Setting screen saver
M313	Mail Xmit Image	Setting E-mail, C-mail connection screen
M314	EZ Connect Img.	Setting EZweb connection screen
M315	Power Saving	Setting Power save screen
M32	Sub Display	Setting Sub display
M321	Standby Screen	Setting wallpaper on Sub display's standby screen
M322	Notice Disp.	Setting notice screen of Sub display
M323	On Calling Disp.	Setting Sub display during call
M33	Lighting	Setting lighting of display and keys
M331	Usual Screen	Setting lighting for Main display
M332	Mail Screen	Setting lighting for mail screen
M333	EZweb Screen	Setting lighting for EZweb screen
M34	Switch Font	
M341	Font Size	Setting character size
M342	Font Type	Setting character font
M35	ハ`イソカ`ル機能	Setting the English/Japanese display
M36	Coloration	Setting the display's colors
M37	Illumination	
M371	Call Illum.	Setting illumination during call
M372	Notice Lamp	
M38	KeyLight Save	Setting key illumination during power save

M4 Privacy

Mode No.	Function	Description
M41	Change LockNo.	Changing Lock Number
M4	Number Notice	Announcing your number to the other party
M43	User Restrict	Restricted Setting
M431	Auto Lock	Setting Auto Lock
M432	Dial Restrict	Disabling dial-up calls
M433	AddressBookRstr	Restricting Address Book access
M434	Mail Restrict	Restricting mail access
M435	EZweb Restrict	Restricting EZweb access
M436	EZappli Restrict	
M437	Secret Mode	Setting Secret
M44	Incoming Reject	Rejecting designated unwanted phone numbers
M45	One Call Reject	Rejecting nuisance calls
M46	Reset	
M461	Reset Learning	
M462	Reset Function	Initializing all functions
M463	Reset Memory	Initializing the memory
M464	Reset EZappli	
M465	Reset All	Initializing all functions and memories

M5 User Support

Mode No.	Function	Description
M51	Char.Entry	Setting character entry method
M511	Entry Setup	Setting character entry method/forecast conversion
M512	Edit Format	Editing formatted text
M513	Edit Face Mark	Editing face marks
M514	Edit User Dict.	Registering/Editing User dictionary
M515	D/L Dict.	Registering the dictionary downloaded from EZweb
M52	Any Key Answer	Answering calls using the digit keys
M53	Jpn.Area Code	Registering frequently used area code
M54	Set Open Close	Setting actions for incoming calls when opening and closing the handset
M55	Transmission	
M551	XMSN Mode	Setting transmission mode
M552	XMSN Speed	Setting transmission speed
M553	Data Transfer	
M554	Print Mode	
M555	MassStorageMode	
M56	Voice Notice	
M57	Network	
M571	Play Voice Mail	Listening to messages
M572	VoiceMail1 ON	Setting the answering message service 1
M573	VoiceMail2 ON	Setting the answering message service 2
M574	VoiceMail OFF	Stopping the answering message service
M575	Change Ans.Msg.	Recording/Confirming/Changing response messages
M576	Eng.Guidance	Switching to English language guidance
M577	Jpn.Guidance	Switching to Japanese language guidance
M58	Earphone Setup	

M6 Ans.Ph./Manner

Mode No.	Function	Description
M61	Answer Phone	Setting simple absence memo
M62	Answer Message	Selecting simple absence memo message
M63	Voice Data Opr.	Playing, deleting and recording Voice data
M631	Record MyVoice	Recording own voice during standby
M632	Rec.Phone Memo	Recording other party's voice during call
M633	Ans.Ph/Ph.Memo	Playing and deleting the absence memo
M634	MyVoice Folder	Playing My Voice
M64	Manner Mode	Setting the manner mode and its styles
M65	Emission	
M66	Charging Mode	Setting the home mode
M67	Rear Key Setup	Setting the key(External) usage

M7 Clock

Mode No.	Function	Description
M71	Auto Correct	Setting the date and time
M72	Auto Power ON	Power on at specified time
M73	Auto Power OFF	Power off at specified time

Guidance (M#)

Mode No.	Function	Description
M#	Guide Function	Displaying the operation instructions for functions other than M functions

Specifications

Weight: approximately XX g (including battery pack)

Continuous talk time: approximately XX minutes

Continuous standby time: approximately XX hours

Dimensions (H/W/D): approximately XX mm x XX mm x XX mm
(not including the antenna and protuberances)

The height and depth are the dimensions when the telephone is folded.

Used Japan

The continuous talk time and continuous standby time are the average values of when the signals can be received normally while the telephone is in the standstill status.

The operation time may be reduced to utmost half due to charging conditions, temperature, and other operation environment conditions, signal condition at the location of use, function setting, roaming area.