

60502-Front-NEW.fm Page 1 Tuesday, June 1, 1999 10:58 AM



**Microwave Oven  
Owner's Manual**

**Horno de Microondas  
Instrucciones en español**

Model Nos./Modelos 565. 60502/565. 60509

ENGLISH  
ESPAÑOL



Sears, Roebuck and Co., Hoffman Estates, IL 60179, U.S.A.

Visit our sears website: [www.sears.com](http://www.sears.com)

08/99 Printed in Singapore  
Part No. XXXXX

## PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the:
  - (1) DOOR (bent)
  - (2) HINGES AND LATCHES (broken or loosened)
  - (3) DOOR SEALS AND SEALING SURFACES
- (d) The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

### SPECIFICATIONS

Model:	565. 60502/ 565. 60509
Power Source:	AC 120V, 60 Hz
Power Consumption:	1580W, 13.6 Amps
Maximum Output:	1100W*
Oven Capacity:	2.0 cu. ft.
Turntable Diameter:	12- <sup>5</sup> / <sub>8</sub> "*
Dimensions: (w x h x d)	23- <sup>7</sup> / <sub>16</sub> " x 14- <sup>1</sup> / <sub>4</sub> " x 18- <sup>1</sup> / <sub>8</sub> "
Weight: Approx.	43 lbs.

\*According to IEC-705 test procedure.  
Specifications subject to change without notice.

### FOR YOUR ASSISTANCE...

To make a request for service, information or replacement of parts, Sears will require the complete Model number and Serial number of your oven. Copy your Model and Serial numbers.

**Model No.**

(Located on the inner left side of control panel)

**Serial No.**

(Located on the inner left side of control panel)

## TABLE OF CONTENTS

<b>SAFETY</b>		<b>COOKING GUIDE</b>	
Proper and safe use of your oven	4	Cooking Techniques . . . . .	18
Important Safety Instructions .	5	Quick Touch™ Cooking . . . . .	19
Electrical Grounding Instructions	6	Appetizers and Rice . . . . .	21
Utensils . . . . .	6	Meats, Poultry and Fish . . . . .	22
		Eggs . . . . .	24
		Baked Goods and Desserts . . . . .	25
<b>ASSEMBLY</b>		<b>MAINTENANCE</b>	
Names of Oven Parts and		Cleaning . . . . .	26
Accessories . . . . .	8	Sears Service . . . . .	26
Turntable Installation . . . . .	8	Troubleshooting . . . . .	27
Installation . . . . .	9		
<b>OPERATION</b>		<b>ESPAÑOL (Spanish Instructions)</b>	
Basic Features		<b>GARANTIA</b> . . . . .	29
Control Panel and Features . .	10	<b>SEGURIDAD</b> . . . . .	30
Setting Clock . . . . .	11	<b>ENSAMBLE</b> . . . . .	33
Child Lock-Out . . . . .	11	<b>OPERACION</b> . . . . .	34
Kitchen Timer . . . . .	12	(Consulte la página 29 para encontrar	
Time Cooking . . . . .	12	el índice detallado)	
Special Features			
Quick Touch™ Cooking . . . . .	14		
Automatic Defrost by Weight .	15		
Add Minute . . . . .	17		
Turntable Setting . . . . .	17		

## WARRANTY

### KENMORE® MICROWAVE OVEN FULL ONE YEAR WARRANTY

For one year from the date of purchase, if this Kenmore® Microwave Oven fails due to a defect in material or workmanship, Sears will repair it, free of charge.

### KENMORE® MAGNETRON FULL FIVE YEAR WARRANTY

For five years from the date of purchase, if the magnetron in this Kenmore® Microwave Oven fails due to a defect in material or workmanship, Sears will repair it, free of charge.

The above warranty coverage applies only to microwave ovens which are used for private household purposes.

Warranty service is available by simply CONTACTING THE NEAREST SEARS STORE OR SERVICE CENTER in the United States.

This Warranty applies only while this product is in use in the United States.

The Warranty give you specific legal rights, and you may also have other rights which vary from state to state.

SEARS, ROEBUCK AND CO.,  
D/817 WA,  
HOFFMAN ESTATES, IL. 60179

For Service Call:  
1 - 800 - 4 - REPAIR  
1 - 800 - 473 - 7247

SAFETY

ASSEMBLY

OPERATION

COOKING GUIDE

MAINTENANCE

ESPAÑOL

60502-assembly.fm Page 8 Tuesday, June 1, 1999 11:05 AM

## ASSEMBLY

### NAMES OF OVEN PARTS AND ACCESSORIES

 
Remove the oven and all materials from the carton.

Your oven comes with the following accessories:

Turntable/ Turntable roller rest/ Owner's Manual


#### Ultra EvenWave<sup>®</sup> System

Stirrer fan located in the right side wall of the oven cavity turn microwaves round like Windmill. The microwaves bounce to every direction and also reach the embossments on the interior walls and then bounce in every direction. As a result, microwave energy will be reflected from many angles to cook and defrost more evenly and results in improved performance.

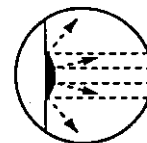

#### Safety interlock system

 Shuts off oven power if door is opened during operation.

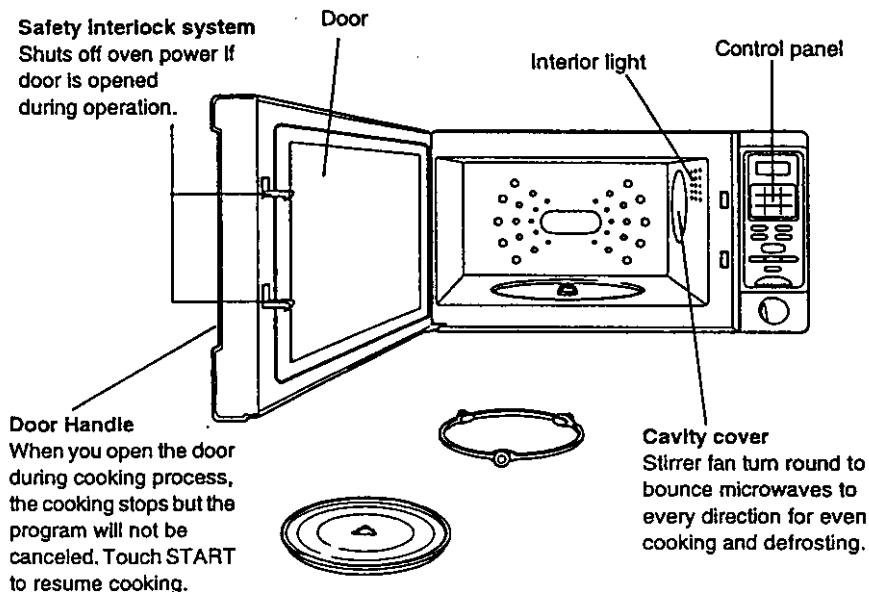

#### Door Handle

When you open the door during cooking process, the cooking stops but the program will not be canceled. Touch START to resume cooking.

 
#### Cavity cover

Stirrer fan turn round to bounce microwaves to every direction for even cooking and defrosting.

### TURNTABLE INSTALLATION

- Place the roller rest on the cavity bottom.
- Turntable hub should be securely locked in the receptacle. **Never** place the turntable upside down.
- The turntable rotation should never be restricted.
- Place the turntable on top of the roller rest as shown in the diagram.
- Both turntable and roller rest must always be used during cooking.
- All food and containers of food are always placed on this turntable for cooking.
- This turntable rotates clockwise or counterclockwise; this is normal.

**CAUTION:** The inside of the oven and turntable get very hot, so do not touch them immediately after use.

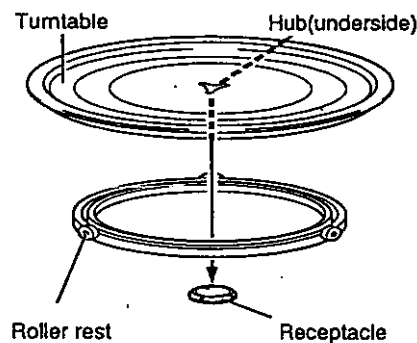


## INSTALLATION

This oven is designed for Countertop or Built-in installation. Before you begin installation, you need to decide how you install your oven.

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

### Countertop Installation

 1. Select a level surface that provides enough open space for the intake and/or outlet vents.

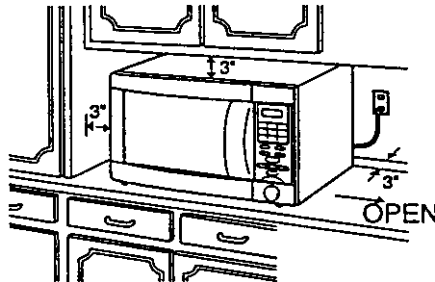

A minimum clearance of 3 inches is required between the oven and any adjacent wall. One side must be open.

- Leave a minimum clearance of 3 inches above the oven.
- Do not remove the legs from the bottom of the oven.
- Blocking the intake and/or outlet openings can damage the oven.

2. Plug your oven into a standard 120-volt / 60-Hz household outlet. Be sure the electrical circuit is at least 15 amperes and that your microwave oven is the only appliance on the circuit.

**WARNING:** Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

### Built-In Installation

It is necessary for you to purchase an Optional Kit for Built-in Installation. Contact the store where you purchased your oven for an optional Built-in Kit.

Model No.	Built-in Kit Stock No.
565. 60509	(27 inch) 20-69910 (30 inch) 20-69912
565. 60502	(27 inch) 20-69911/ 20-6911 (30 inch) 20-69913/ 20-6913

 
- When installing in a Built-in situation, the oven requires an opening for installation.  
(27 inch): 25" (w) x 17" (h) x 21" (d)  
(30 inch): 28- $\frac{1}{2}$ " (w) x 17" (h) x 21" (d)
- Do not remove the legs from the bottom of the oven.
- Blocking the intake and/or outlet openings can damage the oven.
- The trim must not interfere with adjacent appliance or cabinet surfaces. To prevent interference, leave the clearances listed below at the front of the microwave opening.  
Left and Right sides: 1 inch  
Top and Bottom sides: 2 inches

- Plug your oven into a standard 120-volt / 60-Hz household outlet. Be sure the electrical circuit is at least 15 amperes and that your microwave oven is the only appliance on the circuit.

**WARNING:** If installing the microwave oven over an electric oven, it must only be installed over the following Kenmore Electric Ovens, Stock No.:

(27 inch) 47485, 47486, 47489, 47189  
(30 inch) 41785, 41789, 41085, 41086, 41089.

If installed over any other than the listed Electric ovens, the microwave could be damaged and the warranty would be void.

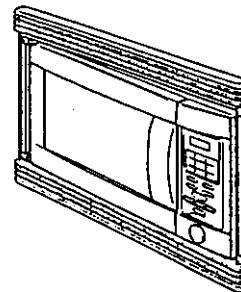

ASSEMBLY