

# **SCP-5400**

**Operating Guide**

**(Draft)**

**Dual-Band /Tri-Mode**

---

## Table of Contents

<b>Getting to Know your Phone</b> .....	<b>6</b>
Your New PCS Phone .....	6
Viewing the Display Screen.....	8
Turning your Phone On and Off .....	9
Unlocking the Phone .....	9
Using the Battery .....	10
Displaying your Phone Number .....	11
<b>Making and Answering Calls</b> .....	<b>12</b>
Making Calls .....	12
Answering Calls .....	12
Using the Speakerphone .....	13
Changing Ringer Volume .....	13
Adjusting Volume During a Conversation.....	13
Muting a Call .....	13
Missed Call Notification.....	14
Calling Emergency Numbers.....	14
Dialing Options .....	14
In-Call Options.....	15
End-of-Call Options .....	16
Saving a Phone Number.....	16
Finding a Phone Number.....	17
Dialing and Saving Phone Numbers With Pauses.....	17
Four-Digit Dialing .....	18
Dialing From the Internal Phone Book.....	18
Using One-Touch Speed Dialing.....	18
<b>Controlling Your Phone's Settings</b> .....	<b>19</b>
Sound Settings .....	19
Ringer Types.....	19
Selecting Ringer Types for Voice Calls.....	19
Selecting Ringer Types for Voicemail.....	19
Selecting Ringer Types for Messages .....	20
Setting Tone Length, Start-up/Power-off Tone or Voice Prompt .....	20

Adjusting the Phone's Volume Settings .....	20
Alert Notification .....	21
Silence All .....	22
Display Settings .....	22
Changing the Greeting .....	22
Changing the Backlight Time Length .....	23
Changing the Display Screen .....	23
Setting the Display for Incoming Calls .....	24
Setting the Display for the Standby Mode .....	24
Changing the Screen Saver .....	25
Changing the Display for Mi Amigo .....	25
Changing the Display Color .....	25
Changing the Font Size .....	26
Location Settings .....	26
Setting Airplane Mode .....	26
Setting TTY Mode .....	27
Phone Setup Options .....	27
My Shortcut .....	27
Auto Answer Mode .....	28
Setting Flip Options .....	28
Setting Any Key Answer .....	28
Setting Abbreviated Dialing .....	29
Headset Mode .....	29
Setting Side Key Guard .....	29
Sleep Mode .....	30
Setting Message Notification .....	30
Changing the Menu Language .....	30
<b>Setting Your Phone's Security .....</b>	<b>31</b>
Accessing the Security Menu .....	31
Locking Your Phone .....	31
Unlocking Your Phone .....	31
Changing the Lock Code .....	31
Calling in Lock Mode .....	32
Restricting Calls .....	32
Using Special Numbers .....	32

Erasing the Internal Phone Book.....	33
Erasing the Downloads .....	33
Resetting Your Phone .....	33
Resetting and Locking Your Phone through SMS.....	34
<b>Controlling Your Roaming Experience.....</b>	<b>35</b>
Understanding Roaming .....	35
Setting Your Phone's Roam Mode .....	36
Controlling Roaming Charges Using Call Guard .....	36
<b>Navigating Through Menus .....</b>	<b>38</b>
Menu Navigation .....	38
Menu Structure.....	38
<b>Managing Call History .....</b>	<b>39</b>
Viewing Call History .....	39
Call History Options.....	39
Making a Call From Call History.....	39
Saving a Phone Number From Call History .....	40
Prepending a Phone Number From Call History.....	41
Erasing Call History.....	41
<b>Using your Internal Phone Book.....</b>	<b>42</b>
Internal Phone Book Entry Options.....	42
Selecting a Character Input Mode .....	43
Entering Characters Using T9 Text Input .....	43
Adding a Word to the T9 Database .....	43
Entering Characters by Tapping the Keypad .....	44
Using Smart Punctuation.....	45
Entering Numbers, Symbols, Canned Suffix and Smileys.....	45
Adding a New Internal Phone Book Entry.....	46
Finding Internal Phone Book Entries.....	47
Adding a Phone Number or Address to an Internal Phone Book Entry.....	48
Editing an Internal Phone Book Entry.....	49
Selecting a Ringer/Image Type for an Entry .....	50
Secret Internal Phone Book Entries .....	50

Dialing PCS Services .....	51
Storing Special Numbers in the Phone Book .....	51
Using Different Dialing Methods .....	52
My PCS Phone Number.....	53
<b>Personal Organizer.....</b>	<b>54</b>
Managing Schedules.....	54
Adding an Event to the Scheduler.....	54
Event Alerts.....	55
Event Alert Menu.....	56
Editing an Event.....	56
Adding a Call Alarm to the Scheduler .....	56
Call Alarm Alerts .....	57
Call Alarm Menu.....	57
Editing Call Alarms .....	57
Erasing a Day's Events or Call Alarms.....	58
Going to Today's Scheduler Menu .....	58
Adding To Do Items .....	58
Viewing To Do List.....	59
Editing To Do Items .....	59
Adding To Do Item to Schedule .....	59
Deleting Items from the To Do List.....	59
Viewing Event, Call Alarm or To Do List.....	60
Purging All Events, Call Alarms or To Do List.....	60
Displaying User Address.....	60
Getting to know Icon Indication .....	61
Displaying the Version Information.....	61
Using your Phone's Tools.....	61
Using the Calculator.....	61
Using World Clock .....	62
<b>Using Your Phone's Voice Services .....</b>	<b>63</b>
Using Voice-Activated Dialing.....	63
Programming Voice Dial Tag to Your Phone.....	63
Erasing All Voice Dialing Tags .....	64
Recording Voice Memos .....	64

Voice Memo Options .....	65
Erasing Voice Memos .....	65
Setting Up Screen Call .....	66
<b>Using Voicemail.....</b>	<b>68</b>
Setting Up Your Voicemail .....	68
Voicemail Notification .....	68
New Voicemail Message Alerts .....	68
Retrieving Your Voicemail Messages.....	69
Voicemail Options .....	69
Clearing the Message Icon .....	71
Using Caller ID .....	71
Responding to Call Waiting .....	71
Making a Three-Way Call .....	72
Using Call Forwarding .....	72
Messages.....	73
New Messages .....	73
Message Storage .....	73
Displaying Messages .....	73
Changing the Displaying Font Size of a Message.....	74
Message Options .....	74
Prepending a Phone Number From a Message .....	74
Extracting Phone Numbers or E-mail/Web Address From a Message.....	75
Creating Folders for Messages .....	76
Adding a Folder To the Message .....	77
Moving a Message Into the Other Folder .....	77
Editing Folders .....	77
Erasing a Folder Including Messages .....	78
Erasing All Messages .....	78
<b>Safety .....</b>	<b>79</b>
Getting the Most Out of Your Reception.....	79
Maintaining Safe Use of and Access to Your Phone .....	80
Caring for the Battery .....	82
Acknowledging Special Precautions and the FCC Notice .....	83

# Getting to Know Your Phone

## Your New PCS Phone



1. **Antenna:** The voice on the other end sounds clearest when the antenna is all the way up.
2. **Ready Link key:** Lets you make a Ready Link Call. Long press for redialing last number that you dialed or received with Ready Link Call, and short press for displaying Company List in the Standby mode. Also, lets you mute the ringer when receiving incoming calls.
3. **Side Volume key:** Lets you adjust the receiver volume during a call, or off the ringer while ringing. Lets you adjust the ringer volume in Standby mode when the clamshell is open. Lets you scroll up or down the message on Sub LCD when the clamshell is closed.
4. **Headset Jack:** Insert the plug of the headset (sold separately) for hands-free listening.
5. **LED (green/red light):** Incoming Call = Green blinks / Notification (Message, Voicemail, Alert, etc.) = Red blinks
6. **Sub LCD:** Lets you monitor the phone's status and see who's calling without opening the phone.
7. **Main LCD (display):** Displays the phone's main menu, features, modes, etc.
8. **Soft Key (left):** Lets you select the menu corresponding to the bottom left line on the Main LCD.
9. **Navigation Key:** Lets you navigate quickly and easily through the menu options. ▲/▼ of the Navigation key adjusts the receiver volume during a call. It takes a shortcut to the menu by pressing, ► =Phone Book (Find Name), ◀ =My Shortcut, ▲ = Messaging and ▼ =Downloads.
10. **MENU/OK:** Lets you see the phone's menus and select menu options.
11. **Web:** Lets you launch the Browser.
12. **TALK:** Lets you place a call, receive a call, answer Call Waiting, use Three-Way Calling and Voice Dial.
13. **Accessories Connector:** Connect the charging accessories such as Travel Charger (included), Desktop Charger or PCS Wireless Connection Kit(sold separately).
14. **Number Keys:** Lets you enter numbers, letters and characters, and navigate within Menus. Press and hold 2-9 key to make a Speed Dial call.
15. **SPEAKER:** Lets you set the Speaker Phone Mode to ON and OFF, use Voice Dial and long press for Memo recording.
16. **END/POWER:** Turns the phone ON and OFF. Lets you disconnect a call while talking or mute the ringer when receiving incoming calls.
17. **BACK:** Allows you to clear characters from the screen, mute ringer when receiving incoming calls or display Time/Date while the phone is in use.



18. **Side Call key:** Lets you receive calls or redial last number while phone is closed.


























Long press for receiving incoming calls or redialing last number that you dialed.

Short press for muting the ringer when receiving incoming calls.

19. **Soft Key (right):** Lets you select the menu corresponding to the bottom right line on the Main LCD.

### Viewing the Display Screen

This list identifies some of the more common symbols you'll see on your display screen.

-  shows your current signal strength. The more lines you have, the stronger your signal.
-  means your phone cannot find a signal.
-  tells you a call is in progress.
-  indicates the Data access is dormant.
-  indicates the Data access is active.
-  indicates the Data access is disabled.
-  indicates you have text messages waiting.
-  indicates you have voicemail messages waiting. Press and hold 1 to call your voicemail box.
-  indicates you have text messages and voicemail messages waiting.
-  indicates the phone is on another service provider's network.
-  shows the level of your battery charge. The more black you see, the more power you have left. It turns  while charging.
-  indicates you have menus to scroll.
-  indicates the vibrate feature is set to ON.
-  indicates volume level 4 and vibrate feature is set to ON.
-  indicates the Location Service of your phone is enabled.
-  indicates the Location Service of your phone is disabled.
-  indicates you have new caller's message.
-  indicates the Screen Call Auto setting is ON.
-  indicates you have new downloaded data.
-  indicates the Speaker Phone mode is set to ON
-  indicates Headset mode is Ready Link Call and Headset is connected.
-  indicates Ready Link Call is available.
-  indicates Ready Link Call is unavailable.
-  indicates TTY mode is set to ON when you connect TTY devices.

## Soft Keys

You can select the menus, which are described at the bottom line of the display by pressing the corresponding soft keys (left/right). In this User Manual, the explanation for selecting such menus are as shown below:

Press **Memo** (right softkey).

(Press the right softkey corresponding to **Memo**).

## Turning your Phone On and Off

### Turning your Phone On:

To turn your phone on, press **END/**.

Once your phone is On, it displays “Looking for service...”, indicating that your phone is searching for a signal. When your phone finds a signal, it automatically enters Standby mode – the phone’s idle state. At this point, you are ready to begin making and receiving calls. If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. When a signal is found, your phone automatically returns to Standby mode.

In power save mode, your phone searches for a signal periodically without your intervention. You can also initiate a search for PCS Service by pressing any key (when your phone is turned On).

**Tip:** The Power Save feature helps to conserve your battery power when you are in an area where there is no signal.

### Turning your Phone Off:

Press and hold **END/** for two seconds until you see the powering down animation on the display screen.

Your screen remains blank while your phone is off (unless the battery is charging).

## Unlocking the Phone

1. Press **END/** to turn the phone on.
2. Press **Unlock** (left softkey).
3. Enter your four-digit lock code. For security purposes, the code is not visible as you type.

## Using the Battery

### Installing the Battery

Your PCS Phone comes with a Lithium Ion battery. Follow these steps to install it:

1. Place the battery into the space beneath the antenna with the metal contacts at the bottom, facing downward.
2. Gently press down until it's in place and the battery release latch snaps.


### Removing the Battery

To remove your battery for charging or for other reason, follow these easy steps:

1. Make sure the power is off so that you don't lose any stored numbers or messages.
2. Press up the battery release latch and hold the battery.
3. Then pull it up and out at a 45-degree angle.

### Charging the Battery




Your PCS Phone comes with a rechargeable battery. You should charge the battery as soon as possible so you can begin using your phone.


Keeping track of your battery's charge is important. If your battery level becomes too low, your phone automatically turns off and you'll lose all the information you were just working on. For a quick check of your phone's battery level, glance at the battery charge indicator located in the upper-right corner of your phone's display screen. If the battery charge gets too low, the battery icon  appears and the phone sounds a warning tone. Always use a recommended Desktop Charger, Travel Charger or Vehicle Power Adapter to charge your battery.

**Warning!** Using the wrong battery charger could cause damage to your phone and void the warranty.

### Using the Travel Charger

To use the travel charger provided with your phone:

1. Plug the travel charger into a wall outlet.
2. Plug the other end into the travel charger into the bottom of your phone (with the battery installed).
  - Charging when your phone is turned on:  
The battery icon  appears on the display while charging.  
The battery icon turns to  when charging is complete.
  - Charging when your phone is turned off:  
The battery icon  appears, and the message "BATTERY CHARGING-Power

Off” is shown on the display while charging. When the battery is completely discharged, you may wait for several minutes until the message is shown on the display. The battery icon turns to , and message changes to “CHARGING COMPLETE-Power Off-” when charging is complete.

### Displaying your Phone Number

To display your phone number:

1. Press **MENU/OK** to display the main menu.
2. Highlight **Phone Info** and press **MENU/OK**.
3. Highlight **Phone#/User ID** and press **MENU/OK**.

**Note:** To access the phone’s main menu, press **MENU/OK** from Standby mode. Menu items may be selected by highlighting them with the Navigation key and pressing **MENU/OK**, or you can press the number corresponding to the menu item on your keypad.

## Making and Answering Calls

### Making Calls

1. Make sure your phone is On.
2. Enter a phone number. (If you make a mistake while dialing, press **Back** to erase one digit at a time. Press and hold **Back** to erase the entire number).
3. Press **TALK** or **SPEAKER** (To make a call when you are roaming and Call Guard is enabled, press **MENU/OK**, highlight **Roam Call** or **Roam:Speaker** and press **MENU/OK**).
4. When you're finished, press **END/**.

**Tip:** To redial your last outgoing call, press **TALK** or **SPEAKER** twice.

### Answering Calls

1. Make sure your phone is on. If your phone is off, incoming calls go to voicemail.
2. When your phone rings, press **TALK** or **SPEAKER**.

Depending on your settings, your PCS Phone notifies you of incoming calls in the following ways:

- The phone rings and/or vibrates.
- The LED flashes.
- The backlight illuminates.
- The screen displays an incoming call message.
- If available, the phone number of the caller is displayed.
- If the phone number is in your Internal Phone Book, the Phone Book entry's name is displayed.
- The picture is displayed when you have set the downloaded picture to "Incoming Calls".

The following options are also displayed by pressing **MENU/OK**. To select an option, highlight it and press **MENU/OK**.

- **Call Guard** to answer the call when you are in roaming (This feature appears when you are in digital area and analog service area). See "Call Guard" on pages 36-37.
- **Answer** to answer the call.
- **Answer:Speaker** to answer the call with Speakerphone mode.
- **Skip** to hang up the incoming call and return to Web while you are in the Web operation. (This feature appears when Data access is dormant).
- **Screen Call** to answer the call by using pre-recorded announcement. (This feature appears when you are in Service area or digital roaming area). See pages 66-67 for setting up.

- **Quiet Ringer** to mute the ringer. (This feature appears when the ringer is set).

To answer a call when you are roaming and Call Guard is enabled, you must press **MENU/OK**, highlight **Answer** or **Answer:Speaker** and press **MENU/OK** to answer the call. See “Call Guard” on pages 36-37.

**Note:** If your phone is off. Incoming calls go to voicemail.

3. To disconnect the call, press **END**.

### Using the Speakerphone

The speakerphone feature lets you hear audio through the speaker and talk without holding the phone. When the speakerphone is activated, use the volume control keys on the side of the phone to adjust the volume.

To activate the speakerphone during a call:

- Press **SPEAKER**.

-or-

Press **Menu**, highlight **Speaker On** and press **OK**.

To turn the speakerphone off:

- Press **SPEAKER**.

-or-

Press **Menu**, highlight **Speaker Off** and press **OK**.

### Changing Ringer Volume

To change the ringer volume, adjust the volume keys on the side of your phone when the clamshell is open in Standby mode.

**Note:** To change the ringer volume from the main menu, see “Adjusting the Phone’s Volume Settings” on page 20.

### Adjusting Volume During a Conversation

Whether you need to hear more or less of a conversation, adjust the side volume key, or press **▲/▼** of the Navigation key during a call.

### Muting a Call

There are times when it’s necessary to mute a call so that your caller does not hear you or certain background noise.

To use this function during a call:

1. Press **MENU/OK** to display the options.
2. Highlight **Mute** and press **MENU/OK**.

When the phone is muted, "Mute" appears on the display.

To unmute a call:

1. Press **MENU/OK** to display the options.
2. Highlight **Unmute** and press **MENU/OK**.

### Missed Call Notification

When an incoming call is not answered, the Missed Call log is displayed on your screen.

To display the list of Missed Calls :

- Press **View** (left softkey).

If the phone is locked, you need to press **Unlock** (left softkey), then enter the lock code and press **View** (left softkey).

To dial the last Missed Call Number:

- Highlight the entry and press **TALK** or **SPEAKER**.

### Calling Emergency Numbers

You can place calls to 911 (dial **9 1 1** and press **TALK** or **SPEAKER**), even if your phone is locked or your account is restricted. Once the dial is made, you will enter Emergency Mode.

The phone tries to dial to 911 automatically until the dial will be connected.

While you are in the Emergency Mode, all phone calls can be received.

To exit from the Emergency Mode, follow these instructions:

1. Press **END/**.
2. Press **MENU/OK** to display the options.
3. Highlight **Exit Emergency** and press **MENU/OK**.

### Dialing Options

Dialing options are displayed when you press **MENU/OK** after entering numbers in the Standby mode.

To select an option, highlight it and press **MENU/OK**.

- **Call** to dial the phone number. (If you are roaming and have the Call Guard feature activated, you need take extra step. See "Call Guard" on pages 36-37).
- **Call:Speaker On** to dial the phone number with Speaker Phone mode.(If you are roaming and have the Call Guard feature activated, You need take extra step. See the "Call Guard" on pages 36-37).
- **Ready Link** to make a Ready Link Call.
- **Save Phone#** to save the phone number in your Internal Phone Book. (See "Saving a

Phone Number” on page 16).

- **Find** to display Internal Phone Book entries that end with the digits you enter. (See “Finding a Phone Number” on page 17).
- **[H] Hard Pause** to insert a hard pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 17).
- **[T] 2-Second Pause** to insert a 2-second pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 17).
- **Hyphen** to insert a hyphen manually where you like, however they are mainly for show. (See “Dialing and Saving Phone Numbers With Pauses” on page 17).

**Tip:** To speed dial a phone number from the Standby mode, press and hold appropriate speed dial key locations 2-9. See page 18 for setting.

This option appears when you press after entering 4-digit and press **[MENU/OK]**.

- **Abbrev. Dial** to dial the phone number in your Internal Phone Book that ends with the four digits you enter. (See “Four-Digit Dialing” on page 18).

This option appears when you enter four or more digits and press **[MENU/OK]**.

## In-Call Options

During a call, your phone displays menu options by pressing **[MENU/OK]**.

To select an option, highlight it and press **[MENU/OK]**.

- **Flash** to answer an incoming Call Waiting call or connect a third party during Three-Way Calling.
- **Mute or Unmute**  
Select **Mute** to mute your phone’s microphone. Select **Unmute** to reactivate the Microphone.
- **Speaker On or Speaker Off** to route the phone’s audio through the speaker. You can adjust the speakerphone volume using the volume keys on the side of the phone.
- **Three -Way Call** to call a third party.
- **Call History** to use like a main menu. (See “Managing Call History” on pages 39-41).
- **Phone Book** to use like a main menu. (See “Using Your Internal Phone Book” on pages 42-53).
- **Voicemail** to use like a main menu. (See pages 68-78).
- **Settings** to use like a main menu. (See “Controlling Your Phone’s Settings” on pages 19-30.)
- **Tool/Extras** to use like a main menu. (See “Calendar” menu instructions on pages 54-60).



- **Voice Services** to use like a main menu. (See pages 63-65).

**Note:** Flash menu appears in Call Waiting and Three-Way Call. Mute menu does not appear during a 911 call. Three-Way Call Menu does not appear in Roaming area.

### End-of-Call Options

After receiving a call from or making a call to a phone number that is not in your Internal Phone Book, the phone number and the duration of the call is displayed. You can display the following menu options by pressing **MENU/OK** within 10 seconds after disconnecting the call.

To select an option, highlight it and press **MENU/OK**.

- **Call Again** to dial the phone number.
- **Call: Speaker On** to dial the phone number with Speakerphone mode.
- **Save Phone#** to save the phone number in your Internal Phone Book. (See “Saving a Phone Number” on page 16).

After receiving a call from or making a call to a phone number that is in your Internal Phone Book, the Phone Book entry name, phone number and the duration of the call are displayed. You can display the following menu options by pressing **MENU/OK** within 10 seconds after disconnecting the call.

To select an option, highlight it and press **MENU/OK**.

- **Call Again** to dial the phone number.
- **Call:Speaker On** to dial the phone number with Speakerphone mode.
- **Go to Phone Book** to save the other phone number into the same entry in your Internal Phone Book.

**Note:** The End-of-Call options are not displayed for calls identified as No ID or Restricted.

### Saving a Phone Number

Your PCS Phone can store a total of 500 phone numbers in 300 Internal Phone Book entries. Each Phone Book entry can store 7 phone numbers, and the entry’s name can contain 16 characters. Your phone automatically sorts the Internal Phone Book entries alphabetically.

To save a number from the main menu:

1. Enter a phone number.
2. Press **MENU/OK**.
3. Highlight **Save Phone#** and press **MENU/OK**.

4. Select a label by highlighting **Home, Work, Mobile, Pager, Data, Fax** or **No Label** and press **MENU/OK**.
5. Enter a Name, and press **MENU/OK**. (See “Selecting a Character Input Mode” on page 43.) Or you can also save the phone number without a name by pressing **MENU/OK** from the name entry display, highlighting **Yes** and then pressing **MENU/OK**. If you have already stored entries in the Phone Book, you are prompted to select the following entry modes:
  - **New Name** to enter a name directly.
  - **From Ph. Book** to select a name from Phone Book entry list.
6. Press **Save** (left softkey).

After you have saved the number, the new Internal Phone Book entry is displayed. (See “Internal Phone Book Entry Options” on page 42).

### Finding a Phone Number

Your phone searches the phone number in your Internal Phone Book that ends with the digits you entered.

To find a phone number:

1. Enter four or more digits and press **MENU/OK**. The more numbers you enter, the more specific the search becomes.
2. Highlight **Find** and press **MENU/OK**.
3. The Phone Book entry list that ends with the digits you entered appears.
4. Highlight your desired entry.
  - Press **MENU/OK** to display the entry details.
  - Press **TALK** or **SPEAKER** to dial.

### Dialing and Saving Phone Numbers With Pauses

You can dial or save phone numbers with pauses for use with automated systems, such as voicemail or credit card billing numbers. If you select a hard pause, the next set of numbers is sent when you press **TALK** or **SPEAKER**. If you select a 2-second pause, your phone automatically sends the next set of numbers after two seconds.

**Note:** You can have multiple pauses in a phone number and combine 2-second and hard pauses.

To dial or save phone numbers with pauses:

1. Enter the phone number and press **MENU/OK**.
2. Highlight either **Hard Pause** or **2-Second Pause** and press **MENU/OK**. Hard Pauses are displayed as an “H” and 2-second pauses as a “T”.

3. Enter additional numbers.
4. Press **MENU/OK**, highlight **Call** or **Call:Speaker On** to dial the number or **Save Phone#** to save the number in your Internal Phone Book and press **MENU/OK**.  
When dialing a number with a Hard pause, press **MENU/OK** and highlight **Send Tone** and press **MENU/OK** to send the next set of numbers.

### Four-Digit Dialing

Enter four digits and press **MENU/OK** to display the 4-Digit Dialing option. If you select **Abbrev.Dial**, your phone dials the phone number in your Internal Phone Book that ends with the four digits you entered. See page 29 for setting this feature.

To use 4-Digit Dialing:

1. Dial the last four digits of an Internal Phone Book entry's phone number.
2. Press **MENU/OK** to display the menu options.
3. Highlight **Abbrev.Dial** and press **MENU/OK** or **TALK** or **SPEAKER**.

**Note:** 4-Digit Dialing dials the first number in your Internal Phone Book that matches the four digits.

### Dialing From the Internal Phone Book

1. Press **MENU/OK** to access the main menu.
2. Highlight **Phone Book** and press **MENU/OK**.
3. Highlight **Find Name** and press **MENU/OK**.
- Press the right Navigation key for the shortcut (steps 1 through 3).
4. Use your Navigation key to scroll through the Phone Book list and highlight one of the appropriate entries and press **MENU/OK**.
5. Select the box under your desired memory location by scrolling.
6. Press **Options** (right softkey) for the menu options.
7. Highlight your desired feature and press **MENU/OK**.

### Using One-Touch Speed Dialing

With this feature, you can dial Speed Dial entries using one key press for locations 2-9.

To use One-Touch Dialing for Speed Dial locations 2-9:

- Press and hold the appropriate key for two seconds.  
The display confirms that the number has been dialed when it shows "Connecting..."

## Controlling Your Phone's Settings

**Reminder:** To access the phone's main menu, press **MENU/OK** from Standby mode. Menu items may be selected by highlighting them with the Navigation key and pressing **MENU/OK**.

### Sound Settings

#### Ringer Types

Ringer types help you identify incoming calls and messages. You can assign ringer types to individual Internal Phone Book entries, types of calls and types of messages.

- **Programmed Ringers** include a variety of standard ringer types and familiar music.
- **Vibrating Ringer** alerts you to call or messages without disturbing others.
- **Downloaded Ringers** can be downloaded right to your Phone.

#### Selecting Ringer Types for Voice Calls

Your PCS Phone provides a variety of ringer options, which allow you to customize your ringer and volume settings.

To select a ringer type for voice calls so you recognize when a certain type of call is coming in by the ringer:

1. Press **MENU/OK** to access the main menu.
2. Highlight **Settings** and press **MENU/OK**.
3. Highlight **Sounds** and press **MENU/OK**.
4. Highlight **Ringer Type** and press **MENU/OK**.
5. Highlight **Voice Calls** and press **MENU/OK**.
6. Select the menu under **With Caller ID**, **No Caller ID** or **Roaming** and press **MENU/OK**.
7. Highlight your desired ringer type and press **MENU/OK**.
  - If you selected Animation Ringer, preview display starts after step 7 above.
  - **Get New:** start up a Browser and you can select an item to download.

#### Selecting Ringer Types for Voicemail

To select a ringer type for voicemail:

1. Press **MENU/OK** to access the main menu.
2. Highlight **Settings** and press **MENU/OK**.
3. Highlight **Sounds** and press **MENU/OK**.
4. Highlight **Ringer Type** and press **MENU/OK**.
5. Highlight **Voicemail** and press **MENU/OK**.
6. Select the menu under **Voicemail** and press **MENU/OK**.
7. Highlight your desired ringer type and press **MENU/OK**.
  - **Get New:** start up a Browser and you can select an item to download.

## Selecting Ringer Types for Messages

To select a ringer type for text messages:

1. Press **MENU/OK** to access the main menu.
  2. Highlight **Settings** and press **MENU/OK**.
  3. Highlight **Sounds** and press **MENU/OK**.
  4. Highlight **Ringer Type** and press **MENU/OK**.
  5. Highlight **Messaging** and press **MENU/OK**.
  6. Select the menu under **Messaging** and press **MENU/OK**.
  7. Highlight your desired ringer type and press **MENU/OK**.
- **Get New:** start up a Browser and you can select an item to download.

## Setting Tone Length, Start-up/Power-off Tone or Voice Prompt

You can determine the length of your key beep (you hear this when you press any key) or type of the Start-up/Power off tone (sounds when you turn the phone on/off on this feature).

1. Press **MENU/OK** to access the main menu.
  2. Highlight **Settings** and press **MENU/OK**.
  3. Highlight **Sounds** and press **MENU/OK**.
  4. Highlight **Others** and press **MENU/OK**.
  5. Select the menu under **Tone Length, Start-up Tone, Power-off Tone or Voice Prompt** and press **MENU/OK**.
  6. Highlight your desired option and press **MENU/OK**.
- **Get New:** start up a Browser and you can select an item to download.

**Tip:** The volume of Start-up Tone and Power-off Tone can be set through the volume setting. See pages 20-21 for instructions.

**Tip:** When ringer volume is set to **Silence All**, voice prompts cannot be heard.

## Adjusting the Phone's Volume Settings

To change the ringer/ key volume

1. Press **MENU/OK** to access the main menu.
  2. Highlight **Settings** and press **MENU/OK**.
  3. Highlight **Sounds** and press **MENU/OK**.
  4. Highlight **Ringer/Key Vol.**, and press **MENU/OK**.
  5. Highlight **Ringer Volume, Start-up/Pw-off or Key Beep** and Press **MENU/OK**.
  6. Highlight your desired volume level and press **MENU/OK**.
- **Vibrate** alerts you to calls or messages without disturbing others.

- **Ringer Off** to set the Voice Call ringer volume to off.(Only appears in Ringer Volume Setting).
- **Silence All** to set all the ringer volume to off. (Only appears in Ringer Volume Setting).

To Adjust Earpiece volume:

1. Press **MENU/OK** to access the main menu.
2. Highlight **Settings** and press **MENU/OK**.
3. Highlight **Sounds** and press **MENU/OK**.
4. Highlight **Receiver Volume** and press **MENU/OK**.
5. Select your desired volume level and press **MENU/OK**.

**Tip:** You can adjust the ringer volume in Standby mode by using the side volume key on or the earpiece volume during a call by using up or down of the Navigation keys or side volume key.

### Alert Notification

Your phone comes with several different options to keep you aware of what's going on by sounding the alert or ringer.

- **Services** sets alert On or Off for network services parameter changes.
- **Voicemail** sets alert to notify you of caller's message(s).
- **Messaging** sets alert to notify you of text message(s).
- **Minute Beep** sets a minute reminder that beeps ten seconds before the end of each minute during a call.
- **Signal Fade** sets alert to notify you when your phone loses a signal during a call.

To set the alerts:

1. Press **MENU/OK** to access the main menu.
2. Highlight **Settings** and press **MENU/OK**.
3. Highlight **Sounds** and press **MENU/OK**.
4. Highlight **Alerts** and press **MENU/OK**.
5. Highlight your desired option and press **MENU/OK**.
6. If you selected **Service**, **Minute Beep** or **Signal Fade**, select **On** or **Off**.

If you selected **Voicemail** or **Messaging**, select **Once**, **Repeat Alert** or **Off**.

**Tip:** Repeat Alert sounds every two minutes for twenty minutes.

## Silence All

There may be times when you need to silence your phone entirely. The phone's Silent Mode allows you to mute all sounds without turning your phone off.

To change your phone's Silent Mode:

1. Press **MENU/OK** to access the main menu.
2. Highlight **Settings** and press **MENU/OK**.
3. Highlight **Sounds** and press **MENU/OK**.
4. Highlight **Ringer/Key Vol.** and press **MENU/OK**.
5. Select the menu under **Ringer Volum** and press **MENU/OK**.
6. Highlight **Silence All** and press **MENU/OK**.

**Tip:** When Ringer Volume is set as **Silence All**, other items are changed to **Off** and cannot be highlighted by cursor.

## Display Settings

### Changing the Greeting

The greeting can be up to 15 characters and is displayed on the first line of your phone's display screen in Standby mode.

To change your greeting:

1. Press **MENU/OK** to access the main menu.
2. Highlight **Settings** and press **MENU/OK**.
3. Highlight **Display** and press **MENU/OK**.
4. Highlight **Greeting** and press **MENU/OK**.
5. Select either **Username** or **Custom**.
  - **Username** to display the username when you are signed in.
  - **Custom** to customize the greeting by entering characters (Press **Back** to erase single character, press and hold **Back** to erase entire entry. See pages 44-46 for the entering method.)
6. Press **MENU/OK**.

**Note:** When Calendar or Screen Saver is set for Standby Display, greeting is not displayed.

## Changing the Backlight Time Length

The backlight setting lets you select how long the display screen and keypad are backlit after any key press is made.

To change the backlight setting:

1. Press **MENU/OK** to access the main menu.
2. Highlight **Settings** and press **MENU/OK**.
3. Highlight **Display** and press **MENU/OK**.
4. Highlight **Backlight** and press **MENU/OK**.
5. Select the menu under **Main LCD** or **Key** and press **MENU/OK**.
6. Select **Always On**, **Always Off** or your defined time length, and press **MENU/OK**.
  - **Always Off** always turns the Backlight off.
  - **Always On** always turns the Backlight on.

**Note:** **Always On** setting returns to previous value on next power cycle.

To change Keypad backlight setting:

1. From the step 5 above, select the menu under **Key** or **Sub LCD** and press **MENU/OK**.
2. Select **Always Off** or your defined time length, and press **MENU/OK**.

**Note:** Long backlight setting affects the battery's talk and standby times.

## Changing the Display Screen

This feature lets you display the animation as a display for Standby, Outgoing calls or Service Search.

To assign the Animation:

1. Press **MENU/OK** to access the main menu.
2. Highlight **Settings** and press **MENU/OK**.
3. Highlight **Display** and press **MENU/OK**.
4. Highlight **Animation** and press **MENU/OK**.
5. Highlight **Standby**, **Outgoing Calls** or **Service Search** and press **MENU/OK**.
  - Press **Preview** (right softkey) to see an example display.
6. Select the menu under the item and press **MENU/OK**.
7. Highlight your desired option and press **MENU/OK**.
  - For Standby, also set animation starting time. Select the option under **after** then highlight your desired setting time.
  - **Preset:** the pre-programmed data.
  - **Downloads:** start up a browser and you can select an item to download.

To deactivate this feature, select **Off** during step 7 above.



## Setting the Display for Incoming Calls

You can set the color or downloaded image (screen saver) data to be shown on the Incoming Call display.

Follow these steps:

1. Press **MENU/OK** to access the main menu.
  2. Highlight **Settings** and press **MENU/OK**.
  3. Highlight **Display** and press **MENU/OK**.
  4. Highlight **Incoming Calls** and press **MENU/OK**.
  5. Select the menu under **Incoming Calls** and press **MENU/OK**.
  6. Highlight your desired color or downloaded image (screen saver) data or picture and press **MENU/OK**.
- **Get New:** start up a Browser and you can select an item to download.
  - If you select the downloaded image (screen saver) data or picture during step 6 above, press **Preview** (right softkey) to see an example display.

**Note:** PCS Connection kit must be purchased for downloading the data from PC.

## Setting the Display for the Standby Mode

This feature enables you to select a variety of items to display on the Standby mode.

Follow these steps:

1. Press **MENU/OK** to access the main menu.
  2. Highlight **Settings** and press **MENU/OK**.
  3. Highlight **Display** and press **MENU/OK**.
  4. Highlight **Standby Display** and press **MENU/OK**.
  5. Select your desired item and press **MENU/OK**.
- **Screen Saver** selects the screen saver to display.
  - **Calendar** displays the Calendar.
  - **Digital Clock** displays the local time in digital mode.
  - **Analog Clock** displays the local time in analog mode.
  - **World Clock** displays the time of the selected country along with the local time. You can scroll the World Clock list by pressing right/left of the Navigation key for changing country, **Summer** (left softkey) / **Standard** (right softkey) for changing between summer and standard time if applicable. The " \* " icon indicates the summer time.

**Tip:** You can also display the World Clock from Tools/Extras menu. See "Using the World Clock" on page 62.

- **Default** sets this feature to default.

6. After following each system prompt or confirming the preview display, press **MENU/OK** to save the setting.

## Changing the Screen Saver

Your new PCS Phone offers you the option of displaying a screen saver while in Standby mode.

To assign a screen saver:

1. Press **MENU/OK** to access the main menu.
2. Highlight **Settings** and press **MENU/OK**.
3. Highlight **Display** and press **MENU/OK**.
4. Highlight **Standby Display** and press **MENU/OK**.
5. Select **Screen Saver** and press **MENU/OK**.
6. Select the menu under **Screen Saver** and press **MENU/OK**.
7. Highlight your desired screen saver, and press **MENU/OK**.
  - **Get New:** start up a Browser and you can select an item to download.
  - Press **Preview** (right softkey) during step 7 above to see an example display.
8. Press **Save** (left softkey) to save the screen saver.

**Tip:** In no service area, Screen Saver, Calendar, Time (Large), or World Clock cannot be shown on the Standby display.

## Changing the Display for Mi Amigo

This feature enables you to see a funny animation for 30 seconds on the Main LCD after opening the flip.

Follow these steps:

1. Press **MENU/OK** to access the main menu.
  2. Highlight **Settings** and press **MENU/OK**.
  3. Highlight **Display** and press **MENU/OK**.
  4. Highlight **Mi Amigo** and press **MENU/OK**.
  5. Select **On** or **Off** and press **MENU/OK**.
- Press **Preview** (right softkey) to see a display preview.

## Changing the Display Color

To change the display color scheme:

1. Press **MENU/OK** to access the main menu.
2. Highlight **Settings** and press **MENU/OK**.
3. Highlight **Display** and press **MENU/OK**.

4. Highlight **Color** and press **MENU/OK**.
5. Highlight **Main LCD** or **Sub LCD** and press **MENU/OK**.
6. Select your desired color and press **MENU/OK**.

### Changing the Font Size

There are four font size settings for the message notification and browser. To change the font size, follow these steps:




1. Press **MENU/OK** to access the main menu.
2. Highlight **Settings** and press **MENU/OK**.
3. Highlight **Display** and press **MENU/OK**.
4. Highlight **Font Size** and press **MENU/OK**.
5. Highlight **Notifications** or **Browser**, and press **MENU/OK**.
6. Select your desired font size.
  - Press **Preview** (right softkey) to display a font size example.
7. Press **MENU/OK** to set the selected font.

**Tip:** From the font example display, you can see the larger/smaller font displays by pressing the left/right Navigation key.

### Location Settings

To enable your phone's Location feature:

1. Press **MENU/OK** to access the main menu.
2. Highlight **Settings** and press **MENU/OK**.
3. Highlight **Location** and press **MENU/OK**.
4. Press **MENU/OK** or **OK**. Or wait a few seconds until the message scrolls down completely.
5. Select **On** and press **MENU/OK**.
  - To deactivate this feature, select **Off** at the step 5 above.

**Tip:** These icons lets you know whether information of your position is sent to the network or not. If you are in no service or roaming area, indication is always   
 indicates the Location Service is enabled.  
 indicates the Location Service is disabled.

### Setting Airplane Mode

This feature shuts all Incoming Calls or Outgoing Calls (except for 911 dialing) to prevent interference with aircraft electronics.

To set Airplane Mode:

1. Press **MENU/OK** to access the main menu.
2. Highlight **Settings** and press **MENU/OK**.
3. Highlight **Airplane Mode** and press **MENU/OK**.
4. Read the message, and press **MENU/OK** or **OK** (left softkey).
  - Press **Cancel** (right softkey) to return to the Setting display.
5. Select **On** and press **MENU/OK**.
  - To deactivate this feature, select **Off** at the step 5 above.

**Note:** While in Airplane mode, your phone's standby screen will display "Phone Off".

### Setting TTY Mode

This feature set the TTY Mode to On or Off.

A TTY (also known as TDD or Text Telephone), is a telecommunications device that allows people who are deaf or hard of hearing, or who have speech or language disabilities, to communicate by telephone. Connect the TTY device to the Headset Jack of Your PCS Phone. Then, type the message you want to send on the TTY's keyboard.

To Turn the TTY Mode On or Off:

1. From the Standby mode, press ##889.
2. Press **MENU/OK**.
3. Highlight **Save Phone#** and press **MENU/OK**.
4. Highlight **Accessibility** and press **MENU/OK**.
5. Highlight **TTY On** or **TTY Off** and press **MENU/OK**.
  - Highlight **Info** during step 5 above for instruction.

### Phone Setup Options

#### My Shortcut

You can arrange your own shortcut menu.

1. Press **MENU/OK** to access the main menu.
2. Highlight **Settings** and press **MENU/OK**.
3. Highlight **Others** and press **MENU/OK**.
4. Highlight **My Shortcut** and press **MENU/OK**.
5. Select the menu under **My Shortcut** and press **MENU/OK**.
6. Highlight your desired menu option and press **MENU/OK**.
  - Press **Info** (right softkey) during step 5 above to see the My Shortcut information.